

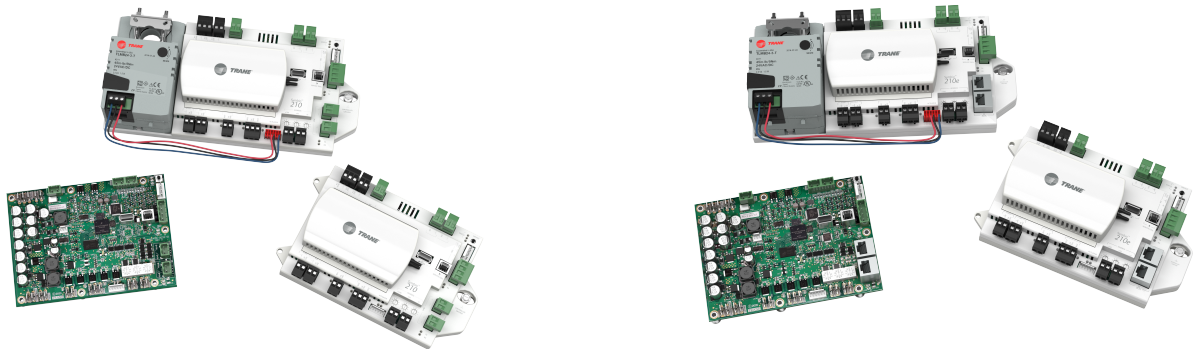


Installation, Operation, and Maintenance

Symbio™ 210 Programmable

Variable-Air-Volume (VAV) Box

Controller



⚠ SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.



Introduction

Read this manual thoroughly before operating or servicing this unit.

Warnings, Cautions, and Notices

Safety advisories appear throughout this manual as required. Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

The three types of advisories are defined as follows:



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.

NOTICE

Indicates a situation that could result in equipment or property-damage only accidents.

Important Environmental Concerns

Scientific research has shown that certain man-made chemicals can affect the earth's naturally occurring stratospheric ozone layer when released to the atmosphere. In particular, several of the identified chemicals that may affect the ozone layer are refrigerants that contain Chlorine, Fluorine and Carbon (CFCs) and those containing Hydrogen, Chlorine, Fluorine and Carbon (HCFCs). Not all refrigerants containing these compounds have the same potential impact to the environment. Trane advocates the responsible handling of all refrigerants.

Important Responsible Refrigerant Practices

Trane believes that responsible refrigerant practices are important to the environment, our customers, and the air conditioning industry. All technicians who handle refrigerants must be certified according to local rules. For the USA, the Federal Clean Air Act (Section 608) sets forth the requirements for handling, reclaiming, recovering and recycling of certain refrigerants and the equipment that is used in these service procedures. In addition, some states or municipalities may have additional requirements that must also be adhered to for responsible management of refrigerants. Know the applicable laws and follow them.

⚠ WARNING

Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring MUST be performed by qualified personnel. Improperly installed and grounded field wiring poses FIRE and ELECTROCUTION hazards. To avoid these hazards, you MUST follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

⚠ WARNING

Personal Protective Equipment (PPE) Required!

Failure to wear proper PPE for the job being undertaken could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the instructions below:

- Before installing/servicing this unit, technicians **MUST** put on all PPE required for the work being undertaken (Examples; cut resistant gloves/sleeves, butyl gloves, safety glasses, hard hat/bump cap, fall protection, electrical PPE and arc flash clothing). **ALWAYS** refer to appropriate Safety Data Sheets (SDS) and OSHA guidelines for proper PPE.
- When working with or around hazardous chemicals, **ALWAYS** refer to the appropriate SDS and OSHA/GHS (Global Harmonized System of Classification and Labelling of Chemicals) guidelines for information on allowable personal exposure levels, proper respiratory protection and handling instructions.
- If there is a risk of energized electrical contact, arc, or flash, technicians **MUST** put on all PPE in accordance with OSHA, NFPA 70E, or other country-specific requirements for arc flash protection, **PRIOR** to servicing the unit. **NEVER PERFORM ANY SWITCHING, DISCONNECTING, OR VOLTAGE TESTING WITHOUT PROPER ELECTRICAL PPE AND ARC FLASH CLOTHING. ENSURE ELECTRICAL METERS AND EQUIPMENT ARE PROPERLY RATED FOR INTENDED VOLTAGE.**

⚠ WARNING

Follow EHS Policies!

Failure to follow instructions below could result in death or serious injury.

- All Trane personnel must follow the company's Environmental, Health and Safety (EHS) policies when performing work such as hot work, electrical, fall protection, lockout/tagout, refrigerant handling, etc. Where local regulations are more stringent than these policies, those regulations supersede these policies.
- Non-Trane personnel should always follow local regulations.

⚠ WARNING

Cancer and Reproductive Harm!

This product can expose you to chemicals including lead and bisphenol A (BPA), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Copyright

This document and the information in it are the property of Trane, and may not be used or reproduced in whole or in part without written permission. Trane reserves the right to revise this publication at any time, and to make changes to its content without obligation to notify any person of such revision or change.

Trademarks

All trademarks referenced in this document are the trademarks of their respective owners.

Revision History

Updated Controller storage, operating, and compliance information table in Controller Specifications and Dimensions topic and added Ordering Numbers and Smoke Control Support (UJKL) topics in Overview chapter.



Table of Contents

Overview	6
The BACnet® Protocol	6
BACnet Testing Laboratory (BTL) Certification	6
Ordering Numbers	6
Controller Specifications and Dimensions	7
Shipping and Storage	9
Symbio™ 210 Features	9
Device Connections	10
Device Inputs/Outputs	11
Smoke Control Support (UUKL)	12
Wiring Installation	13
Symbio™ 210 Controller Pre-power Check-out	13
Transformer Recommendations	13
Symbio™ 210 Controller Power Wiring	13
Wiring Requirements	14
Connecting the Wires	14
Power On Check	14
Guidelines	14
BACnet® MS/TP Communication Link	16
Wiring Guidelines	17
Wiring Best Practices	17
Setting Up the Symbio™ 210 Controller on a BACnet® MS/TP Link	17
Setting the Address	18
BACnet®/IP Communication Link	18
Wiring Guidelines	19
Wiring Best Practices	20
Setting the Symbio™ 210 Controller on a Daisy Chain BACnet®/IP Link	20
Setting the Symbio 210 Controller on a Home Run BACnet/IP Link	20
BACnet Networks Without a Tracer SC+ System Controller	21
BACnet Networks With a Tracer SC+ System Controller	21
Device ID Assignment for BACnet® MS/TP Devices	21
Device ID Assignment for BACnet/IP Devices	22
Application Wiring	22
Zone Sensor Wiring	22
Duct Temperature Sensor Wiring	23
Binary Wiring	24
Controller LEDs	25
Symbio™ 210 Controller Points and Parameters	29
Status Utility	29
Unit Summary Screen	29

Analog, Binary, and Multistate Screens	30
Controller Status Screen	30
Equipment Utility	30
Setpoints Screen	30
Setup Parameters Screen	31
Commissioning Screen	33
Configuration Screen	34
Calibration, Operation Modes, and Control	35
Calibration	35
Occupancy Modes	35
Occupied Mode	35
Unoccupied Mode	35
Occupied Standby Mode	36
Occupied Bypass Mode	36
Space Temperature Control (STC) for Single Duct and Fan-powered Units	36
Single Duct Units	36
Fan-Powered Units	42
Ventilation Flow Control (VFC)	43
Flow Tracking (FTC)	45
Troubleshooting	47
Diagnostics	47
Troubleshooting Procedures	48
Symbio™ 210 Controller Failure	48
Symbio™ 210 Controller Communication Loss	49
Wired Zone Sensor Failure	50
Wired Zone Sensor Setpoint Failure	51
Airflow Sensor Failure	52
Supply/Discharge Air Temperature Sensor Failure	54
CO ₂ Sensor Failure	54
VAV Damper Failure	55
VAV Series Fan Failure	56
VAV Parallel Fan Failure	57
PSC (Permanent Split Capacitor) Variable Speed Motor Check	58
VAV Electric Heat Stage Failure	58
VAV Modulating Hot Water Failure	59
Trane/Honeywell Proportional Valve Check Out	60
Symbio™ 210 Firmware Restore and Recovery Methods	61
Appendix: Typical Trane Factory Wiring Diagrams	62
Additional Resources	64



Overview

The Symbio™ 210 controller is a programmable, general-purpose BACnet®, microprocessor-based, direct digital controller (DDC). This controller can be installed as a factory or field device. When this controller is factory installed on Trane® Variable-Air-Volume (VAV) terminal units, the factory will download the unit with the appropriate VAV programs and configuration settings for the unit. These can include sales-order-specified airflow setpoints.

Trane VAV units are made with either pneumatic or microprocessor controls (DDC/VAV). This manual considers only terminal units with BACnet Symbio 210 controller DDC/VAV controls. Factory-installed DDC/VAV controls are available with all single duct terminal units, parallel fan-powered, and series fan-powered units.

The Symbio 210 controller can be configured with three (3) different application programs:

- **Space Temperature Control (STC)**

When the Symbio 210 controller is configured for STC, it modulates the VAV damper blade based on the zone temperature, measured airflow, airflow and temperature, and setpoints, to continuously control conditioned air delivery to the space. The volume of monitored incoming air and the damper adjusts to provide accurate airflow control independent of the duct pressure. The damper modulates discharge airflow into the space between operator airflow setpoints depending on space conditions. Additionally, the fan and heat outputs may be energized depending on the application.

- **Ventilation Flow Control (VFC)**

When the Symbio 210 controller is configured for VFC, it can be applied to a VAV terminal and tempers cold outdoor air that is brought into a building for ventilation purposes. The tempered air is intended to supply an air handler unit (AHU), which provides comfort control to the zones it is serving. The VAV terminal supplies the correct amount of ventilation air. When reheat is added, it tempers the ventilation air to reduce the load on the air handler by sensing the discharge air temperature of the VAV unit, and controls its long-term average to the discharge air temperature setpoint.

Note: Communicated Discharge Air Temperature Setpoint range is between 19°F and 70°F.

- **Flow Tracking Control (FTC)**

When the Symbio 210 controller is configured for FTC, it works in conjunction with another Symbio 210 controller configured for STC. The current discharge airflow from the STC controller is communicated to the FTC controller. The FTC controller is then configured to supply an offset (positive or negative) flow relative to the other VAV box(es). This provides positive or negative pressure to a zone.

The BACnet® Protocol

The Building Automation and Control Network protocol is a standard that allows building automation systems or components from different manufacturers to share information and control functions. BACnet provides building owners the capability to connect various types of building control systems or subsystems together for many uses. In addition, multiple vendors can use this protocol to share information for monitoring and supervisory control between systems and devices in a multi-vendor interconnected system.

The BACnet protocol identifies standard objects (data points) called BACnet objects. Each object has a defined list of properties that provide information about that object. BACnet also defines a number of standard application services that access data and manipulate these objects and provides a client/server communication between devices.

BACnet Testing Laboratory (BTL) Certification

The Symbio 210 supports the BACnet communication protocol and has been designed to meet the requirements of the application-specific control profile. For more details, refer to the BTL web site at www.bacnetassociation.org.

Ordering Numbers

Table 1. Ordering numbers

Ordering Number	Description
BMSY210AAA0100011	Symbio™ 210 MS/TP Programmable VAV Controller with no actuator
BMSY210AAA0100021	Symbio 210 MS/TP Programmable VAV Controller with no actuator, UL-864/UUKL (a)
BMSY210AAA0T00011	Symbio 210 MS/TP Programmable VAV Controller with Trane actuator

Table 1. Ordering numbers (continued)

Ordering Number	Description
BMSY210AAA0B00011	Symbio 210 MS/TP Programmable VAV Controller with Belimo actuator
BMSY210ACA0T00011	Symbio 210 MS/TP Programmable Bypass Controller with Trane actuator
BMSY210ACA0T10011	Symbio 210 MS/TP Programmable Bypass Controller with Trane actuator and duct temperature sensor
BMSY210VTA0T01011	Symbio 210 MS/TP Programmable Zone Damper Controller with Trane actuator and no pressure sensor
BMSY210VTA0101011	Symbio 210 MS/TP Programmable Zone Damper Controller with no actuator and no pressure sensor
BMSY210AAA0T00111	Symbio 210e IP Programmable VAV Controller with Trane actuator
BMSY210AAA0B00111	Symbio 210e IP Programmable VAV Controller with Belimo actuator
BMSY210AAA0100111	Symbio 210e IP Programmable VAV Controller with no actuator
BMSY210AAA0100121	Symbio 210e IP Programmable VAV Controller with no actuator, UL-864/UUKL ^(a)
501897940100	VAV controls metal enclosure
WIR06493	Actuator Harness for Symbio 210

^(a) When installed and programmed in accordance with the *Engineered Smoke Control System for the Tracer® SC+System Controller, Application Guide (BAS-APG040*-EN)*.

Controller Specifications and Dimensions

Table 2. Controller storage, operating, and compliance information

Storage	
Temperature:	-67°F to 203°F (-55°C to 95°C)
Humidity:	5% to 95% (non-condensing)
Operating	
Temperature:	-40°F to 122°F (-40°C to 50°C)
Humidity:	5% to 95% (non-condensing)
Power:	20-4–27.6 Vac, (24 Vac ±15% nominal, 50–60 Hz, 10.5 VA). See Table 6 , p. 15 for transformer sizing details.
Environmental Rating (Enclosure):	NEMA 1
Pollution:	U.L. 840: Degree 2
Agency Compliance	
<ul style="list-style-type: none"> • UL916 PAZX- Open Energy Management Equipment • UL94-5V Flammability • Only Applicable for specific part numbers listed in previous section: UL864/UUKL Smoke Control (when installed and programmed in accordance with the <i>Engineered Smoke Control System Application Guide (BAS-APG040*-EN)</i>). • UL2043 Plenum Rated (Plastic enclosure versions without actuators only) • CE Marked • FCC Part 15, Subpart B, Class B Limit • VCCI-CSPR 32:2016 • CAN ICES-003(B)/NMB-003(B) • Communications BACnet® MS/TP, BACnet IP, or BACnet Zigbee (Air-Fi) • The Symbio™ 210 is BACnet Testing Laboratory (BTL) certified to revision 15 of the ASHRAE BACnet-135 standard as a Building Controller (BC) profile device • The European Union (EU) Declaration of Conformity is available from your local Trane® office 	

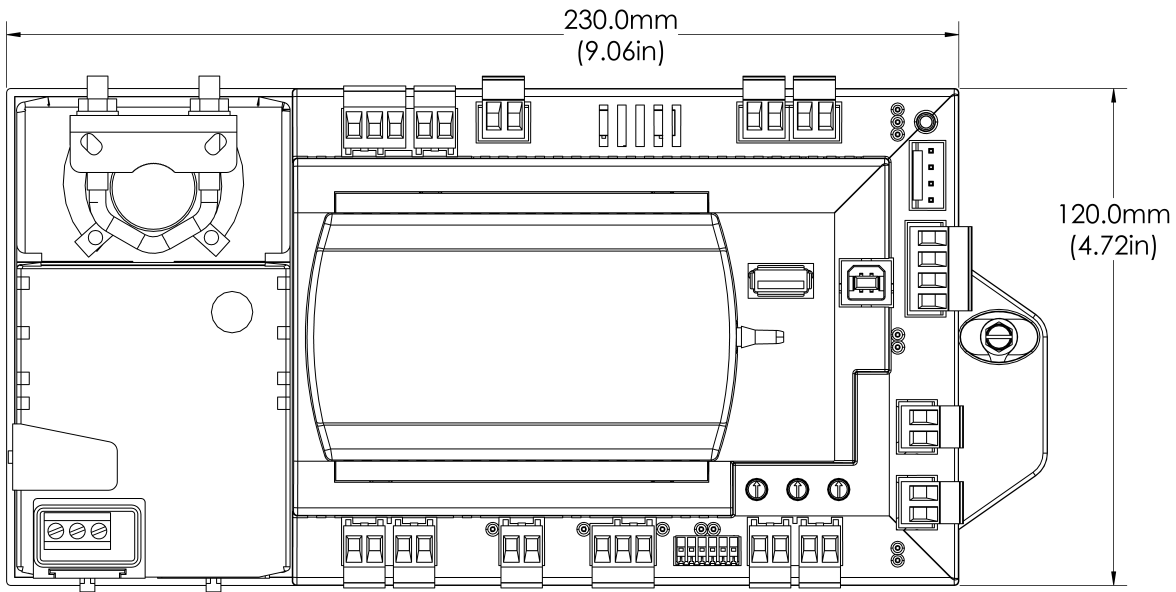
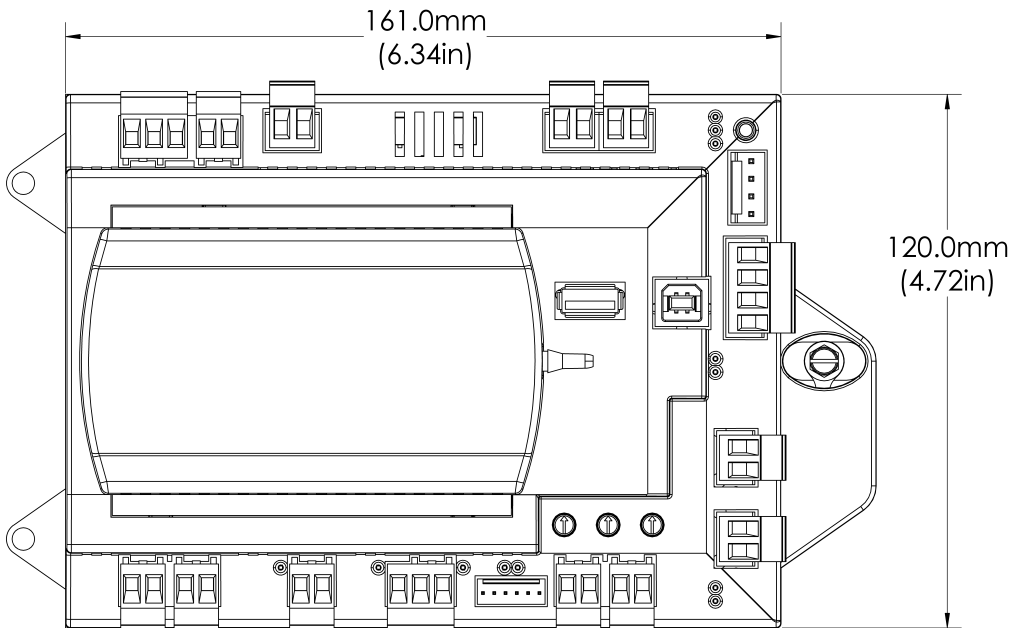
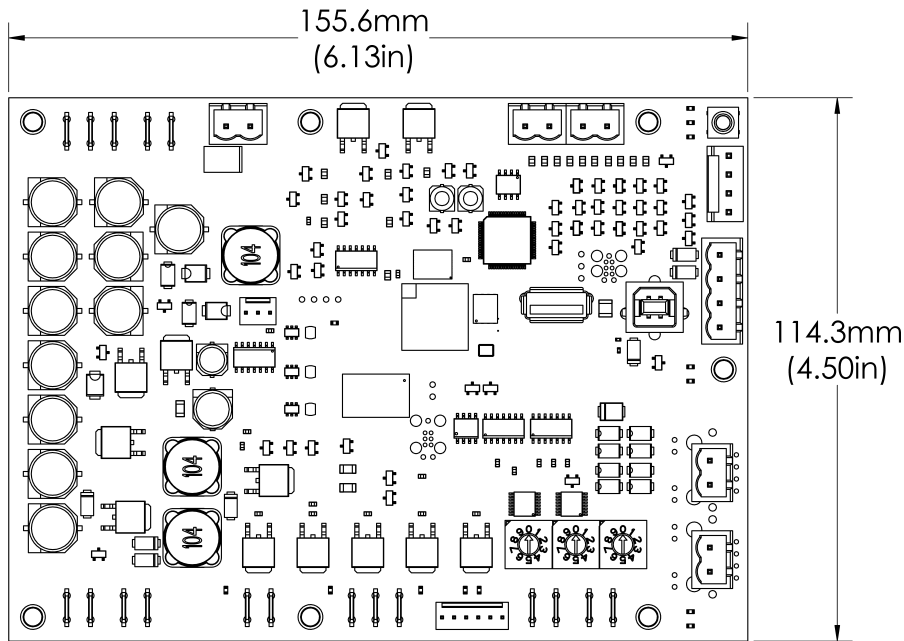
Figure 1. Dimensions (with actuator)**Figure 2. Dimensions (without actuator)**

Figure 3. Dimensions (Trane VAV factory version)



Note: Symbio 210e is the same dimensions at Symbio 210.

Shipping and Storage

Each VAV order ships with service literature. When unpacking, ensure that the literature is not lost or discarded with the packing material.

Note: Visually inspect the individual components for obvious defects or damage. All components are thoroughly inspected before leaving the factory. Any claims for damage incurred during shipment must be filed with the carrier.

If storing any component of the VAV system and/or field installed accessories for a period of time prior to installation, those components must be protected from the elements. See “[Controller Specifications and Dimensions](#),” p. 7 for storage location temperature and the relative humidity ranges.

Important: The warranty will not cover damage to the VAV or controls due to negligence during storage. A controlled indoor environment must be used for storage.

Symbio™ 210 Features

[Table 3, p. 9](#) provides information about the features of the Symbio 210 controller.

Table 3. Symbio 210 Features

Feature	Description
Controller Interface Flexibility:	The Symbio 210 controller allows VAV units to communicate on a BACnet® MS/TP, BACnet IP, or BACnet Zigbee (Air-FI) link and is compatible with the latest generation of Trane controls. This controller can operate in standalone mode, peer-to-peer with one or more other units, or when connected to a Tracer® SC+ or a 3rd party building automation system that supports BACnet.
Flow Tracking:	The Symbio 210 controller is designed with the ability to be applied in flow tracking applications. This allows the controller to be paired with one of its peers to mirror the flow of the lead unit, with or without an offset (positive or negative static pressure as desired).
Ventilation Flow Control with Tempering:	The Symbio 210 controller is designed with the ability to be applied in ventilation flow control applications. These applications combine a fresh air unit with ventilation boxes to provide fresh (tempered) air to a zone. This feature also includes a freeze protection sequence to protect the hot water reheat coil from low supply air temperatures.



Overview

Table 3. Symbio 210 Features (continued)

Feature	Description
Auto-commissioning Sequence:	The Symbio 210 controller is designed with an auto-commissioning sequence. With a discharge air temperature sensor, this feature exercises the air valve, fan, and heat in the box and records the temperature before/after the action. This allows the installer to easily verify the operation of the unit and commission by exception. An auto-commissioning report can be generated with Tracer TU service tool.
Automatic Calibration:	The Symbio 210 controller is designed to automatically calibrate the flow transducer each time the unit transitions to unoccupied. This eliminates the need to initiate/schedule calibration for most installations. The exception is 24/7 sites, in which case, the Tracer SC+ or another BAS can be used to initiate/schedule calibration.
Local Versus Remote Reheat Flexibility:	The controller can be configured to have local and/or remote heat. In addition, provided configuration flexibility allows the installer to select priority for either local or remote heat has.
Spare Inputs/Outputs:	The Symbio 210 controller has spare I/Os that are not used by the VAV applications. These spare I/Os can be programmed using the Tracer Graphical Programming editor (by means of the Tracer TU service tool) to measure and/or control ancillary devices such exhaust fans, second air valve for dual duct VAV, or sensing relative humidity.
Expansion	The Symbio 210 controller can be expanded with an additional eight (8) I/O points. This expansion allows up to two (2) XM30 or XM32 expansions modules to be added to a Symbio 210 controller.
Wireless Zone Sensors:	The Symbio 210 controller is compatible with the latest technology available from Trane. Wireless zone sensors provide flexibility of sensor location and re-location as well as reducing the cost of installation. Wireless zone sensor receivers are available as a factory or field installed option.
Drive Min/Max from Zone Sensor:	When applied with a Trane zone sensor module, that includes a thumbwheel setpoint or a LCD display, the Symbio 210 controller can easily be overridden to minimum and maximum flow. By simply turning the thumbwheel to * or increasing the setpoint to maximum on display sensors (end of range in one direction), the controller drives the air valve to the minimum flow setpoint. Likewise, turning the thumbwheel to the ** or decreasing the setpoint to minimum on display sensors (end of range in the other direction) the controller drives the air valve to the maximum flow setpoint. This feature can be disabled by putting Airflow Override Local, Multistate Input 2, and Out of Service using Tracer TU.
Ventilation Flexibility:	Ventilation can be managed in the following ways: <ul style="list-style-type: none"> • Fixed occupancy ventilation setpoint • Scheduled (calculated) ventilation setpoint • Occupancy sensor to switch between normal and reduced ventilation • CO₂ sensor for demand-controlled ventilation

Device Connections

The following table provides information about the types of device connections.

Table 4. Device connections

Connection	Quantity	Types	Range	Notes
Analog input (AI1 to AI3)	3	Temperature	10 kΩ thermistor	AI1 to AI3 can be configured for timed override capability.
		Setpoint	189 Ω to 889 Ω	
		Resistive	100 Ω to 100 kΩ	Typically used for fan speed switch.
Universal input (UI1 and UI2)	2	Linear	0 to 20 mA	These inputs may be configured to be thermistor or resistive inputs, 0 to 10 Vdc inputs, or 0 to 20 mA inputs.
		Linear	0 to 10 Vdc	
		Temperature	10 kΩ thermistor	
		Setpoint	189 Ω to 889 Ω	
		Resistive	100 Ω to 100 kΩ	Low impedance relay contacts recommended.
		Binary	Open collector/dry contact	
		Pulse	Solid state open collector	Minimum dwell time is 25 ms On and 25 ms Off.
Binary input (BI1)	1		24 Vac detect/dry contact	The Symbio 210 controller provides the 24 Vac that is required to drive the binary inputs when using the recommended connections.
Binary output (BO1 to BO5)	5	TRIAC (BO1 to BO5)	0.5 A max @24 Vac, resistive and pilot duty	Used as binary outputs and modulating 3-wire floating point. TRIAC switches to ground.

Table 4. Device connections (continued)

Connection	Quantity	Types	Range	Notes
Analog output/binary input (AO1/BI2 and AO2/BI3)	2	Linear output	0 to 20 mA	Each termination must be configured as either an analog output or binary input.
		Linear output	0 to 10 Vdc	
		Binary input	Dry contact	
		PWM output	80 Hz signal @ 15 Vdc	
Pressure inputs (PI1)	1	3-wire	0 to 5 in H ₂ O	Pressure inputs supplied with 5 volts of power. Designed for Kavlico™ pressure transducers.
Overall Point Total	14			

Note: In addition, Eight (8) expansion points can be added for XM30 or XM32 expansion modules. For more information on Expansion Module wiring see the Tracer XM30, XM32, XM70, and XM90 Expansion Module, Installation Operation and Maintenance manual (BAS-SVX46*-EN).

Device Inputs/Outputs

Below is a list of device inputs and outputs.

- A twisted/shielded communication link
- Zone sensor
- Occupancy sensor (optional)
- Discharge Air Temperature (DAT)
- CO₂ sensor
- 24 Vac, Class II power

Table 5, p. 11 provides details for each type input/output.

Table 5. Symbio 210 inputs and outputs

Analog Inputs 1 through 3 <i>Note: Configuration options when used as spare; 10kΩ thermistor, 0 to 1kΩ linear setpoint, 200Ω to 20kΩ linear.</i>	Universal Inputs UI1 and UI2 <i>Note: Configuration options when used as spare; 4 to 20mA, 0 to 10V, resistive (see AI specifications), binary (solid state open collector).</i>
<ul style="list-style-type: none"> • AI1: Space temperature; thermistor: 10kΩ @77°F (25°C) range: 32°F to 122°F (0°C to 50°C) • AI2: Space setpoint; potentiometer: 1kΩ from 50 to 90°F (10 to 32.2°C), *** (thumbwheel) functionality supported • AI3: Discharge air temperature: 10kΩ @77°F (25°C) from -40°F to 212°F (-40 to 100°C) 	<ul style="list-style-type: none"> • UI1: Relative Humidity • UI2: CO₂
Pressure Input P1	Binary Input BI1, Dry Contact
P1: Supply air flow; pressure transducer: From 0 to 5 in. water column (0 to 1245 Pa)	BI1: Occupancy
Analog Outputs AO1 and AO2 <i>Note: Configuration options when used a spare; Voltage output is 0 to 10 VDC, 500 ohm min. impedance. Current output is 4 to 20 mA, 500Ω max. impedance.</i>	Binary Outputs 1 through 5 <i>Note: 0.5A Resistive Maximum Rating.</i>
<ul style="list-style-type: none"> • AO1/BI2: ECM • AO2/BI3: SCR Heat/Waver Valve Signal 	<ul style="list-style-type: none"> • BO1: Heat stage 3 TRIAC • BO2: Heat stage 2/Water Valve Close TRIAC • BO3: Heat stage 1/Water Valve Open TRIAC • BO4: Air Damper Open TRIAC • BO5: Air Damper Close TRIAC



Overview

Smoke Control Support (UUKL)

The Symbio™ 210 and 210e Controllers are available in a UL864 certified version, approved to operate as a component of a UUKL system with the Tracer SC+ System Controller (see [“Ordering Numbers,”](#) p. 6). For more information, see *Engineered Smoke Control System for the Tracer SC+ System Controller* (BAS-APG040*-EN).



Wiring Installation

This section provides wiring guideline information about the following:

- “Symbio™ 210 Controller Pre-power Check-out,” p. 13
- “Symbio™ 210 Controller Power Wiring,” p. 13
- “BACnet® MS/TP Communication Link,” p. 16
- “Application Wiring,” p. 22

Symbio™ 210 Controller Pre-power Check-out

Carefully follow the check-out procedures below and read all warnings and notices.


⚠ WARNING

Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

- Check the supply voltage at XFRM.

Note: Proper polarity must be maintained. The 24 Vac is the hot side (+) and  is the ground side (-) of the 24 Vac input.

Important: The Symbio 210 controller cannot be powered from a common 24 Vac transformer that is supplying power to a device containing a full-wave rectifier bridge in its power supply. The acceptable voltage is 20.4 to 27.6 (24 Vac nominal). However, voltages at either extreme may result in increased system instability.

- Verify that the zone sensor connections are correct as detailed in the Symbio 210 controller wiring section.
- If heat has been added to the unit, verify that the proper output connections are correct, as detailed in the Symbio 210 controller wiring section.
- Verify that the tubing is properly connected to the differential pressure transducer.

Transformer Recommendations

A 24 Vac power supply must be used for proper operation of the binary inputs, which requires 24 Vac detection. In addition, the spare 24 Vac outputs may be used to power relays and TRIACS.

- **AC transformer requirements:** UL listed, Class 2 power transformer, 24 Vac \pm 15%, device max load 24 VA. The transformer must be sized to provide adequate power to the controller (24 VA) and binary outputs loads. See [Table 6, p. 15](#) for additional sizing information.
- **CE-compliant installations:** The transformer must be CE marked and SELV compliant per IEC standards.

Symbio™ 210 Controller Power Wiring

The following section provides wiring guidelines for powering the Symbio 210 controller.

⚠ WARNING

Hazardous Voltage!

Failure to disconnect power before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. Verify that no power is present with a voltmeter.



Wiring Installation

⚠ WARNING

Electrical Shock Hazard!

Failure to follow instructions below could result in death or serious injury.

System contains oversized grounding terminal. All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

NOTICE

Use Copper Conductors Only!

Failure to use copper conductors could result in equipment damage as the equipment was not designed or qualified to accept other types of conductors.

Wiring Requirements

To ensure proper operation of the Symbio 210 controller, install the power supply circuit in accordance with the following guidelines:

- The controller must receive AC power from a dedicated power circuit.
Important: Failure to comply may cause the controller to malfunction.
- A dedicated power circuit disconnect switch must be near the controller, easily accessible by the operator, and marked as the disconnecting device for the controller.
- DO NOT run AC power wires in the same wire bundle with input/output wires.
Important: Failure to comply may cause the controller to malfunction due to electrical noise.
- 18 AWG (0.823 mm²) copper wire is recommended for the circuit between the transformer and the controller.

Connecting the Wires

1. Disconnect power to the transformer.
2. Connect the 24 Vac secondary wires from the transformer to the XFMR 24 Vac and $\overline{17}$ terminals on the Symbio 210 controller.

Power On Check

1. Verify that the 24 Vac connector and the chassis ground are properly wired.
2. Remove the lockout/tagout from the line voltage power to the electrical cabinet.
3. Energize the transformer to apply power to the Symbio 210 controller.
4. Observe the cleared Symbio 210 controller when power is applied to verify the power check sequence as follows:
 - a. The Status LED blinks red or green while the controller is booting.
 - b. The Status LED illuminates solid green when the controller is finished booting.

Note: If the sequence completes as described, the controller is properly booted and ready for the application code. If the Status LED flashes red, a fault condition exists.

Guidelines

- Use 18 AWG copper wire (recommended) for power and connect to terminals XFRM 24 Vac and $\overline{17}$.
- Use U.L. listed, Class 2 power transformer, 20.4 to 27.6 Vac (24 Vac nominal).
- Size the transformer to provide adequate power to the Symbio 210 controller (24 VA maximum) and outputs (maximum 12 VA for each binary output).

Important: A dedicated 24 Vac, Class 2 transformer is recommended to power the Symbio 210 controller. When powering multiple controllers from one transformer, polarity must be maintained. Terminal 24 Vac is designated positive (+) and terminal $\overline{17}$ is negative (-) to the unit casing ground. It is important to include power consumption in the calculations.

- The power consumption for cooling-only Series F Models (VariTrac™ and VariTrane) is up to 26 VA. See [Table 6, p. 15](#) for information about calculating actual VA requirements.

Table 6. Calculating actual VA requirements

Item	Sub	VA Draw Per I/O (24 Vac)	Maximum Total VA Draw (24 Vac)	
Symbio 210 Board	Symbio 210 (No I/O)		8 VA	
	Symbio 210e (No I/O)		9.5 VA	
	3 x AI ^(a)	0 VA per AI	0 VA	
	2 x UI ^(a)	0 VA per UI	0 VA	
	1 x PI	0.3 VA per PI	0.3 VA	
	1 x BI	0.1 VA per BI	0.1 VA	
	2 x AO	1.1 VA Per AO	2.2 VA	
	5 x BO (TRIAC)	0.1 VA Per TRIAC (No Load)	0.5 VA	
	Subtotal for Symbio 210 with all I/O used			11.1 VA
	Subtotal for Symbio 210e with all I/O used			12.6 VA
24 Vdc Supply	200 mA ^(b) IMC and I/O	1 VA Per 20 mA DC	10.0 VA	
	250 mA USB Host	3 VA Per USB Host	3.1 VA	
	Total for Symbio 210 fully loaded		24.2 VA	
	Total for Symbio 210e fully loaded		25.7 VA	
Binary Outputs (TRIAC)	5 x BO (TRIAC)	0.5 A @ 24 Vac = 12 VA per BO	60.0 VA	
Below is an example VA draw calculation for a BACnet® MS/TP controller on a cooling-only VAV box:				
Description		Draw		
<ul style="list-style-type: none"> Symbio no I/O Setpoint and Zone Temperature Sensor Input Air Flow Sensor Input Occupancy Input Binary Out for Air Damper (only one energized at a time, not including actuator draw) Trane F Series Air Damper Actuator (Taken from) 		<ul style="list-style-type: none"> 8.0 VA 0 VA 0.3 VA 0.1 VA 0.1 VA 4.0 VA 		
Total		12.5 VA		
Below is an example VA draw calculation for a BACnet IP controller on a hot water reheat VAV box:				
Description		Draw		
<ul style="list-style-type: none"> Symbio 210e Setpoint and Zone Temperature Sensor Input Air Flow Sensor Input Binary Out for Water Valve (only one energized at a time, not including actuator draw) Belimo Hot Water Actuator (TR24-3) Binary Out for Air Damper (only one energized at a time, not including actuator draw) Trane F Series Air Damper Actuator (Taken from) 		<ul style="list-style-type: none"> 9.5 VA 0 VA 0.3 VA 0.1 VA 1.0 VA 0.1 VA 4.0 VA 		
Total		15 VA		
Below is an example VA draw calculation for a BACnet Zigbee controller with XM on a hot water reheat VAV box:				



Wiring Installation

Table 6. Calculating actual VA requirements (continued)

Item	Sub	VA Draw Per I/O (24 Vac)	Maximum Total VA Draw (24 Vac)
Description		Draw	
• Symbio 210		• 8.0 VA	
• Air-Fi WCI (X13790901030) ^(c)		• 0.5 VA (10 mA WCI power draw)	
• Air Flow Sensor Input		• 0.3 VA	
• XM32		• 5.0 VA (100 mA XM32 power draw)	
• Binary Out for Water Valve (only one energized at a time, not including actuator draw)		• 0.1 VA	
• Belimo Hot Water Actuator (TR24-3)		• 1.0 VA	
• Binary Out for Air Damper (only one energized at a time, not including actuator draw)		• 0.1 VA	
• Trane F Series Air Damper Actuator (Taken from)		• 4.0 VA	
Total		19 VA	

^(a) Insignificant load.

^(b) See device connected to DC supply for current draw.

^(c) Older WCI version draw more current than current design.

- Replace the control box cover after field wiring to prevent any electromagnetic interference.
- Review for factory-installed components and voltage amperage.

Table 7. Binary load values

Style	Volt Amps
F - Style Actuator	4 VA
Air Valve Actuator C through E Style	12 VA
Fan Power Fan Output	6 VA
Hot Water Proportional	4 VA
Hot Water 2 Position	6.5 VA
Electric Heater Magnetic Contactor	10 VA
Electric Heater Mercury Contactor	12 VA

BACnet® MS/TP Communication Link

This subsection provides information about the following:

- [“Wiring Guidelines,” p. 17](#)
- [“Wiring Best Practices,” p. 17](#)
- [“Setting Up the Symbio™ 210 Controller on a BACnet® MS/TP Link,” p. 17](#)
- [“Setting the Address,” p. 18](#)
- [“BACnet Networks Without a Tracer SC+ System Controller,” p. 21](#)
- [“BACnet Networks With a Tracer SC+ System Controller,” p. 21](#)
- [“Device ID Assignment for BACnet/IP Devices,” p. 22](#)
- [“Connecting the Wires,” p. 14](#)
- [“Application Wiring,” p. 22](#)

For more details about BACnet MS/TP communication link, see the *BACnet® MS/TP Wiring and Link Performance Best Practices and Troubleshooting Installation, Operation, and Maintenance* (BAS-SVX51*-EN).

⚠ WARNING

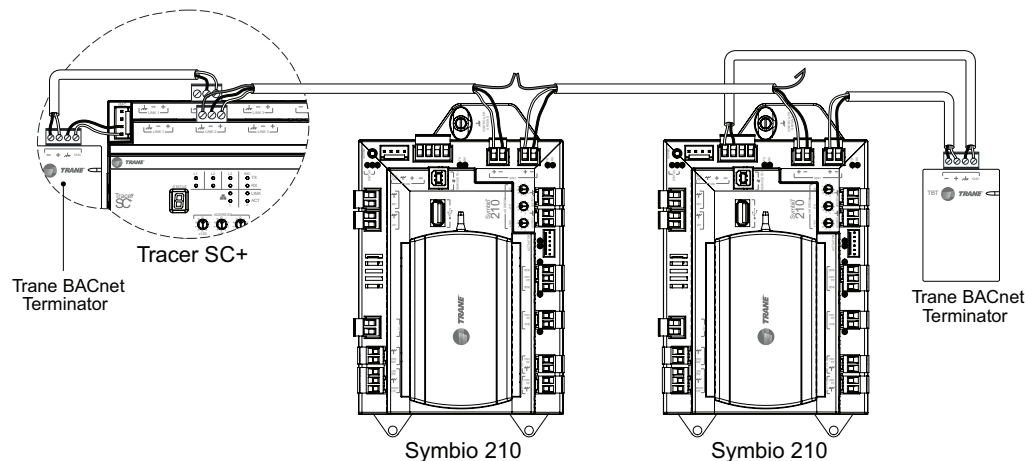
Electrical Shock Hazard!

Failure to follow instructions below could result in death or serious injury. System contains oversized grounding terminal. All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

Wiring Guidelines

- Use 18 AWG Trane purple-shielded communication wire for BACnet installations.
- Link limit of 4,000 ft. and 60 devices maximum.
- Use a Trane BACnet termination on each end of the link.
- Use daisy chain topology (see Figure 4, p. 17).
- Maintain polarity.

Figure 4. BACnet® MS/TP link wiring



Wiring Best Practices

To ensure proper network communication, follow the recommended wiring and best practices below when installing communication wire:

- All wiring must comply with the National Electrical Code™ (NEC) and local codes.
- Ensure that 24 Vac power supplies are consistent in regards to grounding. Avoid sharing 24 Vac between controllers.
- Avoid over tightening cable ties and other forms of cable wraps. This can damage the wires inside the cable.
- Do not run communication cable alongside or in the same conduit as 24 Vac power. This includes the conductors running from TRIAC-type inputs.
- In open plenums, avoid running wire near lighting ballasts, especially those using 277 Vac.
- Use same communication wire type, without terminators, for the zone sensor communication stubs from the Symbio 210 controller IMC terminals to the zone sensor communication module.
- Zone Sensor communication wiring length limits of 300 ft. (100 m).

Note: For more details, see the *BACnet® MS/TP Wiring and Link Performance Best Practices and Troubleshooting Installation, Operation, and Maintenance (BAS-SVX51*-EN)*.

Setting Up the Symbio™ 210 Controller on a BACnet® MS/TP Link

Observe the following when setting up the Symbio 210 controller on a BACnet link.

- Use 18 AWG shielded communication wire for BACnet MS/TP installations.



Wiring Installation

- Limit BACnet MS/TP wiring links to 4,000 ft. There is a maximum of 60 devices per link.

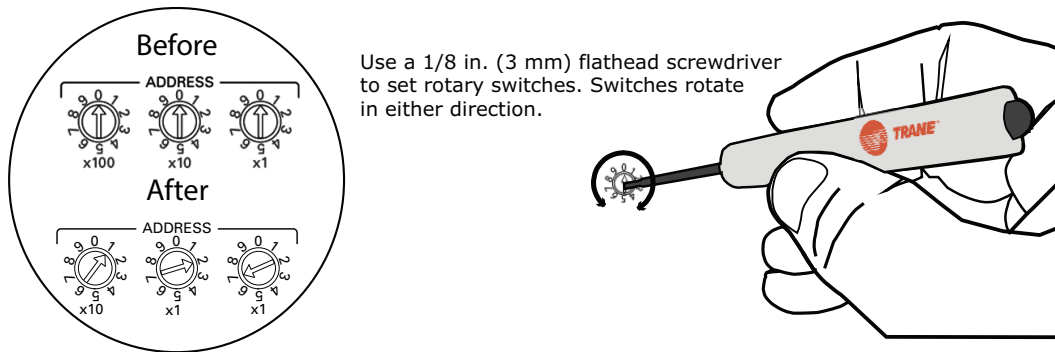
Note: Three BACnet MS/TP links are available on the Tracer® SC+.

- Connect the BACnet link to the Symbio 210 controller terminals labeled Link on the lower-right corner of the Symbio 210. Incoming wires can be connected to the first two terminals, and the outgoing wires can be connected to the second set of terminals, so there is only one wire per termination. For more details, see the *BACnet® MS/TP Wiring and Link Performance Best Practices and Troubleshooting Installation, Operation, and Maintenance* (BAS-SVX51*-EN).

Setting the Address

The three rotary address dials on the Symbio 210 serve one or two purposes depending upon the network: they are always used for the MAC Address, which is sometimes all or part of the BACnet Device ID.

Figure 5. Setting the rotary address



MAC Address

The MAC Address is required by the RS-485 communication protocol on which BACnet operates. Valid MAC addresses are 001 to 127 for BACnet.

Important: Each device on the link must have a unique MAC Address/Device ID. A duplicate address or a 000 address setting will interrupt communications and cause the Tracer® SC device installation process to fail.

BACnet Device ID

The BACnet Device ID is required by the BACnet network. Each device must have a unique number from 001 to 4094302.

BACnet®/IP Communication Link

This subsection provides information on the following:

- Wiring Guidelines
- Wiring Best Practices
- Setting up the Symbio 210e Controller on a daisy chain BACnet/IP Link
- Setting up the Symbio 210e Controller on a home run BACnet/IP Link
- Setting the address
- BACnet/IP Networks Without a Tracer® SC System Controller
- BACnet/IP Networks With a Tracer SC System Controller

⚠ WARNING

Electrical Shock Hazard!

Failure to follow instructions below could result in death or serious injury.

System contains oversized grounding terminal. All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

Wiring Guidelines

- Use CAT5 or CAT5e non-shielded twisted pair, Ethernet cable with RJ45 connectors for BACnet/IP installations.
- Cable length limit is 100 meters (328 feet).
- Use daisy chain (Figure 6, p. 19) or home run topology (Figure 7, p. 20).

Figure 6. BACnet®/IP daisy chain wiring for Symbio 210e

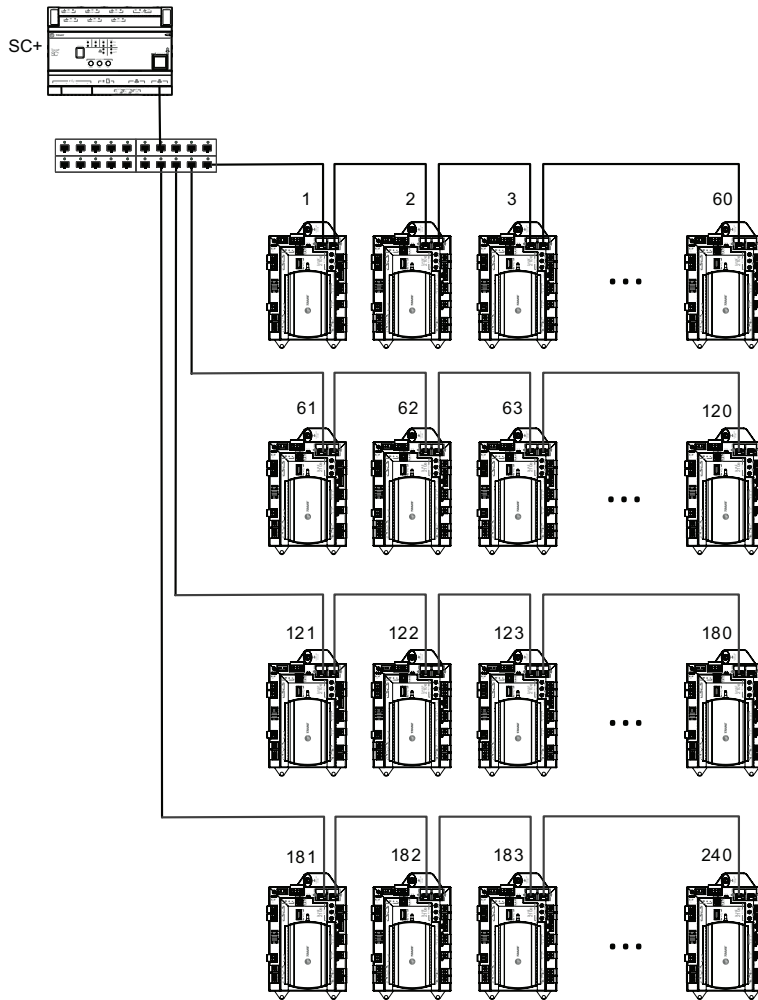
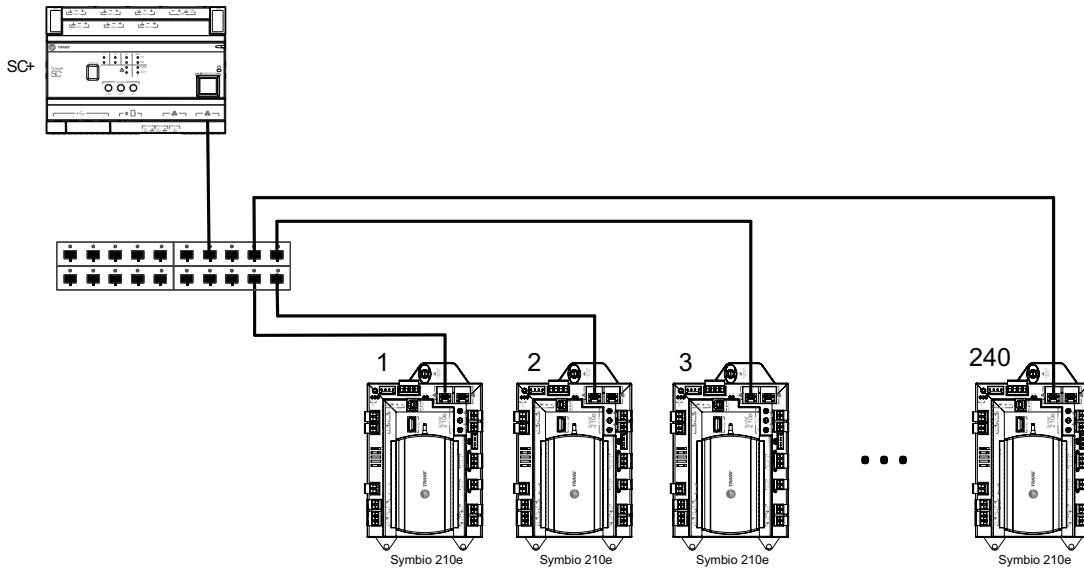


Figure 7. BACnet/IP home run wiring for Symbio 210e


Note: Maximum of 240 devices per SC+.

Wiring Best Practices

To ensure proper network communication, follow the recommended wiring best practices below when installing communication wire:

- All wiring must comply with the National Electrical Code™ (NEC) and local codes.
- Ensure that 24 Vac power supplies are consistent in regards to grounding. Avoid sharing 24 Vac between controllers.
- Avoid over tightening cable ties and other forms of cable wraps. This can damage the wires inside the cable.
- Do not run communication cable alongside or in the same conduit as 24 Vac power. This includes the conductors running from TRIAC-type inputs.
- In open plenums, avoid running wire near lighting ballasts, especially those using 277 Vac.
- Use Trane purple communication wire without terminators, for the zone sensor communication stubs from Symbio 210 controller IMC terminals to the zone sensor communication module.
- Zone sensor communication wiring length limit of 328 feet (100 meters).

Setting the Symbio™ 210 Controller on a Daisy Chain BACnet®/IP Link

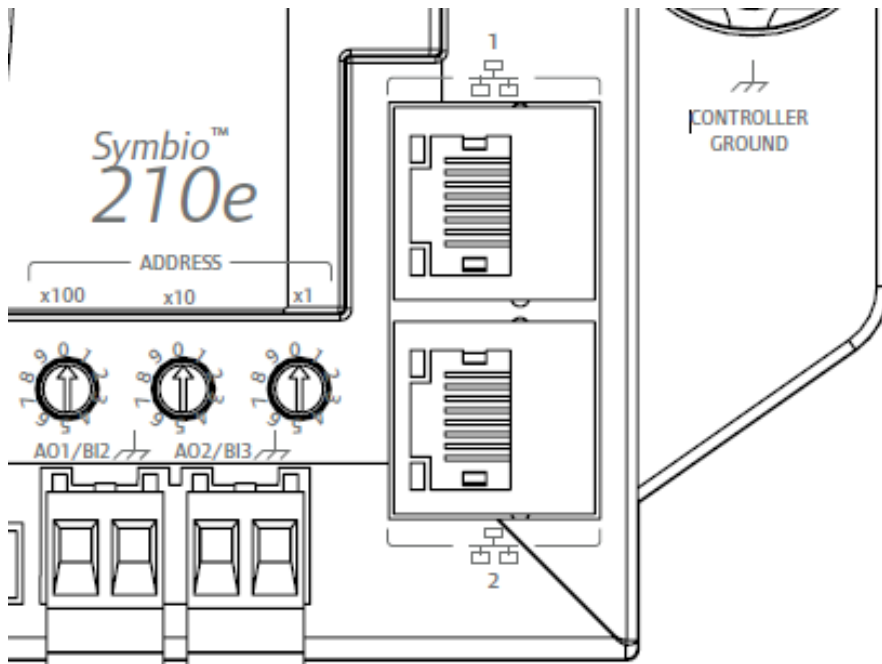
Observe the following when setting up the Symbio 210 controller on a daisy chain BACnet/IP link:

- Use CAT5 or CAT5e non-shielded twisted pair, Ethernet cable with RJ45 connectors for BACnet/IP installations.
- Cable length limit is 100 meters (328 feet).
- Connect the Ethernet cable coming into the Symbio 210 controller RJ45 jack marked #1. Connect an Ethernet cable going to the next controller in the daisy chain to the RJ45 jack marked #2. See [Figure 8, p. 21](#).

Setting the Symbio 210 Controller on a Home Run BACnet/IP Link

Observe the following when setting up the Symbio 210 controller on a home run BACnet/IP link:

- Use CAT5 or CAT5e non-shielded twisted pair, Ethernet cable with RJ45 connectors for BACnet/IP installations.
- Cable length limit is 100 meters (328 feet).
- Connect the Ethernet cable from the Symbio 210 controller RJ45 jack marked #1 back to the switch port dedicated for this controller. See [Figure 8, p. 21](#).

Figure 8. Ethernet cable connection from Symbio 210


BACnet Networks Without a Tracer SC+ System Controller

On BACnet networks without a Tracer SC+ system controller, the Device ID can be assigned one of two ways:

- It can be the same number as the MAC Address, determined by the rotary address dials on the Symbio 210 controller. For example, if the rotary address dials are set to 042, both the MAC Address and the BACnet Device ID are 042, OR
- It can be soft set using Tracer TU service tool or Symbio UI. If the BACnet Device ID is set using Tracer TU service tool or Symbio UI, the rotary address dials only affect the MAC Address, they do not affect the BACnet Device ID.

BACnet Networks With a Tracer SC+ System Controller

On BACnet networks with a Tracer SC system controller, the Device ID for the Symbio 210 controller can be soft set by the system controller using the following scheme.

Note: The BACnet Device ID is displayed as the Software Device ID on the Tracer TU Controller Settings Page in the Protocol group.

Device ID Assignment for BACnet® MS/TP Devices

Each unit controller must have a unique BACnet device ID. Tracer SC+ automates the process by calculating a unique device ID for each unit controller and then saving the device ID to memory in each device.

BACnet MS/TP device IDs are calculated using the following three sets of values:

- The Tracer SC+ rotary switch value (1 to 419)
- The Tracer SC+ BACnet MS/TP link number (1 to 3)
- The unit controller rotary switch value (1 to 127)

The three values are joined together to form the BACnet® device ID for the unit controller as shown in the following table.

Table 8. Calculating the BACnet Device ID

Tracer® SC+ rotary switch value (21)	0	2	1				
Tracer SC+ BACnet MS/TP link number (1)				1			
Unit controller rotary switch value (38)					0	3	8
BACnet Device ID 211038	0	2	1	1	0	3	8



Wiring Installation

Device ID Assignment for BACnet/IP Devices

For devices connecting over BACnet/IP, Tracer® SC+ calculates the device ID with the following:

- The BACnet network number for the BACnet/IP link. (This number can be changed by the user).
- The unit controller rotary switch value. (The Tracer SC+ rotary address is not used to calculate BACnet/IP device IDs).

The following table shows this process using a Tracer UC600 unit controller.

Table 9. Calculating the BACnet/IP Device ID

BACnet network number Eth port 1 (1)		1			
Unit controller rotary switch value (42)			0	4	2
BACnet/IP Device ID: 0142	0	1	0	4	2

For BACnet MS/TP Network numbers higher than 4190, TTrraacceerr SSCC++ will not be able follow this scheme and will not propose a Device ID for the unit controller. The controller can be installed with the Device ID number previously assigned to it.

Note: It is very important to avoid duplication of BACnet network numbers or device IDs.

Application Wiring

This section provides information about pre-configured wiring for the following applications:

- “Zone Sensor Wiring,” p. 22
- “Duct Temperature Sensor Wiring,” p. 23
- “Binary Wiring,” p. 24

Note: For more details about mounting, wiring, and configuring wireless zone sensors, see the section, “Additional Resources,” p. 64.

Zone Sensor Wiring

Zone Sensor Hard Wired Option

Depending on the zone sensor options used, a maximum of seven (7) wires may be required to run from the Symbio 210 controller to the zone sensor. The zone sensor options are:

- Zone sensor (temperature only); Part Number X1351152801.
- Zone sensor with timed override (TOV) on/cancel button; Part Number X1351153001.
- Zone sensor with adjustable setpoint thumbwheel, Part Number X1351152901.
- Zone sensor with adjustable setpoint thumbwheel, timed override (TOV) on/cancel button; Part Number X1351152701.
- Zone sensor with digital display; Part Number X1379088601.

Note: Display sensor has factory mounted communication module.

- Communications module; Part Number X1365146702, one (1) box of 12.

Wireless Communicating Sensor

The following Air-Fi® wireless sensors are available for Symbio 210.

- WCS-SB: Base sensor, no display
- WCS-SD: Display sensor
- WCS-SO: Occupancy sensor
- WCS-SCO2: CO2 sensor
- WCS-SB/R: Remote monitoring sensor
- WCS-SH: Humidity module
- WCI Wireless Communicating Interface

See *Air-Fi® Wireless System Installation, Operation, and Maintenance* (BAS-SVX40*–EN) for part numbers.

Zone Sensor Mounting and Wiring

Mounting Location

A zone sensor in each control zone should be located in the most critical area of the zone. Sensors should not be mounted in direct sunlight or in the area supply air stream. Subdivision of the zone may be necessary for adequate control and comfort. Avoid mounting zone sensors in areas subject to the following:

- Drafts or dead spots behind doors or corners.
- Hot or cold air ducts.
- Radiant heat from the sun or appliances.
- Concealed pipes or chimneys.
- Surfaces not heated or cooled behind the sensor such as outside walls.
- Airflows from adjacent zones or other units.
- Avoid locations outside of the operating temperature and the humidity range.

Wiring

Each unit must be controlled by a zone sensor that utilizes a standard 10KΩ at 77°F thermistor for temperature outputs. Field wiring for the zone sensors must meet the following requirements:

- Use 18 to 22 AWG stranded, tinned-copper, shielded, twisted-pair wire, recommended.
- Maximum wire length 300 ft. (91 m).
- All wiring must be in accordance with the NEC and local codes.
- If local codes require enclosed conductors, install the zone sensor wires in the conduit.
- See [“Appendix: Typical Trane Factory Wiring Diagrams,” p. 62.](#)

Important: Control wires and power conductors can never be near each other (except at 90 degrees). Do not run power wired through same conduit as signal wires

Zone Sensor Communication Stubs

The wire that runs from a zone sensor to a unit controller is commonly referred to as the communication stub. It is the wire that goes from the IMC terminal link on the Symbio 210 controller down to the zone sensor. At least one zone sensor per area or controller network should include the optional communications module. Installing additional sensors with the communications module provides added convenience for the service technician.

Important: There is no limitation on the number of stubs that can be wired from the Symbio 210 controller. Polarity must be maintained and the length limit is 300 ft. (91 m).

The wire for the communication stub must be the same that is used for BACnet® communication link wiring. See the section, [“Zone Sensor Mounting and Wiring,” p. 23.](#)

Duct Temperature Sensor Wiring



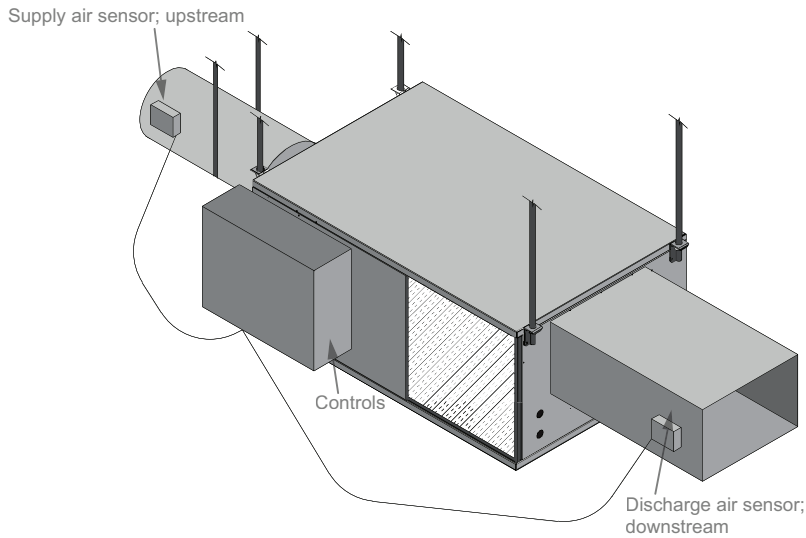
The Symbio 210 controller has one analog input for a discharge air sensor, which can be user-configured for supply air temperature. The typical mounting position of the supply air sensor is upstream of the VAV unit and connected into the Symbio 210 controller at AI3 and  (see the illustration below). However, the discharge air temperature sensor may be downstream of the VAV unit (at the discharge) and connected into the Symbio 210 controller at AI3 and . See the [“Appendix: Typical Trane Factory Wiring Diagrams,” p. 62.](#) For standalone VAV units (those not connected to BACnet link), an air supply sensor is needed for auto-changeover from cooling to heating mode or from heating to cooling mode.

Figure 9. Duct sensor locations and wiring



Binary Wiring

Binary Input Wiring

Each Symbio 210 controller provides one (1) binary input (BI1), which is configured for occupancy with the standard VAV code. The binary input can be configured with the Tracer® TU service tool for occupancy or other use. The input associates 0 Vac with open contacts and 24 Vac with closed contacts. It is activated by a dry contact switch closure. Binary input wiring must meet the following requirements:

- Use 18 to 22 AWG.
- Maximum wire length 1,000 ft. (300 m).
- See “[Appendix: Typical Trane Factory Wiring Diagrams](#),” p. 62 and the *Wireless Zone Sensors for Models WTS, WZS, and WDS Installation, Operation and Maintenance* (BAS-SVX04*-EN) for zone sensor installation instructions and terminal connections.

Occupancy Binary Input

The occupancy binary input can be configured as normal open (NO) or normal closed (NC). Occupied is the normal state and the initial state at power-up and after a reset. Unoccupied is the other state. If the binary input is set as Out of Service, the default occupancy mode is occupied.

Binary Output Wiring

Binary outputs that are required for unit operation are factory wired and commissioned. The Symbio 210 controller does have extra binary outputs available for many other configurations. To program the extra outputs see the *Tracer® BACnet® VAV Controllers Applications Guide* (BAS-APG010*-EN).

Controller LEDs

This section describes how to verify and interpret the Symbio™ 210 controller LEDs and safely operate the controller. LEDs are used to provide controller serviceability. The Symbio 210 controller has the following LEDs located on the front (see Figure 10, p. 25, Table 10, p. 26, and Table 11, p. 27):

- Marquee LED
- Communication status LEDs and IMC status LEDs
- Service button LED
- Five (5) TRIAC status LEDs

For details about wiring communication links, see the *BACnet® MS/TP Wiring and Link Performance Best Practices and Troubleshooting, Installation, Operation, and Maintenance (BAS-SVX51*-EN)*.

Figure 10. BACnet® MS/TP Controller LEDs

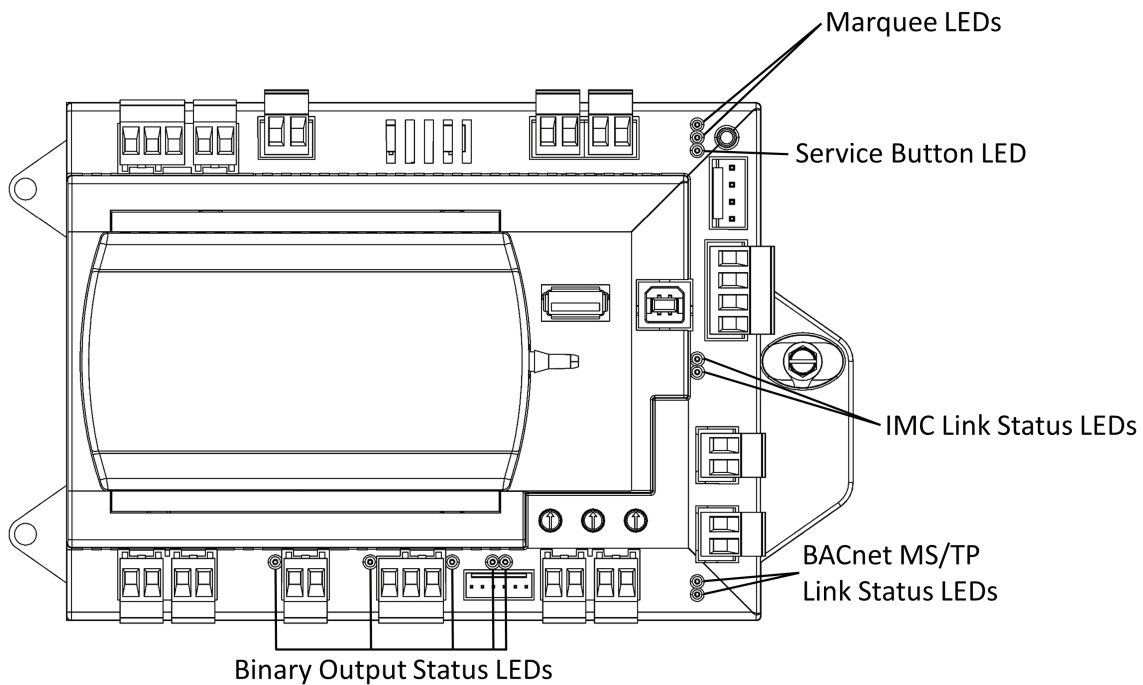


Figure 11. BACnet® IP LEDs

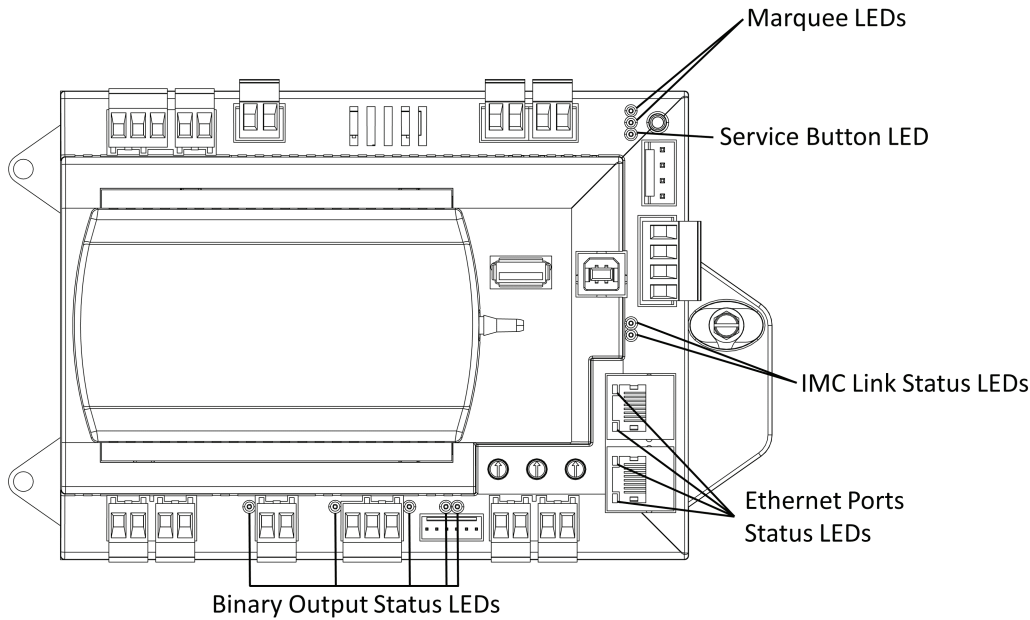


Table 10. LED activities and troubleshooting tips

LED Name	Activities	Indication and Troubleshooting Tips	Notes
Link and IMC	TX blinks green.	Blinks at the data transfer rate when the unit transfers data to other devices on the link.	TX LED: Regardless of connectivity or not, this LED will constantly blink as it continually looks for devices to communicate to. LED not lit: Determine if, for example, a Tracer® SC or BACnet device is trying to talk to the controller or if it is capable of talking to the controller. Also determine if the communication status shows down all of the time. In addition, check polarity and baud rate.
	RX blinks yellow.	Blinks at the data transfer rate when the unit receives data from other devices on the link. <ul style="list-style-type: none"> ON solid yellow: indicates there is reverse polarity. 	
	LED is not lit.	Indicates that the controller is not detecting communication. <ul style="list-style-type: none"> Not lit: cycle the power to reestablish communication. 	
Service	Shows solid green when the LED has been pressed.		When the Symbio™ 210 is placed into boot mode, the system will not run any applications such as trending, scheduling, and TGP2 runtime. The controller is placed into boot mode if the service pin is held in when power is applied. In boot mode, the controller is non-operational and is waiting for a new main application to be downloaded.
	LED not lit.	Indicates controller is operating normally.	
Binary B01 through B05	Shows solid yellow	Indicates a corresponding binary output has been commanded ON. <ul style="list-style-type: none"> Relay coil: indicates that a command has been made to energize. TRIAC: indicates that a command has been made to turn ON. 	If you are currently powering the Symbio 210 from a USB port, the Led lights will turn ON. However, the binary outputs will not be activated. Commanded ON; As an example of commanded ON, a command could be a manual command such as an override or a command could be from TGP2 based on a list of conditions that are met telling these outputs to turn ON. LED not lit: Did you command it to be ON? If yes, see the Table 10, p. 26 .
	LED not lit	Indicates that a relay output is de-energized or no power to the board. <ul style="list-style-type: none"> Not lit: cycle power to reestablish communication. 	

Each of the following codes is a two digit number following this pattern: First digit, 600mS pause, Second digit, 2 second pause and then repeat the pattern.

Table 11. Marquee LED status and error codes

LED Blink Pattern	Message	Description	Action by User	
Green LED Blink Pattern	Solid green light	No active alarms or messages	None - normal operation	
	11	Load Field	Attempting to load the field kernel and device tree from NAND flash.	None- normal operation
	13	Boot Field	Successfully loaded the field images and are attempting to boot.	None- normal operation
	14	Load Recover	Attempting to load the recover image from NAND flash.	None- normal operation
	16	Boot Recover	Successfully loaded the recovery image and are attempting to boot.	None- normal operation
	17	Recovery	Successfully booted into the recovery partition.	None- normal operation
	23	Field Format	Reformatting the field file system.	None- normal operation
	28	Starting Update	Starting the firmware update process.	None- normal operation
	29	Locating Firmware File	Attempting to locate a firmware update file.	None- normal operation
	33	Validating Firmware	Validating the signature on the firmware update file.	None- normal operation
	35	Decrypting Firmware	Decrypting the firmware update file.	None- normal operation
	36	Update Success	Done performing the firmware update.	None- normal operation
	37	Clearing Database	Clearing the database.	None- normal operation
	38	Validating Firmware	Validating the signature on the firmware update file.	None- normal operation
	41	Decrypting Firmware	Decrypting the firmware update file.	None- normal operation
	43	Restoring Backup	Restoring a database backup.	None- normal operation
	45	Force Database Clear	The user has 30 seconds to set the rotaries to something other than 9-9-9 to start the process of returning to factory defaults.	None- normal operation
	46	Clear Done	Done returning the database to factory defaults.	None- normal operation
	47	Done	Done returning whatever process was started (usually a forced recovery partition update).	None- normal operation
	51	Backup Retored	Database backup has been restored.	None- normal operation
	52	Updating Firmware	Updating the firmware.	None- normal operation
	53	Firmware Updated	Firmware was updated.	None- normal operation
	55	Updating Firmware	Firmware is currently being updated.	None- normal operation
56	Updating Kernel	The kernel is currently being updated.	None- normal operation	
58	Updating Device Tree	The kernel is currently being updated.	None- normal operation	
61	Updating Bootloader	The bootloader is being updated.	None- normal operation	
63	Updating Recovery	The recovery file system is being updated.	None- normal operation	



Controller LEDs

Table 11. Marquee LED status and error codes (continued)

LED Blink Pattern	Message	Description	Action by User	
Red LED Blink Pattern	12	Load Field Fail	Attempted load of the field kernel or device tree failed.	<ol style="list-style-type: none"> 1. Thumb drive with .scfx file, power down, set address rotaries to 997, and power up. 2. Replace controller.
	15	Load Recovery Fail	Attempted load of the recovery image failed.	Replace controller
	18	Field Mount Fail	Failed to mount the field partition during a firmware update attempt.	<ol style="list-style-type: none"> 1. Thumb drive with .scfx file, power down, set address rotaries to 997, and power up. 2. Replace controller.
	19	Bad Switch Setting	Rotary switches are set to a bad/unknown value.	Contact technical support.
	21	Bad Firmware File	Unable to mount the firmware update file.	Download firmware file again and retry download.
	22	Firmware Not Compatible	Firmware file downloaded is not compatible with this hardware.	Download the correct FW file for the controller.
	24	Field Format Fail	Failed to reformat the field file system.	Replace controller.
	25	Field Attach UBI Fail	Failed to attach (UBI) to the field file system.	Replace controller.
	26	Field Mount Fail	Failed to mount the field file system.	Replace controller.
	27	Bad Update Method	Don't know what our update method is.	Contact technical support.
	31	No Firmware File Found	Unable to find a firmware update file.	Thumb drive has no .scfx file. .scfx file must be located at the root of the USB drive.
	32	Multiple Firmware Found	Multiple firmware update files were found.	Too many .scfx files on the thumb drive. Can only have on .scfx file and must be located in the root of the USB drive.
	34	Firmware Invalid		Download the firmware file again and retry download.
	39	Firmware Invalid		Download the correct FW file again and retry download.
	42	Bad Firmware File	Unable to mount the firmware update file.	Download the firmware file again and retry download.
	44	Restore Failed	Database restore failed for some reason.	Try to restore using a different backup file (Restore file may be corrupt).
	48	Hold	Crashed too many times and are now "holding."	Contact technical support.
	49	Abnormal Termination	The embedded application terminated abnormally.	Contact technical support.
	54	Firmware Not Compatible	The firmware file downloaded is not compatible with this hardware.	Download the correct FW file for the controller.
	57	Kernel Update Failure	Failed to update the kernel.	<ol style="list-style-type: none"> 1. Try upgrading the controller firmware again. 2. Replace controller.
59	Device Tree Failure	Failed to update the kernel device tree.	Not applicable for 210, 400, or 600.	
62	Bootloader Failure	Failed to update the bootloader.	<ol style="list-style-type: none"> 1. Try upgrading the controller firmware again. 2. Replace controller. 	
64	Recovery Failure	Failed to update the recovery file system.	<ol style="list-style-type: none"> 1. Try upgrading the controller firmware again. 2. Replace controller. 	

Note: *Patch firmware updates will cause the same error codes.



Symbio™ 210 Controller Points and Parameters

You can use the Tracer® TU service tool to view or adjust points and parameters in the Symbio 210 controller. It is a software application for monitoring, configuring, balancing, and testing Trane unit controllers, such as the Symbio 210 controller.

Refer to the following documents for product information including an introduction to the Tracer TU service tool, its utilities, screens, concepts, and procedures:

- The *Tracer® TU Service Tool, User Guide* (BAS-SVU047*-EN)
- The Tracer TU Help for Programmable Controllers (Online Help included with Tracer® TU)

This section contains information about points and parameters specific to VAV configurations. They are grouped according to the Tracer TU utility screens.

- “Status Utility,” p. 29
- “Equipment Utility,” p. 30

Status Utility



The Status Utility is displayed by default when you start a Tracer TU session. This subsection presents VAV related items you will see on the Unit Summary, Analog, Binary, Multistate, and Controller Status screens.

Unit Summary Screen

Note: Example based on a Symbio 210 configured for Space Temperature Control.

The Tracer TU service tool will launch and display the status of the Symbio 210 controller. The Unit Summary screen arranges relevant status information under the Operating Status, Space, Ventilation, and Outputs expanding boxes. The following points apply to VAV operations and are explained here.

Operating Status

- **Occupancy Status:** The Symbio 210 controller has four (4) valid occupancy modes that display under the operating status—Occupied mode, Unoccupied mode, Occupied Standby mode, and Occupied Bypass mode.
- **Heat /Cool Status:** The heat/cool status displays the heating and cooling mode of the Symbio 210 controller. This is where the controller displays the heating or cooling mode of the controller. The controller can receive communicated requests for heating or cooling operation. Responses are: Heat, Cool, Calibrate, and Test. Test will be displayed in air or water valve is being overridden.
- **Actual Air Valve Position:** Reports air valve position.
- **Air Valve Position Control:** The Symbio 210 controller displays either pressure dependent or pressure independent status if it has a valid flow input to the controller from the flow ring and pressure transducer. The controller can operate with or without a valid flow value; the airflow is hard wired only. It operates under pressure dependent control or pressure independent control.
 - Pressure dependent control: When a valid flow value is not present, the controller operates under pressure dependent control (position control). Pressure dependent control substitutes the air valve position for the flow measurement for all control actions.
 - Pressure independent control: When a valid flow value is present, the controller operates under pressure independent control. If after an airflow sensor failure, the airflow returns to the valid range (airflow value greater than 10% of configured nominal airflow), the controller automatically resumes pressure independent control.
- **Discharge Airflow:** Displays the current discharge airflow when in pressure independent operation.
- **Airflow Setpoint (Active):** Displays the active airflow setpoint. The airflow setpoint will be determined based on the heat cool mode status, and the required heating or cooling capacity.
- **Space CO₂ Concentration:** CO₂-based demand control ventilation uses the space CO₂ value. The controller compares the space CO₂ concentration to the configured band of CO₂ values and determines the demand ventilation rate of the zone. The resulting ventilation rate is called the effective ventilation setpoint. The effective ventilation setpoint is the outdoor airflow required to provide ventilation. It is used to calculate the ventilation ratio of the zone.



Symbio™ 210 Controller Points and Parameters

Space

- **Space Temperature:** The temperature, as reported by the zone sensor.
- **Space Temperature (Active) Setpoint:** The active (or actual) setpoint currently used by the Symbio™ 210 controller. Can be either Heating or Cooling depending on operating mode.
- **Space Temperature Setpoint BAS:** Shows the setpoint being communicated to the VAV unit from a BAS system.
- **Space Temperature Setpoint Local:** Displays setpoint from local zone sensor.
- **Space Temperature Setpoint Default:** Displays default configured setpoint.
- **Discharge Air Temperature:** Shows the discharge air temperature input, which is the temperature of the air leaving the VAV box.
- **DA Temperature Setpoint BAS:** Displays communicated discharge air temperature setpoint, if valid, when discharge air temperature control reset is enabled.

Ventilation

- **Ventilation Ratio:** Required ratio of OA to primary air to meet zone ventilation need.
- **Ventilation Setpoint:** Arbitrated final value of the zone ventilation requirement.
- **Air Flow Stpt Active Min:** Displays active minimum flow setpoint.
Note: The Symbio 210 may not be using the minimum flow setpoint if space conditions require more airflow).
- **Air Flow Stpt Active Min Source:** Displays the current minimum flow setpoint source.

Outputs

- **Supply Fan Status:** Indicates current fan On/Off status, or None if no fan present.
- **Air Valve Position Command:** Indicates desired air valve position.
- **Heat Output Secondary Status:** Indicates Reheat Capacity Status in percentage.

Analog, Binary, and Multistate Screens

Use the Analog, Binary, and Multistate screens to view input, output, and value points. These three categories are presented in expanding boxes that stretch across the middle of each screen and are defined from the factory.

Note: For field use of spare points, see the Appendix section of the Symbio™ BACnet® VAV Control Applications Guide, (BAS-APG043-EN).*

Controller Status Screen

Program

The Symbio™ 210 controller has up to three (3) TGP2 programs downloaded and defined in the factory as part of the factory commissioning process. The three programs are a base program for damper control, fan, and reheat control. When looking at programming section of Controller Status tab, operation of these programs can be monitored.

Equipment Utility



Use the Equipment Utility to set and change a number of equipment setpoints and setup parameters on the Equipment Utility screens.

Setpoints Screen

Default Setpoints

- **Unoccupied Cooling Setpoint:** Setpoints have a range from 40.0°F to 115.0°F (4.44°C to 46.11°C). This cooling setpoint is used when the UCM is unoccupied. The unoccupied cooling setpoint must be greater than or equal to the unoccupied heating setpoint plus 2.0°F (1.1°C).
- **Unoccupied Heating Setpoint:** Setpoints have a range from 40.0°F to 115.0°F (4.44°C to 46.11°C). This heating setpoint is used when the UCM is unoccupied. The unoccupied cooling setpoint must be greater than or equal to the unoccupied heating setpoint plus 2.0°F (1.1°C).

- **Occupied Offset:** Setpoints have a range from 0.9°F to 45°F (-17.27°C to 7.22°C). If a zone sensor thumbwheel setpoint is not being used, this setpoint are added and subtracted from the Space Temperature Setpoint Default to determine the occupied heating and cooling setpoints.
- **Standby Offset:** Setpoints have a range from 0.9°F to 45°F (-17.27°C to 7.22°C). If a zone sensor thumbwheel setpoint is not being used, this setpoint are added and subtracted from the Space Temperature Setpoint Default to determine the standby heating and cooling setpoints.
- **Space Temperature Setpoint Default:** Setpoints have a range from 40.0°F to 115.0°F (4.44°C to 46.11°C). If a zone sensor thumbwheel setpoint is not being used, this setpoint is used as the active cooling setpoint of the UCM during occupied times. The cooling setpoint must be greater than or equal to the heating setpoint plus 2.0°F (1.1°C).

Setpoint Limits

Each point has its own min/max, therefore, the following setpoint limits are incorporated in the occupied setpoint point, standby setpoint point, and unoccupied heat/cool setpoints. After the controller completes all setpoint calculations, the calculated occupied setpoint is validated against these configured space setpoint limits:

- Heating Setpoint High Limit
- Heating Setpoint Low Limit
- Cooling Setpoint High Limit
- Cooling Setpoint Low Limit

These setpoint limits apply only to the occupied and occupied standby, heating and cooling setpoints. They do not apply to the unoccupied heating and cooling setpoints. When the controller is in the unoccupied mode, it always uses the unoccupied heating and cooling setpoints. Unit configuration enables or disables the local (hard-wired) setpoint. This parameter provides additional flexibility to allow you to apply communicated, hard wired, or default setpoints without making physical changes to the unit. Similar to hard-wired setpoints, the effective setpoint value for a communicated setpoint is determined based on the stored default setpoints, configuration values, and the controller occupancy mode.

Setup Parameters Screen

Device

- **Space Temperature Source:** The drop-down menu is used to select the source of the controllers space temperature value. Choices are Local Source and BAS.
- **Occupancy Request Source:** The drop-down menu is used to select the source of the controllers Occupancy Request. Choices are Local Source and BAS.

VAV Setup

- **Airflow Nominal Status:** Nominal flow is the total airflow capacity of the VAV box. Nominal Flow becomes an active field when Generic is selected in Box Size under Equipment Options on the Configuration page. Select the CFM nominal flow for the unit. This is normally used when mounting the Symbio™ 210 controller on someone else's VAV unit.
- **Unit Flow Gain:** The flow gain is a multiplier used to calibrate the value reported by the flow sensor so that the reported airflow matches the actual airflow. Typically, it is not necessary to change this value. For Trane units, the nominal airflow and unit flow gain are based on unit size and are not adjustable. The default unit flow gain for generic VAV boxes is 1.0.
- **Airflow Measurement Offset:** The flow offset is used to calibrate the value reported by the flow sensor so that the reported flow matches the actual flow. The flow offset is determined during the air balancing process. A test-and-balance professional will use the Tracer® TU Air and Water Balance tool to calculate this value and balance the VAV box. Typically, it is not necessary to change this value.

Note: The flow offset is calculated only for two-point balancing, which requires reading both the maximum and minimum airflows during balancing. Two-point balancing ensures greater accuracy over the entire range of air valve operation.

- **Airflow Gain:** The airflow gain is used to calibrate the value reported by the flow sensor so that the reported airflow matches the actual airflow. The flow gain is determined during the air balancing process. A test-and-balance professional will use the TU Air and Water Balance tool to calculate this value and balance the VAV box. Typically, it is not necessary to change this value.

Ventilation Setup

- **Ventilation Setpoint Local:** The Tracer SC BAS uses the ventilation setpoint from all the VAV boxes to calculate how much outdoor air (OA) the system needs. During the occupied mode, this setpoint is the active setpoint for ventilation, and should be equal to the ventilation airflow required at design occupancy of the space.



Symbio™ 210 Controller Points and Parameters

- **Ventilation Standby Setpoint:** During the occupied standby mode, this setpoint is the active setpoint for ventilation.

Space CO₂ Setup

- **Space CO₂ Low Limit:** The controller adjusts the ventilation setpoint based on the current CO₂ concentration. When the concentration is less than or equal to this low limit, the zone is most likely unoccupied and the ventilation setpoint is set equal to Ventilation Standby Setpoint. When the concentration is between the low and high limits, the ventilation setpoint is adjusted proportionally between Ventilation Standby Setpoint and Ventilation Setpoint Local.
- **Space CO₂ High Limit:** The controller adjusts the ventilation setpoint based on the current CO₂ concentration. When the concentration is greater than or equal to this high limit, the zone is most likely at design occupancy and the ventilation setpoint is set equal to Ventilation Setpoint Local.

Flow Setpoints Setup

- **Airflow Setpoint Minimum:** Although the UCM will read flow down to 5% of cataloged, the range of MIN FLOW settings is 0% or 10% to 100% of cataloged. The UCM will not drive its flow below this minimum flow value under normal operating conditions while in the cool mode. Cool mode occurs when cool air is in the supply duct. The entry in this field must be less than or equal to the entry in the Airflow Setpoint Maximum field.
- **Airflow Setpoint Maximum:** This range is 10% to 100% of the cataloged unit CFM size. Cooling and heating flow can be edited to zero. The UCM will not drive its flow above this maximum flow value under normal operating conditions while in the Cool mode. Cool mode occurs when cool air is in the supply duct. The entry in this field must be greater than or equal to the entry in any of the Minimum fields.
- **Standby Minimum Airflow:** Occupied standby mode is used to reduce the heating and cooling demands during the occupied hours when the space is temporarily unoccupied. For example, it can be activated for a classroom currently not in use. Standby Minimum is the minimum amount of airflow desired during this mode.
- **Airflow Setpoint Minimum Standby Heat:** Occupied standby mode is used to reduce the heating and cooling demands during the occupied hours when the space is temporarily unoccupied. For example, it can be activated for a classroom currently not in use. Airflow Setpoint Minimum Standby Heating is the minimum amount of airflow desired when in the heat mode during this mode.
- **Airflow Setpoint Minimum Heat:** The UCM will not drive its position/flow below this value under normal operating conditions while in the HEAT mode (warm air in the supply duct) or while it is using local heat.
- **Airflow Setpoint Maximum Heat:** The controller enters maximum flow heat on receipt of a communicated command and remains in Airflow Setpoint Maximum Heat until the command changes. The controller maintains the flow rate at the heating maximum airflow. This is normally used with a rooftop unit with staged heat that needs a Max constant volume of air movement to keep the heat exchanger from overheating and tripping the heat in the rooftop unit tripping on a high limit safety.
- **Airflow Setpoint Minimum Local Heat:** If the Min Local Heat flow is enabled, then this Minimum Local Heat setpoint is used to determine the minimum position/flow instead of the Airflow Setpoint Minimum Heat when local heat is on. This entry must be less than or equal to the entry for the Airflow Setpoint Maximum Heat.

Discharge Air Reset Limits

The following parameters are used for Single Duct Units that are equipped with either modulating hot water reheat or SCR electric heat, which allows variable airflow when reheat is activated (for example, “dual maximums” control sequence).

- **Airflow Setpoint Reset Minimum Local Heat:** The minimum position/flow when local heat (either modulating hot water or SCR electric) is on. This entry must be less than or equal to the entry for Airflow Setpoint Reset Maximum Local Heat. When reheat is initially activated the air valve opens to, and remains at, this minimum position/flow setpoint, while reheat capacity is modulated to maintain the space temperature at the active heating setpoint. Once reheat capacity has increased to the point that the discharge air temperature reaches the Discharge Air Temperature Design Setpoint, the controller will begin to increase airflow above this minimum setpoint.
- **Airflow Setpoint Reset Maximum Local Heat:** The maximum position/flow when local heat (either modulating hot water or SCR electric) is on. This entry must be greater than or equal to the entry for Airflow Setpoint Reset Minimum Local Heat. Once reheat capacity has increased to the point that the discharge air temperature has reached the Discharge Air Temperature Design Setpoint, the controller will begin to increase airflow above Airflow Setpoint Reset Minimum Local Heat. If the air valve reaches this maximum setpoint, reheat capacity is allowed to increase further, raising the discharge air temperature, while the air valve remains at Airflow Setpoint Reset Maximum Local Heat.
- **Discharge Air Temperature Reset Maximum:** This is the maximum discharge air temperature allowed when local heat (either modulating hot water or SCR electric) is on. Once the controller has increased airflow to Airflow Setpoint Reset

Maximum Local Heat, reheat capacity is allowed to increase further, raising the discharge air temperature, but not above this maximum limit.

- **Discharge Air Temperature Design Setpoint:** When local heat (either modulating hot water or SCR electric) is initially activated, the air valve will maintain position/flow at Airflow Setpoint Reset Minimum Local Heat and begin increasing reheat capacity. Once reheat capacity has increased to the point that the discharge air temperature has reached this design setpoint, the controller will begin to modulate airflow between Airflow Setpoint Reset Minimum Local Heat and Airflow Setpoint Reset Maximum Local Heat, while reheat capacity is modulated to maintain the discharge air temperature at this design setpoint.

Note: When the parameters on this tab are used, leave Airflow Setpoint Minimum Local Heat (found in the Flow Setpoints Setup section) at the factory configured value. If there is a fault with the discharge air temperature sensor, the controller reverts to Airflow Setpoint Minimum Local Heat when local heat is on.

Commissioning Screen

Actions

- **Zero Air and Water Valve Position (Start Button):** The calibration sequence enables the controller to calibrate the air valve position and the water valve position, as well as calibrate the flow sensor.
- **Auto-commissioning (Start Button):** The controller auto-commissioning test sequence validates both the proper operation of all outputs and the capability to measure all inputs. The purpose of the test sequence is to minimize the labor required to commission the unit in the field.

The auto-commissioning test does not require a flow sensor or a discharge or supply air temperature sensor. If there is no flow sensor, the controller runs in pressure-dependent mode. A temperature sensor in the discharge air stream is required for testing of the fan and the reheat. The fan and the reheat are not tested if the discharge air temperature sensor is not present. The fan is not tested if there is no fan. Local reheat is tested, if it is present. Remote reheat is not tested.

The sequence starts on receipt of an auto-commission command from the Tracer® TU service tool start button or the Tracer® SC. The auto-commission command contains a time/date stamp. No third party tool can start the auto-commissioning sequence. You can then choose to commission all VAV boxes or one VAV box. The results of auto-commissioning are contained in a structured network variable called reported auto commissioning report. The controller places the time/date stamp in the report. The structure is loaded with the default values for all of the fields when the auto-commissioning test sequence starts. The fields are updated with the results as the sequence progresses. The data is held until the next auto-commissioning test.

If an auto-commission command is received in the middle of an auto-commissioning cycle, the auto-commissioning sequence restarts. If an auto-commission command is received during calibration, calibration aborts and restarts after auto-commissioning finishes. If an abort auto-commission command is received during the calibration portion of the primary air valve test, it is honored after the air valve calibration finishes.

- **Calibrate Air Valve (Start Button):** Displays the Calibrate Air Valve dialog box. Use this air balancing tool to perform a basic two-point air balance for the Symbio 210 controller. See the Tracer TU Help for Programmable Controllers (“Configuring and Commissioning Equipment” > “VAV Boxes” > “Using the Air Balancing Tool”) for the correct procedure.
- **Airflow Override (Start Button):** Displays the Airflow Override dialog box. You can override the air damper to open for a limited duration as part of a system water balancing operation. When the timed duration expires, the water valve is released back to its normal setting.
- **Water Valve Override (Start Button):** Displays the Water Valve Override dialog box. You can override the water valve to open for a limited duration as part of a system water balancing operation. When the timed duration expires, the water valve is released back to its normal setting.
- **Fan Override (Start Button):** Displays the Fan Override dialog box, which can be used to override the fan setting to On.

Note: For ECM fans, you can also select the speed at which the fan turns on.

Operating Status

This box includes view only settings related to air flow. Two fan output settings can be overridden.

ECM Fan Setup

(Visible if an ECM fan is configured.) This box includes flow setpoint, maximum and minimum flow settings, and a correction factor setting.



Symbio™ 210 Controller Points and Parameters

Current Calibration Summary

Presents the results of the two point air valve calibration along with the Minimum and Maximum Air Flow Setpoints.

Discharge Air Reset Limits

This box contains settings that are used for Dual max VAV boxes. When the VAV heating valve is open, the box flow will modulate between the flow settings to control to the Discharge Air Temp Design Setpoint.

Configuration Screen

Application Selection

- **Profile:** This allows for selection between three operational programs. The three programs are Space Temperature, Ventilation Flow, and Flow Tracking.
- **Box Size:** Used to select a Trane F-style box size or Generic Box.
- **Air Damper Opens:** Chose between Clockwise and Counter-Clockwise damper rotation to open the damper.
- **Fan Control:** Choices are None, Parallel, and Series. If Parallel or Series is selected the Fan Setting group box will appear.
- **Reheat Type:** Choose between reheat options of None, Hot Water, or Electric heat. If Hot Water or Electric heat are selected the Reheat Settings group box will appear.

Fan Settings

- **Fan Motor Type:** The default is Standard. Select ECM if an ECM is installed.
- **Parallel Fan Control:** This entry will determine if a parallel fan is controlled based on zone temperature or on flow conditions. The entry field on this line will disappear if the unit does not have a parallel fan. Refer to the section, "[Parallel Fan](#)," p. 42, for details on parallel fan operation.

Reheat Settings

- **Valve Control Type (Hydronic):** The choices are two-position, modulating, or both.
- **Location of Reheat:** Choices are Local and Remote. If Both is selected for Valve Control Type, this is used to select the location of the 2-Position valve. There is an additional binary value point to select whether local or remote reheat has priority. By selecting Local the VAV unit will use local reheat before remote reheat. If Remote is selected it does the opposite in that the VAV unit will use remote heat before local heat.
- **Heat Control Type (Electric):** Choices are Pulse Width Modulation, Staged, and SCR. Chose the correct electric heat type.
- **Number of Reheat Stages (PWM or Staged):** Choose the correct number of reheat stages (1-3)

Sensor Options

If a Symbio™ 210 has a wireless zone sensor and is a member of Tracer® SC wireless link, you can install this feature to configure the unit controller so it will communicate the wireless zone sensor battery level to the Tracer SC once it is installed on the Tracer SC. An alarm will be activated in response to a predefined **replace batteries** state of the point.



Calibration, Operation Modes, and Control

This section provides information about the following:

- “Calibration,” p. 35
- “Occupancy Modes,” p. 35
- “Space Temperature Control Mode,” p. 36
- “Ventilation Flow Control (VFC),” p. 43
- “Flow Tracking (FTC),” p. 45

Calibration

The calibration sequence enables the controller to calibrate both, the air valve position and the water valve position. Calibration takes place if auto-calibration is enabled and either a power cycle or a transition from occupied to unoccupied has occurred.

Note: *Whether or not auto-calibration is enabled, the controller initiates calibration on a communicated application mode command.*

The building automation system is responsible for the staggering of the calibration sequence that is needed between units. When auto-calibration is enabled, and a transition from occupied to unoccupied occurs, the calibration sequence starts after a fixed delay of three (3) minutes. The controller effective occupancy mode is unoccupied, but runs as if it is occupied during this three- minute period.

The mode field of reported unit status reports calibration when the controller is in the calibration sequence. If auto-calibration is disabled, the air valve and water valve are not driven closed and the flow sensor zero flow voltage reading is not recorded. Refer to following table for calibration actions.

Table 12. Calibration actions

I/O Device	Calibration Action Taken	Result After Calibration
Air valve	Drive the air valve closed to the stroke time, plus 20 seconds.	Initialize the air valve position as closed when the air valve is over-driven.
Flow sensor	Record the flow reading when the air valve is fully closed.	Subtract the zero flow reading from all subsequent readings.
Modulating hot water reheat	Drive the water valve closed for the stroke time, plus 20 seconds.	Initialize the water valve position as closed when the water valve is over-driven.
Fan	Enabled	Enabled
Electric or On/Off hot water	Disabled	Enabled

Occupancy Modes

The Symbio™ 210 controller has four (4) valid occupancy modes:

- Occupied mode
- Unoccupied mode
- Occupied standby mode
- Occupied bypass mode

Occupied Mode

Occupied mode is the normal (default) operating mode for occupied spaces or daytime operation. When the controller is in the occupied mode, it uses occupied setpoints and is controlled by:

- Occupied space temperature control
- Ventilation flow control (constant volume with discharge air temperature control)
- Flow tracking control (has no occupancy)

Unoccupied Mode

Unoccupied mode, known as night setback, is the normal operating mode for unoccupied spaces or nighttime operation. Unoccupied setpoints enable or disable occupied space temperature control.



Calibration, Operation Modes, and Control

When the controller is in the unoccupied mode, and configured for space temperature control, the controller attempts to keep the space temperature between the active unoccupied heating setpoint and the active unoccupied cooling setpoint. When the controller is in the unoccupied mode and configured for ventilation flow control, it will not run in unoccupied mode. In addition, the air valve is closed and local heat is disabled.

A flow tracking controller runs the same as when it is occupied. When the controller is in the unoccupied mode and configured for flow tracking control, it runs the same as it does in occupied mode.

Occupied Standby Mode

Occupied standby mode is used to reduce the heating and cooling demands during the occupied hours when the space is unoccupied. As an example, it can be activated for a classroom currently not in use.

The controller can be placed in the occupied standby mode when a communicated occupancy mode request (from a communicated occupancy override, occupancy schedule, or occupancy sensor) is combined with an occupancy request from the local (hard-wired) occupancy binary input. Once in occupied standby mode, the controller uses the occupied standby cooling and heating setpoints, which typically cover a wider range than the occupied setpoints. The wider range reduces the demand for heating and cooling in the space.

When the communicated occupancy mode request is unoccupied, the occupancy binary input signal (if present) does not affect the controller occupancy mode. When the communicated occupancy mode request (communicated occupancy override not valid, communicated occupancy schedule occupied, or communicated occupancy sensor not valid) is occupied, the controller uses the local occupancy binary input to switch between the occupied and occupied standby modes. When the controller is in the occupied standby mode, it uses occupied standby setpoints and is controlled by:

- Occupied temperature control
- Ventilation flow control
- Flow tracking control

Occupied Bypass Mode

Occupied bypass mode is used for timed overrides. For example, if the controller is in unoccupied mode or occupied standby mode, pressing the zone sensor ON button places the controller in occupied bypass mode for 120 minutes (default configured occupied bypass time) or until someone presses the zone sensor CANCEL button. The controller can be placed in occupied bypass mode by either communicating an occupancy mode request of bypass mode (communicated occupancy override) to the controller or by using the zone sensor timed override ON button. The occupied setpoints are used when in occupied bypass mode.

When the controller is in the unoccupied mode, pressing the zone sensor ON button places the controller in the occupied bypass mode for the duration of the configured occupied bypass time.

When the controller is in the occupied standby mode, pressing the zone sensor ON button places the controller in the occupied bypass mode for the duration of the configured occupied bypass time.

Space Temperature Control (STC) for Single Duct and Fan-powered Units

Single Duct Units

Space Temperature Control Mode

Space temperature control is one of three supported control algorithms (the other two supported control algorithms are “Ventilation Flow Control (VFC),” p. 43 and “Flow Tracking (FTC),” p. 45. Space temperature control requires a valid space temperature. If there is no valid space temperature (either communicated, local, or default), the space temperature control algorithm does not run and the unit either shuts down or goes into construction mode.

The controller heat/cool mode is determined by either a communicated request or by the controller itself. When the heat/cool mode request is AUTO, the controller compares the space temperature with the active space setpoint to determine the heat/cool mode status.

In addition, the controller compares the active space temperature setpoint and the active space temperature and calculates the desired capacity need to bring the space temperature up or down to the space temperature setpoint. The controller positions the modulating air valve to deliver the required airflow based on cooling or heating capacity required.

Cooling Operation

Under space temperature control during the cooling mode (communicated heat/cool mode is cool), the controller attempts to maintain the active space temperature at the active space temperature setpoint. Based on the controller occupancy mode, the active space temperature setpoint is determined based on the occupied or standby offset being added to the communicated, local or default setpoint, the occupied standby cooling setpoint, or the unoccupied cooling setpoint is used.

The outputs are controlled based on the unit configuration and the required cooling capacity. At 0% required cooling capacity, the air valve is at the active minimum flow setpoint. As the required cooling capacity increases, the air valve opens above the minimum position. At 100% required cooling capacity, the air valve opens to the maximum position or to the active maximum flow setpoint.

All units have a modulating air valve that is used to control the volume of airflow through the diffusers and into the space. Modulating the volume of air modulates the unit cooling capacity.

Heating Operation

Under space temperature control during the heating mode (heat/cool mode is heat the space temperature is below the active space temperature setpoint and the heat cool mode request is AUTO), the controller attempts to maintain the space temperature at the active space temperature setpoint. Based on the controller occupancy mode, the active space temperature setpoint is determined based on the occupied or standby offset being subtracted from the communicated, local or default space temperature setpoint or the unoccupied heat setpoint is used. All ventilation requirements are in force during occupied heating and cooling.

The outputs are controlled based on the unit configuration and the required heating capacity. At 0% required heating capacity, the air valve is at its heating minimum or local heating minimum flow setpoint. As the required heating capacity increases, the air valve opens above its minimum position. At 100% required heating capacity, the air valve opens to its maximum position.

All units have a modulating air valve that is used to control how much air is flowing through the diffusers and into the space. By modulating the volume of airflow, the unit heating capacity is modulated.

Reheat Enable Setpoint

Units may have local or remote reheat, which may be hydronic or electric. Reheat is turned on when the space temperature is below the active space temperature setpoint, and the supply air temperature is below the reheat enable setpoint. Reheat is used to maintain the space temperature at the heating setpoint. Heating operation and Reheat are two different entities.

Auto-changeover

The auto-changeover feature is used if the RTU has heat and the Symbio™ 210 has a valid local or communicated Supply Air Temperature. If the supply air temperature reaches the Auto-changeover Point, then the air valve control changes from cooling control action to heating control action.

In cooling control action, the air valve modulates between the Airflow Setpoint Minimum and Airflow Setpoint Maximum to meet the required cooling capacity. In heating control action, the air valve modulates between Airflow Setpoint Minimum Heat and Airflow Setpoint Maximum Heat to meet the required heating capacity. Essentially, the RTU is providing heat to the space. If the heating capacity increases, the air valve modulates further open to provide more hot air to the space.

Air Valve Control in Space Temperature Control Operation

Air delivered to the space is controlled with a three-wire, floating-point actuator that modulates the air valve. The controller positions the modulating air valve to deliver the desired airflow (cooling or heating capacity).

The desired airflow is called the active flow setpoint. The controller positions the modulating air valve to deliver the desired airflow (cooling and heating capacity) to within +/-2% of nominal airflow. For example, if the nominal airflow of the box is 900 CFM, the air valve is controlled to maintain flow within +/- 18 CFM of the airflow setpoint.

The airflow control algorithm compares the active airflow setpoint with the measured airflow and calculates the necessary air valve movement to minimize error. The airflow setpoint is limited by applicable minimum and maximum flow setpoints.

Reheat Control

There are two (2) types of reheat control:

- Hydronic heat
- Electric heat

Reheat is allowed to turn ON if the zone temperature is below the heating setpoint. Space temperature control can use reheat if the following conditions are all TRUE:

- The unit is not calibrating



Calibration, Operation Modes, and Control

- Heat Cool Mode Status is heat
- For local reheat only, the fan, if present, is not being overridden to Off (communicated fan override)
- The supply air temperature is less than the configured reheat enable setpoint
- For electric reheat, the unit is in Pressure Independent mode or the Pressure Dependent Mode Reheat Enable point is enabled.

NOTICE

Potential Equipment Shut Down and/or Damage Due to Overheating!

Failure to follow instructions below could result in equipment damage due to overheating.

There are potential maintenance issues, such as overheating, that can occur if the electric reheat is allowed to energize when the airflow passing over the element is too low or is below the Airflow Setpoint Minimum Local Heat. Refer to the equipment catalog for Trane F-Style VAV boxes for minimum airflow settings based on box inlet size and heating element kW.

Electric Heat

Electric Heat Pulse-width Modulation (PWM)

Single-duct units can have from one to three stages of electric heat pulse-width modulation. Fan powered units can have up to three stages of electric heat pulse-width modulation. Energizing for a portion of a three-minute time period modulates the electric heater. This allows exact load matching for energy efficient operation, and optimum zone temperature control. The Airflow Setpoint Minimum Local Heat is enforced during reheat. The amount of reheat supplied is dependent on both the degrees that the space temperature is below the active heating setpoint and the time that the space temperature has been below the active heating setpoint. If not already OFF, reheat de-energizes when the zone temperature rises more than 0.5°F (0.28°C) above the heating setpoint. When reheat is de-energized, the cooling Airflow Setpoint Minimum is enforced.

- **Stage 1;** the ON time is proportional to the amount of reheat required. For example, when 50% of stage 1 capacity is required, reheat is ON for 90 seconds and OFF for 90 seconds. When 75% of stage 1 capacity is required, reheat is ON for 135 seconds and OFF for 45 seconds. When 100% of stage 1 capacity is required, reheat is ON continuously.
- **Stages 2 and 3;** the same ON time logic as stage 1, except stage 1 is always energized. For example, when 75% of unit capacity is required, stage 1 is energized continuously, and stage 2 is ON for 90 seconds and OFF for 90 seconds.

Electric Heat SCR

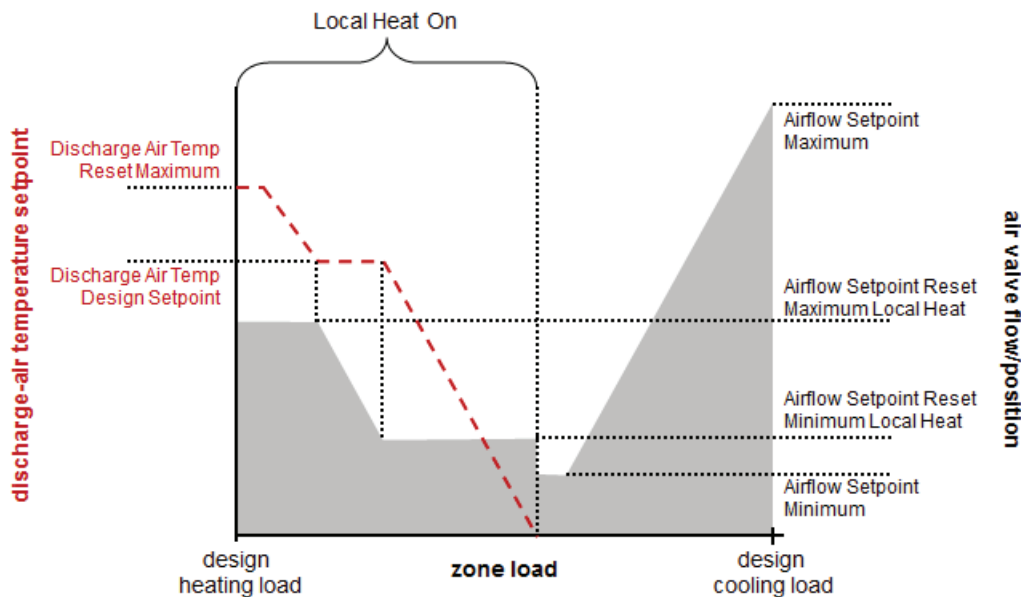
SCR is a heat controller that controls a single stage electric heater proportional to an analog signal. The analog output signal is proportional to the amount of reheat required. Typically with SCR heat, the heater is turned on and off on a very short cycle time to provide proportional control of heat output. This allows for closer matching of heating capacity to the heating load, resulting in more stable temperature control.

When the space requires cooling, the air valve modulates between Airflow Setpoint Maximum and Airflow Setpoint Minimum, to maintain space temperature at the active cooling setpoint; and the electric heater is off. When the cooling load has decreased to the point where the air valve has reached Airflow Setpoint Minimum, space temperature is allowed to drift downward, in the deadband between the active cooling setpoint and active heating setpoint.

When the space temperature drops below the active heating setpoint, the air valve opens to the Airflow Setpoint Reset Minimum Local Heat and the SCR controls the electric heater to maintain space temperature at the active heating setpoint. SCR control is dependent on the degree that the space temperature is below the active heating setpoint and the amount of time that the space temperature has been below the active heating setpoint.

If the discharge air temperature reaches the Discharge Air Temperature Design Setpoint, the air valve opens further and modulates between Airflow Setpoint Reset Minimum Local Heat and Airflow Setpoint Reset Maximum Local Heat to maintain space temperature at the active heating setpoint, while the SCR controls the electric heater to maintain discharge air temperature at the Discharge Air Temperature Design Setpoint (see [Figure 12, p. 39](#)). If the air valve reaches Airflow Setpoint Reset Maximum Local Heat, the SCR controls the electric heater to maintain space temperature at the active heating setpoint, while the air valve remains at Airflow Setpoint Reset Maximum Local Heat.

Figure 12. Single duct VAV unit with modulating hot water or SCR electric heat



Reheat de-energizes when the space temperature rises more than 0.5°F (0.28°C) above the heating setpoint. When reheat is de-energized, the cooling Airflow Minimum Setpoint is enforced.

The Trane VAV unit's SCR electric heater module takes a 0-to-10 Vdc control signal from AO2. Any signal less than 0.2 Vdc, and the heater is turned off. For a signal between 0.2 and 10 Vdc, the heater is on and modulated up to 100% capacity.

Important: Discharge air temperatures should not exceed between 100°F and 110°F, with a temperature between 85°F and 95°F being optimal for space temperature control. If air that is too hot is delivered to the space through ceiling-mounted diffusers, and then leaves the space through ceiling-mounted return-air grilles, the buoyancy of this hot air will tend to cause some of the air to bypass from the supply-air diffusers to the return-air grilles, resulting in uneven air distribution and possible comfort complaints. Refer to Table 13, p. 39 and Table 14, p. 40 for fan powered reheat.

Table 13. Local heat only with no fan present

Configuration		Method of Control		
Local	Remote	Stage 1	Stage 2	Stage 3
PWM electric(1 to 3 stages)	Not applicable	<ul style="list-style-type: none"> Local PI capacity loop Each stage represents an equal percentage of total capacity PWM Output (one stage = 100%; two stages = 50% each; three stages = 33.33% each) Total capacity is limited by communicated supply heat control 		
SCR electric	Not applicable	<ul style="list-style-type: none"> Local PI capacity loop SCR heat capacity = total capacity Total capacity limited by communicated supply heat control 	Not applicable	Not applicable
On/Off electric(1 to 3 stages)	Not applicable	Local thermostatic: <ul style="list-style-type: none"> On: Zt < HSP Off: Zt ≥ HSP + 0.5 °F (0.28°C) 	Local thermostatic: <ul style="list-style-type: none"> On: Zt < HSP - 1°F (0.56°C) Off: Zt ≥ HSP - 0.5°F (0.28°C) 	Local thermostatic: <ul style="list-style-type: none"> On: Zt < HSP - 2°F Off: Zt ≥ HSP - 1.5°F (16.9°C)
Each stage represents an equal percentage of total capacity. Total capacity is limited by communicated supply heat control.				

Calibration, Operation Modes, and Control

Table 13. Local heat only with no fan present (continued)

Configuration		Method of Control		
Local	Remote	Stage 1	Stage 2	Stage 3
On/Off hot water (1 stage)	Not applicable	Local thermostatic: <ul style="list-style-type: none"> On: $Z_t < \text{HSP}$ Off: $Z_t \geq \text{HSP} + 0.5^\circ\text{F}$ (0.28°C) 	Not applicable	Not applicable
		Total capacity is limited by communicated supply heat control	Not applicable	Not applicable
Modulating hot water	Not applicable	<ul style="list-style-type: none"> Local PI capacity loop Modulating valve capacity = Total capacity Valve drive incrementally open/closed Total capacity limited by communicated supply heat control 		Not applicable

Table 14. Local heat only with parallel fan present

Configuration		Method of Control			
Local	Remote	Fan	Stage 1	Stage 2	Stage 3
Fan	Not applicable	Parallel fan	Not applicable	Not applicable	Not applicable
Fan and PWM electric (1 to 2 stages)	Not applicable	Parallel fan	<ul style="list-style-type: none"> Local PI capacity loop. Each stage represents an equal percentage of total capacity PWM Output (one stage = 100%; two stages = 50% each. Total capacity is limited by communicated supply heat control. 	<ul style="list-style-type: none"> Local PI capacity loop. Each stage represents an equal percent of total capacity. (1 stage = 100%, 2 stages = 50% each). PWM output. 	Total capacity is limited by communicated supply heat control.
			<ul style="list-style-type: none"> Local PI capacity loop SCR heat capacity = total capacity Total capacity limited by communicated supply heat control 	Not applicable	
Fan and On/Off electric (1 to 2stages)	Not applicable	Parallel fan	Local thermostatic: <ul style="list-style-type: none"> On: $Z_t < \text{HSP}$ Off: $Z_t \geq \text{HSP} + 0.5^\circ\text{F}$ (0.28°C) 	Local thermostatic: <ul style="list-style-type: none"> On: $Z_t < \text{HSP} - 1^\circ\text{F}$ (0.56°C) Off: $Z_t \geq \text{HSP} - 0.5^\circ\text{F}$ (0.28°C) 	Local thermostatic: <ul style="list-style-type: none"> On: $Z_t < \text{HSP} - 2^\circ\text{F}$ (1.11°C) Off: $Z_t \geq \text{HSP} - 1.5^\circ\text{F}$ (0.83°C)
			<ul style="list-style-type: none"> Each stage represents an equal percentage of total capacity. Total capacity is limited by communicated supply heat control. 	<ul style="list-style-type: none"> Each stage represents an equal percentage of total capacity. Total capacity is limited by communicated supply heat control. 	

Table 14. Local heat only with parallel fan present (continued)

Configuration		Method of Control			
Local	Remote	Fan	Stage 1	Stage 2	Stage 3
Fan and On/Off hot water (1 to 2 stages)	Not applicable	Parallel fan	Local thermostatic: <ul style="list-style-type: none"> On: $Z_t < \text{HSP}$ Off: $Z_t \geq \text{HSP} + 0.5^\circ\text{F}$ (0.28°C) 	Local thermostatic: <ul style="list-style-type: none"> On: $Z_t < \text{HSP} - 1^\circ\text{F}$ (0.56°C) Off: $Z_t \geq \text{HSP} - 0.5^\circ\text{F}$ (0.28°C) 	Not applicable
			Total capacity is limited by communicated supply heat control.	Total capacity is limited by communicated supply heat control.	Not applicable
Fan and Modulating hot water	Not applicable	Parallel fan	<ul style="list-style-type: none"> Local PI capacity loop. Modulating valve capacity = Total capacity. Valve drive incrementally open/closed. Total capacity limited by communicated supply heat control. 	<ul style="list-style-type: none"> Local PI capacity loop. Modulating valve capacity = Total capacity. Valve drive incrementally open/closed. Total capacity limited by communicated supply heat control. 	

On/Off Electric Reheat

The Airflow Setpoint Minimum Local Heat is enforced during reheat.

- **Stage 1**; energizes when the space temperature falls below the active heating setpoint and minimum airflow requirements are met. When the zone temperature rises above the active heating setpoint by 0.5°F (0.28°C), stage 1 is de-energized.
- **Stage 2**; energizes when the space temperature is 1°F (0.56°C) or more below the active heating setpoint, and is de-energized when the space temperature is 0.5°F (0.28°C) below the active heating setpoint.
- **Stage 3**; energizes when the zone temperature is 2°F (1.11°C) or more below the active heating setpoint, and de-energizes when the space temperature is 1.5°F (0.83°C) below the active heating setpoint.

When reheat is de-energized, the cooling Airflow Minimum Setpoint is enforced. Refer to [Table 13, p. 39](#) and [Table 14, p. 40](#).

Hot Water Heat

Two types of control of hydronic heat are supported:

- **ON/OFF**

Refer to on/off electric heat for operation. The main difference with ON/OFF hot water heating is the control of a two position hot water valve instead of the contactor energizing an electric heat strip. Refer to [Table 13, p. 39](#) and [Table 14, p. 40](#).

- **Modulating**

Proportional hot water reheat uses 3-wire, floating-point-actuator technology. It is enabled if there is no valid supply air temperature and disabled if the supply air temperature is greater than the configured reheat enable setpoint.

When the space requires cooling, the air valve modulates between Airflow Setpoint Maximum and Airflow Setpoint Minimum, to maintain space temperature at the active cooling setpoint; and the water valve is closed. When the cooling load has decreased to the point where the air valve has reached Airflow Setpoint Minimum, space temperature is allowed to drift downward, in the deadband between the active cooling setpoint and active heating setpoint.

When the space temperature drops below the active heating setpoint, the air valve opens to the Airflow Setpoint Reset Minimum Local Heat and the reheat valve modulates to maintain space temperature at the active heating setpoint. Control of the water valve uses a separate proportional plus integral control loop, and its position is dependent on the degree that the space temperature is below the active heating setpoint and the amount of time that the space temperature has been below the active heating setpoint.



Calibration, Operation Modes, and Control

If the discharge air temperature reaches the Discharge Air Temperature Design Setpoint, the air valve opens further and modulates between Airflow Setpoint Reset Minimum Local Heat and Airflow Setpoint Reset Maximum Local Heat to maintain space temperature at the active heating setpoint, while the water valve modulates to maintain discharge air temperature at the Discharge Air Temperature Design Setpoint. (See [Figure 12, p. 39](#)) If the air valve reaches Airflow Setpoint Reset Maximum Local Heat, the water valve opens further and modulates to maintain space temperature at the active heating setpoint, while the air valve remains at Airflow Setpoint Reset Maximum Local Heat.

An additional ON/OFF remote heat output is available and energized when the water valve is driven 100% open and de-energized when the water valve reaches 50% open.

When reheat is de-energized, the cooling Airflow Minimum Setpoint is enforced.

Note: *Steam is not supported.*

Fan-Powered Units

The Symbio™ 210 controllers provide the following three (3) fan options when in space temperature control mode:

- One-speed ON/OFF series fan
- One-speed ON/OFF parallel fan
- Flow control parallel fan

ECM Fan

This controller supports an electronically commutated motor (ECM). The controller turns the ECM fan ON and OFF. It does not change the ECM fan airflow dynamically. The fan operates at a single speed to match the fan flow setpoint. The fan flow correction factor is a direct multiplier used to determine fan speed, and can be adjusted if the measured flow rate does not meet the fan flow setpoint. To assist with flow balancing the fan flow rate is stored as a configuration item. The minimum and maximum flow settings are predetermined at the factory and should not be adjusted in the field. For units configured in the field, the maximum flow should not be set higher than the nominal airflow of the VAV box.

Series Fan

The series fan is always controlled as a one-speed ON/OFF fan. The fan continuously operates in the occupied or occupied standby mode and cycles ON and OFF with calls for heating or cooling in the unoccupied mode. The series fan operates in a manner that prevents reverse rotational operation. The series fan is turned ON whenever one of the following occurs:

- Target airflow control point is greater than zero.
- Target air valve position *is not* Closed.
- Actual air valve position *is not* Closed.

Series Fan Operation During Calibration

During calibration, the series fan is OFF for 10 seconds during calibration after the air valve closes all the way. It remains OFF after the 10 seconds expires if:

- System mode (communicated application mode or communicated heat/cool mode) is OFF.
- Occupancy mode status is unoccupied.

Otherwise the series fan is turned ON when the 10-second period expires.

Parallel Fan

The parallel fan is the first stage of heat. When the supply air temperature is cold, the parallel fan:

- Cycles ON as the first stage of heat during occupied mode or occupied standby mode.
- Cycles ON with a call for heat during unoccupied mode.

When the supply air temperature is warm or hot, the parallel fan is OFF, unless the local reheat is ON. Two (2) methods of control are supported for energizing the parallel fan:

- One method is based on space temperature.
- One method is based on supply airflow.

The parallel fan start points for each method of control are able to be configured.

Parallel Fan Start based on Space Temperature

The parallel fan turns ON when the space temperature falls below the heat setpoint, plus the configured parallel fan temperature enable setpoint. It turns OFF when the space temperature rises above the heat setpoint, plus the configured parallel fan temperature enable setpoint by 0.5°F (0.28°C).

Parallel Fan Start Based on Supply Airflow

The parallel fan turns ON when the supply airflow falls below the configured parallel fan airflow enable setpoint, or the supply airflow is less than the active minimum flow setpoint, plus 2% of the configured nominal airflow. The parallel fan turns OFF when:

- The supply airflow rises above the configured parallel fan airflow enable setpoint, plus 5% of the configured nominal airflow.
- When the supply airflow is greater than the active minimum flow setpoint, plus 5% of the configured nominal airflow.

In pressure dependent mode, the air valve position is substituted for the supply airflow.

Parallel Fan Operation During Calibration

During calibration, the parallel fan is in the same state (ON or OFF) prior to the start of calibration. It remains in that state until one minute after calibration ends. One minute after calibration ends, normal control of the parallel fan resumes. The one-minute period is ignored if reheat is active or if the parallel fan is overridden.

Fan OFF Delay

There is a 15-second fan OFF delay. When reheat is turned OFF, the controller turns the fan OFF 15 seconds later.

Ventilation Flow Control (VFC)

Ventilation flow control is applied to a VAV terminal and used to temper cold outdoor air (OA) that is brought into a building for ventilation purposes. The tempered air is intended to supply an air handler unit (AHU), which provides comfort control to the zones it serves. The VAV terminal supplies the correct amount of ventilation air and, when possible, tempers the ventilation air to reduce the load on the air handler. Refer to the following table for ventilation flow control outputs.

Table 15. Ventilation flow control outputs

Occupancy Mode	Source Temperature	Air Valve Control	Reheat Control	
Occupied, Occupied Standby, or Occupied Bypass	Any	Constant volume (if valid, communicated ventilation setpoint; if not valid, configured ventilation setpoint)	Electric	VFC staged reheat control
			Staged hot water	VFC staged reheat control
			Modulating hot water	VFC modulating reheat control (same as STC capacity control)
Unoccupied	Communicated source temperature (if valid; if not valid, discharge air temperature) greater than configured OA low limit.	Closed, 0%	Electric	Off
			Staged hot water	Off
			Modulating hot water	Off
	Communicated source temperature (if valid; if not valid, discharge air temperature) less than configured OA low limit.	Closed, 0%	Electric	Off
			Staged hot water	On, 100% freeze protection
			Modulating hot water	On, 100% freeze protection

The ventilation flow control process is a constant volume, variable temperature process. Single duct VAV units with either electric or hot water reheat are used. Fan-powered units are not used for ventilation flow control. Ventilation flow control must have a temperature sensor that is located and setup as a discharge air temperature sensor. The required range of discharge air temperature setpoints is from 19°F to 70°F (-7.22°C to 21.11°C).

Ventilation flow control staged reheat control (electric or hot water) achieves a 30-minute average discharge air temperature to within ±5°F (±2.78°C) of the discharge air temperature setpoint when the inlet temperature is within the control range. Ventilation flow control modulating reheat control (hot water only) achieves a discharge air temperature to within ±5°F (±2.78°C) of the discharge air temperature setpoint when the inlet temperature is within the control range.



Calibration, Operation Modes, and Control

Air Valve Control

Ventilation flow control uses the air valve as a constant volume device. The unit is given a constant flow setpoint for air valve control (configured ventilation setpoint). The air valve only repositions itself in response to changes in inlet static pressure. By using pressure-independent control for ventilation purposes, a constant volume of fresh air can be maintained, regardless of small fluctuations in inlet static pressure. Ventilation flow control unit can use a Ventilation Setpoint from a BAS system, if it is valid. If the unit is standalone, the ventilation flow control uses one of the following two (2) airflow setpoints:

- If no reheat being used, it uses the configured Ventilation Setpoint Local.
- If reheat being used, it uses the configured Airflow Setpoint Minimum Local Heat.

Staged Reheat Control (Electric and Hot Water)

The heat outputs of the controller are binary. Only discrete levels of discharge air temperature are possible. Since discrete discharge air temperature levels do not always provide an instantaneous temperature within the required band, staged reheat controls to a 30-minute average discharge air temperature. The discharge air temperature setpoint is limited from 19°F to 70°F (-7.22°C to 21.11°C).

Staged Electric Reheat Control

Units that are equipped with electric reheat should be sized so that the maximum temperature rise across the heating elements is from 40°F to 48°F (4.44°C to 8.88°C); it should never exceed 50°F (10°C) for safety reasons. These values were selected to allow the largest control range without damage to the heater elements.

For staged electric ventilation flow control, the number of installed stages can range from one to three. Three stages are recommended, since finer control is available with more stages. In cases where the outdoor air temperature is more than 48°F (8.88°C) below the discharge air temperature setpoint, the controller cannot provide the requested control performance.

The controller provides no cooling capacity. If the outdoor air temperature (OAT) is above the discharge air temperature setpoint, the discharge air temperature cannot be controlled and the discharge air temperature is equal to the OAT.

Staged Hot Water Reheat Control

Units equipped with hot water coils should be sized so the maximum temperature of air leaving the coil does not exceed 140°F (60°C). Since only one stage of hot water reheat is available, staged hot water does not allow tight control of the discharge air temperature. Although the controller operates in this configuration, it is not recommended.

Staged Reheat Control Algorithm (Integral Only)

An incremental form of the integral PID algorithm computes the desired level of reheat capacity. The algorithm is run once every 10 seconds.

Modulating Reheat Control (Hot Water Only)

Units equipped with hot water coils should be sized so the maximum temperature of air leaving the coil does not exceed 140°F (60°C). If hot water reheat is installed, the preferred method of control is with a modulating valve. The modulating valve enables an instantaneous discharge air temperature within the dead band of the discharge air temperature setpoint. The reheat capacity algorithm for modulating hot water discharge air temperature control is the same algorithm used to control modulating hot water valves for a space temperature controller.

Modulating Reheat Control Algorithm (Proportional-Integral)

An incremental form of the proportional integral algorithm runs once every 10 seconds and calculates the reheat capacity required to meet the discharge air temperature setpoint. The required capacity is equal to valve position.

Freeze Protection (Hot Water Only)

Units with hot water coils installed are susceptible to freezing. It is important to prevent the water coils from freezing. Freeze protection occurs only when the controller is in the OFF state or during the unoccupied period when the supply air valve is closed and the reheat is disabled. During occupied operation, the control algorithm indirectly provides freeze protection. Refer to the following table for unoccupied VFC control.

Table 16. Unoccupied VFC control, freeze protection for hot water reheat

Controller Operation	Air Valve Position	Condition	Hot Water Valve Position
Networked and valid communicated supply air temperature	Closed no flow	Communicated supply air temperature greater than configured outdoor air low limit.	Closed
		Communicated supply air temperature less than or equal to configured outdoor air low limit, freeze protection active diagnostic (with 10°F hysteresis).	Open to 100%
Stand-alone, coil temperature sensed at discharge air temperature ^(a)	Closed no flow	Discharge air temperature greater than configured outdoor air low limit.	Closed
		Discharge air temperature less than or equal to configured outdoor air low limit, freeze protection active diagnostic (with 10° F hysteresis).	Open to 100%

^(a) Place the discharge temperature sensor in close proximity to the hot water coil discharge. The sensor effectively reports coil temperature when there is no airflow through the coil. Therefore, the coil can be freeze protected by the discharge air temperature sensor.

Stand-alone Controller Freeze Protection

Controllers operating without communications do not have the source temperature available to them. In these cases, the discharge air temperature sensor is assumed to provide a reasonable representation of the coil temperature at conditions with no airflow, if the sensor is close to the coil. If the discharge air temperature (at no airflow) falls below the configured outdoor air low limit, the hot water valve is fully opened. The hot water valve remains OPEN until the discharge air temperature is 10°F above the configured outdoor air low limit or occupied operation begins. If the communicated source temperature is invalid and the local discharge air temperature sensor has failed, freeze protection is active and the water valve is open.

Unoccupied Ventilation Flow Control

The controller closes the air valve and the local electric heat and hot water heat are disabled. The hot water valves OPEN, if needed for freeze protection. The operation of freeze protection for local hot water heat depends on whether the controller is operating as a network controller or a stand-alone controller.

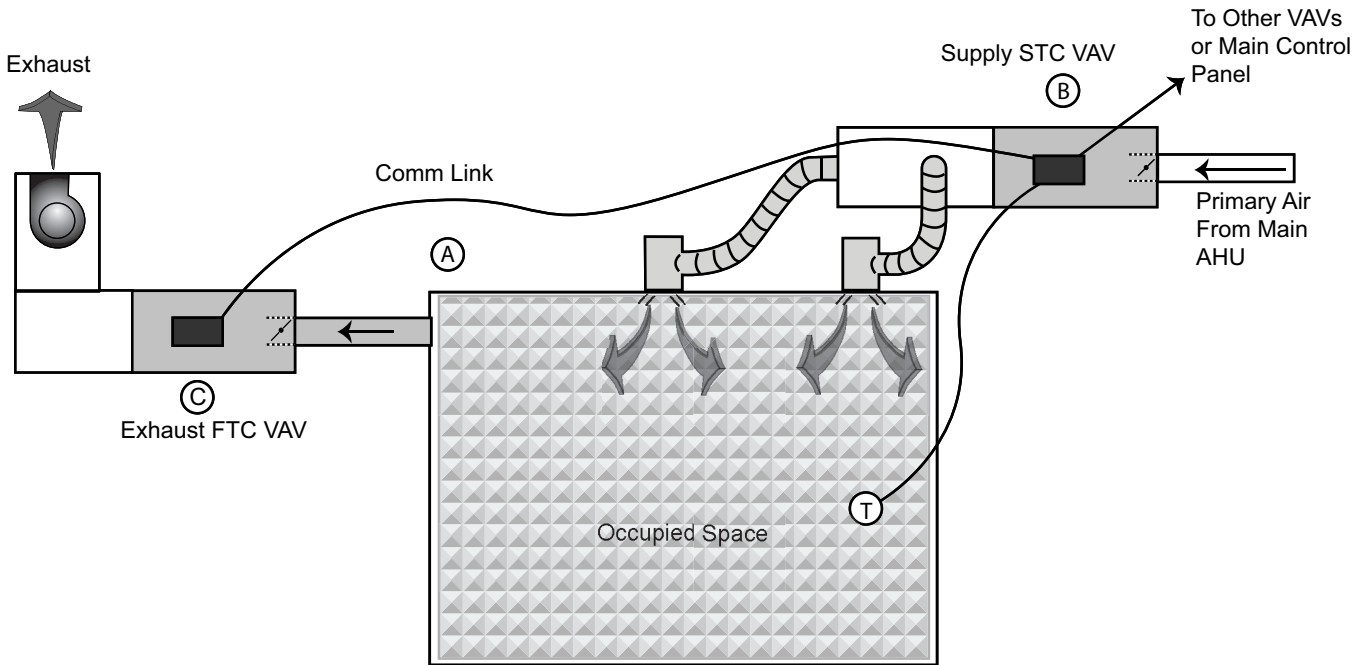
Flow Tracking (FTC)

Two (2) Symbio™ 210 controllers work together to provide flow tracking control (refer to the illustration below). The space temperature controller (STC) Discharge Air Flow is communicated to the flow tracking controller and is reported as Air Flow Setpoint BAS.

Note: This must be set up on the Tracer® SC using either a global reference or TGP2 program. for more details, refer to the Air Systems for Tracer SC Application Guide (BAS-APG007*-EN).

The flow tracking controller adds the configured airflow tracking offset (positive or negative) to the Air Flow Setpoint BAS and controls the airflow to this setpoint (Air Flow Setpoint Active). The flow tracking controller does not require a space temperature sensor or a discharge air temperature sensor. If the calculated airflow setpoint is less than 10% of the configured nominal airflow, and the configured airflow tracking offset is less than zero, the air valve is closed. If the calculated airflow setpoint is less than 10% of the configured nominal airflow, and the configured airflow tracking offset is greater than or equal to zero, the air valve is positioned at the configured minimum airflow. The maximum airflow setpoint is limited by the configured maximum airflow.

Figure 13. Use of two Symbio 210 controllers to provide flow tracking control



Reheat Control in Flow Tracking Control Operation

Reheat is not an option on a flow tracking controller.

Unoccupied Flow Tracking Control

In unoccupied control mode, the controller operates the air valve the same as it does in occupied control mode. The controller enters this mode from a communicated command or from a local occupancy sensor.



Troubleshooting

This section provides information about the following:

- “Diagnostics,” p. 47
- “Troubleshooting Procedures,” p. 48

⚠ WARNING

Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

Diagnostics

The following table provides information about controller diagnostics.

Table 17. Controller diagnostics

Diagnostic	Air Valve	Fan	Reheat
Discharge air temperature failure (space temperature control)	Normal	Normal	Normal
Discharge air temperature failure (ventilation flow control without reheat)	Normal	Do not care	Do not care
Discharge air temperature failure (ventilation flow control with reheat)	Closed	Do not care	Off
Discharge air temperature failure (flow tracking control)	Normal	Do not care	Do not care
Low airflow (space temperature control)	Normal	Normal	Local electric heat is Off; local hydronic and all remote heat is normal
Low airflow (ventilation flow control)	Normal	Do not care	Local electric heat is Off; local hydronic is normal; remote is Don't Care
Supply air temperature failure (space temperature control)	Normal	Normal	Local electric heat is Off ^(a) ; If system mode is heat or auto with a warm or hot supply air temperature; local hydronic and all remote heat is normal
Supply air temperature failure (ventilation flow control)	Normal	Do not care	Normal
Supply air temperature failure (flow tracking control)	Normal	Do not care	Do not care
Space temperature fail (space temperature control) ^(b)	Occupied: cool minimum flow setpoint Unoccupied: closed	Series fan enabled; parallel fan Off	Off
Space temperature fail (ventilation flow control) ^(b)	Normal	Do not care	Normal
Space temperature fail (flow tracking control) ^(b)	Normal	Do not care	Do not care
Local setpoint failure	Normal	Normal	Normal
Flow sensor failure or flow sensor calibration failure (space temperature control)	Normal pressure dependent control	Normal	Normal
Flow sensor failure or flow sensor calibration failure (ventilation flow control)	Normal pressure dependent control	Do not care	Normal

Troubleshooting

Table 17. Controller diagnostics (continued)

Diagnostic	Air Valve	Fan	Reheat
Flow sensor failure or flow sensor calibration failure (flow tracking control)	If the configured airflow tracking offset is positive, configure maximum airflow. If the configured airflow tracking offset is negative, configure minimum airflow.	Do not care	Do not care
Freeze protection active (ventilation flow control)	Closed	Off	Off
Thumbwheel in * position (single star position)	Minimum airflow	Normal	Normal
Thumbwheel in ** position (double star position)	Maximum airflow	Normal	Normal
Normal	Normal	Normal	Normal

^(a) If system mode is heat or auto with a warm or hot supply air temperature.

^(b) When a temperature sensor fails after being valid, the controller generates a diagnostic to indicate the sensor loss condition. The controller automatically clears the diagnostic once a valid sensor temperature value is present (non-latching diagnostic).

Troubleshooting Procedures

Symbio™ 210 Controller Failure


⚠ WARNING

Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

In the event the Symbio 210 controller fails, check the following:

- Check for incorrect supply voltage or no voltage. Verify that Symbio 210 is properly grounded through one leg of transformer or with jumper to ground.
 - Check Marquee LED for the following:
 - Displays solid green when the Symbio 210 controller is powered and operating normally.
 - Displays solid red when the Symbio 210 controller is powered, but represents low power or a malfunction.
 - If marquee LED displays solid red, check incoming power. Measure the power input to the Symbio 210 controller on XFMR 24 Vac input and .

The supply voltage should be between 20.4 to 27.6 Vac (24 Vac cataloged). However, voltages at either extreme may result in system instability.
 - If no voltage, check up stream of controller to see where voltage has been interrupted. Refer to the section, “Appendix: Typical Trane Factory Wiring Diagrams,” p. 62.
- Check for short.
 - Remove all wires from controller except incoming power.
 - Check device using Tracer® TU service tool to see if the Symbio 210 controller is operating properly. If it does operate properly check, inputs/outputs for a short.
 - If controller still fails, replace controller.

Note: For instructions on how to use Tracer® TU, refer to the Tracer® TU Online Help and to the Tracer® TU Service Tool User Guide (BAS-SVU047*-EN).
- Check for alarms or diagnostics with Tracer TU service tool.

Symbio™ 210 Controller Communication Loss


⚠ WARNING

Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

In the event of communication loss (no activity on the LINK or IMC LEDs), check the following:

- The TX LED blinks green at the data transfer rate when the Symbio 210 controller transfers data to other devices on the link.
- The RX LED blinks yellow at the data transfer rate when the Symbio 210 controller receives data from other devices on the link.
- Check for incorrect supply voltage/no voltage.
 - Check Marquee LED for the following:
 - Displays solid green when the Symbio 210 controller is powered and operating normally.
 - Displays solid red when the Symbio 210 controller is powered, but represents low power or a malfunction.
 - If marquee LED is solid red, check incoming power. Measure the power input to Symbio 210 controller on XFMR 24 Vac input and 
 - The supply voltage should be between 20.4 to 27.6 Vac (24 Vac cataloged). However, voltages at either extreme may result in system instability.
 - If no voltage, check up stream of controller to see where voltage has been interrupted. Refer to the section, [“Appendix: Typical Trane Factory Wiring Diagrams,”](#) p. 62.
 - Check for correct addressing on the Symbio 210 controller.
 - Each Symbio 210 controller on the BACnet® link must have a unique rotary switch setting, otherwise communication problems will occur. There are three rotary switches on the front of the Symbio 210 controller. Use these switches to define a three-digit address when the Symbio 210 controller is installed in a BACnet system (for example, 107, 120, and so on), whether with other Trane BACnet controls or controls from another vendor. This three-digit rotary switch setting is used as both the BACnet MAC address and the BACnet Device ID.
 - Note:** *Valid addresses are 001 to 120. Sequential addressing without gaps is recommended.*
 - Verify that there are no duplicated addresses on the communication link.
- Check for alarms or diagnostics with Tracer TU service tool, and check that the communication link avoids interference. Communication link should not be routed near or with any voltage source.
 - The following wiring best practices are recommended:
 - Strip no more than 2 inches (5 cm) of the outer conductor of shielded wire.
 - Avoid sharing 24 Vac power between unit controllers.
 - Ensure that 24 Vac power supplies are consistently grounded. If grounds are not maintained, then intermittent or failed communication could result.
- Check that twisted shielded pair wiring is used and observe the following guidelines (refer to the section, [“Wiring Installation,”](#) p. 13):
 - Connect the shield portion of the wire at the first unit controller in the link.
 - Tape back the shield at the end of the unit controller line.
 - Wire together and tape all other shields at each unit controller.
- Check application version and build or download the latest application version using the Tracer® TU service tool.
 - Note:** *For instructions on how to use Tracer® TU, refer to the Tracer® TU online Help and the Tracer® TU Service Tool User Guide (BAS-SVU047*-EN).*
- If communication loss persists, we recommend connecting to the link with Serial Spy MS/TP analyzer to review the token passing. For detailed instructions about use, analysis and Comm link voltage tests, refer to the [BACnet® MS-TP Wiring and Link Performance Best Practices and Troubleshooting Guide](#) (BAS-SVX51*-EN).





Wired Zone Sensor Failure
⚠ WARNING
Hazardous Service Procedures!

Failure to follow all precautions in this manual and on the tags, stickers, and labels could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the following instructions: **Unless specified otherwise, disconnect all electrical power including remote disconnect and discharge all energy storing devices such as capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. When necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been trained in handling live electrical components perform these tasks.**

In the event that the Symbio™ 210 controller reports an incorrect zone temperature, check the following:

- Verify that the actual room temperature is higher or lower than what the Symbio 210 controller reads.
 - Check the location and installation of the zone sensor for heat sources or drafts. If necessary, a calibration offset can be added with Tracer TU, in the Space Temperature Local configuration screen.
- Note:** *If the zone sensor is OFF more than ± 2 degrees, proceed to the next bullet item.*
- Verify that the zone sensor is wired correctly. Refer to the section, “Wiring Installation,” p. 13.
 - Verify that the zone sensor is working properly.
 - Disconnect the zone sensor terminal plug from the Symbio 210 controller and using an ohmmeter, measure the resistance across the terminals 1 and 2. Compare the resistance to the temperature (refer to Table 18, p. 50). The resistance value should be within ± 2 degrees near those measured with an accurate temperature measuring device. If not, replace the zone sensor.
 - Verify that neither the wiring or the Symbio 210 controller are defective. With wires still connected to the Symbio 210 controller, disconnect zone sensor wires that were connected to terminals 1 and 2 of zone sensor. Measure for 2.6–3.3 Vdc and if it is not present, then verify whether the Symbio 210 controller is outputting 2.6–3.0 Vdc.

To do this, disconnect the wires on the Symbio 210 controller from terminals A11 and , and measure the Vdc— it should be 2.6–3.0 Vdc. If 2.6–3.0 Vdc is present at the Symbio 210 controller, the wires going to the zone are OPEN. If the correct voltage is not present, check the incoming power to the Symbio 210 controller on XFMR 24 Vac input and . It should measure 24 Vac ± 15%. If the proper voltage is measured at the XFMR 24 Vac input and , and there is no voltage at A11 and , replace the Symbio 210 controller.

- Verify that the zone sensors are not shorted out. Check the resistance across the wires. Disconnect wires from the Symbio 210 controller and zone sensor, ensuring that the ends are not touching each other, and then measure resistance. It should be infinite or no conductivity. If lower resistance is shown, then the wires are shorted together and need to be replaced.

Table 18. Zone sensor temperature resistance

Temperature (°F)	Thermostat Thumbwheel Resistance (Ohms) (a)	Sensor Resistance (k Ohms)
55	792	17.0
56	772	16.5
57	753	16.1
58	733	15.7
59	714	15.4
60	694	15.0
61	675	14.6
62	656	14.3
63	636	14.0
64	617	13.6
65	597	13.3
66	578	13.0
67	558	12.6
68	539	12.3
69	519	12.1

Table 18. Zone sensor temperature resistance (continued)

Temperature (°F)	Thermostat Thumbwheel Resistance (Ohms) (a)	Sensor Resistance (k Ohms)
70	500	11.8
71	481	11.5
72	461	11.2
73	442	11.0
74	422	10.7
75	403	10.4
76	383	10.2
77	364	10.0
78	344	9.7
79	325	9.5
80	306	9.3
81	286	9.0
82	267	8.8
83	247	8.6
84	228	8.4
85	208	8.2

(a) Thumbwheel resistance checks are made at terminal 2 and 3 on the zone sensor. Temperature sensor resistance is measured at terminal 1 and 2 of the zone sensor.

Wired Zone Sensor Setpoint Failure

⚠ WARNING




Hazardous Service Procedures!

Failure to follow all precautions in this manual and on the tags, stickers, and labels could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the following instructions: **Unless specified otherwise, disconnect all electrical power including remote disconnect and discharge all energy storing devices such as capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. When necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been trained in handling live electrical components perform these tasks.**

In the event that the Symbio™ 210 controller reports an incorrect zone setpoint, check the following:

- Verify that the zone sensor is wired correctly.
- Check that the zone sensor setpoint dial is not defective.
 - Disconnect the zone sensor terminal plug from the Symbio 210 controller and using an ohmmeter, measure the resistance across the terminals 2 (common) and 3 (setpoint). Compare the resistance to specified setpoint on sensor using [Table 18, p. 50](#). The resistance shown should correlate within ± 2 degrees of setpoint. If not, replace the zone sensor.
- Check the wiring and the Symbio 210 controller.
 - With the wires still connected to Symbio 210 controller, disconnect zone sensor setpoint wires and check voltage (direct current) from wires that were connected to terminals 2 and 3 of zone sensor. Measure for 2.6–3.0 Vdc and if not present, then verify whether the Symbio 210 controller is outputting 2.6–3.0 Vdc.

To do this, disconnect the wires on the Symbio 210 controller on terminals Ground  and AI2 and measure the Vdc— it should be 2.6–3.0 Vdc. If there is 2.6–3.0 Vdc at the Symbio 210 controller, the wires going to the zone are OPEN. If 2.6–3.0 Vdc is not present, check the incoming power to the Symbio 210 controller on XFMR 24 Vac input and . It should measure 24 Vac $\pm 15\%$. If the proper voltage is measured at the XFMR 24 Vac input and , and there is no voltage at the and AI2, replace the Symbio 210 controller.
- Verify that the zone sensor setpoint is not shorted out.
 - Check the resistance across the wires. Disconnect wires from the Symbio 210 controller and zone sensor making sure the ends are not touching each other and measure resistance. It should be infinity or no conductivity. If lower resistance is shown, then the wires are shorted together and need replacing.

Airflow Sensor Failure

In the event that the air valve is reading position (pressure dependent) instead of flow (pressure independent), or in the event that the measured flow reads incorrectly, (for example, different from the balance report), check the following:

- Recalibrate the VAV unit by cycling power to unit. This can also be accomplished with Tracer® TU service tool or Tracer® SC.

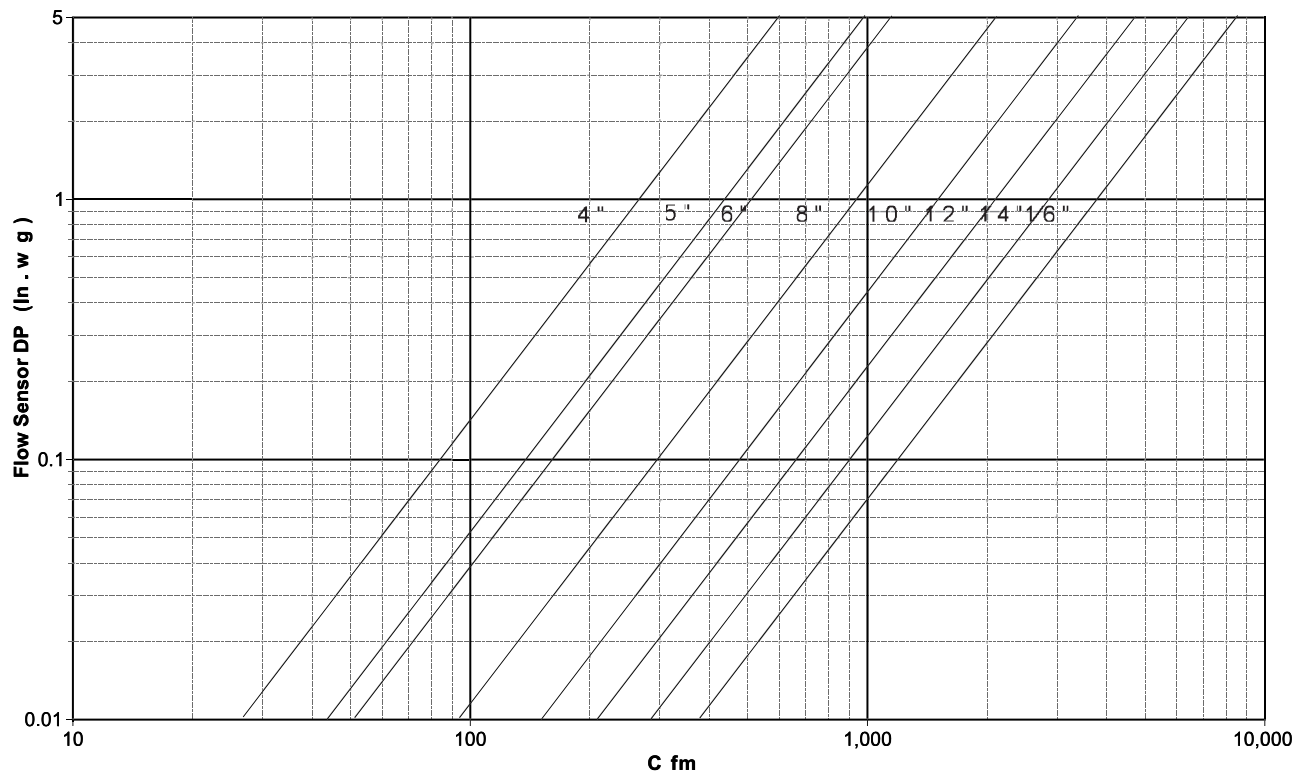
Important: *Cycling power to the VAV board: The default will automatically cause the unit to calibrate, but this depends on binary value, auto-calibrate, enable/disable point. However, following the procedure outlined below will provide a more accurate calibration. It is only necessary to perform this procedure when experiencing incorrect flow readings or if the unit reverts to pressure dependent mode despite being above 5% and below 110% of cataloged flow and performing a normal calibration and does not correct the problem.*

To calibrate:

1. Connect to the Symbio™ 210 controller with Tracer TU service tool.
 2. Turn the central air handler OFF. If this is not possible, Trane recommends pulling the transducer tubes off during the calibration process to simulate this.
 3. Select the Zero Air and Water Valve Start button on the Commissioning page. Tracer TU service tool will indicate that calibration is taking place. When calibration is complete, the box will release to AUTO.
 4. Drive the box OPEN by overriding multistate value 2, air flow override, to Air Valve Maximum Setpoint, from the Multistate Status page to ensure that the box is not below 5% of its cataloged CFM. The controller is accurate in reading flow from 5% to 110% of cataloged CFM.
 5. Release the box to AUTO and perform any necessary balancing work. For details, refer to the Tracer TU Online Help.
 6. Check to see if flow has been established. If flow is not established, or inaccurate, proceed to the following bullet.
- If the tubing or flow ring is OFF, reversed, plugged, or has a leak:
 1. Check with a magnahelic gauge and compare with the delta pressure (DP) chart located on the VAV box. (See [Figure 14, p. 53.](#))

Note: *The chart shown in Figure 14 is intended for Trane F-Style boxes. Other manufacturers may have different delta pressure charts.*
 2. Check the tubing for reversal and/or leaks.
 3. Check the flow ring for plugged holes. Blow out with compressed air if necessary.

Figure 14. Delta pressure chart for Trane F-Style boxes



- Wrong unit size downloaded into the Symbio™ 210 controller setup screen. Verify that the actual unit size matches what is listed on the unit nameplate.
- Poor inlet configuration.
 - Trane recommends 1½-duct diameters of straight duct before the inlet of the box (a 12-inch box should have 18 inches of straight run duct before the inlet).
- To determine whether or not the transducer has failed, check the following:
 - Check the 24 volts AC supply at XFMR 24 Vac input and $\overline{\sim}$ should be between 20.4 and 27.6 Vac. on the Symbio 210 controller. Voltage
 - Read the input voltage to the transducer from the Symbio 210 controller between the green and red wires on P1 of the controller. The voltage should be between 4.50 volts DC and 5.50 volts DC (5 volts DC cataloged). If voltage not available, replace the Symbio 210 controller.
 - Remove the high and low tubes from the transducer (to simulate no flow). Read the transducer output voltage on P1 of the Symbio 210 controller between the green and the black wires with a voltmeter. The voltage should be between 0.20 volts DC and 0.30 volts DC (0.25 volts DC is the null voltage output of the transducer indicating zero flow). If voltage not available, replace the transducer.

Note: The formula for the transducer output voltage is $0.25 + 0.75 * \langle \text{delta } P \rangle$, where delta P is the pressure in inches of water column. Delta P can range from 0 to 5 inches of W.C.
- With flow going across the flow ring, measure the differential pressure with a magnahelic and use the transducer output voltage formula to check accuracy of reported value. Read the transducer output voltage between the green and the black wires. The measured value should correspond to the value given in the transducer output formula. If transducer is off by $\pm 5\%$, replace transducer.

Supply/Discharge Air Temperature Sensor Failure






⚠ WARNING

Hazardous Service Procedures!

Failure to follow all precautions in this manual and on the tags, stickers, and labels could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the following instructions: Unless specified otherwise, disconnect all electrical power including remote disconnect and discharge all energy storing devices such as capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. When necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been trained in handling live electrical components perform these tasks.

In the event that the Symbio™ 210 controller reports an incorrect or failed discharge or supply air temperature, check the following:

- Ensure the Symbio 210 controller has been configured for the input and the point has not been placed out of service.
- Discharge or supply air temperature is higher or lower than what the Symbio 210 controller reads.
- Check the location and installation of the sensor. Change the calibration factor in the Symbio 210 controller setup screens.
Note: *If sensor is off more than ± 2 degrees continue to the next bullet.*
- Check sensor wiring for the correct connections.
- Defective sensor.
 - Disconnect the sensor terminal plug from the Symbio 210 controller and using an ohmmeter, measure the resistance across the sensor wires. Compare the resistance to temperature (refer to [Table 18, p. 50](#)). The resistance measured should correspond to a temperature within ± 2 degrees near those measured with an accurate temperature measuring device. If the measured resistance does not correspond, replace the sensor.
- Defective wiring or defective Symbio 210 controller.
 - Verify that the Symbio 210 controller is outputting 2.6–3.0 Vdc. This can be performed by disconnecting the wires on the Symbio 210 controller on terminals AI3 and  for a discharge air temperature sensor and measuring the Vdc. It should be 5 Vdc. If there is 2.6–3.0 Vdc at the Symbio 210 controller, the wires going to the zone are OPEN. If 5 Vdc is not present, check the incoming power to the Symbio 210 controller on XFMR 24 Vac input and . It should measure 24 Vac $\pm 15\%$. If the proper voltage is measured at XFMR 24 Vac input , and there is no voltage at AI4 and  for discharge air temperature sensor or AI5 and  for supply air temperature sensor, replace the Symbio 210 controller.

CO₂ Sensor Failure

⚠ WARNING

Hazardous Service Procedures!

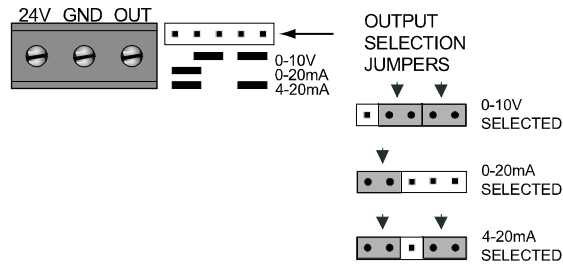
Failure to follow all precautions in this manual and on the tags, stickers, and labels could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the following instructions: Unless specified otherwise, disconnect all electrical power including remote disconnect and discharge all energy storing devices such as capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. When necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been trained in handling live electrical components perform these tasks.

In the event that the Symbio™ 210 controller reports an incorrect or failed CO₂ sensor input temperature, check the following:



- Check that the CO₂ point is not *out of service*.
- Check jumper position on CO₂ sensor.

Figure 15. Jumper positions



- Symbio 210 default is 4–20 mA.

Note: If the CO₂ sensor is not set up for 4–20 mA, the CO₂ input can be put out of service with Tracer® TU, changed to the 0–20 mA or 0–10 Vdc in the configuration screen, and then put back in service.

- Check voltage between UI2 and  with the sensor connected. It should be between 1-10V DC. If it is not, check incoming power.
- Check voltage input to CO₂ sensor with voltmeter. It should be between 20.4 to 27.6 Vac; nominal is 24 Vac.
- After measuring the proper voltage at incoming power, and there is no VDC output at UI2 and , replace sensor. If there is no voltage, check up stream of controller to see were voltage has been interrupted. Refer to the section, “Appendix: Typical Trane Factory Wiring Diagrams,” p. 62.

VAV Damper Failure


⚠ WARNING

Hazardous Service Procedures!


Failure to follow all precautions in this manual and on the tags, stickers, and labels could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the following instructions: **Unless specified otherwise, disconnect all electrical power including remote disconnect and discharge all energy storing devices such as capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. When necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been trained in handling live electrical components perform these tasks.**

In the event that the air valve does not modulate, check the following:

- Tracer® SC or Tracer® TU service tool has enabled an override function in the Symbio™ 210. Verify no overrides are present by clicking on the override icon of multistate value 2, Air Flow Override, on the TU Multistate Status page.
 - The overrides are Open, Closed, Min, or Max. Release all overrides.
 - The Symbio 210 controller is going through a recalibrate (reset) command. This is shown in the diagnostic list in Tracer TU service tool.
 - Wait for calibration to finish.
- Zone temperature is greater than the heat setpoint or less than the cool setpoint. Change the heat and/or cool setpoint.
- Actuator not driving full drive time.
 - Drive time on TU Setup Parameters page, Stroke Times group, not set at 90 seconds on current Varitrane units.
 - Adjust to correct damper travel time using Tracer TU service tool.
 - Damper actuator loose on shaft.
 - Tighten damper actuator set screw to damper shaft by first rotating damper fully clockwise until closed, releasing actuator clutch and rotating actuator collar fully clockwise, and then tightening the setscrews. Incorrect adjustment can result in broken stub axle adapters.
 - Measure the power input to XFMR 24 Vac input and  on the Symbio 210 controller. The supply voltage should be between 20.4 to 27.6 Vac (24 Vac nominal). However, voltages at either extreme may result in system instability and cause damper to not be driven its full range.

Troubleshooting

- If no voltage, check up stream of controller to see where voltage has been interrupted. Refer to the section, “Appendix: Typical Trane Factory Wiring Diagrams,” p. 62.
 - Actuator motor has failed.
 - Check the incoming power to the Symbio 210 controller on XFMR 24 Vac input and TRIAC  supply. The voltage should measure 24 Vac, ± 15%. Measure for the proper voltage at XFMR 24 Vac input and . Check damper actuator motor by applying 24 Vac directly to common (blue) and jumper open (black) wire to ground to drive damper open. Damper should drive open. If not, replace damper actuator.
 - Check damper actuator motor by applying 24 Vac directly to common (blue) and jumper closed (red) wire to ground to drive damper closed. Damper should drive closed. If not, replace damper actuator.
 - The Symbio 210 controller outputs are switched to ground via low-side triac solid-state switches. Because the binary outputs are triac based, the state of the output is difficult to check directly with a digital multi-meter (DMM). To check state of the output with a DMM, the output must be loaded with a 12VA max load. For example, a fan relay. TRIACs can be checked by purchasing a 24 Vac LED and connecting to the TRIAC output. If the 24 Vac LED does not light up, replace the Symbio™ 210 controller.
- Important:** Do not jumper 24 Vac to open and close BOs, because damage will occur to the Symbio 210 binary output circuitry.

VAV Series Fan Failure



WARNING

Hazardous Service Procedures!

Failure to follow all precautions in this manual and on the tags, stickers, and labels could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the following instructions: **Unless specified otherwise, disconnect all electrical power including remote disconnect and discharge all energy storing devices such as capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. When necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been trained in handling live electrical components perform these tasks.**

In the event that the fan output does not energize, check the following:

- Verify the output configuration in the Symbio 210 controller setup screen. Unit needs to be configured as series fan.
 - Outputs on the Symbio 210 controller are configured as normally closed. Verify the output configuration in the Symbio 210 controller setup screen.
- Note:** Series fan-powered units in the occupied mode have the fan continuously energized.
- Tracer® SC has the fan output disabled. Check overrides to ensure they are not inhibiting fan operation.
 - A flow override exists locking out the fan output. Ensure that either Tracer SC or the Tracer® TU service tool has released fan disable override.
 - If the Symbio 210 controller is calling for the fan to be ON (viewed in the Status screen), and if it is not, then check the TRIAC output wiring and relay output.
 - Override damper open.
 - Verify that the fan cycles ON.
 - Check BO to common . It should have 24 Vac. If it does not, measure the power input to on XFMR 24 Vac input and  of the Symbio 210 controller. The supply voltage should be between 20.4 to 27.6 Vac (24 Vac catalogued). However, voltages at either extreme may result in system instability.
 - TRIACs can be checked by purchasing a 24 Vac LED and connecting to the TRIAC output. If the 24 Vac LED does not light up, replace the Symbio 210 controller.
 - Remove fan wires from the Symbio 210 controller and apply 24 Vac directly to fan relay wires.
 - Fan relay should energize. If it does not energize, check wiring. If wiring is correct, replace fan relay.

NOTICE

Equipment Damage!

Failure to follow instructions below could result in equipment damage.

The controller outputs are switched to ground. Do not jumper 24 Vac to binary output TRIAC(s) because damage will occur.

- After all checks have been completed, check motor fan winding integrity and bearing failure.

VAV Parallel Fan Failure



⚠ WARNING

Hazardous Service Procedures!

Failure to follow all precautions in this manual and on the tags, stickers, and labels could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the following instructions: **Unless specified otherwise, disconnect all electrical power including remote disconnect and discharge all energy storing devices such as capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. When necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been trained in handling live electrical components perform these tasks.**

In the event that the fan output does not energize, check the following:

- Verify the output configuration in the Symbio™ 210 controller setup screen. Unit needs to be configured as parallel fan.
- Outputs on the Symbio 210 controller are configured as normally closed. Verify the output configuration in the Symbio 210 controller setup screen.
 - Note:** Parallel fan can be enabled by either a differential temperature above the heating setpoint or CFM flow.
- Tracer® SC has the fan output disabled. Ensure that the overrides are not inhibiting fan operation.
 - Note:** For ECM fan there are two controlling outputs. The start/stop binary output and Analog fan speed. If the fan speed is at 0% then the fan should be running at minimum flow. The status of the outputs can be checked on the TU binary status page.
- A flow override exists locking out the fan output. Ensure that either Tracer SC or the Tracer TU has released fan disable override. Flow overrides can be checked on the TU multistate status page.
 - Note:** If fan cycling is based on temperature or airflow, proceed to the next two bullet items.
- If fan cycling is based on temperature and zone temperature is at or above the heating setpoint plus heating offset on units configured as temperature control. A set differential of 0.5°F exists to prevent short cycling.
 - Increase the Symbio 210 controller heating setpoint causing fan to cycle ON.
 - Lower the heating setpoint by 6 degrees and the fan will cycle OFF.
- If the fan cycling is based on airflow, the unit fan is energized whenever supply airflow is below this setpoint. For this parallel fan configuration, the fan control point (if specified in a percentage of unit airflow), must be set between 15% and 30% of the units cataloged airflow to assure proper operation. A differential of 5% exists to avoid excessive fan cycling.
 - Override damper closed until CFM is below enabled flow setpoint.
 - Verify that the fan cycles ON.
 - Override damper open until CFM is above enabled flow setpoint fan will cycle OFF.
- If the Symbio 210 controller is calling for the fan to be ON (viewed in the Status screen), and it is not, then check the TRIAC output wiring and relay output.
 - Check BO to common . It should have 24 Vac. If it does not, measure the power input to on XFMR 24 Vac input and  of the Symbio 210 controller. The supply voltage should be between 20.4 and 27.6 Vac (24 Vac catalogued). However, voltages at either extreme may result in system instability.
 - TRIACs can be checked by using a 24 Vac load such as relay, led, or actuator. Connect the wires of the load to the triac outputs on controller. Raise setpoint to initiate call for heat. If the Symbio™ 210 BO LEDs are lit, but the load doesn't change state, replace controller.

Troubleshooting

Note: Measuring the output voltage with a meter is not a reliable test for TRIAC output voltage. The TRIAC output requires a small amount of current draw in order to fully switch 24 Vac to ground. The LED provides the required current draw.

- Remove fan wires from the Symbio 210 controller and apply 24 Vac directly to fan relay wires.
- Fan relay should energize. If it does not energize, check wiring. If the wiring check is good, replace fan relay.

NOTICE

Equipment Damage!

Failure to follow instructions below could result in equipment damage.

The controller outputs are switched to ground. Do not jumper 24 Vac to binary output TRIAC(s) because damage will occur.

- After all checks have been completed, check motor fan winding integrity and bearing failure.

PSC (Permanent Split Capacitor) Variable Speed Motor Check

⚠ WARNING

Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

If the PSC Variable speed motor control does not change the motor speed, check the following:

- Wires connected improperly. Refer to the section, “Appendix: Typical Trane Factory Wiring Diagrams,” p. 62.
- Check voltage selection switch on side of variable speed motor control. It should be set for motor voltage.
- Check speed control by:
 - Turning the voltage selection switch fully counterclockwise.
 - Turning the motor speed control potentiometer fully counterclockwise.
 - Ensuring the motor remains OFF.
- Turn voltage selection switch fully clockwise, but:
 - The motor speed control potentiometer still remains fully counterclockwise.
 - Measure the motor voltage. It should be no more than 8 Vac lower than line voltage.
 - The voltage selection switch still remains fully clockwise.
- Turn motor speed control potentiometer slowly, fully clockwise. The motor should smoothly ramp to full speed.
- If the PSC motor speed controller fails, replace it.

VAV Electric Heat Stage Failure

⚠ WARNING



Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

In the event that the heat outputs do not energize, check the following:

- Zone temperature is at or above the heating setpoint. Increase the Symbio 210 controller heating setpoint.
- Verify the output configuration in the Symbio 210 controller setup screen. Unit needs to be configured as 3-stage electric heat.
- Tracer® SC has the electric heat output disabled. Check group, global, and/or Tracer overrides to make sure they are not inhibiting heat operation.

- Minimum heating CFM is not being met, airflow is too low. Increase the airflow or lower the minimum heating flow.
- Heat relays have failed.
 - If the Symbio 210 controller is calling for electric heat (viewed in the Status screen), then the LED is ON for correct binary output(s) for the stage(s) of heat to be ON. If not, then check the Symbio 210 controller TRIAC output, wiring connections, and relay output.
 - Check correct binary output to common . It should have 24 Vac. If it does not, measure the power input to on XFMR 24 Vac input and  of the Symbio 210 controller. The supply voltage should be between 20.4 and 27.6 Vac (24 Vac catalogued). However, voltages at either extreme may result in system instability.
 - Heat TRIACs can be checked by purchasing a 24 Vac LED and connecting to the TRIAC output. If the 24 Vac LED does not light up, replace the Symbio 210 controller.

NOTICE

Equipment Damage!

Failure to follow instructions below could result in equipment damage.

The controller outputs are switched to ground. Do not jumper 24 Vac to binary output TRIAC(s) because damage will occur.

- Move electric heat relay wires from the Symbio 210 controller and apply 24 Vac directly.
- Electric heat stage should energize. If it does not, then check the wiring, safeties, electric heat contactor, or replace any necessary components.

VAV Modulating Hot Water Failure


⚠ WARNING

Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

In the event that the heat outputs do not energize, check the following:

- Zone temperature is at or above the heating setpoint. Increase the Symbio™ 210 controller heating setpoint.
- Verify the valve control type selection on the TU Equipment Configuration screen. Unit needs to be configured as modulating hot water.
- Tracer® SC has the heat output disabled. Check overrides to ensure they are not inhibiting heat operation.
- Heat relays have failed.
 - If the Symbio 210 controller is calling for binary output (viewed in the Status screen), then the LED is ON for the correct binary output to open the valve. If the TRIAC is not closed, then check the Symbio 210 controller TRIAC output, wiring connections, and relay output.
 - Check for correct binary outputs. It should have 24 Vac. If it does not, measure the power input to XFMR 24 Vac input and  of the Symbio 210 controller. The supply voltage should be between 20.4 to 27.6 Vac (24 Vac catalogued). However, voltages at either extreme may result in system instability.
 - Heat TRIAC(s) can be checked by purchasing a 24 Vac LED and connecting to the TRIAC output. If they are lit, it is calling heat output to be OPEN or CLOSED by the Symbio 210 controller. If LED is not lit, replace the Symbio 210 controller.

NOTICE

Equipment Damage!

Failure to follow instructions below could result in equipment damage.

The controller outputs are switched to ground. Do not jumper 24 Vac to binary output TRIAC(s) because damage will occur.



Troubleshooting

Trane/Honeywell Proportional Valve Check Out

There are two failures can result in over conditioning the space:

- Cartridge failure
- Actuator failure

Cartridge Failure

Cartridge failure will occur if the actuator is driven CLOSED, but there is an 1/8 inch or greater of movement in the indicator, or if the piston has not returned up past the 'A' port (frozen). In either case, the cartridge is not closed off completely which will result in over heating (or over cooling) the space.

Actuator Failure

Actuator failure will occur if the actuator has stopped moving to the CLOSED position when commanded to and when there is no play in the lever.

Remove the actuator and work the cartridge stem manually. If the stem moves freely, then only the actuator has failed. However, if the stem is sluggish or stuck, then both the actuator and the cartridge have failed.

Note: *The actuator fault is intermittent. However, the actuator may operate again when removed from the valve or if it is tapped with a tool while still on the valve. The actuator indicator on the side of the actuator should be positioned at the top of the actuator when valve is CLOSED.*

VAV 2-Position Hot Water Failure


⚠ WARNING

Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

In the event that the heat outputs do not energize, check the following:

- Zone temperature is at or above the heating setpoint. Increase the Symbio™ 210 controller heating setpoint.
- Verify the output configuration in the Symbio 210 controller setup screen. Unit needs to be configured as proportional hot water.
- Tracer® SC has the heat output disabled. Check overrides to ensure they are not inhibiting heat operation.
- Heat relays have failed.
 - The Symbio 210 controller will call for the valve to be OPEN, (viewed in the Status screen). If not, check the TRIAC output, wiring connections, and relay output.
 - If the Symbio 210 controller is calling for the heat output to be ON (viewed in the Status screen), then the LED is OFF for the correct Binary Output 7 to open the valve (note, polarity is reversed on this point). If the TRIAC is not closed, then check the Symbio 210 controller TRIAC output, wiring connections, and relay output.
 - Check for correct binary outputs. It should have 24 Vac. If it does not, measure the power input to XFMR 24 Vac input and  of the Symbio 210 controller. The supply voltage should be between 20.4 to 27.6 Vac (24 Vac cataloged). However, voltages at either extreme may result in system instability.

NOTICE

Equipment Damage!

Failure to follow instructions below could result in equipment damage.

The controller outputs are switched to ground. Do not jumper 24 Vac to binary output TRIAC(s) because damage will occur.

- Heat TRIAC(s) can be checked by purchasing a 24 Vac LED and connecting to the TRIAC output. If they are lit, it is calling heat output to be OPEN or CLOSED by the Symbio 210 controller. If LED is not lit, replace the Symbio 210 controller.

Symbio™ 210 Firmware Restore and Recovery Methods

Rotary 999 - Return to Factory Defaults

In some cases, a corrupt database or similar problem may require returning the controller to factory defaults.

999 returns the controller to factory defaults and clears database. Any custom programs will be lost. The factory applied license file will not be cleared. The factory default program is located in a special memory section on the controller that cannot be erased or overwritten. 999 accesses this memory space when returning the controller to factory defaults. No USB stick or external file is required for this process.

Follow this procedure to return controller to factory defaults:

1. Power down the Symbio 210.
2. Set the rotary switches to "999".
3. Power up the Symbio 210.
4. The green LED will be flashing code 45 which means within 30 seconds, you must set the rotary switches to the intended normal value. (If the rotary switches are not reset to the intended normal value within 30 seconds, the Symbio 210 will power down leaving the database intact).
5. Controller operation can now be restored using Tracer® TU or a backup file.

Rotary 998 - Restore from a USB Stick

Restore from a USB stick containing a firmware file. Restoring with 998 is intended to preserve the configuration and settings of the controller. It is recommended to be in contact with technical support before attempting this recovery.

In the event the Symbio 210 becomes unresponsive, you can attempt to restore it by following the instructions below:

1. Power down the Symbio 210.
2. Set the rotary switches to 998.
3. Insert the USB stick containing only one full firmware (.scfx) file into the USB port on the controller.
4. Power up the Symbio 210.
5. The green LED will flash several different codes as it progresses through the restore process. When finished the controller will flash 36 repeatedly.
6. Set the rotary switches to the correct address and cycle power.
7. Once the controller finishes booting after the power cycle it will start controlling equipment based upon existing application code.

Note: *The restore process should take 3-5 minutes to complete. To confirm the restore process was successful or to get more information for troubleshooting reference the log files stored on the USB stick during the restore process.*

Rotary 977 - Clear and Restore from a USB Stick

Clear and restore with a USB stick containing a firmware file. The USB stick must contain only one valid full firmware (.scfx) file, which has to be located at the root of the USB drive and not in any folder. The Restore process will update the firmware and clear the controller's database. After a successful 977 restore, the controller will be in a state as though it is a new controller. It is recommended to be in contact with technical support before attempting this restore.

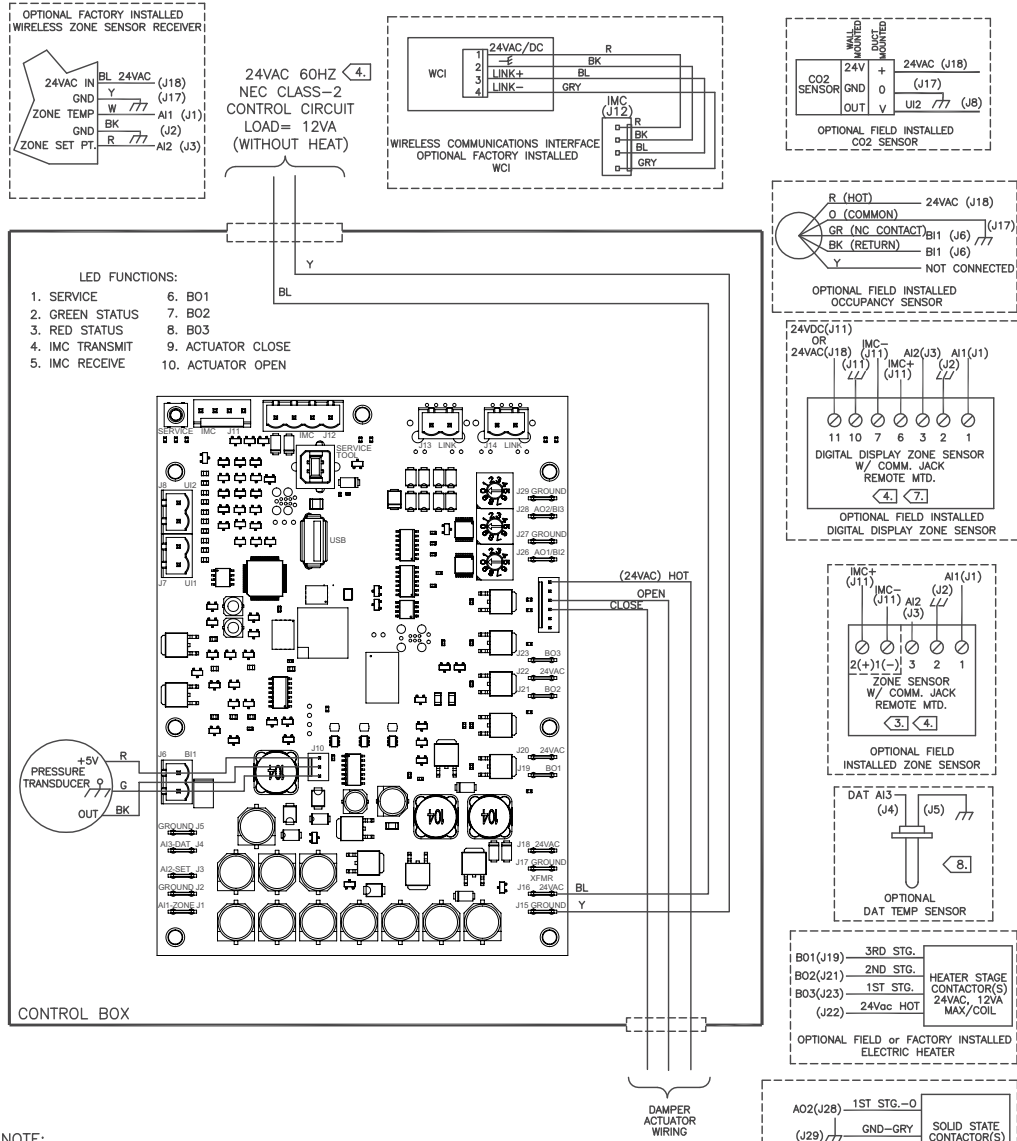
In the event the Symbio™ 210 becomes unresponsive or the red LED is flashing code 12 or 18, you can attempt to restore it by following the instructions below:

1. Power down the Symbio 210.
2. Set the rotary switches to 997.
3. Insert the USB stick containing only one full firmware (.scfx) file into USB port on controller.
4. Power up the Symbio 210.
5. The green LED will flash several different codes as it progresses through the restore process. When finished the controller will flash 36 repeatedly.
6. Set the rotary switches to the correct address and cycle power.
7. Once the controller finishes booting after the power cycle, the status LED should remain solid green indicating that it is ready to be configured using Tracer® TU.

Note: *The restore process should take 3-5 minutes to complete. To confirm the restore process was successful or to get more information for troubleshooting reference the log files stored on the USB stick during the restore process.*

Appendix: Typical Trane Factory Wiring Diagrams

Figure 16. Symbio 210 controller wiring for single duct unit

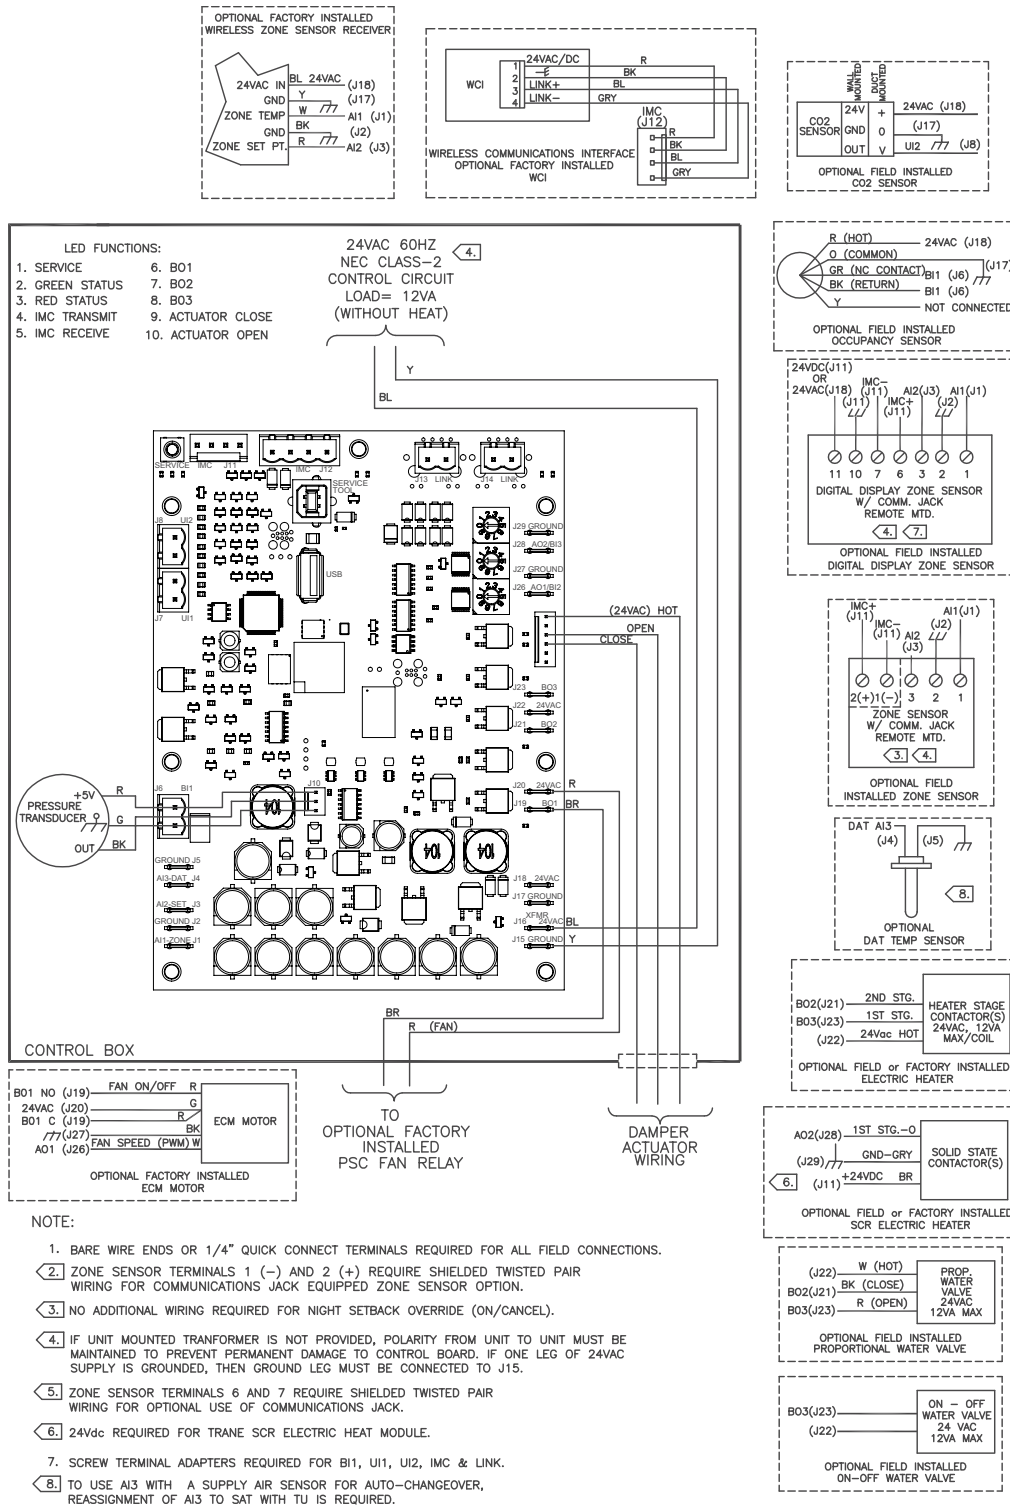


NOTE:

1. BARE WIRE ENDS OR 1/4" QUICK CONNECT TERMINALS REQUIRED FOR ALL FIELD CONNECTIONS.
2. ZONE SENSOR TERMINALS 1 (-) AND 2 (+) REQUIRE SHIELDED TWISTED PAIR WIRING FOR COMMUNICATIONS JACK EQUIPPED ZONE SENSOR OPTION.
3. NO ADDITIONAL WIRING REQUIRED FOR NIGHT SETBACK OVERRIDE (ON/CANCEL).
4. IF UNIT MOUNTED TRANSFORMER IS NOT PROVIDED, POLARITY FROM UNIT TO UNIT MUST BE MAINTAINED TO PREVENT PERMANENT DAMAGE TO CONTROL BOARD. IF ONE LEG OF 24VAC SUPPLY IS GROUNDED, THEN GROUND LEG MUST BE CONNECTED TO J15.
5. ZONE SENSOR TERMINALS 6 AND 7 REQUIRE SHIELDED TWISTED PAIR WIRING FOR OPTIONAL USE OF COMMUNICATIONS JACK.
6. 24Vdc REQUIRED FOR TRANE SCR ELECTRIC HEAT MODULE.
7. SCREW TERMINAL ADAPTERS REQUIRED FOR B11, U11, U12, IMC & LINK.
8. TO USE AI3 WITH A SUPPLY AIR SENSOR FOR AUTO-CHANGEOVER, REASSIGNMENT OF AI3 TO SAT WITH TU IS REQUIRED.

Appendix: Typical Trane Factory Wiring Diagrams

Figure 17. Symbio 210 controller wiring for fan powered unit





Additional Resources

For more detailed information, refer to the following documentation:

- *BACnet® MS/TP Wiring and Link Performance Best Practices and Troubleshooting Guide* (BAS-SVX51*-EN)
- *Engineered Smoke Control System for Tracer® SC System Controller Application Guide* (BAS-APG019*-EN)
- *Tracer® SC System Controller Installation and Setup* (BAS-SVX31*-EN)
- *Rooftop VAV Systems Application Guide* (SYS-AMP007*-EN)
- *Tracer® Graphical Programming 2 (TGP2) Editor Online Help*
- *Tracer® Graphical Programming (TGP2) Application Guide* (BAS-APG008*-EN)
- *Tracer® TU Online Help*
- *Tracer® TU Service Tool User Guide* (BAS-SVU047*-EN)
- *Air-Fi® Wireless System Installation, Operation, Maintenance* (BAS-SVX40*-EN)
- *Tracer® Expansion Modules Installation, Operation, and Maintenance Guide* (BAS-SVX46*-EN)

Note: *Wireless zone sensors are compatible with the Tracer® Programmable BACnet® Controller and can be ordered as factory installed.*



Notes

Trane - by Trane Technologies (NYSE: TT), a global innovator - creates comfortable, energy efficient indoor environments for commercial and residential applications. For more information, please visit trane.com or tranetechnologies.com.

Trane has a policy of continuous product and product data improvements and reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.

BAS-SVX084D-EN 30 Jun 2026
Supersedes BAS-SVX084C-EN (September 2022)

©2026 Trane