


IMPORTANT!
DO NOT ENERGIZE
UNIT UNTIL CHECK-OUT
AND START UP PROCEDURE
HAS BEEN COMPLETED

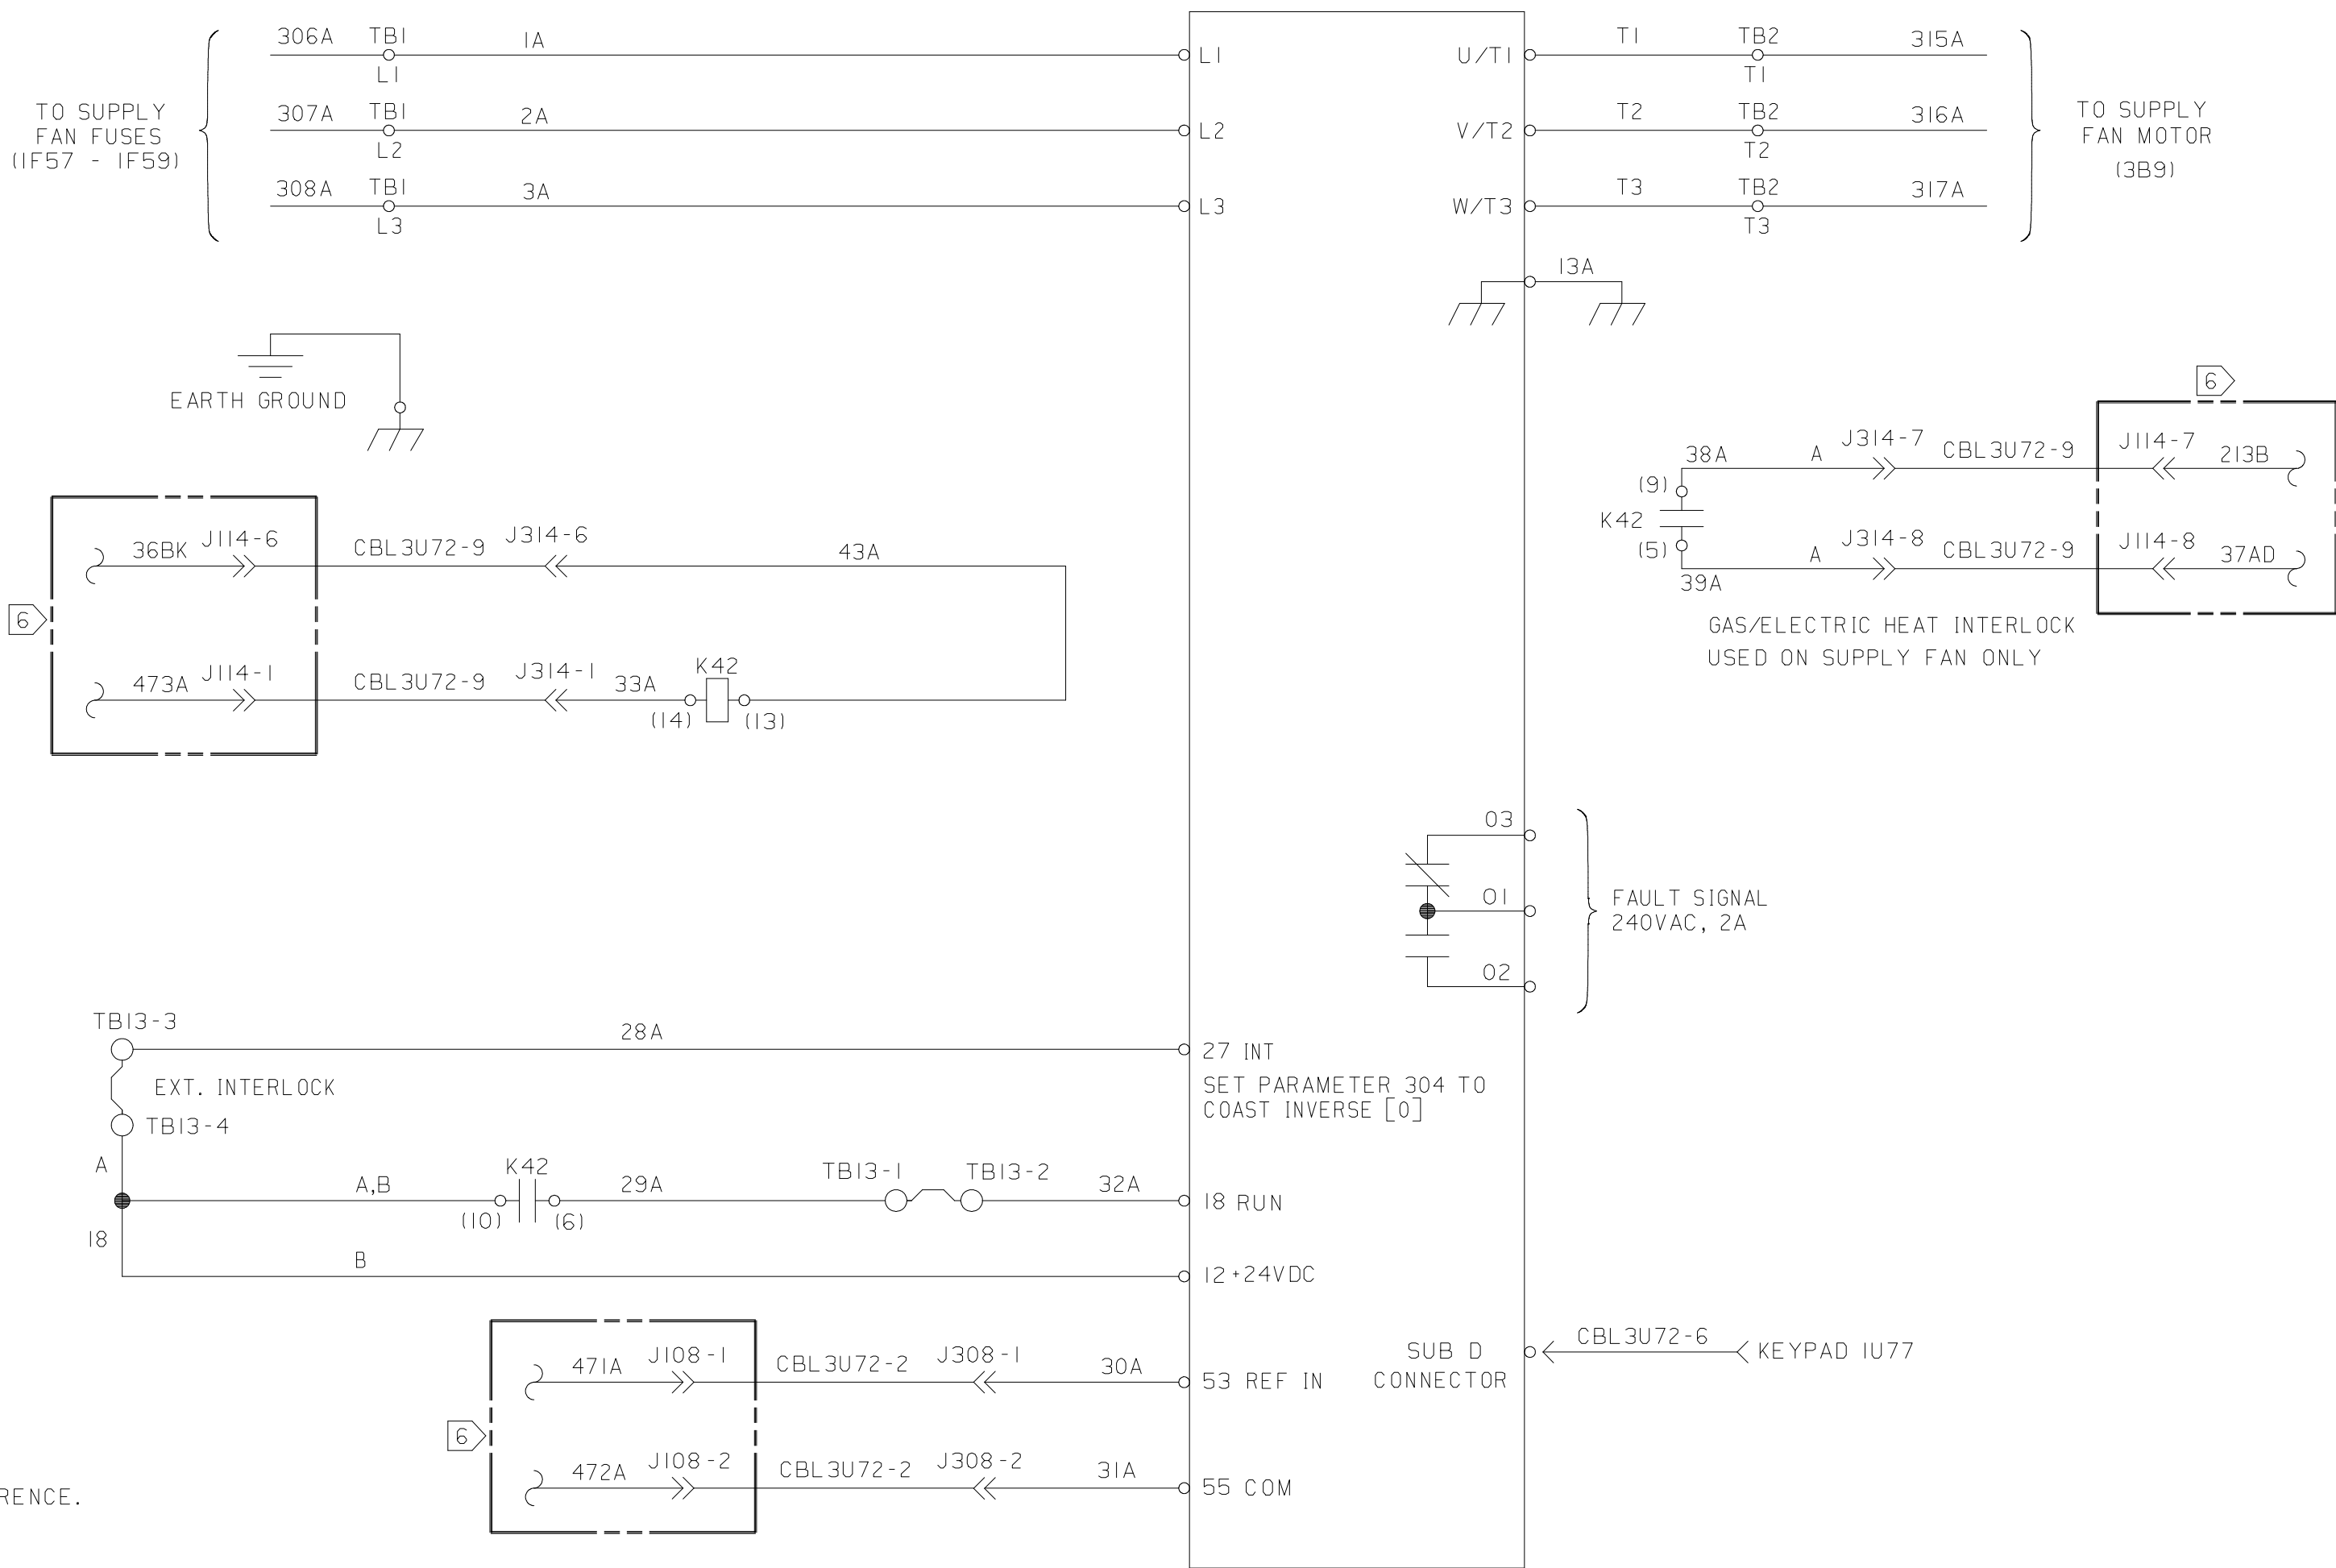

NOTES:




- ① UNLESS OTHERWISE NOTED, ALL SWITCHES ARE SHOWN AT 25° C (77° F), AT ATMOSPHERIC PRESSURE, AT 50 WITH ALL UTILITIES TURNED OFF, AND AFTER A NORMAL SHUTDOWN HAS OCCURRED.
- ② ALL FIELD WIRING MUST BE IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE (NEC), STATE AND LOCAL REQUIREMENTS.
- ③ THIS PANEL LAYOUT IS APPLICABLE TO FIGURE 1 OF X13170390.
- ④ INSET A LAYOUT IS APPLICABLE TO FIGURES 2 AND 3 OF X13170390.
- ⑥ J108, J114 & ASSOCIATED WIRING CONNECTIONS ARE LOCATED IN THE MAIN UNIT CONTROL BOX. SCHEMATIC WIRING SHOWN HERE FOR REFERENCE.

ABBREVIATIONS	
TB	TERMINAL BLOCK
K42	RUN COMMAND RELAY
VFD	VARIABLE FREQUENCY DRIVE

DEVICE PREFIX LOCATION GUIDE	
AREA	LOCATION
1	INSIDE UNIT CONTROL BOX
2	CONDENSER SECTION
3	AIR HANDLER SECTION
4	HEATING SECTION
5	EXTERNAL FIELD MOUNTED DEVICE

3U72 SUPPLY VFD ASSEMBLY

(SEE NOTE 3)

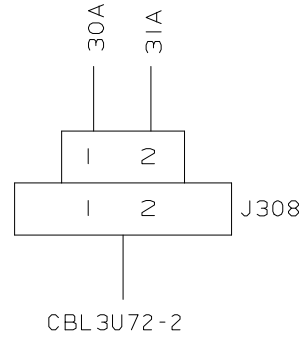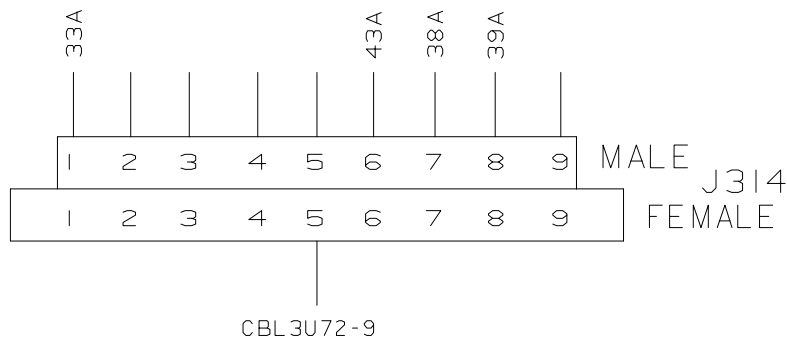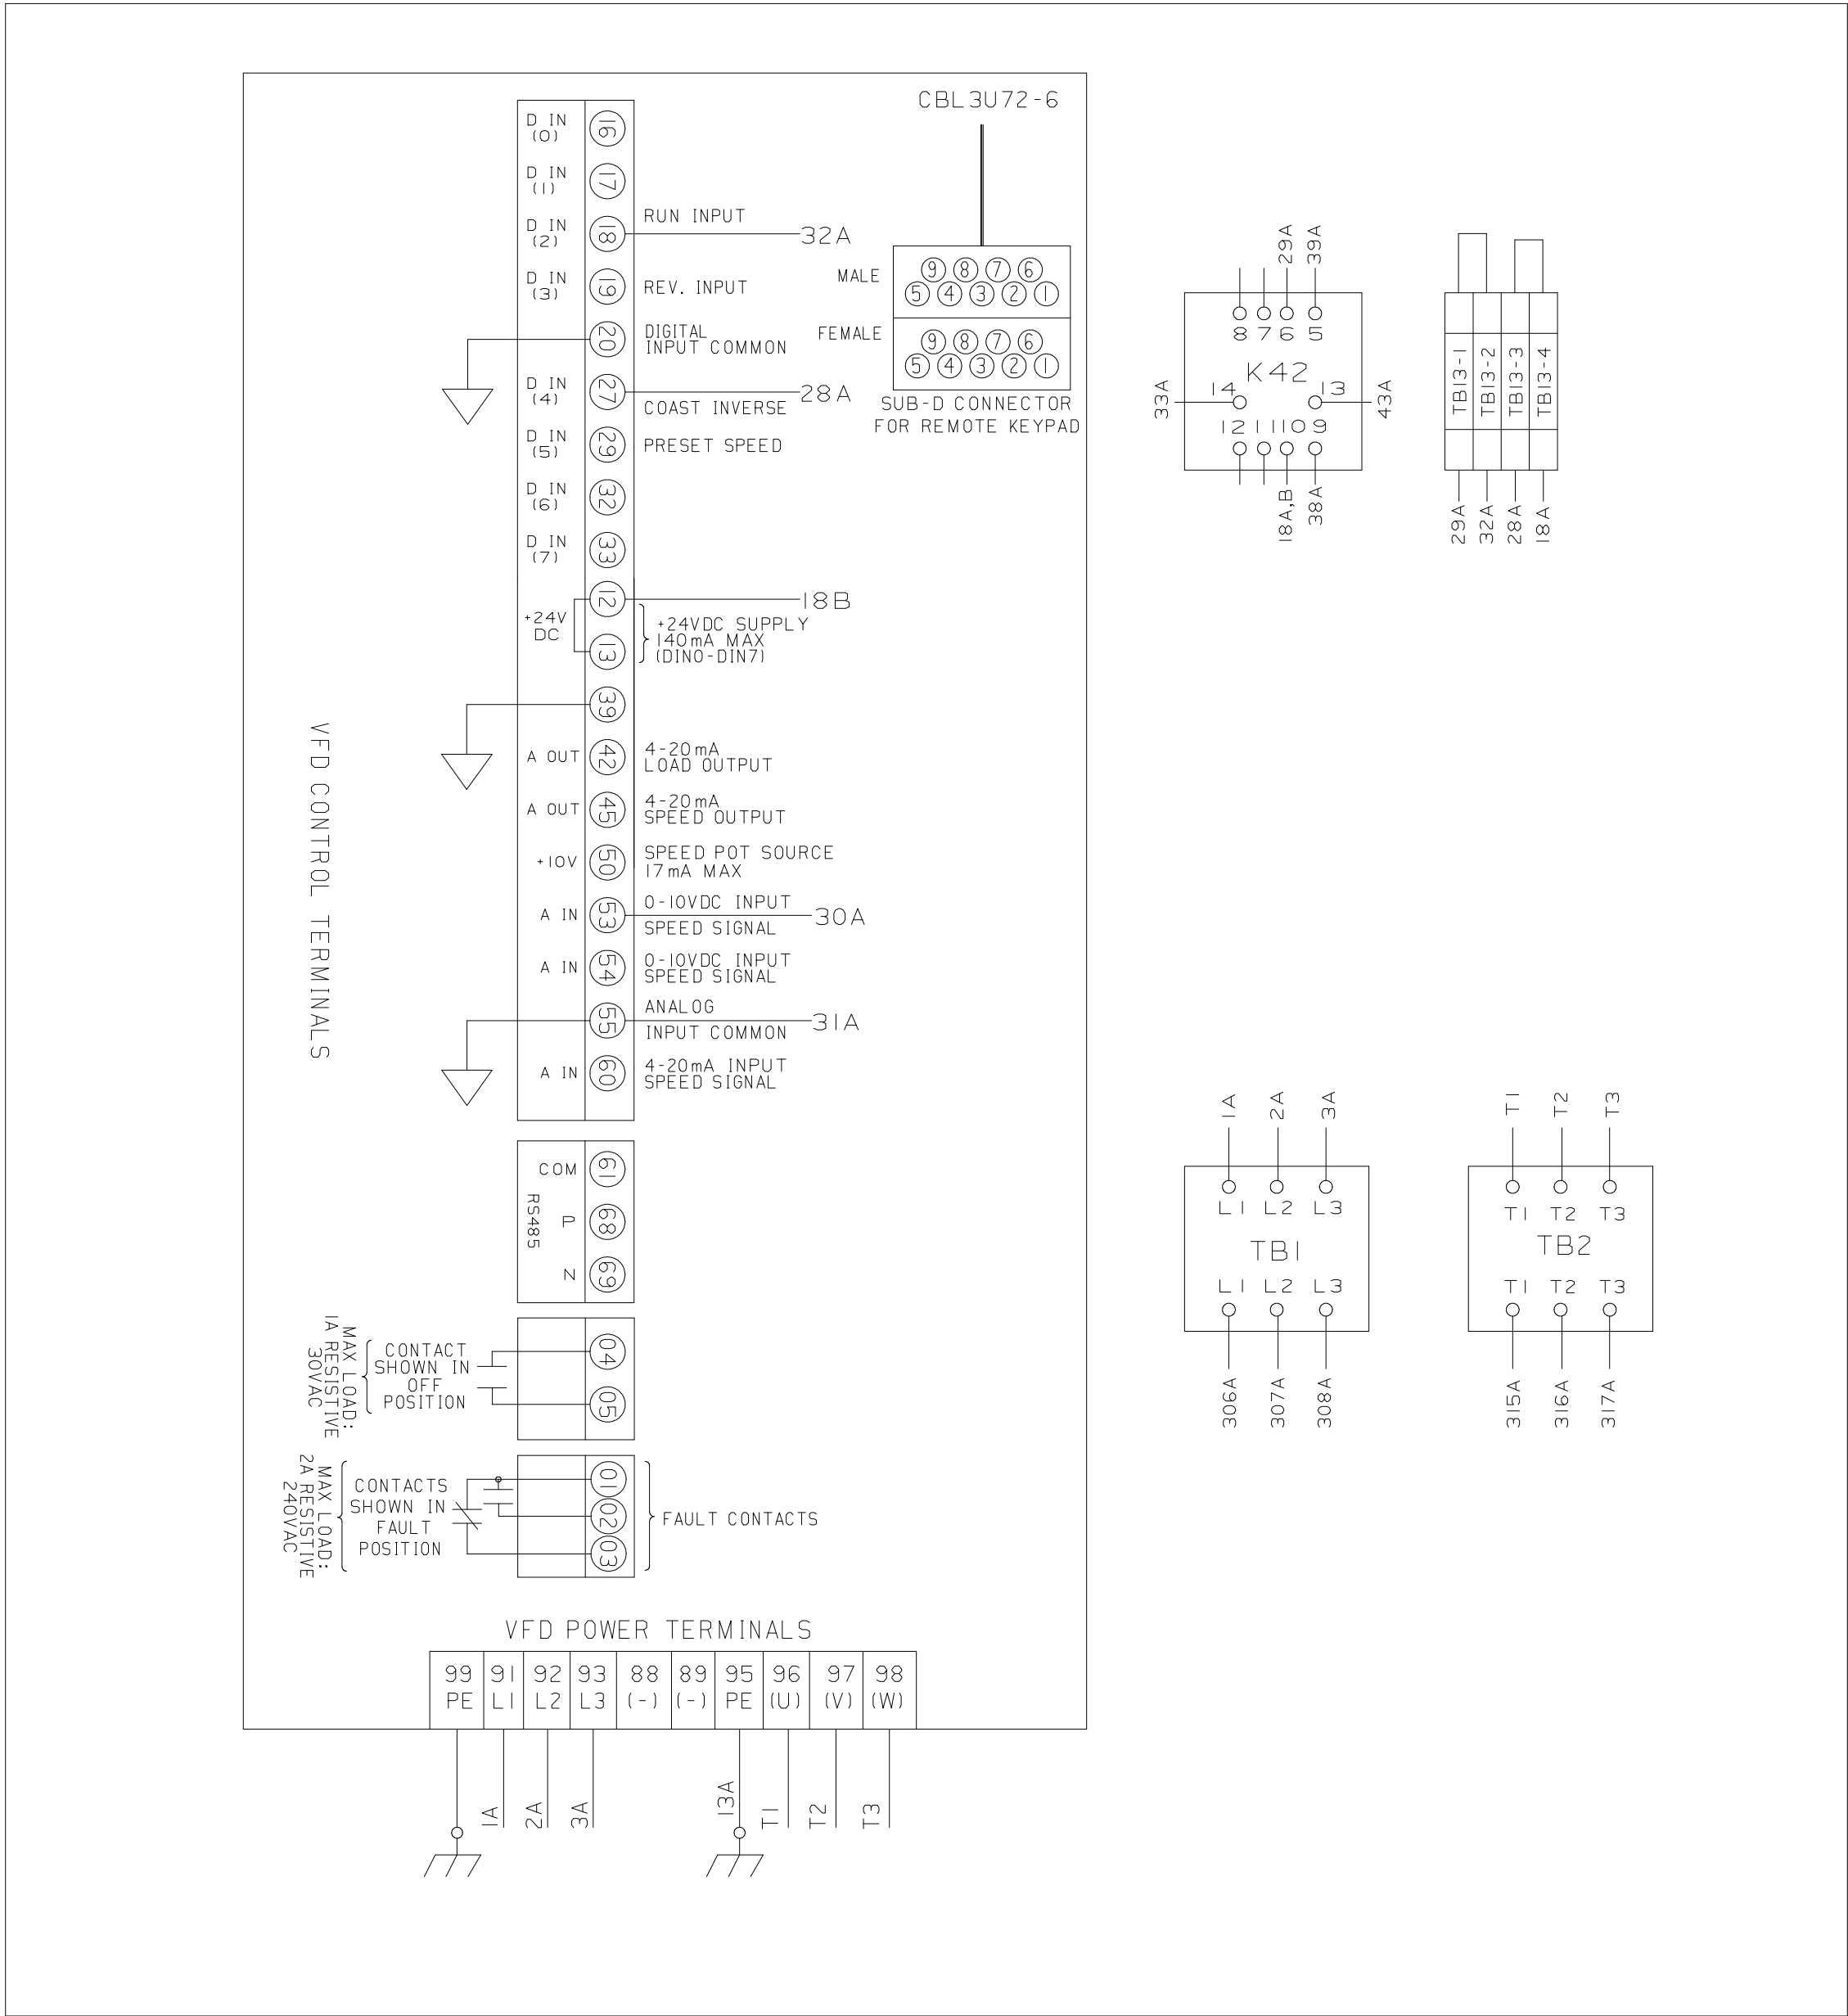

TRNENE		FILE NUMBER:	DRAWING NUMBER:	REV
A DIVISION OF AMERICAN STANDARD INC.			2309-3203	B
ALL RIGHTS RESERVED				
THIS DRAWING IS PROPERTY OF TRNENE AND SHALL NOT BE LOANED, REPRODUCED, COPIED, OR IN ANY MANNER DISSEMINATED WITHOUT THE WRITTEN CONSENT OF TRNENE				
DRAWN BY: P. BRUCE JR.				
DATE: 08/01/03				
REPLACES:	REVISION DATE:	ROOFTOP PACKAGED AIR CONDITIONER		
		SCHEMATIC AND CONNECTION DIAGRAM		
		SUPPLY FAN VARIABLE FREQUENCY		
CADD55	SIMILAR TO: 2307-4573	DRIVE W/O BYPASS CONTROL		

ROOFTOP PACKAGED AIR CONDITIONER
SCHEMATIC AND CONNECTION DIAGRAM
SUPPLY FAN VARIABLE FREQUENCY
DRIVE W/O BYPASS CONTROL

