

NOTES:

- 1 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM 230V TERMINAL TO 208V TERMINAL ON TNS1.
- 2 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM 230V TERMINAL TO 208V TERMINAL ON TNS2.
- 3 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM 230V TERMINAL TO 208V TERMINAL ON TNS3.
- 4 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM H3 TERMINAL TO H2 TERMINAL ON TNS3.
- 5 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM H3 TERMINAL TO H2 TERMINAL ON TNS4.
- 6 FUSE, FUSE RELAY, XFR, CAPACITOR, CFS, CFSB AND ASSOCIATED WIRES ARE ONLY USED WITH POWER EXHAUST OPTION.
- 7 MANUAL BYPASS SWITCH AND WIRES 410C, 413A, 414A, 415A OPTIONAL.
- 8 WIRING SHOWN FOR F CONTACTOR AND FCBI IS FOR ALL VAV UNITS EXCEPT THOSE WITH VFD. WHEN VARIABLE FREQUENCY DRIVE IS INSTALLED SEE INSET B.
- 9 WIRING SHOWN IS FOR OPTIONAL COMMUNICATION INTERFACE. COMMUNICATION WIRES FROM BMS TO TCI/LCI ARE TO BE WIRE TIED TO BOTTOM OF THE CONTROL BOX. SEE TCI/LCI LITERATURE FOR SWITCH SETTINGS.
- 10 FUSE, FUSE, FUSE AND SWITCH SRD ARE USED FOR OPTIONAL FACTORY POWER CONVENIENCE OUTLET. WIRES 400A AND 401A ARE CONNECTED TO FACTORY SUPPLIED DISCONNECT SWITCH.

METAL PLATE 11 X 17

IMPORTANT!
DO NOT ENERGIZE
UNTIL CHECK-OUT
AND START-UP PROCEDURE
HAS BEEN COMPLETED

REPLACES	DATE
2309-300	2307-4002

FLU NUMBER	SHARING NUMBER
2309-3265	c

CONTROL BOX CONNECTION FOR
YC 27.5-35 TON HI HEAT 208-230 VOLT
VARIABLE AIR VOLUME

SHEET 1 OF 2

WARNING



HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER
INCLUDING REMOTE DISCONNECTS
BEFORE SERVICING.
FAILURE TO DISCONNECT POWER
BEFORE SERVICING CAN CAUSE SEVERE
PERSONAL INJURY OR DEATH.

AVERTISSEMENT

VOLTAGE HASARDEUX!
DECONNECTEZ TOUTES LES SOURCES
ELECTRIQUES INCLUANT LES
DISJONCTEURS SITUES A DISTANCE
AVANT D'EXECUTER L'ENTRETIEN.
FAUTE DE DECONNECTER LA SOURCE
ELECTRIQUE AVANT D'EXECUTER
L'ENTRETIEN PEUT ENTRAINER DES
BLESURES CORPORELLES SEVERES
OU LA MORT.

CAUTION

USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED
TO ACCEPT OTHER TYPES OF
CONDUCTORS.
FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

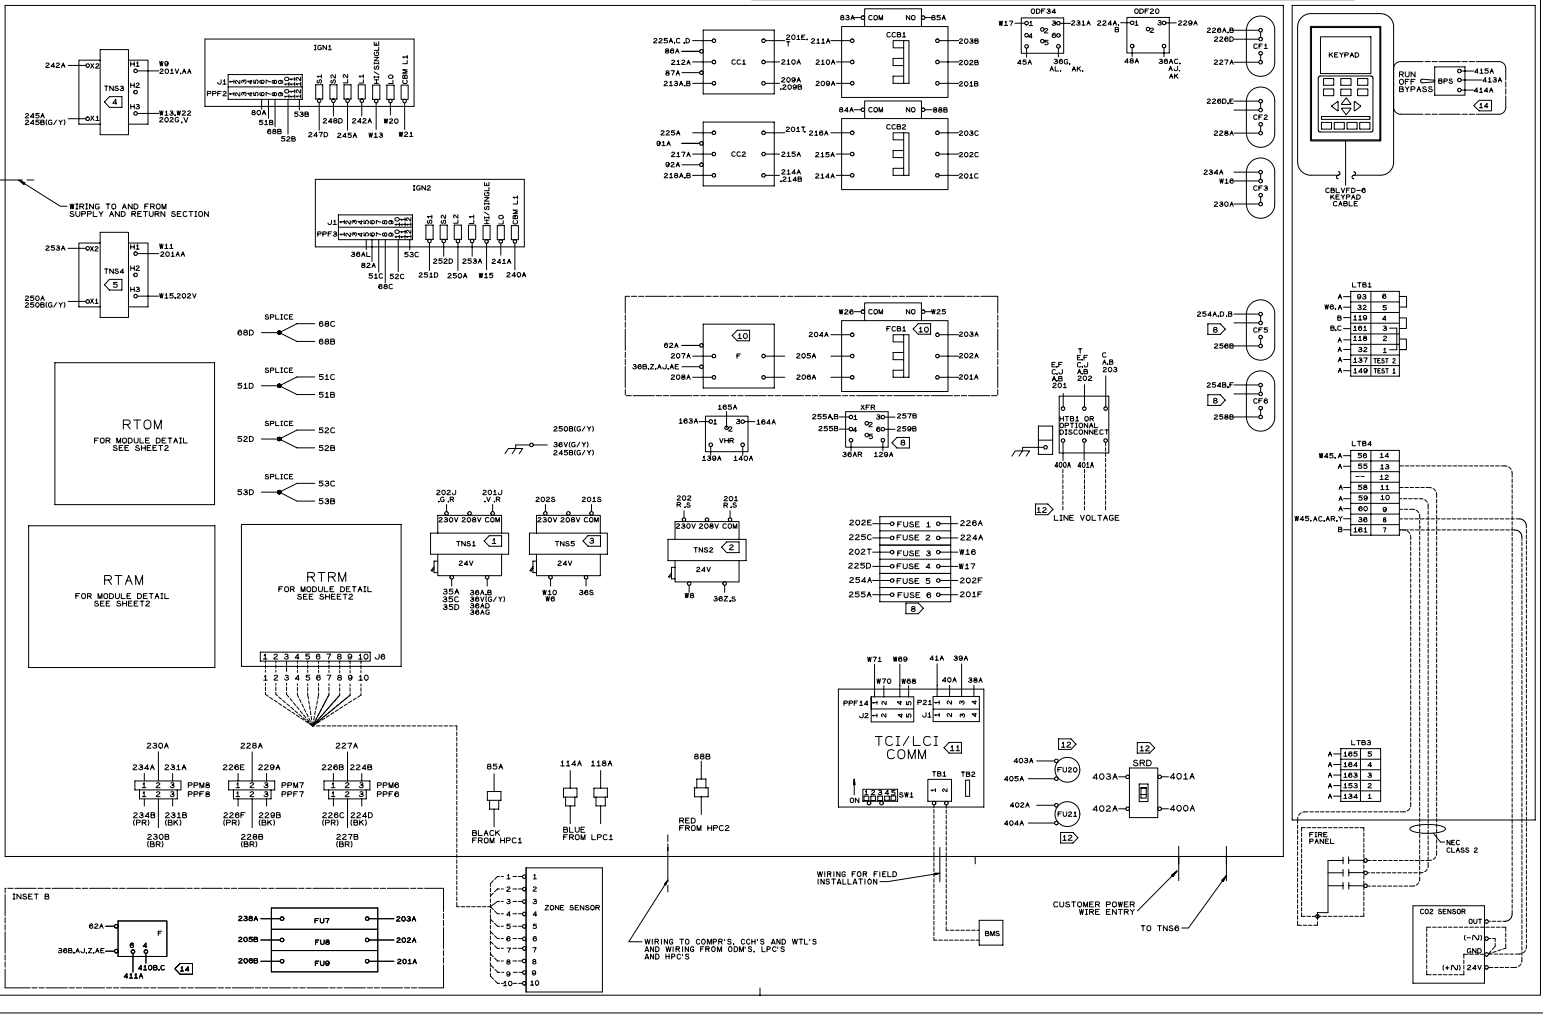

LT81

A	93	0
B	32	5
C	110	4
D	181	3
E	118	2
F	32	1
G	137	2
H	140	TEST 1

LT84

A	50	14
B	55	13
C	58	11
D	59	10
E	60	9
F	36	8
G	161	7

LT83

A	165	5
B	164	4
C	163	3
D	153	2
E	134	1