

NOTES:

 FUSE FU5, FU6, FU30, RELAY XFR. AND ASSOCIATED WIRES ARE ONLY USED WITH POWER EXHAUST OPTION.

10 WIRING SHOWN FOR F CONTACTOR AND FCB1 IS FOR ALL VAV UNITS, EXCEPT THOSE WITH VFD. WHEN VARIABLE FREQUENCY DRIVE IS INSTALLED SEE INSET B.

11 WIRING SHOWN IS FOR OPTIONAL COMMUNICATION INTERFACE. COMMUNICATION WIRES FROM BMS TO TC1/LC1 ARE TO BE WIRE TIED TO BOTTOM OF THE CONTROL BOX. SEE TC1/LC1 LITERATURE FOR SWITCH SETTINGS.

12 FUSE FU20, FU21 AND SWITCH SRD ARE USED FOR OPTIONAL FACTORY POWER CONVENIENCE OUTLET. WIRES 400A AND 401A ARE CONNECTED TO FACTORY SUPPLIED DISCONNECT SWITCH.

14 MANUAL BYPASS SWITCH AND WIRES 410C, 413A, 414A, 415A OPTIONAL.

METAL PLATE 11 X 17

TRANE

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE CONSENT OF TRANE.

DRAWN BY: D. GOUTAM	TRANS DATE: 11-30-07
REPLACES:	REVISION DATE:

REPLACES:	REVISION DATE:
CAD SYSTEM USED:	SIMILAR TO: 2307-9049

FILE NUMBER:	2309-3453
--------------	-----------

DRAWING NUMBER:
2309-3479

SHEET:	REV
1 OF 1	A

VOYAGER 3
CONTROL BOX CONNECTION FOR
TC 40-50 TON 380/415 VOLT
VARIABLE AIR VOLUME

IMPORTANT!

DO NOT ENERGIZE UNIT
UNTIL CHECK-OUT AND
START-UP PROCEDURE HAS
BEEN COMPLETED.

⚠ WARNING

HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER
INCLUDING REMOTE DISCONNECTS,
BEFORE SERVICING.

FAILURE TO DISCONNECT POWER
BEFORE SERVICING CAN CAUSE
SEVERE PERSONAL INJURY OR
DEATH.

⚠ Avertissement





VOLTAGE HASARDEUX!
 . DECONNECTEZ TOUTES LES SOURCES
 ELECTRIQUES INCLUANT LES DISJONCTEURS
 SITUES A DISTANCE AVANT D'EFFECTUER
 L'ENTRETIEN.

FAUTE DE DECONNECTEZ LA SOURCE
ELECTRIQUE AVANT D'EFFECTUER
L'ENTRETIEN PEUT ENTRAINER DES BLESSURES
CORPORELLES SEVERES OU LA MORT.

 **CAUTION**

USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED
TO ACCEPT OTHER TYPES OF
CONDUCTORS.

FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

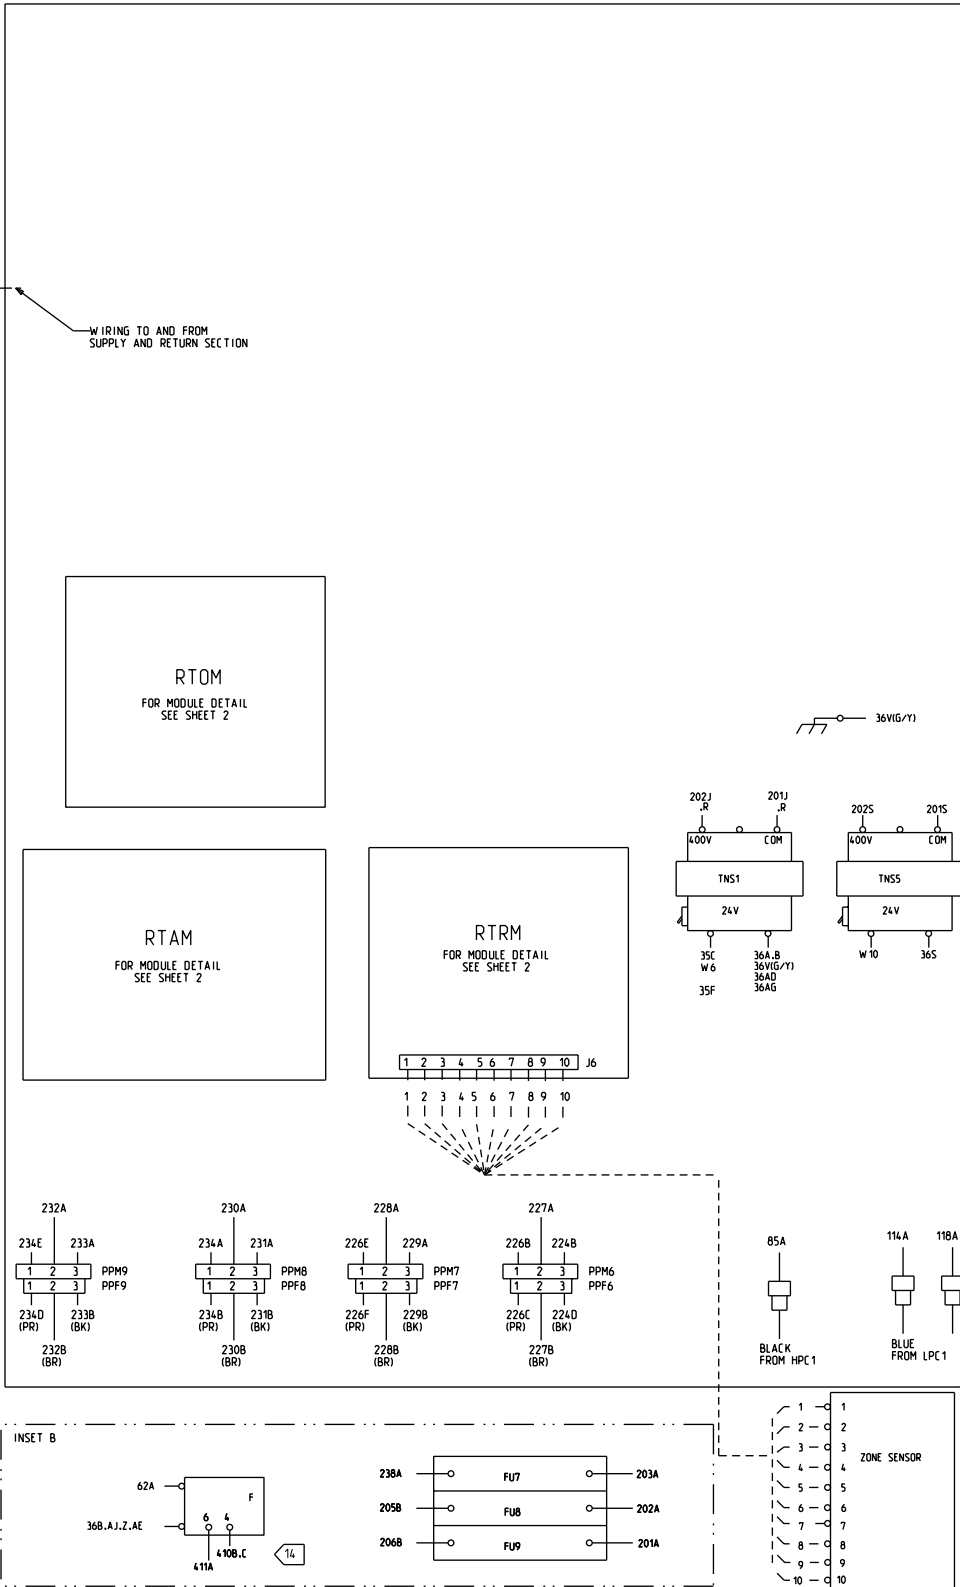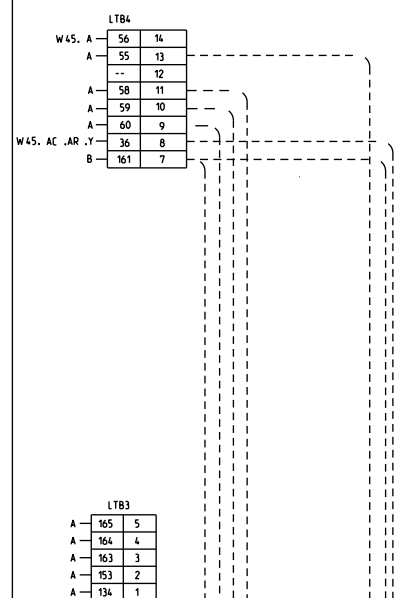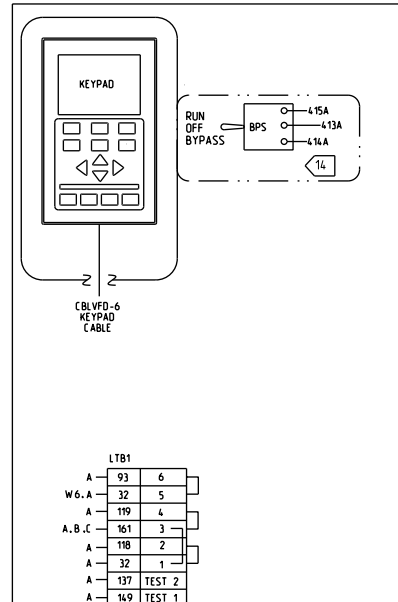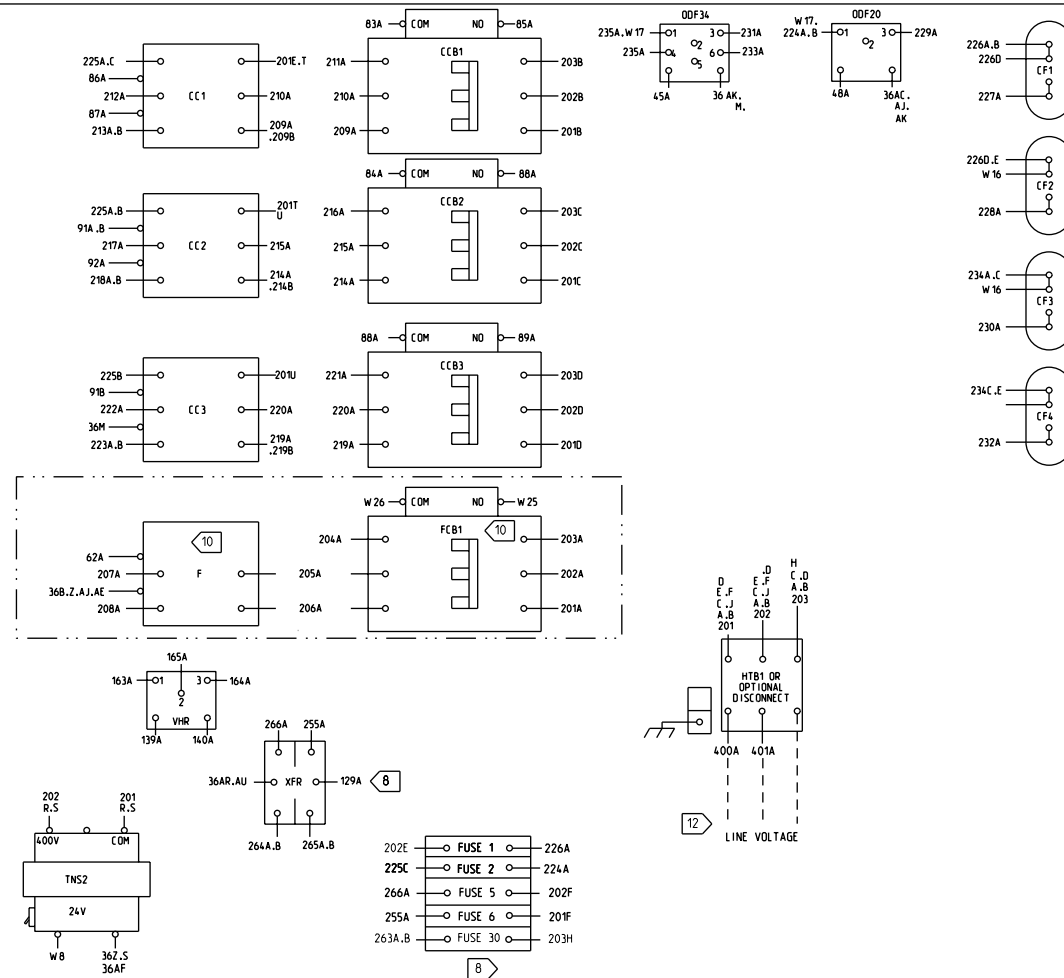

WIRING TO COMPR'S, CCH'S AND WTL'S
AND WIRING FROM ODM'S, CPC'S
AND HPC'S

WIRING FOR FIELD INSTALLATION

CUSTOMER POWER
WIRE ENTRY

TO INS6—