

1 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM 230V TERMINAL TO 208V TERMINAL ON TNS1.

8 FUSE FU5,FU6,FU30, RELAY XFR, AND ASSOCIATED WIRES ARE ONLY USED WITH POWER EXHAUST OPTION.

3 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM 230V TERMINAL TO 208V TERMINAL ON TNS5.

3 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM 230V TERMINAL TO 208V TERMINAL ON TNS5.

4 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM H3 TERMINAL TO H2 TERMINAL ON TNS3.

5 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM H3 TERMINAL TO H2 TERMINAL ON TNS4.

11 WIRING SHOWN IS FOR OPTIONAL COMMUNICATION INTERFACE.
COMMUNICATION WIRES FROM BMS TO TC1/LCI ARE TO BE WIRE TIED
TO BOTTOM OF THE CONTROL BOX. SEE TC1/LCI LITERATURE FOR
SWITCH SETTINGS.

12 FUSE FU20, FU21 AND SWITCH SRD ARE USED FOR OPTIONAL FACTORY POWER CONVENIENCE OUTLET. WIRES 400A AND 401A ARE CONNECTED TO FACTORY SUPPLIED DISCONNECT SWITCH.

USE COPPER CONDUCTORS ONLY!

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT
OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!

LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES
POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.

L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT ENDOMMAGER L'ÉQUIPEMENT.


¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

DO NOT ENERGIZE UNIT
UNTIL CHECK-OUT AND
START-UP PROCEDURE HAS
BEEN COMPLETED.

METAL PLATE 11 X 17

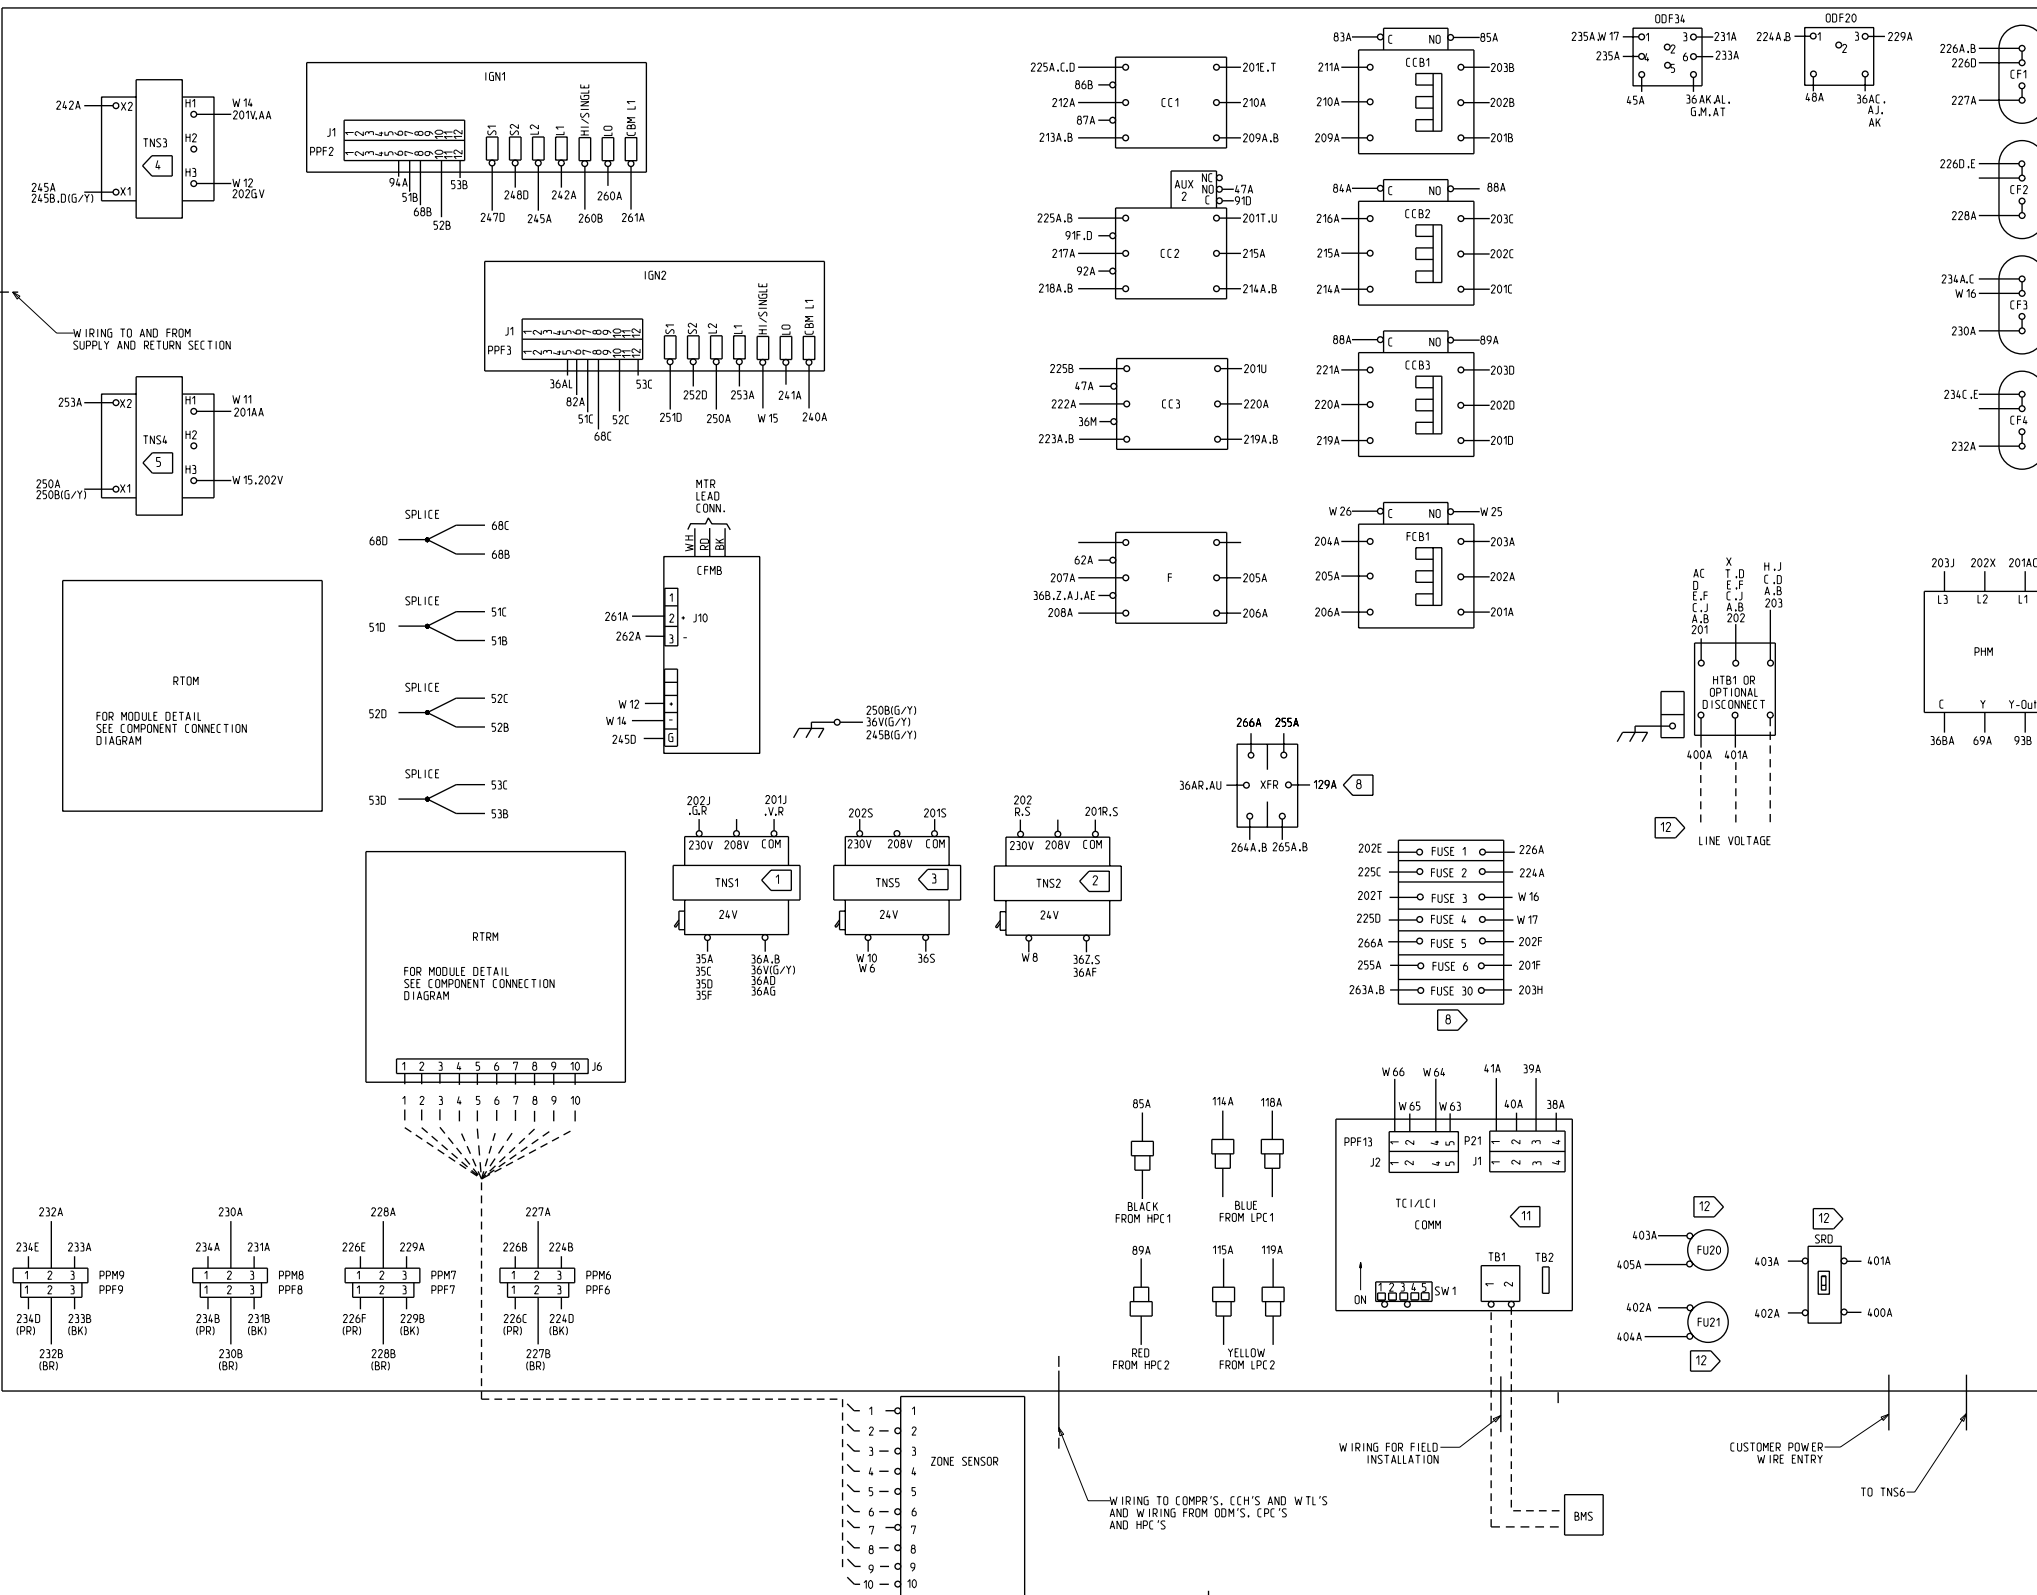

USE COPPER CONDUCTORS ONLY!

UNIT TERMINALS ARE NOT DESIGNED TO
ACCEPT OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO
THE EQUIPMENT.

N'UTILISER QUE DES CONDUCTEURS EN
CUIVRE!

LES BORNES DE L'UNITÉ NE SONT PAS
CONÇUES POUR RECEVOIR D'AUTRES TYPES
DE CONDUCTEURS.

L'UTILISATION DE TOUT AUTRE CONDUCTEUR
PEUT ENDOMMAGER L'ÉQUIPEMENT.

¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN
DISEÑADAS PARA ACEPTAR OTROS TIPOS DE
CONDUCTORES.

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

