

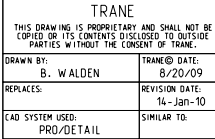




- 22 SENSOR EET AND WIRES 110A & 111A USED WITH OPTIONAL DEHUMIDIFICATION AND IS ATTACHED TO CIRCUIT 1 FOR 27.5-35 TON UNITS, AND TO CIRCUIT 2 FOR 40-50 TON UNITS.
- 23 WIRE 117A IS REQUIRED TO ENABLE DEHUMIDIFICATION. WIRES 141A AND 142A ARE USED WITH DEHUMIDIFICATION AND CUSTOMER INSTALLED SPACE HUMIDITY SENSOR (SHS). WIRES 112A AND 113A ARE USED WITH DEHUMIDIFICATION AND CUSTOMER INSTALLED HUMIDISTAT (HST).



INSET A - OPTIONAL MODBUS CONNECTIONS
WITH OPTIONAL COMM.

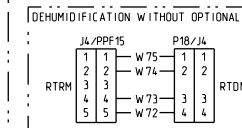

TO 85A (CNTL BOX)
TO CNTL BOX
TO 88B (CNTL BOX)
TO CNTL BOX

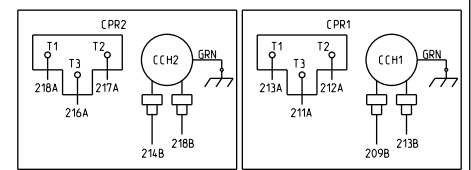

HEAT SECTION WIRING

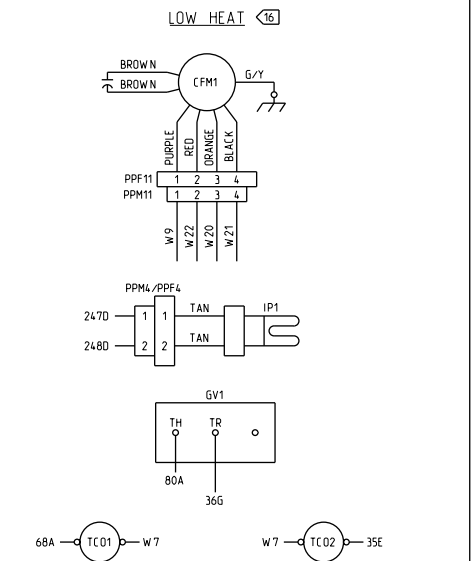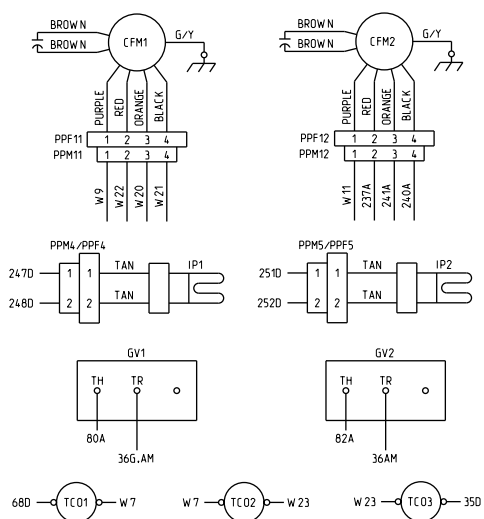

SUPPLY AIR
SECTION WIRING

