


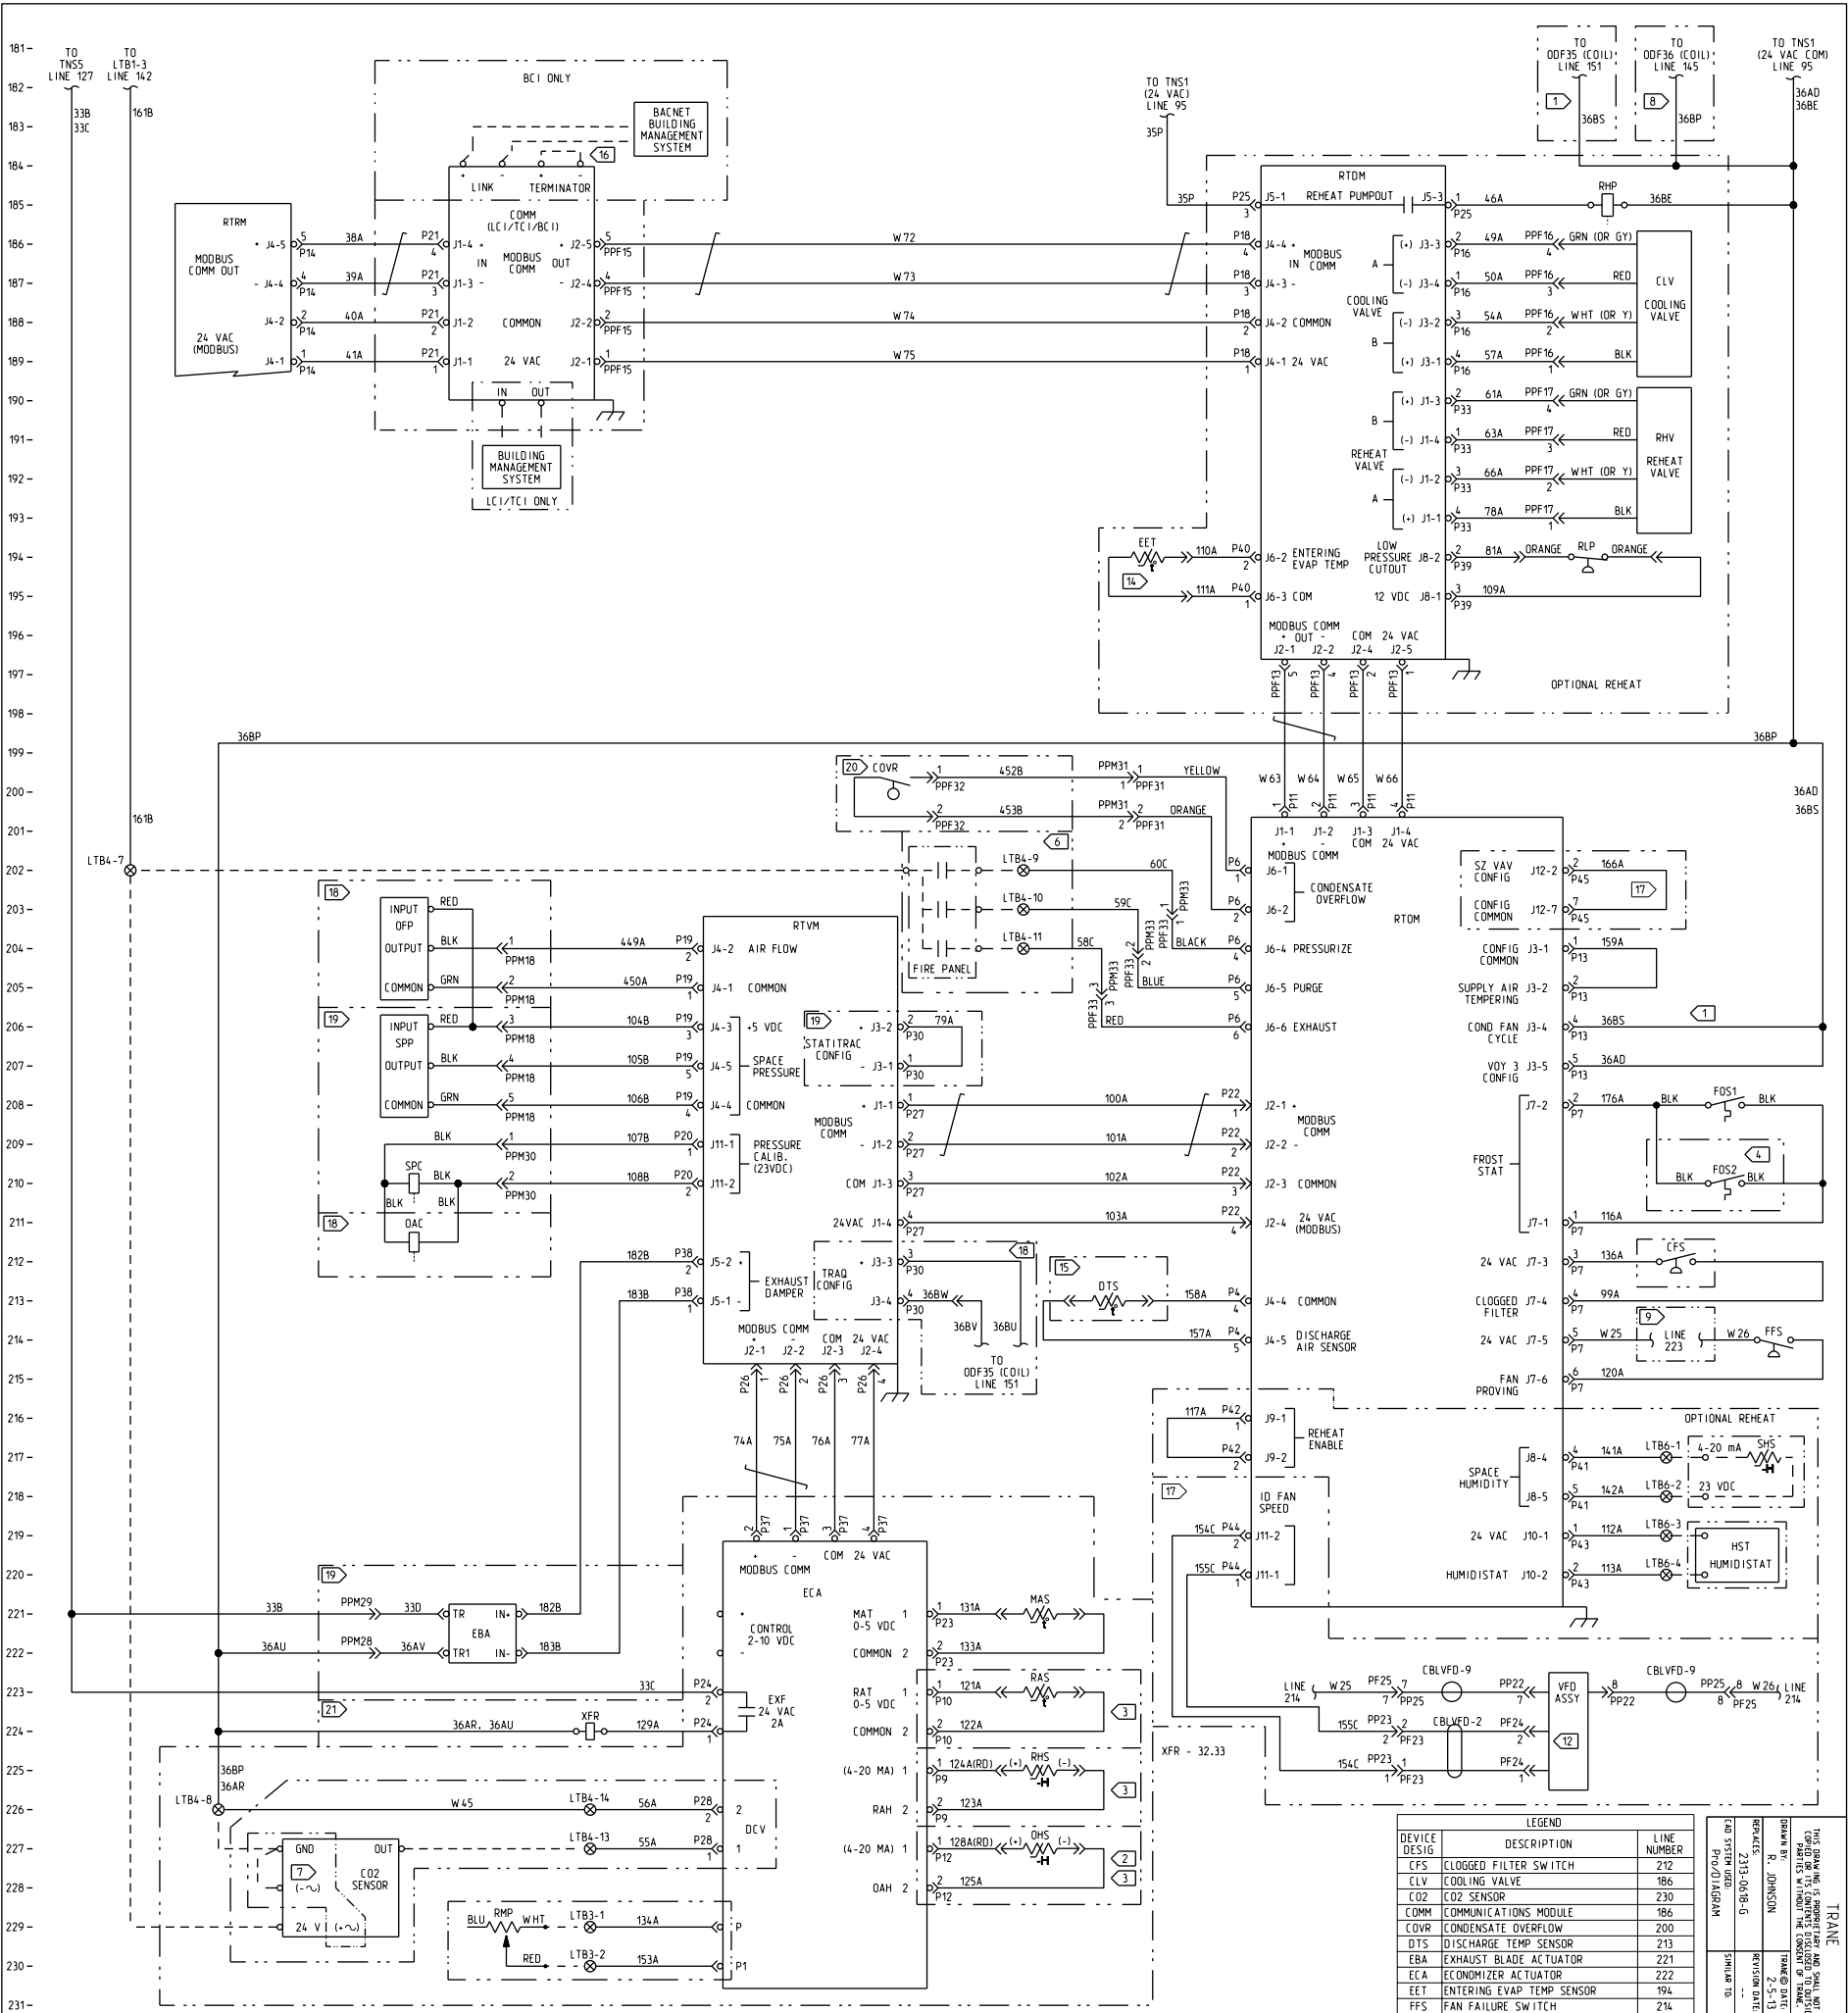

- 1 WIRE 36BS IS NOT USED FOR 35T AND 50T UNITS.
- 2 REQUIRED FOR OPTIONAL REFERENCE ENTHALPY CONTROL.
- 3 REQUIRED FOR OPTIONAL COMPARATIVE ENTHALPY CONTROL.
- 4 FOS2 USED ON 40T AND 50T UNITS ONLY.
- 6 OPTIONAL VENTILATION OVERRIDE.
- 7 0-10 VDC DUCT MOUNTED SENSOR ONLY.
- 8 WIRE 36BP USED ON UNITS WITH OPTIONAL ECONOMIZER ONLY.
- 9 WIRING SHOWN IS FOR UNIT OPTIONAL VARIABLE FREQUENCY DRIVE. WHEN UNIT HAS CONSTANT VOLUME, WIRE W25 CONNECTS TO FAN FAILURE SWITCH AND WIRE W26 IS NOT USED.
- 12 SEE APPICABLE VARIABLE FREQUENCY DRIVE DIAGRAM FOR BALANCE OF CIRCUIT.
- 14 SENSOR EET IS ATTACHED TO CIRCUIT 1 FOR 27.5-35 TON UNITS, AND TO CIRCUIT 2 FOR 40-50 TON UNITS.

- 15 DISCHARGE TEMPERATURE SENSOR IS REQUIRED WITH SUPPLY AIR TEMPERING, DEHUMIDIFICATION AND SZVAV OPTIONS.
- 16 FIELD INSTALLED BACNET TERMINATOR JUMPER IS REQUIRED FOR TERMINATION AT EACH END OF THE WIRED BACNET COMMUNICATIONS LINK.
- 17 WIRES 154C, 155C, AND 166A ONLY INCLUDED WITH SZVAV OPTION.
- 18 REQUIRED FOR OPTIONAL TRAQ. DISCONNECT WIRE 36BV AND 36BW FOR HORIZONTAL UNITS.
- 19 REQUIRED FOR OPTIONAL STATITRAC.
- 20 REQUIRED FOR OPTIONAL CONDENSATE OVERFLOW.
- 21 REQUIRED FOR POWERED EXHAUST.

CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.
FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

PRECAUCIÓN
N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!
LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.
L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT ENDOMMAGER L'EQUIPEMENT.

ATTENTION
UTILISER UNICAMENTE CONDUCTORES DE COBRE!
LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.
SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

LEGEND		
DEVICE	DESCRIPTION	LINE NUMBER
CFS	CLOGGED FILTER SWITCH	212
CLV	COOLING VALVE	186
CO2	CO2 SENSOR	230
COMM	COMMUNICATIONS MODULE	186
COVR	CONDENSATE OVERFLOW	200
DTS	DISCHARGE TEMP SENSOR	213
EBA	EXHAUST BLADE ACTUATOR	221
ECA	ECONOMIZER ACTUATOR	222
EET	ENTERING EVAP TEMP SENSOR	194
FFS	FAN FAILURE SWITCH	214
FOS1	FROST STAT 1	208
FOS2	FROST STAT 2	210
HST	HUMIDISTAT	219
MAS	SENSOR - MIXED AIR TEMP	221
OAC	OUTDOOR AIR CALIBRATION	209
OPF	OUTDOOR FLOW PRESSURE	204
OHS	SENSOR - R/A HUMIDITY	227
RAS	SENSOR - RETURN AIR TEMP	223
RHP	SOLENOID - REHEAT PUMPOUT	185
RHS	SENSOR - R/A HUMIDITY	225
RHV	REHEAT VALVE	190
RLP	REHEAT LOW PRESSURE CUTOUT	194
RMP	POTENTIOMETER - REMOTE MIN POS	229
RTDM	DEHUMIDIFICATION MODULE	186
RTOM	OPTIONS MODULE	204
RTRM	REFRIGERATION MODULE	185
RTVM	VENTILATION MODULE	206
SHS	SENSOR - SPACE HUMIDITY	217
SPC	SPACE PRESS CALIB. SOLENOID	209
SPP	SPACE PRESSURE TRANSDUCER	206
VFD	VARIABLE FREQUENCY DRIVE	222
XFR	EXHAUST FAN RELAY	224

TRANS
2313-1266
2313-1269
DIAGRAM 3
CONTROL MODULES SCHEMATIC
CV & SZ VAV W/ STATITRAC/TRAQ

FILE NUMBER
DRAWING NUMBER
SHEET
REV
A