


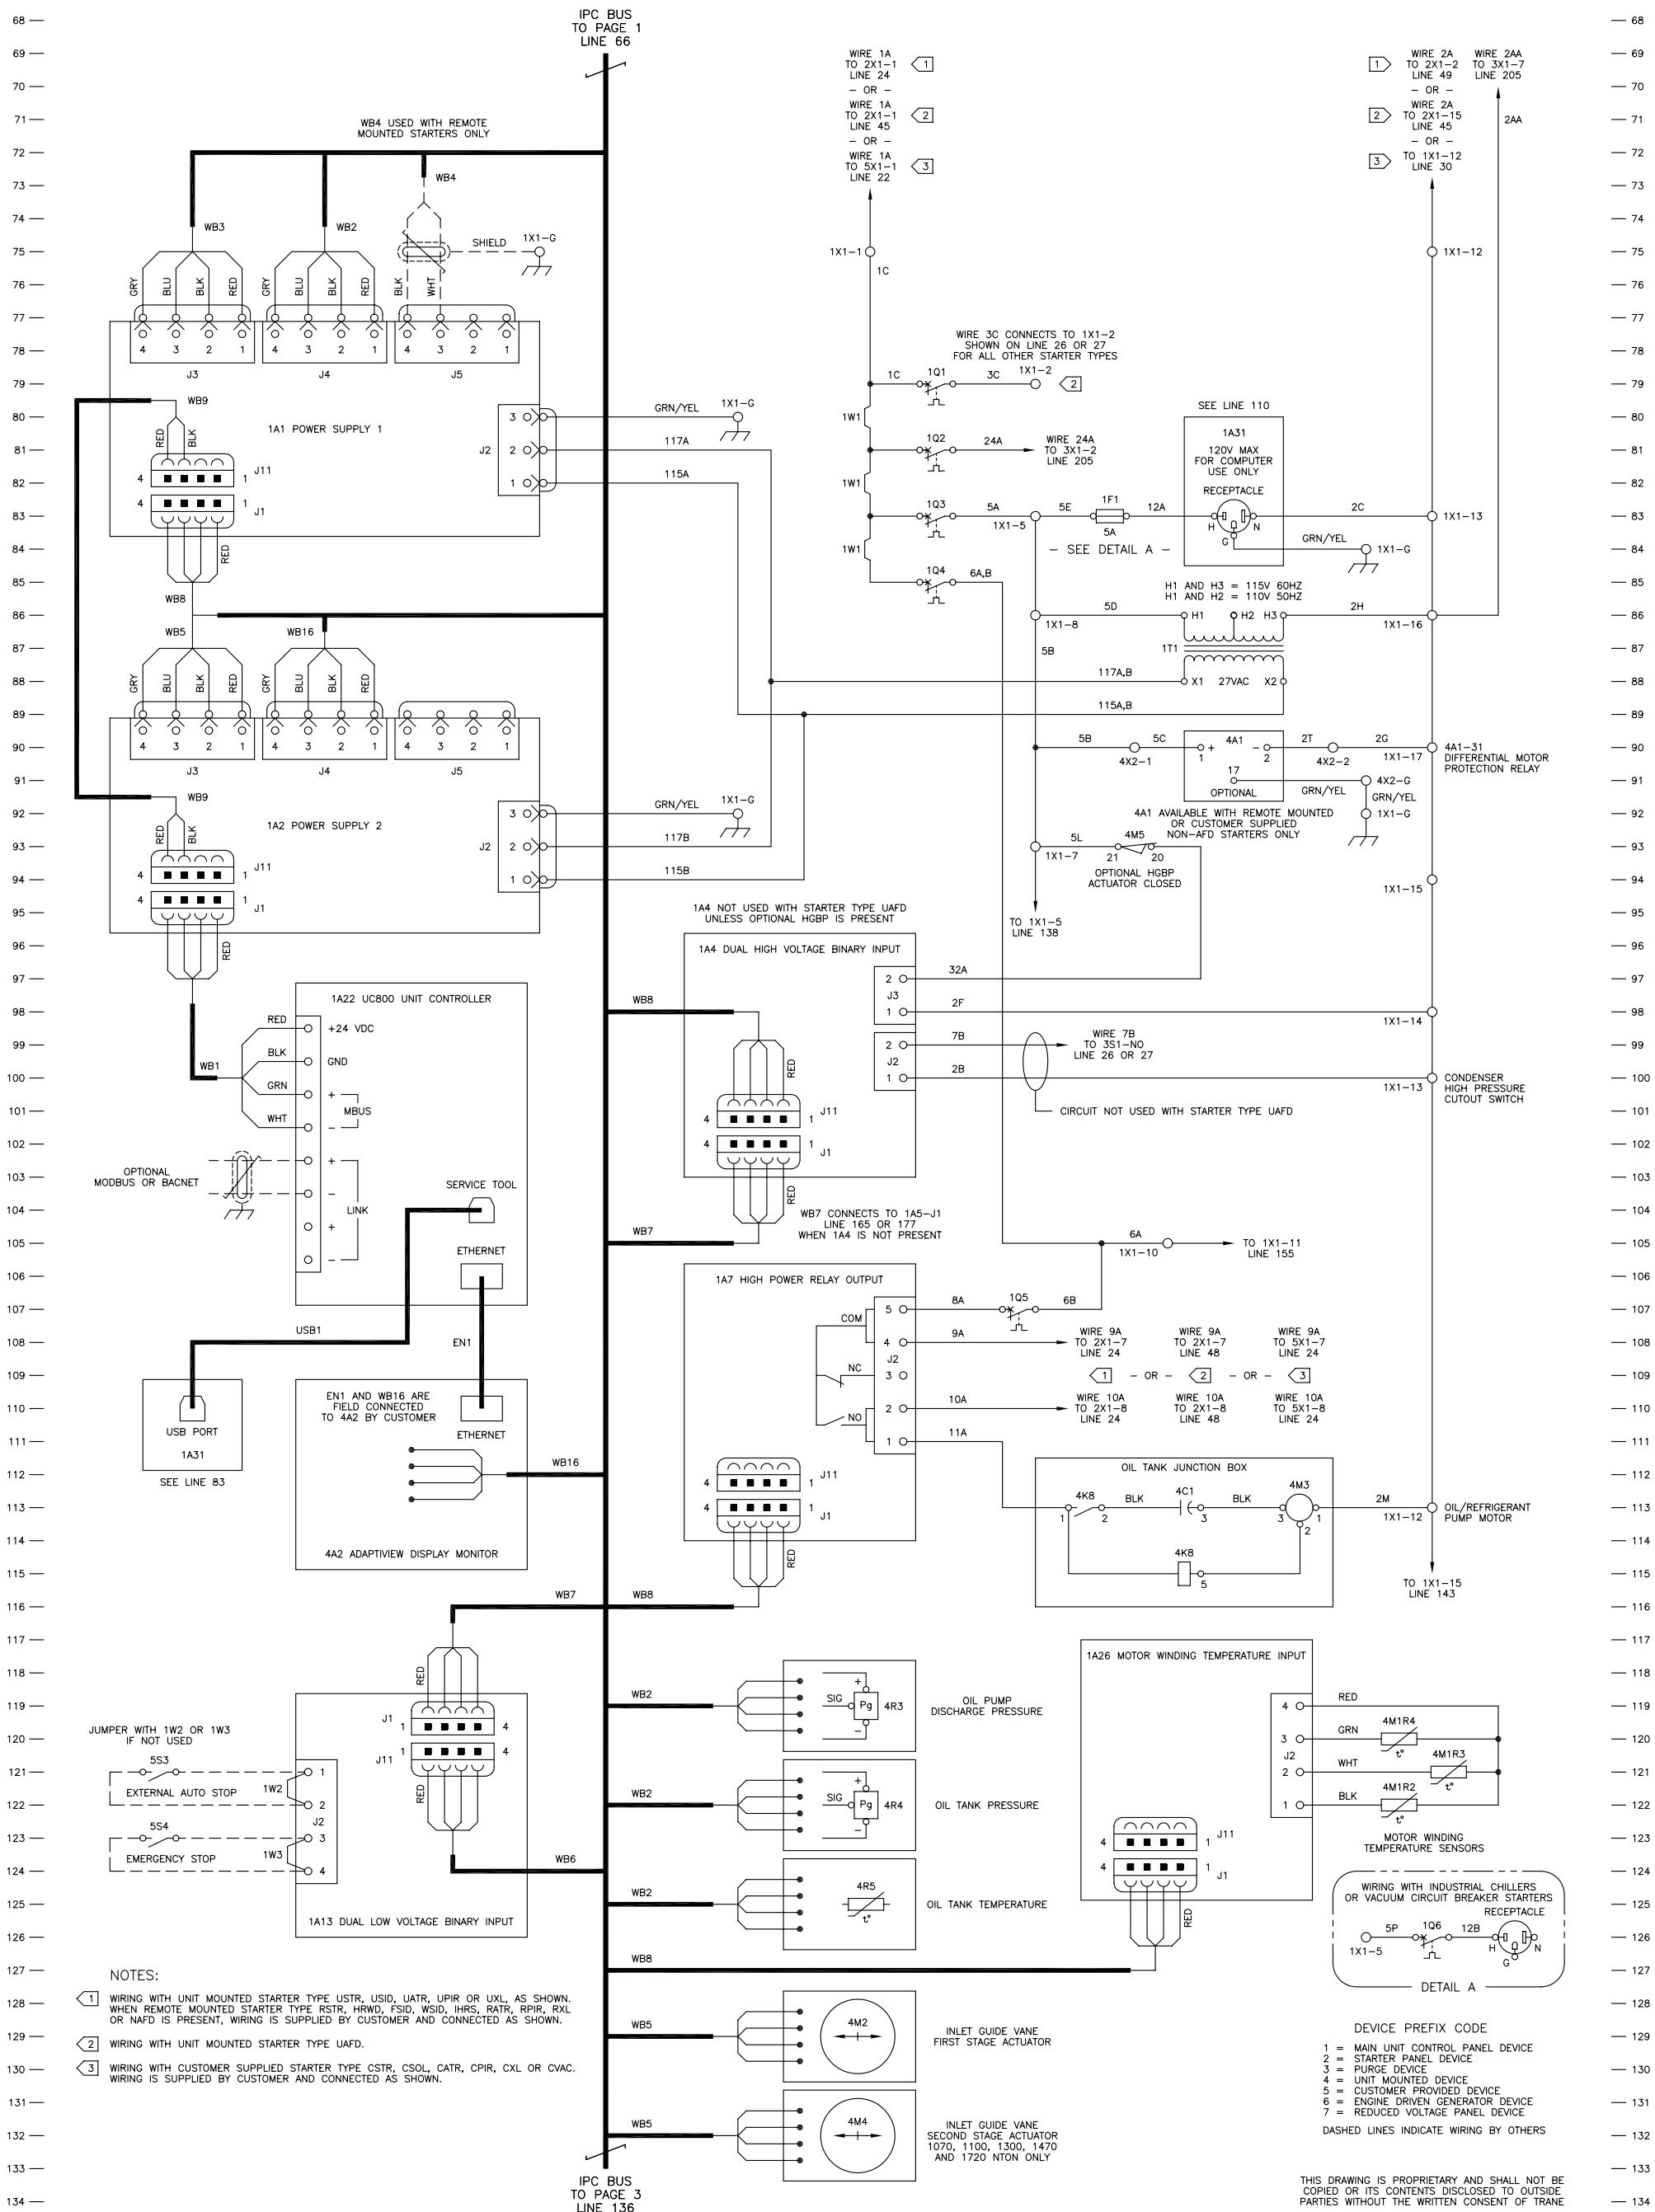

 WARNING

HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER INCLUDING
REMOTE DISCONNECTS AND FOLLOW LOCK OUT
AND TAG PROCEDURES BEFORE SERVICING.
INSURE THAT ALL MOTOR CAPACITORS HAVE
DISCHARGED STORED VOLTAGE. UNITS WITH
VARIABLE SPEED DRIVE, REFER TO DRIVE
INSTRUCTIONS FOR CAPACITOR DISCHARGE.
FAILURE TO DO THE ABOVE BEFORE SERVICING
COULD RESULT IN DEATH OR SERIOUS INJURY.

 AVERTISSEMENT

TENSION DANGEREUSE!
COUPER TOUTES LES TENSIONS ET OUVRIR
LES SECTIONNEURS A DISTANCE, PUIS SUIVRE
LES PROCÉDURES DE VERRUILLAGE ET DES
ÉTIQUETTES AVANT TOUTE INTERVENTION.
VÉRIFIER QUE TOUTS LES CONDENSATEURS
DES MOTEURS SONT DÉCHARGÉS DANS LE CAS
D'UNITÉS COMPORTANT DES ENTRAÎNEMENTS
A VITESSE VARIABLE, SE REPORTER AUX
INSTRUCTIONS DE L'ENTRAÎNEMENT POUR
DÉCHARGER LES CONDENSATEURS.

NE PAS RESPECTER CES MESURES DE
PRÉCAUTION PEUT ENTRAÎNER DES BLESSURES
GRAVES POUVANT ÊTRE MORTELLES.

 ADVERTENCIA

¡VOLTAJE PELIGROSO!
 DESCONECTE TODA LA ENERGÍA ELÉCTRICA,
 INCLUIDO LAS DESCONEXIONES REMOTAS Y SIGA
 LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO
 ANTES DE PROCEDER AL SERVICIO. ASEGÚRESE
 DE QUE TODA LA ENERGÍA DEL MOTOR
 HAYA DESCARGADO EL VOLTAJE ALMACENADO.
 PARA LAS UNIDADES CON EJE DE DIRECCIÓN
 DE VELOCIDAD VARIABLE, CONSULTE LAS
 INSTRUCCIONES PARA LA DESCARGA
 DEL CONDENSADOR.
 EL NO REALIZAR LO ANTERIORMENTE INDICADO,
 PODRÍA OCASIONAR LA MUERTE O SERIAS
 LESIONES PERSONALES.

CAUTION

USE COPPER CONDUCTORS ONLY!

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT
OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

ATTENTION

N'UTILISER QUE DES CONDUCTEURS
EN CUIVRE!

LES BORNES DE L'UNITÉ NE SONT
PAS CONÇUES POUR RECEVOIR D'AUTRES
TYPES DE CONDUCTEURS

L'UTILISATION DE TOUT AUTRE CONDUCTEUR
PEUT ENDOMMAGER L'ÉQUIPEMENT.

PRECAUCIÓN

¡UTILICE ÚNICAMENTE CONDUCTORES
DE COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN
DISEÑADAS PARA ACEPTAR OTROS TIPOS
DE CONDUCTORES

SI NO LO HACE, PUEDE OCASIONAR
DAÑO AL EQUIPO.

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE WRITTEN CONSENT OF TRANS

DEVICE PREFIX CODE

1	=	MAIN UNIT CONTROL PANEL DEVICE
2	=	STARTER PANEL DEVICE
3	=	PURGE DEVICE
4	=	UNIT MOUNTED DEVICE
5	=	CUSTOMER PROVIDED DEVICE
6	=	ENGINE DRIVEN GENERATOR DEVICE
7	=	REDUCED VOLTAGE PANEL DEVICE

DASHED LINES INDICATE WIRING BY OTHERS