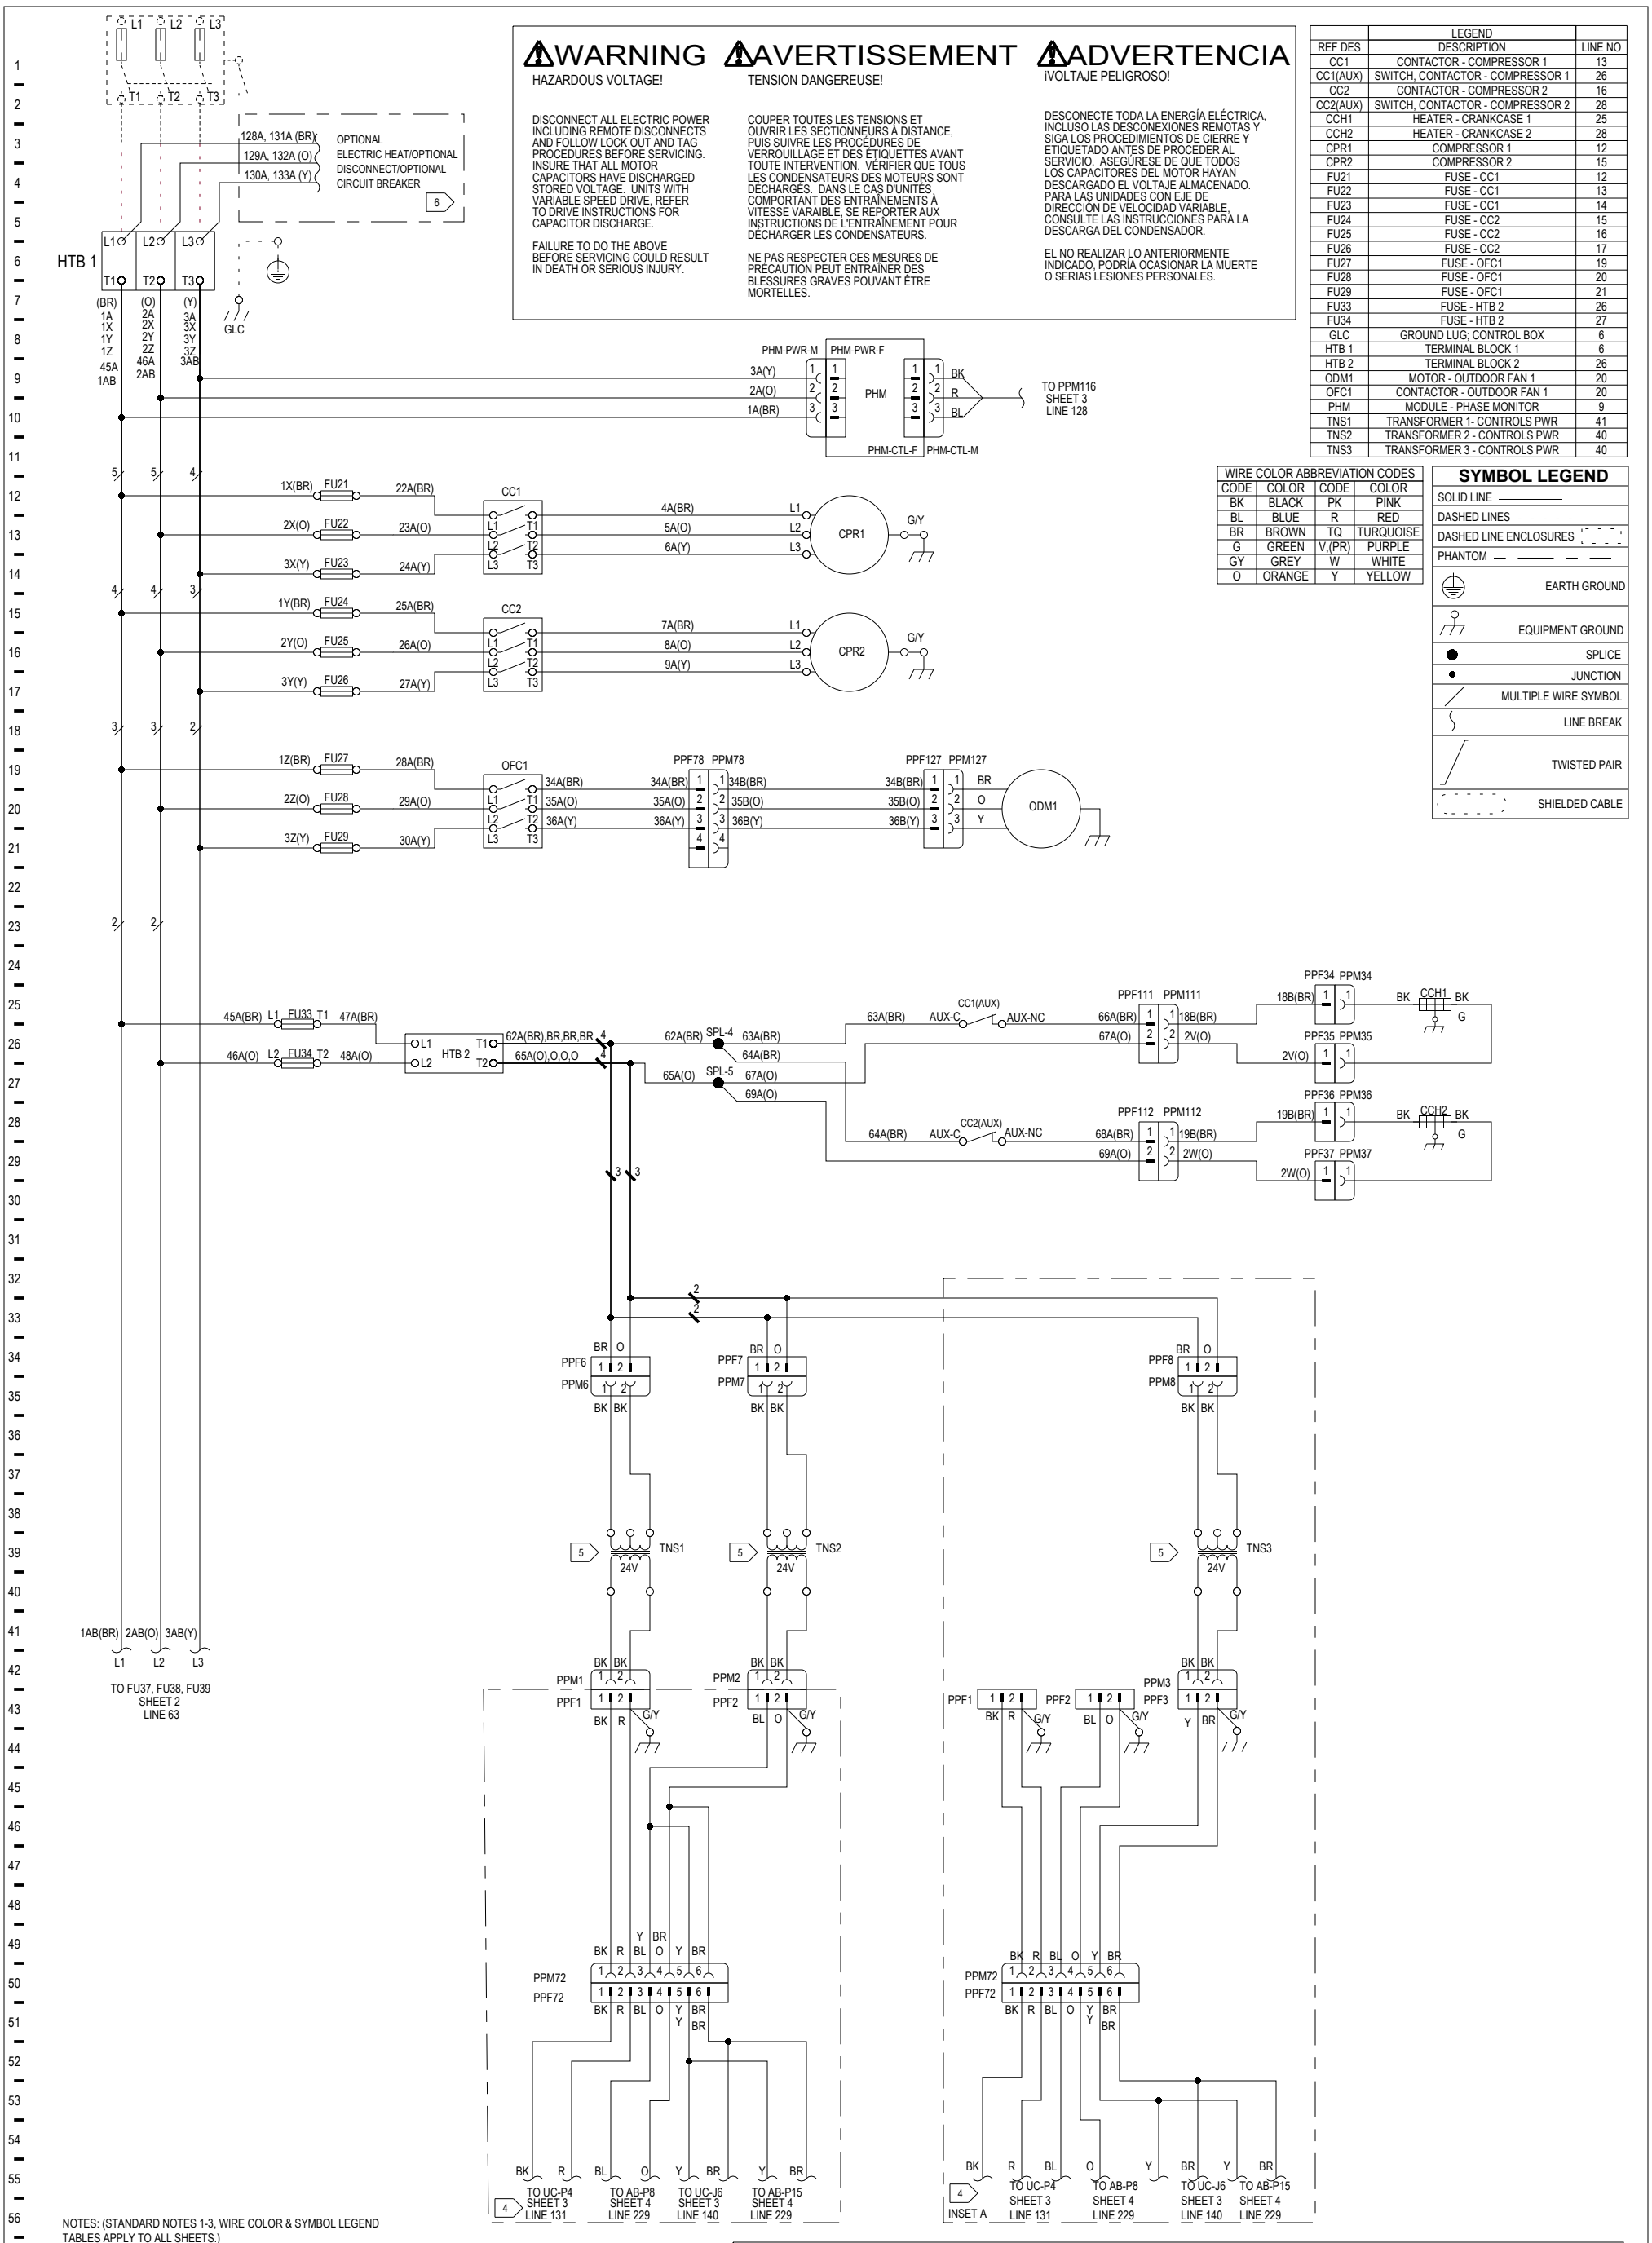

⚠WARNING

HAZARDOUS VOLTAGE!

DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS AND FOLLOW LOCK OUT AND TAG PROCEDURES BEFORE SERVICING. INSURE THAT ALL MOTOR CAPACITORS HAVE DISCHARGED STORED VOLTAGE. UNITS WITH VARIABLE SPEED DRIVE, REFER TO DRIVE INSTRUCTIONS FOR CAPACITOR DISCHARGE.

FAILURE TO DO THE ABOVE BEFORE SERVICING COULD RESULT IN DEATH OR SERIOUS INJURY.

⚠AVERTISSEMENT

TENSION DANGEREUSE!

COUPER TOUTES LES TENSIONS ET OUVRIR LES SECTIONNEURS À DISTANCE, PUIS SUIVRE LES PROCÉDURES DE VERROUILLAGE ET DES ÉTIQUETTES AVANT TOUTE INTERVENTION. VÉRIFIER QUE TOUS LES CONDENSATEURS DES MOTEURS SONT DÉCHARGÉS. DANS LE CAS D'UNITÉS COMPORTANT DES ENTRAÎNEMENTS À VITESSE VARAIBLE, SE REPORTER AUX INSTRUCTIONS DE L'ENTRAÎNEMENT POUR DÉCHARGER LES CONDENSATEURS.

NE PAS RESPECTER CES MESURES DE PRÉCAUTION PEUT ENTRAÎNER DES BLESSURES GRAVES POUVANT ÊTRE MORTELLES.

⚠ADVERTENCIA

¡VOLTAJE PELIGROSO!

DESCONECTE TODA LA ENERGÍA ELÉCTRICA, INCLUSO LAS DESCONEXIONES REMOTAS Y SIGA LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO ANTES DE PROCEDER AL SERVICIO. ASEGÚRESE DE QUE TODOS LOS CAPACITORES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. PARA LAS UNIDADES CON EJE DE DIRECCIÓN DE VELOCIDAD VARIABLE, CONSULTE LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR.

EL NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA OCASIONAR LA MUERTE O SERIAS LESIONES PERSONALES.

LEGEND		
REF DES	DESCRIPTION	LINE NO
CC1	CONTACTOR - COMPRESSOR 1	13
CC1(AUX)	SWITCH, CONTACTOR - COMPRESSOR 1	26
CC2	CONTACTOR - COMPRESSOR 2	16
CC2(AUX)	SWITCH, CONTACTOR - COMPRESSOR 2	28
CCH1	HEATER - CRANKCASE 1	25
CCH2	HEATER - CRANKCASE 2	28
CPR1	COMPRESSOR 1	12
CPR2	COMPRESSOR 2	15
FU21	FUSE - CC1	12
FU22	FUSE - CC1	13
FU23	FUSE - CC1	14
FU24	FUSE - CC2	15
FU25	FUSE - CC2	16
FU26	FUSE - CC2	17
FU27	FUSE - OFC1	19
FU28	FUSE - OFC1	20
FU29	FUSE - OFC1	21
FU33	FUSE - HTB 2	26
FU34	FUSE - HTB 2	27
GLC	GROUND LUG; CONTROL BOX	6
HTB 1	TERMINAL BLOCK 1	6
HTB 2	TERMINAL BLOCK 2	26
ODM1	MOTOR - OUTDOOR FAN 1	20
OFC1	CONTACTOR - OUTDOOR FAN 1	20
PHM	MODULE - PHASE MONITOR	9
TNS1	TRANSFORMER 1- CONTROLS PWR	41
TNS2	TRANSFORMER 2 - CONTROLS PWR	40
TNS3	TRANSFORMER 3 - CONTROLS PWR	40

WIRE COLOR ABBREVIATION CODES			
CODE	COLOR	CODE	COLOR
BK	BLACK	PK	PINK
BL	BLUE	R	RED
BR	BROWN	TQ	TURQUOISE
G	GREEN	V,(PR)	PURPLE
GY	GREY	W	WHITE
O	ORANGE	Y	YELLOW

SYMBOL LEGEND

- SOLID LINE
- DASHED LINES
- DASHED LINE ENCLOSURES
- PHANTOM
- EARTH GROUND
- EQUIPMENT GROUND
- SPLICE
- JUNCTION
- MULTIPLE WIRE SYMBOL
- LINE BREAK
- TWISTED PAIR
- SHIELDED CABLE

NOTES: (STANDARD NOTES 1-3, WIRE COLOR & SYMBOL LEGEND TABLES APPLY TO ALL SHEETS.)

1. UNLESS OTHERWISE NOTED, ALL SWITCHES ARE SHOWN AT 25°C (77°F), AT ATMOSPHERIC PRESSURE, AT 50% RELATIVE HUMIDITY, WITH ALL UTILITIES TURNED OFF, AND AFTER A NORMAL SHUTDOWN HAS OCCURRED.
2. SOLID LINES INDICATE WIRING PROVIDED BY TRANE CO. DASHED LINES INDICATE RECOMMENDED FIELD WIRING PROVIDED BY THE CUSTOMER. DASHED LINE ENCLOSURES AND/OR DASHED DEVICE OUTLINES INDICATE COMPONENTS PROVIDED BY THE CUSTOMER. PHANTOM LINE ENCLOSURES INDICATE ALTERNATE CIRCUITRY OR AVAILABLE SALES OPTIONS.
3. NUMBERS ALONG THE RIGHT SIDE MARGIN OF THE SCHEMATIC DESIGNATE BY LINE NUMBER THE LOCATION OF CONTACTS ENERGIZED BY COIL. AN UNDERLINED NUMBER INDICATES A NORMALLY CLOSED CONTACT. AN OPEN ARROWHEAD POINTING UPWARD BELOW THE LINE NUMBER INDICATES A TIMED CONTACT WHICH BEGINS TIMING WHEN ENERGIZED.

4 TNS3 PRESENT ON UNITS WITH OPTIONAL HOT GAS REHEAT ONLY. SEE INSET A FOR 3 TRANSFORMER WIRING CONFIGURATION.

5 UNITS THAT ARE DUAL RATED FOR 208/230V ARE SHIPPED WITH TRANSFORMER WIRED IN THE 230V CONFIGURATION. FOR 208V OPERATION MOVE WIRE TO THE 208V TAP ON ALL 3 CONTROL POWER TRANSFORMERS.

6 WIRES 128A, 129A, 130A PRESENT ON UNITS WITH OPTIONAL ELECTRIC HEAT. WIRES 131A, 132A, 133A PRESENT ON UNITS WITH OPTIONAL DISCONNECT/CIRCUIT BREAKER.

CAUTION

USE COPPER CONDUCTORS ONLY! 75C

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

ATTENTION

N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!

LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.

L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT ENDOMMAGER L'ÉQUIPEMENT.

PRECAUCIÓN

¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

DESIGNER:	C. COLLINS
ENGINEER:	R. CERVANTES
TRANE © DATE:	3/5/2024
REPLACES:	-
SIMILAR TO:	-
REVISION DATE:	3/5/2024
REVISED BY:	C. COLLINS
APPROVED BY:	-
CAD SYSTEM USED:	CREO SCHEMATICS

TRANE ®

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE WRITTEN CONSENT OF TRANE.

PRECEDENT
UNIT SCHEMATIC; SHEET 1
POWER, DUAL COMPRESSOR, SINGLE CONDENSER FAN, HIGH SCCR

MASTER NUMBER:	DRAWING NUMBER:	SHEET:	REV
-	12134888	1	B