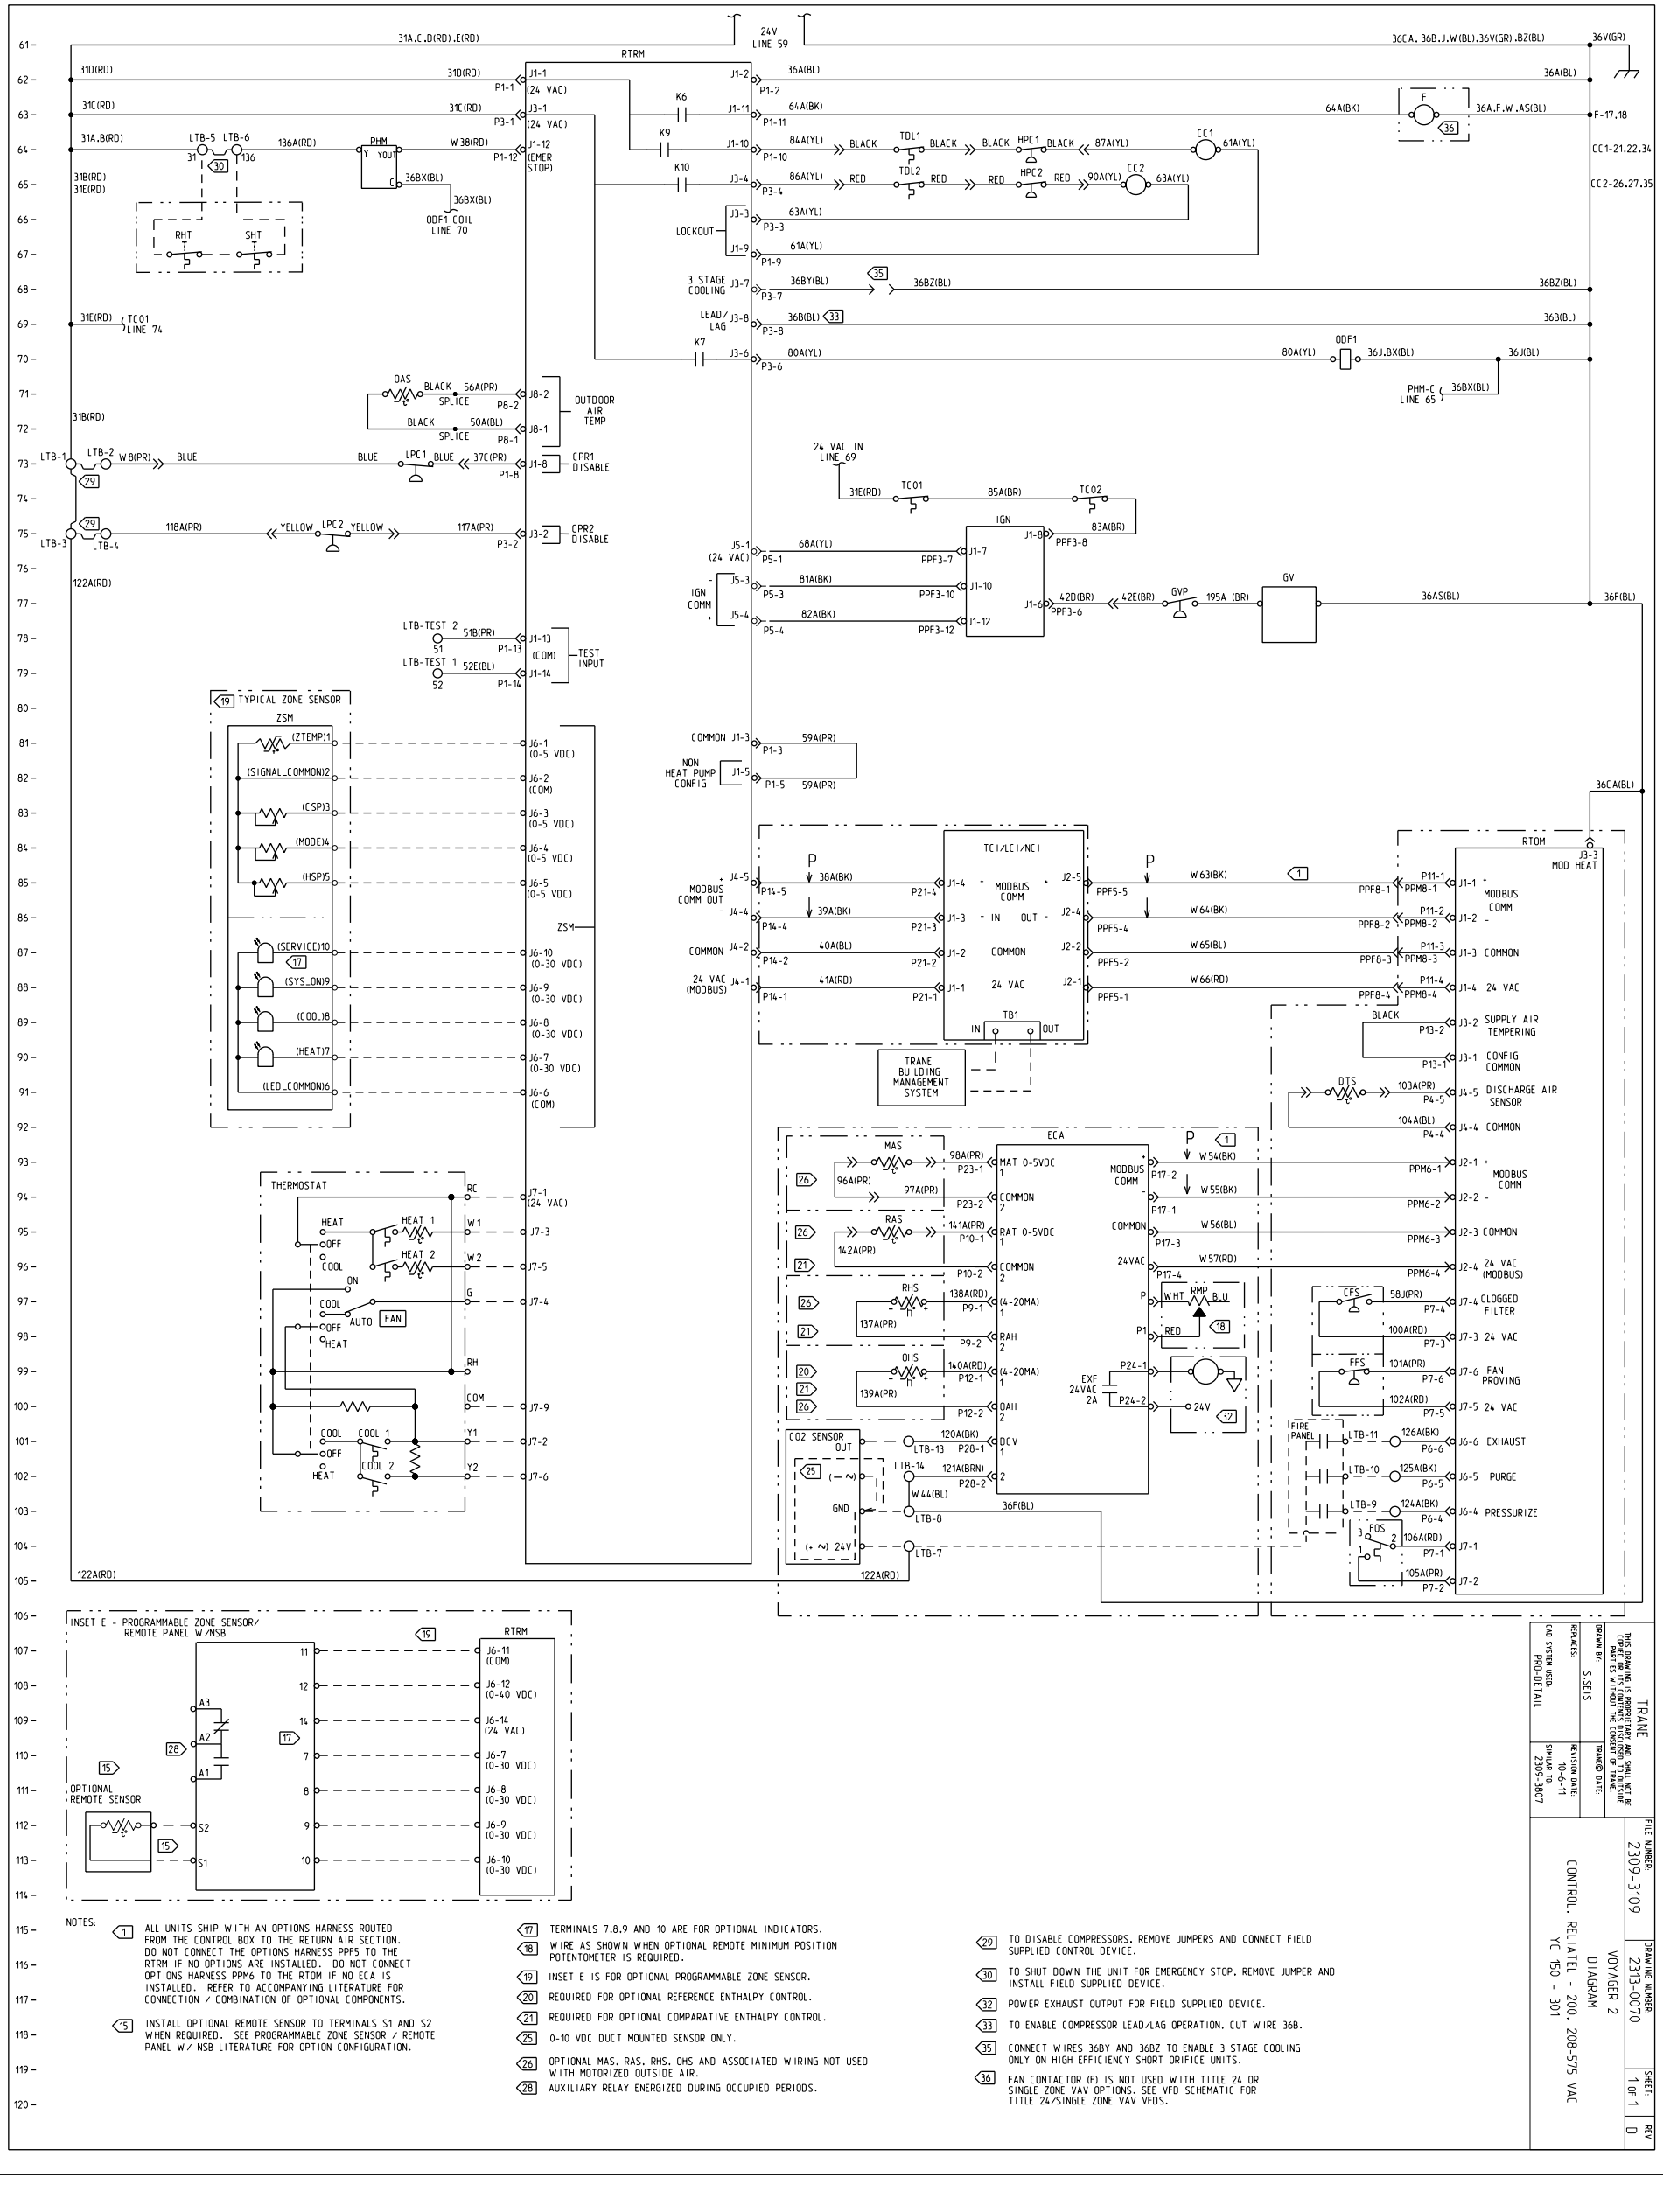

NOTES:

1. ALL UNITS SHIP WITH AN OPTIONS HARNESS ROUTED FROM THE CONTROL BOX TO THE RETURN AIR SECTION. DO NOT CONNECT THE OPTIONS HARNESS PPF5 TO THE RTRM IF NO OPTIONS ARE INSTALLED. DO NOT CONNECT OPTIONS HARNESS PPM6 TO THE RTOM IF NO ECA IS INSTALLED. REFER TO ACCOMPANYING LITERATURE FOR CONNECTION / COMBINATION OF OPTIONAL COMPONENTS.
15. INSTALL OPTIONAL REMOTE SENSOR TO TERMINALS S1 AND S2 WHEN REQUIRED. SEE PROGRAMMABLE ZONE SENSOR / REMOTE PANEL W/ NSB LITERATURE FOR OPTION CONFIGURATION.
17. TERMINALS 7,8,9 AND 10 ARE FOR OPTIONAL INDICATORS.
18. WIRE AS SHOWN WHEN OPTIONAL REMOTE MINIMUM POSITION POTENTOMETER IS REQUIRED.
19. INSET E IS FOR OPTIONAL PROGRAMMABLE ZONE SENSOR.
20. REQUIRED FOR OPTIONAL REFERENCE ENTHALPY CONTROL.
21. REQUIRED FOR OPTIONAL COMPARATIVE ENTHALPY CONTROL.
25. 0-10 VDC DUCT MOUNTED SENSOR ONLY.
26. OPTIONAL MAS, RAS, RHS, OHS AND ASSOCIATED WIRING NOT USED WITH MOTORIZED OUTSIDE AIR.
28. AUXILIARY RELAY ENERGIZED DURING OCCUPIED PERIODS.
29. TO DISABLE COMPRESSORS, REMOVE JUMPERS AND CONNECT FIELD SUPPLIED CONTROL DEVICE.
30. TO SHUT DOWN THE UNIT FOR EMERGENCY STOP, REMOVE JUMPER AND INSTALL FIELD SUPPLIED DEVICE.
32. POWER EXHAUST OUTPUT FOR FIELD SUPPLIED DEVICE.
33. TO ENABLE COMPRESSOR LEAD/LAG OPERATION, CUT WIRE 36B.
35. CONNECT WIRES 36BY AND 36BZ TO ENABLE 3 STAGE COOLING ONLY ON HIGH EFFICIENCY SHORT ORIFICE UNITS.
36. FAN CONTACTOR (F) IS NOT USED WITH TITLE 24 OR SINGLE ZONE VAV OPTIONS. SEE VFD SCHEMATIC FOR TITLE 24/SINGLE ZONE VAV VFDS.

TRANE

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR LOANED TO ANY OUTSIDE PARTIES WITHOUT THE CONSENT OF TRANE.

CAD SYSTEM USED: PRO-DETAIL
DRAWN BY: S.SEIS
REPLACES:
TRANE® DATE:
REVISION DATE: 10-6-11
SYMBOLS: 2309-3807

CONTROL, RELIATEL - 200, 208-575 VAC
YC 150 - 301
VOYAGER 2
DIAGRAM

FILE NUMBER: 2309-3109
DRAWING NUMBER: 2313-0070
SHEET: 1 OF 1
REV: D