



- 4 CONNECTIONS SHOWN ARE FOR 230V/60HZ/1PH UNITS. WHEN 208V/60HZ/1PH OPERATION IS REQUIRED, MOVE WIRE W9 FROM THE 230V TERMINAL ON TNS1 TO THE 208V TERMINAL.
- 5 WHEN INSTALLING ECONOMIZER, REMOVE PPM2 FROM PPF2. CONNECT PPM2A TO PPF2. AND CONNECT MAS TO WIRES 180A AND 181A.
- 6 CONNECTIONS SHOWN INCLUDE FOS AND HPC1. IF NEITHER OPTION IS INSTALLED, CONNECT WIRE LPC1-BLU TO WIRES W24/188A. IF ONLY FOS IS INSTALLED, CONNECT WIRE 189A TO WIRE LPC1-BLU. IF ONLY HPC1 IS INSTALLED, CONNECT WIRE HPC1-BLK TO WIRES W24/188A.
- 7 FOR MOTORIZED OUTSIDE AIR DAMPER, OPTIONAL MAS AND OTS (AND ASSOCIATED WIRING) ARE NOT USED, AND R4 IS REMOVED BETWEEN SO AND + ON ECA.
- 8 (FUTURE OPTION) CONNECTIONS SHOWN ARE FOR 2-STAGE GAS HEAT OPERATION. WHEN 1-STAGE OPERATION IS REQUIRED, WIRE 102B IS REMOVED. WIRES 21A, 101NN, AND 174A ARE NOT CONNECTED TO IGN. AND WIRE 123A IS NOT CONNECTED TO GV.

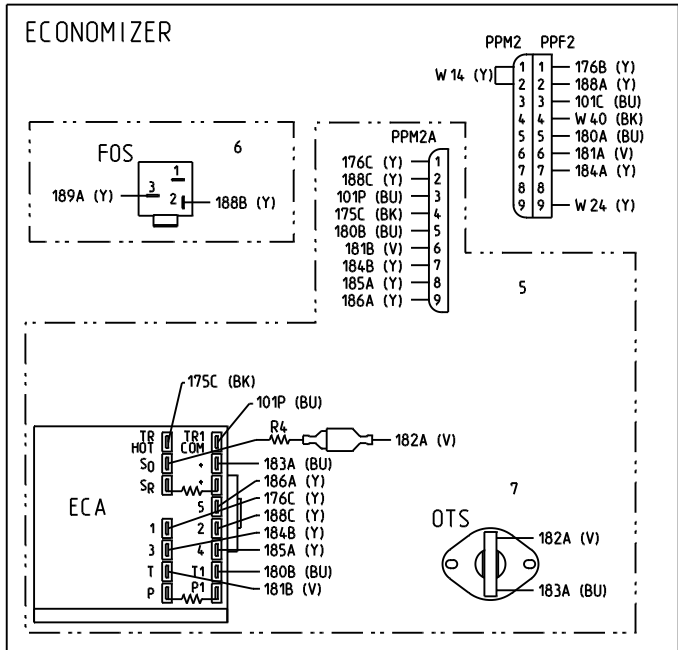

	THERMOSTAT	
100C (R)	--	RC
173A (BR)	--	W1
174A (BR)	--	W2
175A (BK)	--	G
		RH
176A (Y)	--	Y1
184A (Y)	--	Y2
101LL (BU)	--	COMMON