

# Installer's Guide

## Seacoast Kit BAYSEAC001

**⚠ WARNING: HAZARDOUS VOLTAGE - DISCONNECT POWER BEFORE SERVICING**

**ALL phases of this installation must comply with NATIONAL, STATE AND LOCAL CODES**

**IMPORTANT**—This Document is **customer property** and is to remain with this unit. Please return to service information pack upon completion of work.

### MASTER KIT CONTENT:


- 5 - Plastic film (8 inch wide) with magnetic strip on top.
- 1 - Installer's Guide.

### INSPECTION:

Check carefully for any shipping damage. This must be reported to and claims made against the transportation company immediately. Any missing parts should be reported to your supplier at once and replaced with authorized parts only.

### INSTALLATION:

1. Disconnect power to the unit. Open the coil service door.
2. Attach the film to the inside lip of the top cover, using the magnetic strip. Check that you have a strong magnetic attraction between the strip and the top.
3. Center the film over the aluminum copper transition joints. ( See figure 1.)
4. Cut any excess length of film to within 1/2 inch of the base.
5. Close coil service door and reconnect power to the unit.

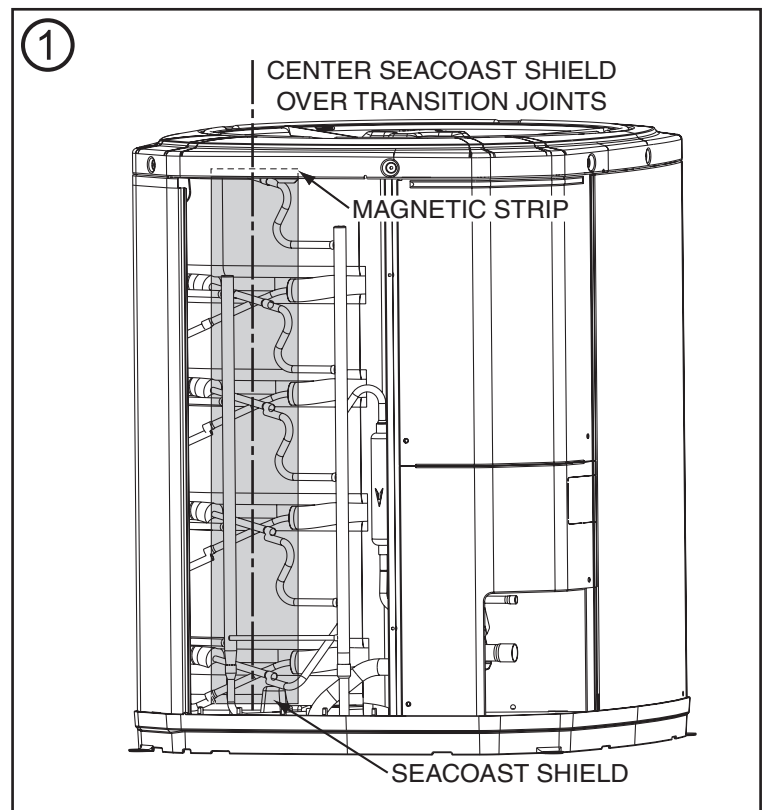

## About Trane and American Standard Heating and Air Conditioning

Trane and American Standard create comfortable, energy efficient indoor environments for residential applications. For more information, please visit [www.trane.com](http://www.trane.com) or [www.americanstandardair.com](http://www.americanstandardair.com)

---

The manufacturer has a policy of continuous data improvement and it reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.

18-HE45D1-1B-EN 08 Jul 2020  
Supersedes 18-HE45D1-1 (February 2002)

© 2020