



1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60

SEE UNIT NAME PLATE
FOR LINE VOLTAGE

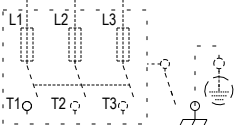

CONVENIENCE OUTLET

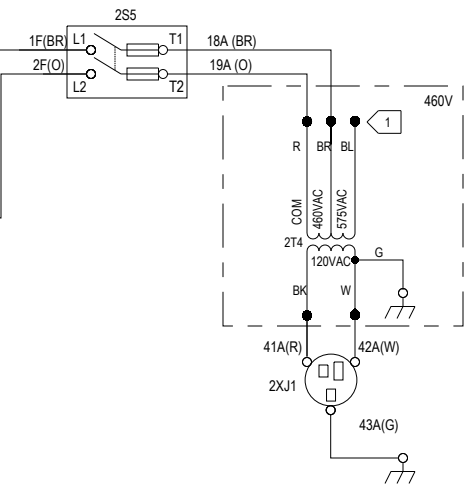

LOCATION CODE	
LOC#	ZONE
1	CONTROL PANEL
2	CONDENSER ZONE
3	HEAT/EXT CASING
4	SUPPLY FAN ZONE
5	EVAP/FILTERS
6	RETURN AIR ZONE
7	CUSTOMER PROVIDED

WIRE COLOR ABBREVIATION CODES			
CODE	COLOR	CODE	COLOR
BK	BLACK	PK	PINK
BL	BLUE	R	RED
BR	BROWN	TQ	TURQUOISE
G	GREEN	V,(PR)	PURPLE
GY	GREY	W	WHITE
O	ORANGE	Y	YELLOW

CAUTION

USE COPPER CONDUCTORS ONLY!

UNIT TERMINALS ARE NOT DESIGNED TO
ACCEPT OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO
THE EQUIPMENT.

ATTENTION

N'UTILISER QUE DES CONDUCTEURS EN
CUIVRE!

LES BORNES DE L'UNIT É NE SONT PAS
CONÇUES POUR RECEVOIR D'AUTRES TYPES
DE CONDUCTEURS.

L'UTILISATION DE TOUT AUTRE CONDUCTEUR
PEUT ENDOMMAGER L'ÉQUIPEMENT.

PRECAUCIÓN

¡UTILICE ÚNICAMENTE CONDUCTORES DE
COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN
DISEÑADAS PARA ACEPTAR OTROS TIPOS DE
CONDUCTORES.

SI NO LO HACE. PUEDE OCASIONAR DAÑO AL
EQUIPO.

LEGEND		
REF DES	DESCRIPTION	LINE NO
1F1	FUSE - CONTROLS TRANSFORMER	41
1F2	FUSE - CONTROLS TRANSFORMER	41
1F5	FUSE - SUPPLY FAN VFD	26
1F7	FUSE - RETURN/RELIEF FAN VFD	38
1F17	FUSE - 27VAC TRANSFORMER PRIMARY	50
1F18	FUSE - 27VAC TRANSFORMER PRIMARY	50
1F19	FUSEBLOCK - POWER METER	22
1F35	FUSE - ERW MOTOR	33
1FC4	OVERLOAD - ERW MOTOR	33
1PG1	POWER METER	15
1QA45	CONTACTOR - ERW MOTOR	33
1QB1/1XD1	UNIT DISCONNECT / TERMINAL BLOCK	7
1S1	FUSED SWITCH - 115V CONTROLS	45
1T1	TRANSFORMER - 115V CONTROLS	44
1T2	TRANSFORMER - 27V	51
1T3	TRANSFORMER - 27V	52
1T7	TRANSFORMER - 24V	54
1TF13	TRANSDUCER - CURRENT	12
1TF14	TRANSDUCER - CURRENT	13
1TF15	TRANSDUCER - CURRENT	14
1XD4	TERMINAL BLOCK - AIRFLOW	18
1XD6	TERMINAL BLOCK - 115VAC	45
1XD7	TERMINAL BLOCK - 115VAC COMMON	45
2S5	FUSED SWITCH - CONVENIENCE OUTLET	3
2T4	TRANSFORMER - CONVENIENCE OUTLET	6
2XJ1	CONVENIENCE OUTLET	9
4F15	FUSE - SUPPLY FAN VFD	26
4FC1	OVERLOAD - RELIEF FAN	30
4M12	MOTOR - SUPPLY FAN	26
4QA19	CONTACTOR - BYPASS SUPPLY FAN	30
4QA21	CONTACTOR - RUN SUPPLY FAN	26
4TB1	VFD SUPPLY FAN	26
6F26	FUSE - RETURN/RELIEF FAN VFD	38
6FC3	OVERLOAD - RELIEF FAN	42
6M14	MOTOR - RETURN/RELIEF FAN	38
6M27	MOTOR - ENERGY RECOVERY WHEEL	33
6QA38	CONTACTOR - RUN RELIEF/RETURN FAN	38
6QA39	CONTACTOR - BYPASS RELIEF/RETURN FAN	42
6TB6	VFD RETURN/RELIEF FAN	38

