


NOTES:

1. DASHED LINES INDICATE FIELD WIRING BY CUSTOMER. CHECK SALES ORDER TO DETERMINE WHICH OPTIONS ARE SPECIFIED.
2. ALL FIELD WIRING MUST BE IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND STATE AND LOCAL REQUIREMENTS. OUTSIDE OF THE UNITED STATES, OTHER COUNTRIES APPLICABLE NATIONAL AND/OR LOCAL REQUIREMENTS SHALL APPLY. ALL CUSTOMER CONTROL CIRCUIT WIRING MUST HAVE A MINIMUM RATING OF 150 VOLTS.
3. DO NOT ROUTE LOW VOLTAGE (30 VDC MAX) WITH CONTROL VOLTAGE (115 VAC) AND DO NOT POWER-UP UNIT UNTIL CHECK-OUT AND START-UP PROCEDURES HAVE BEEN COMPLETED.
4. CHILLED AND CONDENSER-ABSORBER WATER FLOW SWITCHES ARE TO BE INSTALLED AND WIRED TO THE MAIN UNIT CONTROL PANEL BY THE CUSTOMER. THE PURCHASE OF FLOW SWITCHES FROM TRANE IS OPTIONAL.
5. TERMINAL BLOCK IS SHOWN. CIRCUIT BREAKER, FUSED OR NON-FUSED DISCONNECT SWITCH IS OPTIONAL. CHECK SALES ORDER TO DETERMINE WHICH OPTION IS SPECIFIED. LINE VOLTAGE CONNECTIONS REQUIRE THE USE OF COPPER CONDUCTORS ONLY. WIRING TO BE SIZED PER NATIONAL ELECTRIC CODE BASED ON UNIT NAMEPLATE MINIMUM CIRCUIT AMPACITY RATING.
6. ANY COMBINATION OF SENSOR AND RELAY CIRCUITS SHOWN WIRED TO 117 OPTIONS MODULE MAY BE MADE IF THE OPTIONS MODULE OPTION IS SPECIFIED ON THE SALES ORDER.
7. BI-DIRECTIONAL COMMUNICATION LINKS TO BE A SHIELDED, TWISTED WIRE PAIR.
8. UNIT ENERGY VALVE IS TRANE FACTORY INSTALLED AND WIRED ON STEAM UNITS. VALVE TO BE FIELD INSTALLED AND WIRED BY THE CUSTOMER ON HOT WATER UNITS.

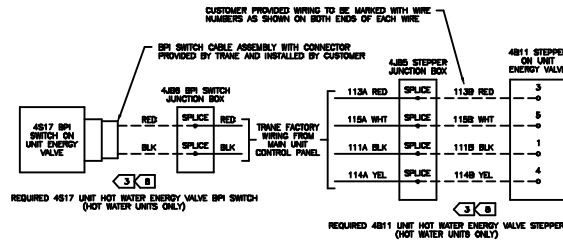

UNIT MODEL NUMBER 2307-3276	AUTOMATIC DO NOT REMOVE	TRANE TRACER SYSTEM 2307-3276	CONNECTION DIAGRAM UNIT FIELD WIRING
UNIT FIELD WIRING 2307-3276	UNIT FIELD WIRING 2307-3276	UNIT FIELD WIRING 2307-3276	UNIT FIELD WIRING 2307-3276

DEVICE PREFIX CODE

- 1 = MAIN UNIT CONTROL PANEL
- 4 = UNIT MOUNTED DEVICE
- 5 = REMOTE MOUNTED DEVICE
- 6 = CUSTOMER PROVIDED DEVICE

WARNING

HAZARDOUS VOLTAGE
DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS BEFORE SERVICING.
FAILURE TO DISCONNECT POWER BEFORE SERVICING CAN CAUSE SEVERE PERSONAL INJURY OR DEATH.

AVERTISSEMENT

DÉCONNECTEZ TOUTES LES SOURCES ÉLECTRIQUES INCLUANT LES DISCONNECTEURS SÉPARÉS À DISTANCE AVANT D'EFFECTUER L'ENTRETIEN. L'ENTRETIEN PEUT ENTRAINER DES BLESSURES CORPORELLES SÉVÈRES OU LA MORT.

CAUTION

USE COPPER CONDUCTORS ONLY. UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS. FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

