


IMPORTANT!
DO NOT DISCONNECT
UNIT UNTIL CHECK-OUT
AND START-UP PROCEDURE
HAS BEEN COMPLETED

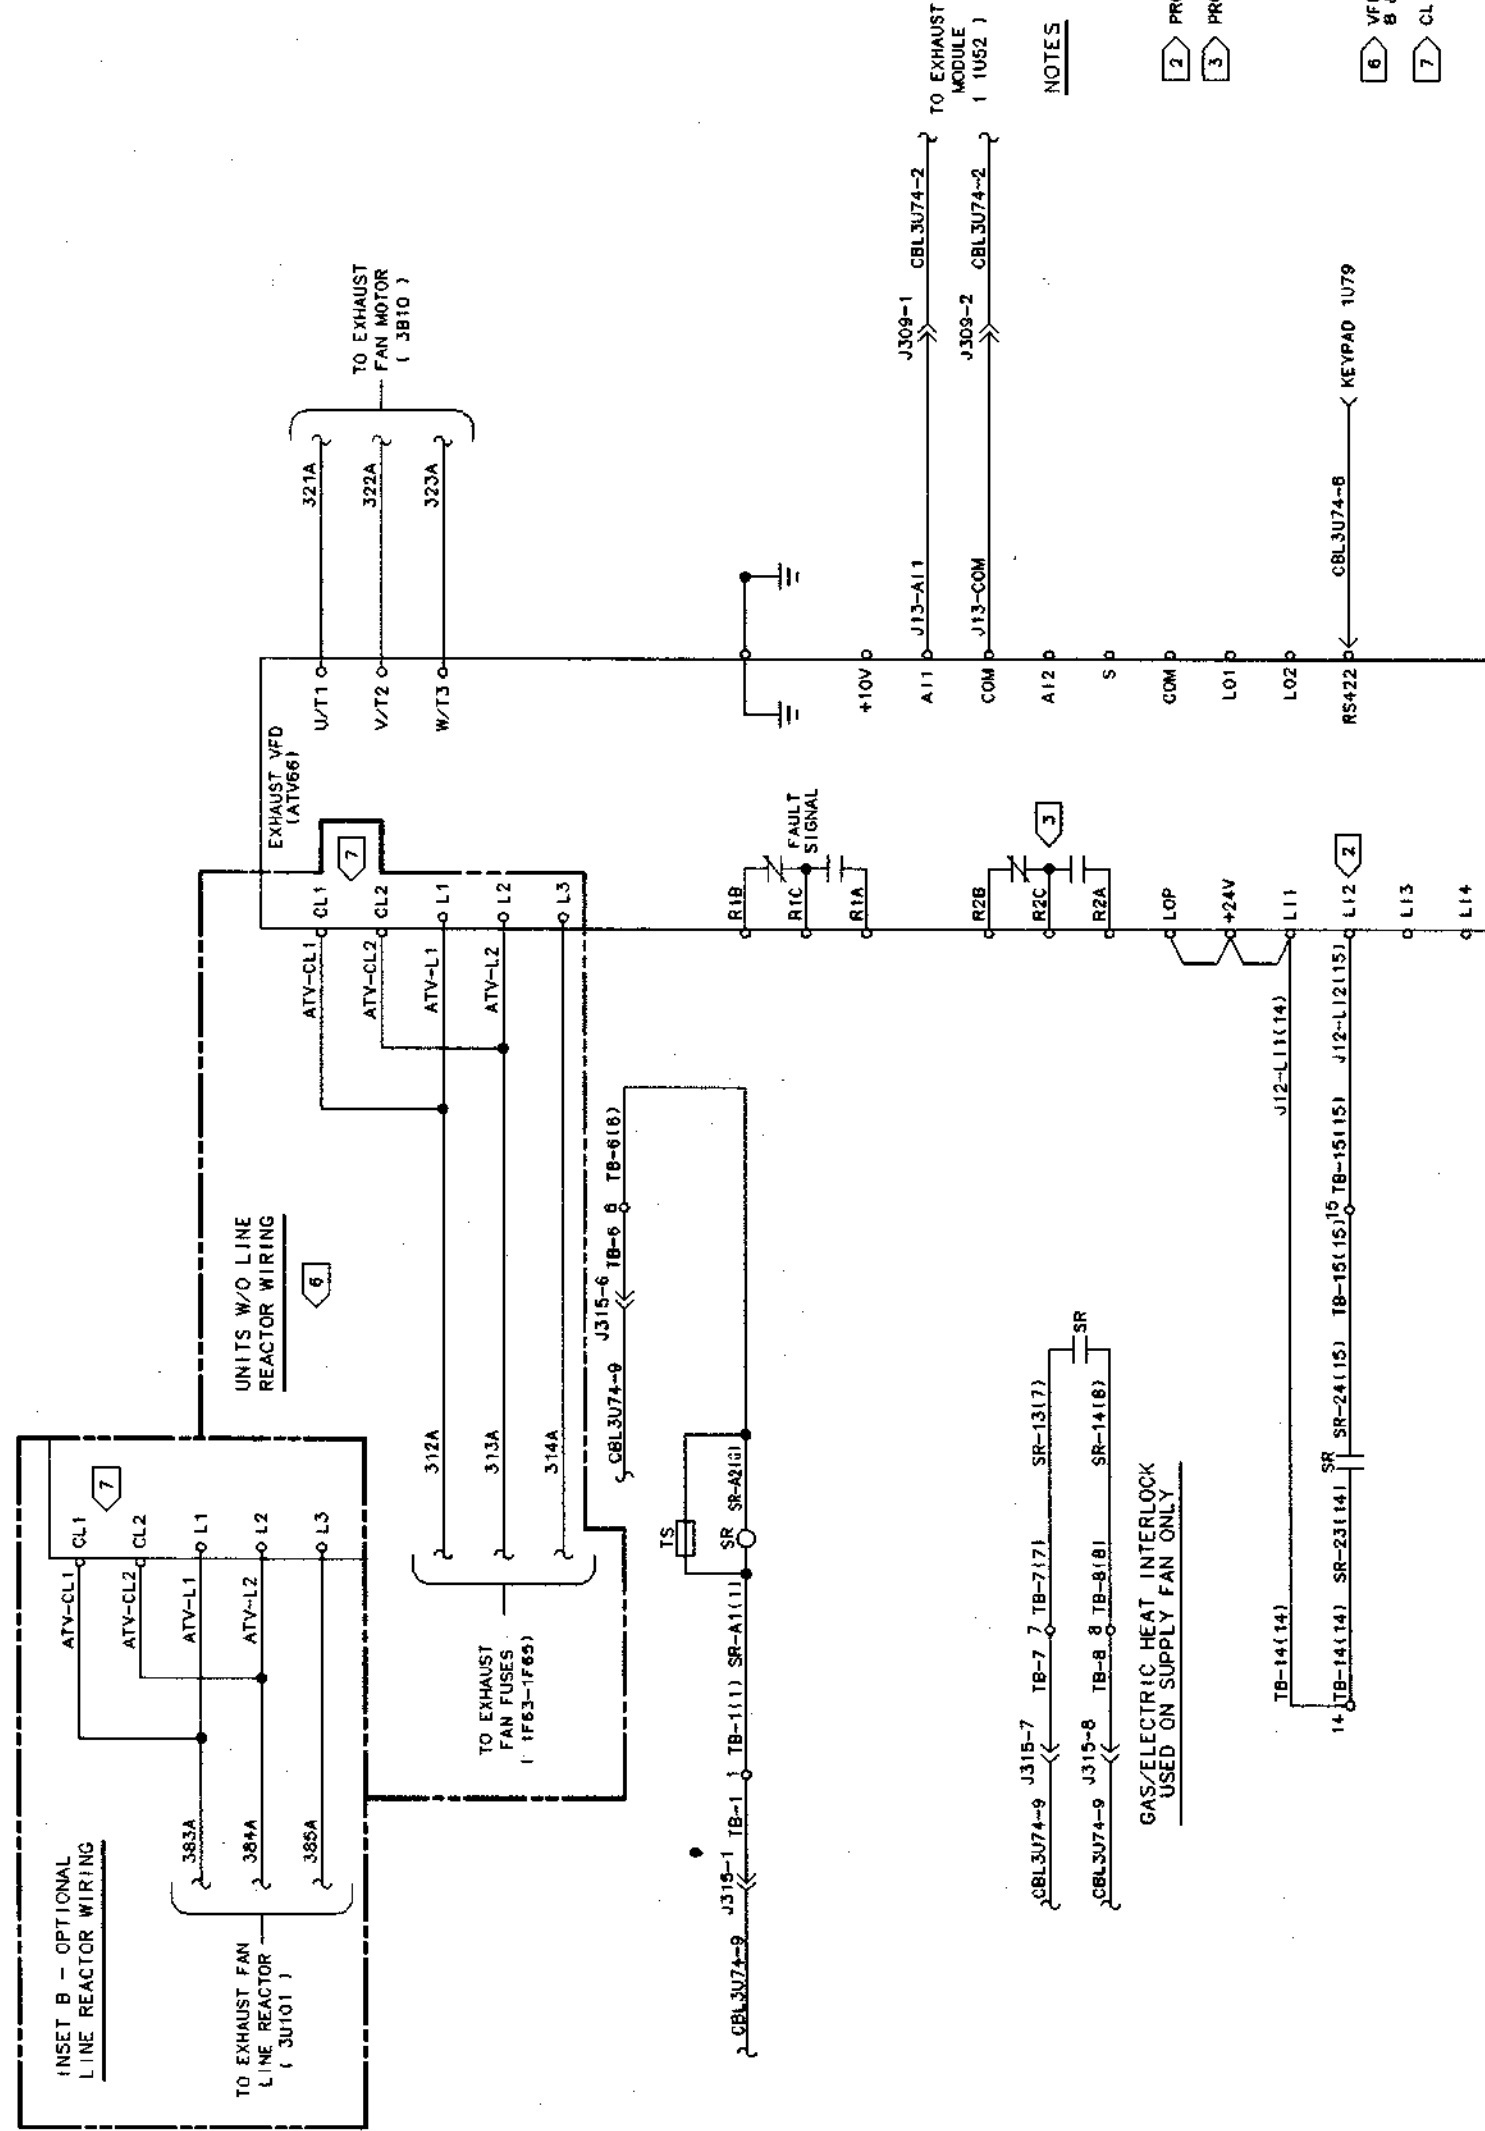

NOTES

- 2 PROGRAM L12 AS RUN FORWARD & TWO WIRE CONTROL.
- 3 PROGRAM R2 AS RUNNING STATE.
- 6 VFD W/O LINE REACTOR WIRING SHOWN. SEE INSETS B & C FOR VFD W/ LINE REACTOR WIRING.
- 7 CL1 & CL2 USED ON ATV66 ONLY.

ABBREVIATIONS	
SR	START RELAY
TB	TERMINAL BLOCK
TS	TRANSIENT SUPPRESSOR
VFD	VARIABLE FREQUENCY DRIVE

DEVICE PREFIX LOCATION CODE	
AREA	LOCATION
1	INSIDE UNIT CONTROL BOX
2	CONDENSER SECTION
3	AIR HANDLER SECTION
4	HEATING SECTION
5	EXTERNAL FIELD MOUNTED DEVICE

3U74 EXHAUST VFD ASSEMBLY

WARNING
HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER
INCLUDING REMOTE DISCONNECTS
BEFORE SERVICING.
FAILURE TO DISCONNECT POWER
CAN CAUSE SEVERE
PERSONAL INJURY OR DEATH.

AVERTISSEMENT
VOLTAGE HASARDEUX!
DECONNECTEZ TOUTES LES SOURCES
ELECTRIQUES INCLUANT LES
DISJONCTEURS SITUES A DISTANCE
AVANT D'EFFECTUER L'ENTRETIEN.
FAUTE DE DECONNECTER LA SOURCE
DE PUISSANCE PEUT ENTRAÎNER DES
BLESSURES CORPORELLES SEVERES
OU LA MORT.

CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED
TO ACCEPT OTHER TYPES OF
CONDUCTORS.
FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

10 X 15 METAL PROOF

REPLACES:	2307-4326	FILE NUMBER:	2307-4317	DRAWING NUMBER:	2307-4317	REV	A
REVISION DATE:	11/5/97	THE TRANE COMPANY A DIVISION OF AMERICAN STANDARD, INC. THE DESIGN IS PROTECTED BY PATENT RIGHTS. NO PART OF THIS DRAWING IS TO BE REPRODUCED WITHOUT THE WRITTEN PERMISSION OF THE TRANE COMPANY.	SCHEMATIC & CONNECTION WIRING DIAGRAM EXHAUST FAN VARIABLE FREQUENCY DRIVE WITHOUT BYPASS CONTROL 20 - 130 TON 5 HP, 5-HP (3074)				
DRAWN BY:	D. SMALLING	STARTING POINT:	2307 3839				
DATE:	11/5/97						

