


CAUTION

USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT
DESIGNED TO ACCEPT OTHER
TYPES OF CONDUCTORS.
FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

14	SEE APPLICABLE VARIABLE FREQUENCY DRIVE DIAGRAM FOR BALANCE OF CIRCUIT.
15	INSTALL OPTIONAL REMOTE SENSOR TO TERMINALS S1 AND S2 WHEN REQUIRED. SEE PROGRAMMABLE ZONE SENSOR / REMOTE PANEL W/MSB LITERATURE FOR OPTION CONFIGURATION.
16	TERMINALS 7,8,9 TO 10 ARE FOR OPTIONAL INDICATORS.
17	INSERT D IS FOR OPTIONAL PROGRAMMABLE ZONE SENSOR.
18	AUXILIARY RELAY ENERGIZED DURING OCCUPIED PERIODS.
19	0-10 VDC DUTY MOUNTED SENSOR ONLY.
20	PROVIDE JUMPER BETWEEN RTM J6-2 RTM J6-4 TO ENABLE AUTO MODE WHEN NO OTHER MODE INPUT IS USED.
21	PROVIDE CONTACT CLOSURE BETWEEN RTM J6-11 RTM J6-12 TO ENABLE UNOCCUPIED MODE WHEN NOT USING PROGRAMMABLE ZSM/REMOTE PANEL OR BMS.
22	EBA REQUIRED FOR OPTIONAL FRESH AIR TRACKING EXHAUST.

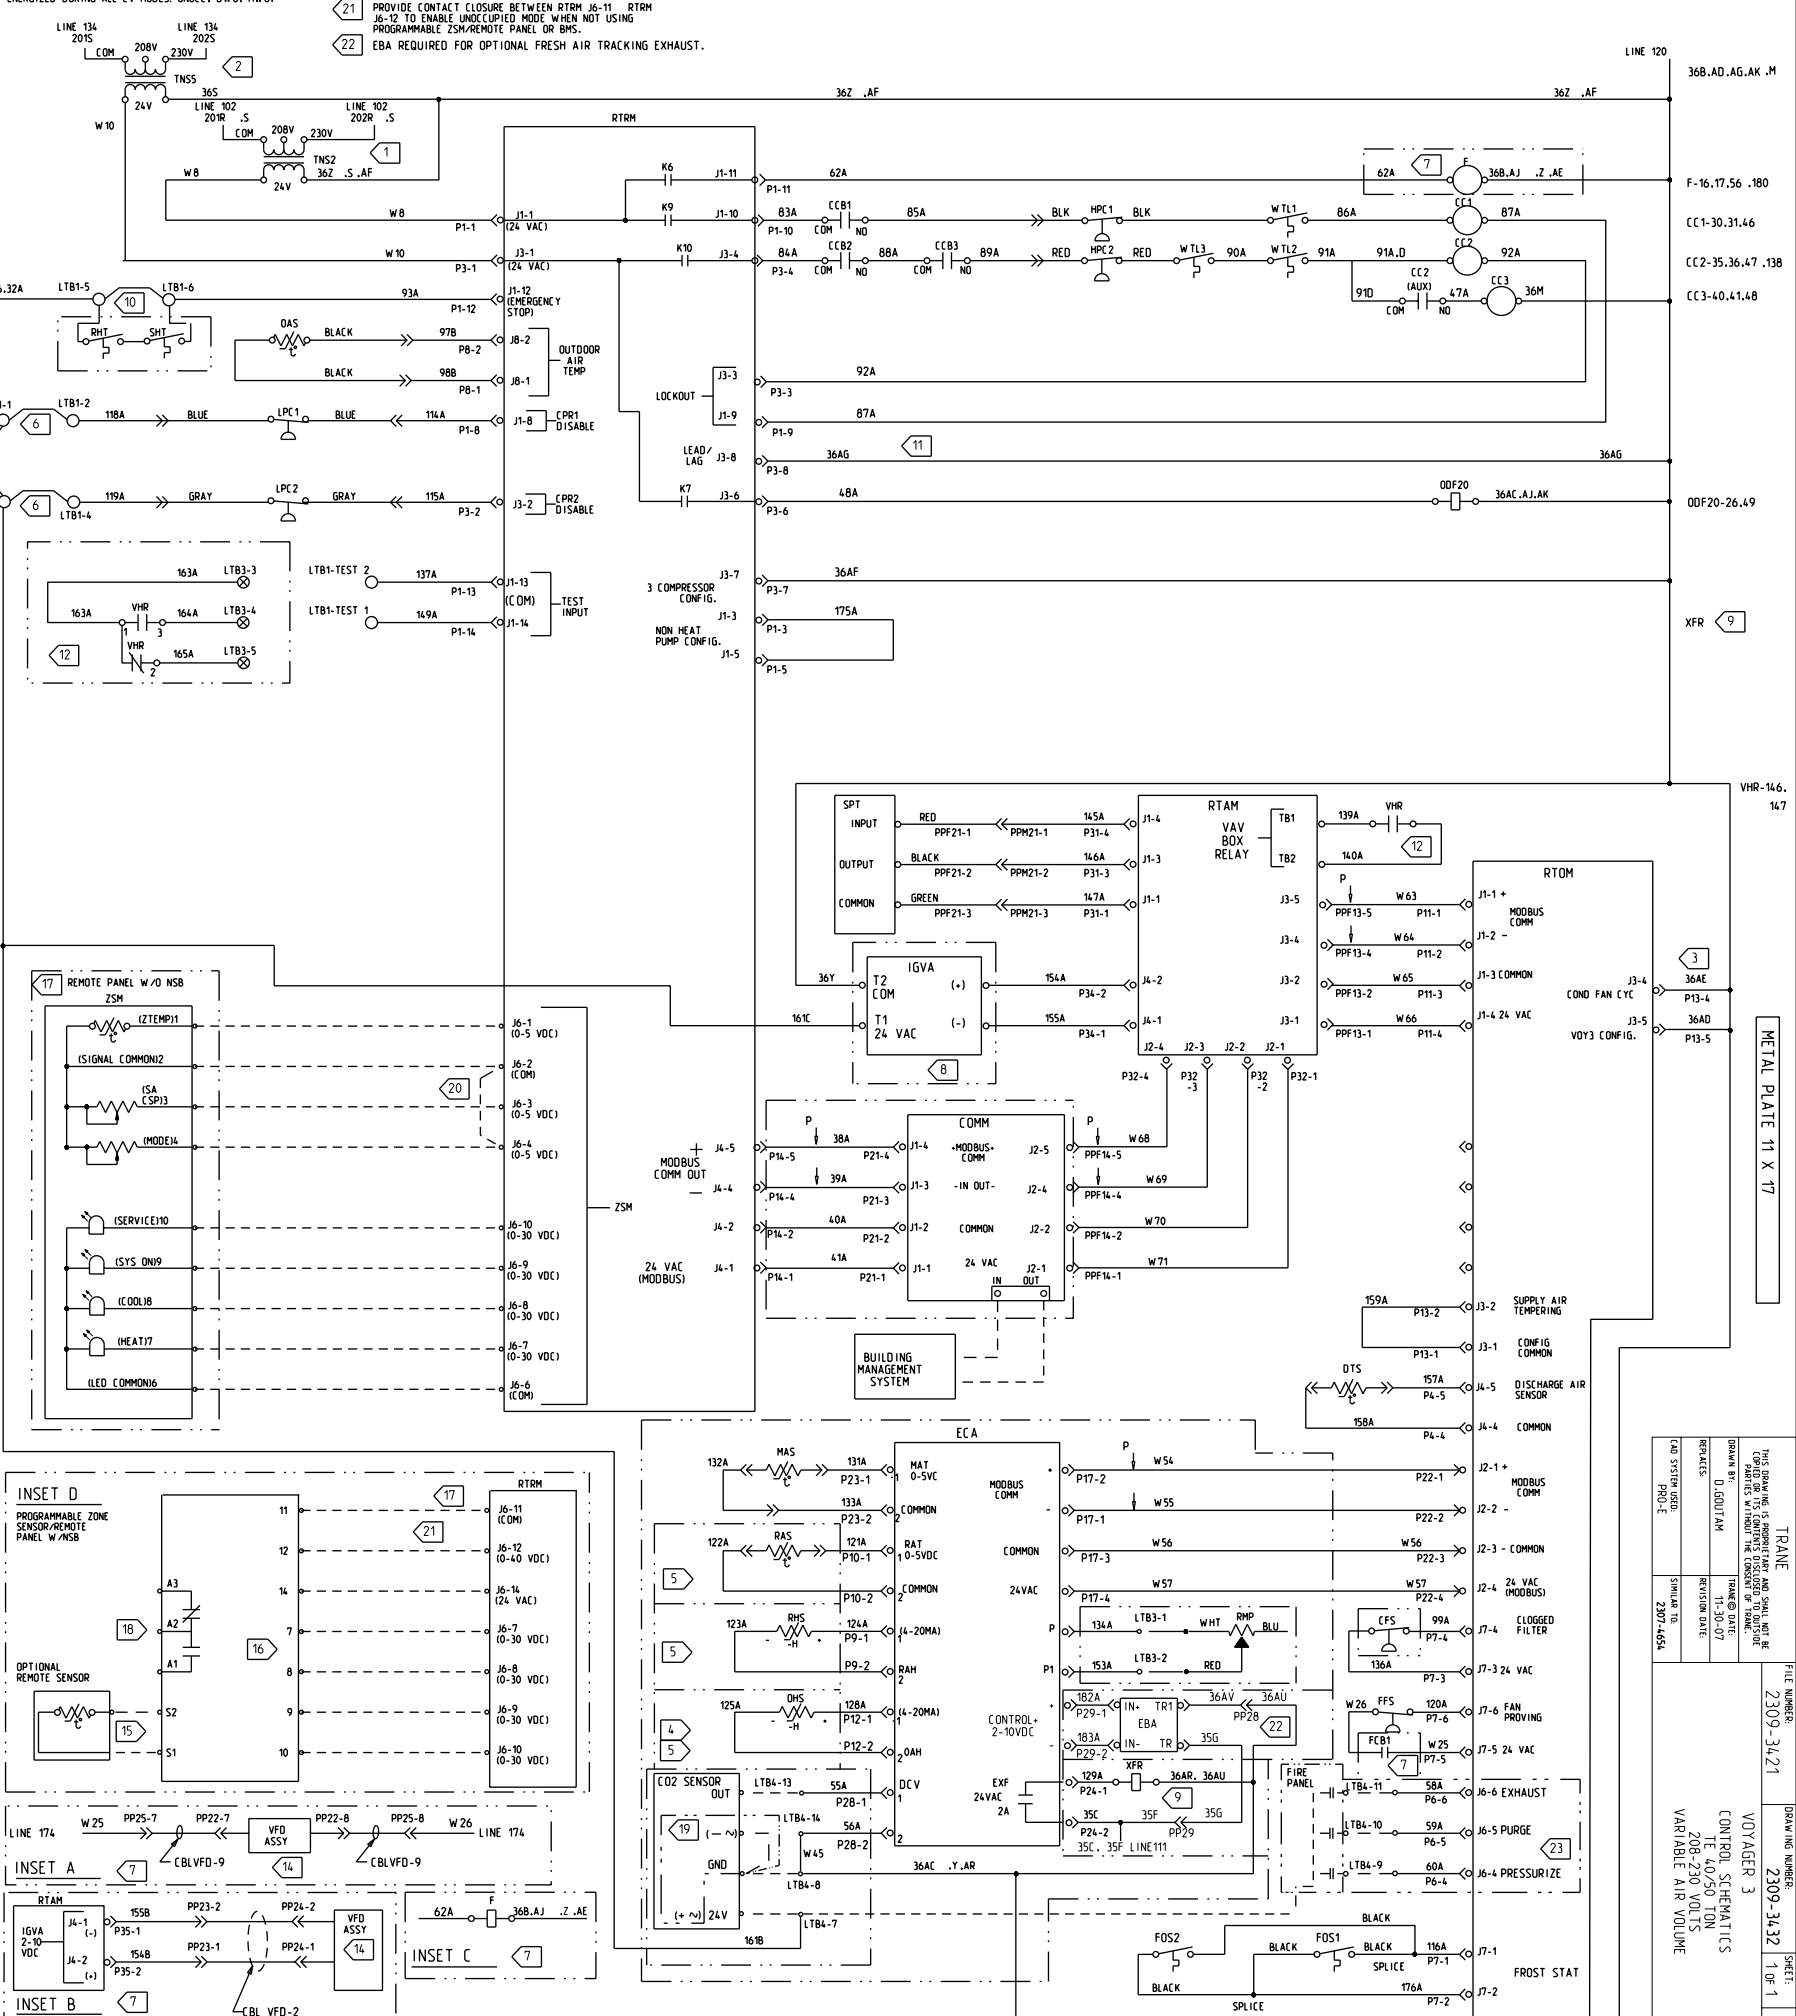

** LEGEND **			** LEGEND **		
DEVICE DESIGNATION	DESCRIPTION	LINE NUMBER	DEVICE DESIGNATION	DESCRIPTION	LINE NUMBER
CC1	COMPRESSOR CONTACTOR #1	136	ODF20	OUTDOOR FAN RELAY #20	143
CC2	COMPRESSOR CONTACTOR #2	137	OHS	OUTSIDE HUMIDITY SENSOR	173
CC3	COMPRESSOR CONTACTOR #3	138	RAS	RETURN AIR SENSOR	169
CFS	CLOGGED FILTER SWITCH	171	RHS	RETURN HUMIDITY SENSOR	171
CO2 SENSOR	CO2 SENSOR	175	RHT	RETURN HIGH TEMP.	139
COMM	COMMUNICATIONS MODULE	159	RMP	REMOTE MINIMUM POSITION	171
DTS	DISCHARGE TEMP SENSOR	165	RTM	YAW MODULE	151,179
ECA	ECONOMIZER ACTUATOR	167	RTOM	OPTIONS MODULE	153
F	IDM FAN CONTACTOR	135	RTRM	REFRIGERATION MODULE	134, 168
F	IDM FAN RELAY	180	SHT	SUPPLY HIGH TEMP.	139
FIRE PANEL	FIRE PANEL	175	SPT	STATIC PRESS. TRANSDUCER	151
FFS	FAN FAILURE SWITCH	173	THSPT	THERMOSTAT	148
FOS1	FROST STAT 1	179	TNS2	CONTROL TRANSFORMER	134
FOS2	FROST STAT 2	179	TNS5	CONTROL TRANSFORMER	132
HPC1	HIGH PRESSURE CUTOUT #1	136	VFD	VARIABLE FREQUENCY DRIVE	176,179
HPC2	HIGH PRESSURE CUTOUT #2	137	VHR	VAV BOX RELAY	146,147,151
IGVA	INLET GUIDE VANE ACTUATOR	155			
LPCL	LOW PRESSURE CUTOUT #1	141	WTL1	WINDING TEMP LIMIT #1	136
LPCL2	LOW PRESSURE CUTOUT #2	143	WTL2	WINDING TEMP LIMIT #2	137
MAS	MIXED AIR SENSOR	167	WTL3	WINDING TEMP LIMIT #3	137
OAS	OUTSIDE AIR SENSOR	139	XFR	EXHAUST FAN RELAY	175
EBA	EXHAUST BLADE ACTUATOR	173	ZSM	ZONE SENSOR MODULE	156,168

METAL PLATE 11 X 17

2309-3421

2309-3422	1 of 1	A
-----------	--------	---