

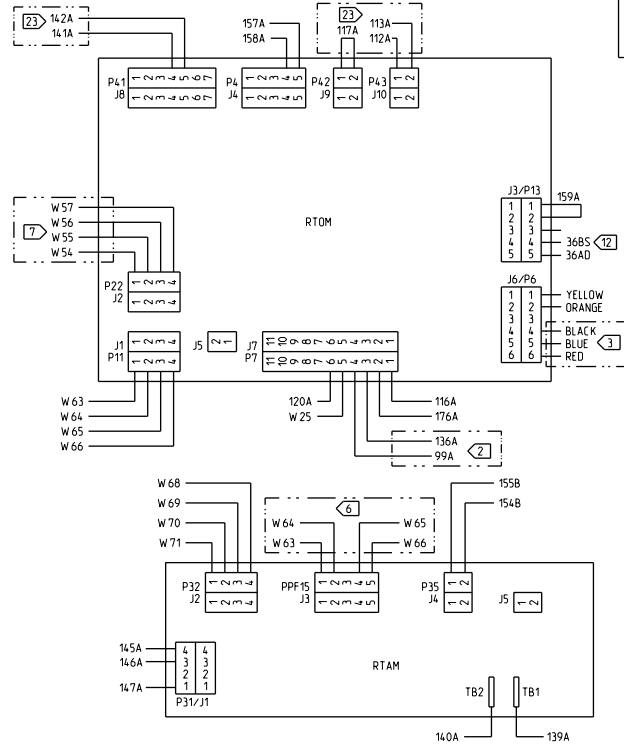
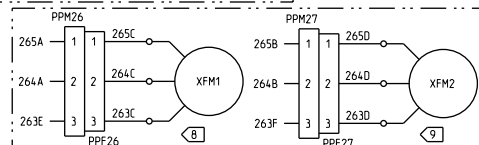
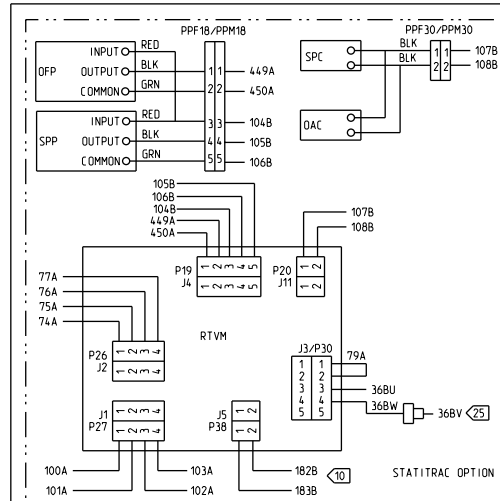





- 23 WIRE 117A IS REQUIRED TO ENABLE DEHUMIDIFICATION. WIRES 141A AND 142A ARE USED WITH DEHUMIDIFICATION AND CUSTOMER INSTALLED SPACE HUMIDITY SENSOR (SHS). WIRES 112A AND 113A ARE USED WITH DEHUMIDIFICATION AND CUSTOMER INSTALLED HUMIDISTAT (HST).

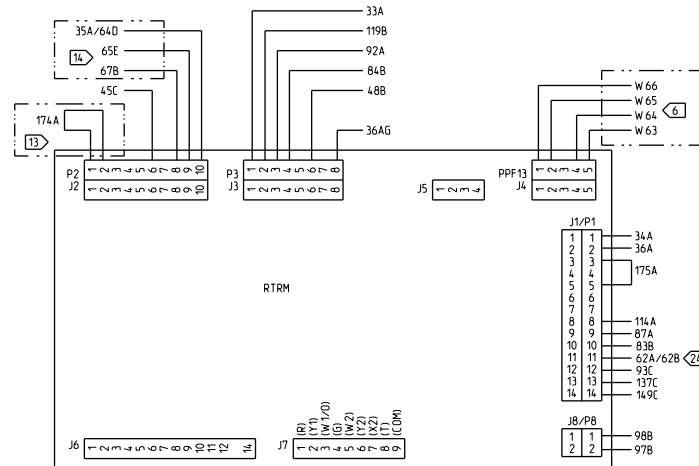

- 25 DISCONNECT WIRES 36BW AND 36BV ON HORIZONTAL UNITS.

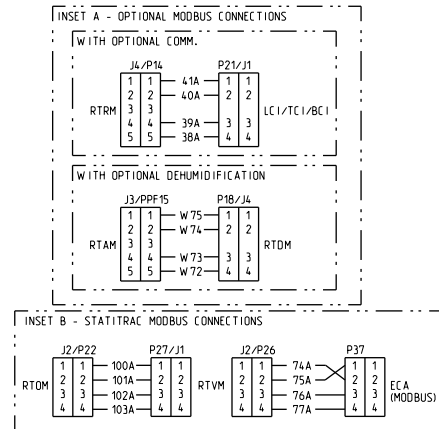


CONDENSER SECTION WIRING

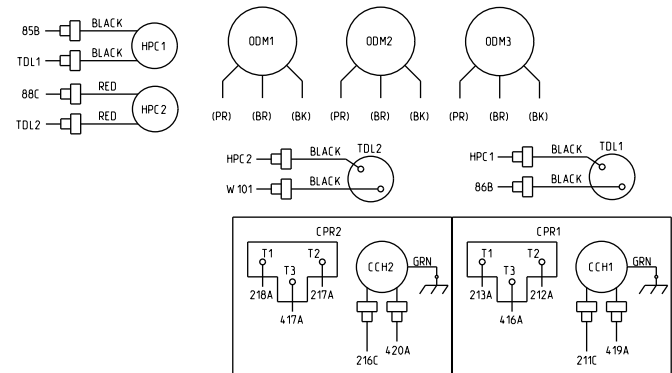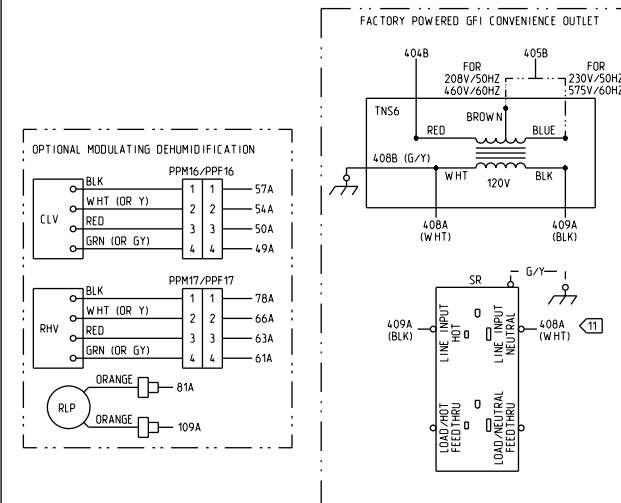


TRANE THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE CONSENT OF TRANE.		FILE NUMBER: 2313-1280	DRAWING NUMBER: 2313-1287	SHEET: 1 OF 1	REV A
DRAWN BY: R. JOHNSON		VOYAGER 3 RACEWAY DEVICES CONNECTION PRINT			
DATE: 8/10/12 REPLACES: 2313-0670		REVISION DATE: 27.5-35 TON VARIABLE AIR VOLUME			
CAD SYSTEM USED: PRO/DETAIL		SIMILAR TO: 36KW/54KW ELECTRIC HEAT/COOLING ONLY			

HEAT SECTION WIRING

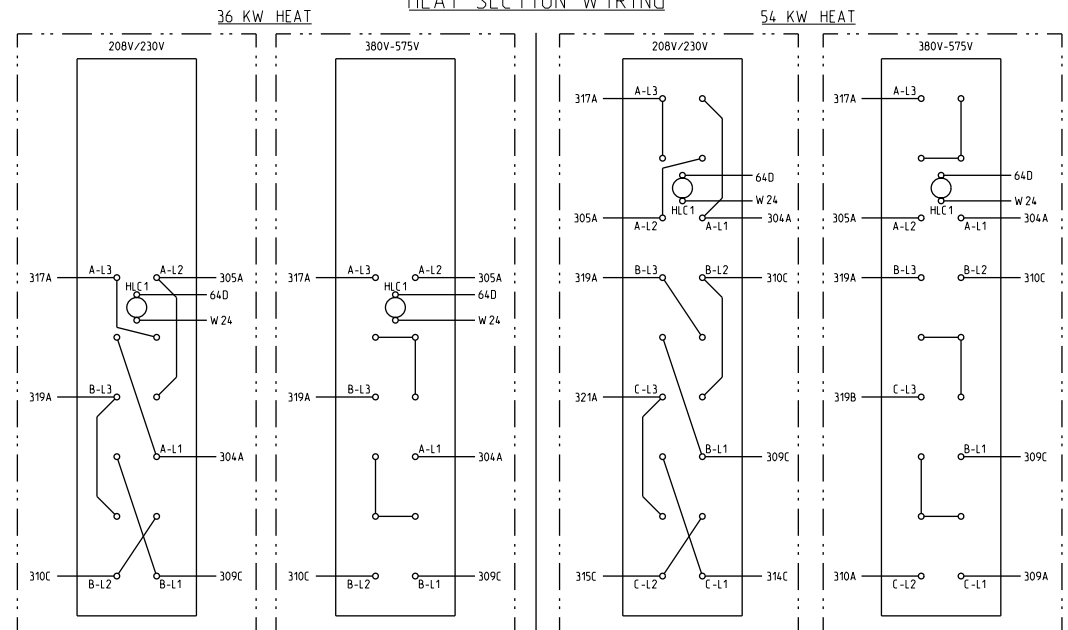

RETURN AIR SECTION WIRING

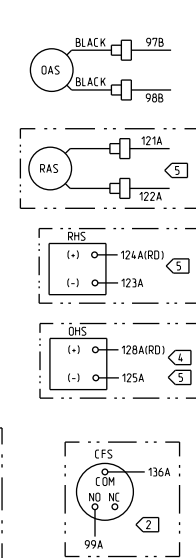

SUPPLY AIR
SECTION WIRING

