LEGEND		
DEVICE DESIG	DESCRIPTION	LINE NUMBER
1CB1	CIRCUIT BREAKER - SUPPLY FAN	32
1CB10	CIRCUIT BREAKER - COMPRESSOR	27
1CB11	CIRCUIT BREAKER - COMPRESSOR	32
1CB8	CIRCUIT BREAKER - COMPRESSOR	16
1CB9	CIRCUIT BREAKER - COMPRESSOR	21
1F1	FUSE - CONDENSER FAN	37
1F2	FUSE - CONDENSER FAN	37
1F3	FUSE - CONDENSER FAN	37
1F4	FUSE - CONDENSER FAN	37
1F5	FUSE - CONDENSER FAN	37
1F55	FUSE - CONVENIENCE OUTLET	15
1F56	FUSE - CONVENIENCE OUTLET	15
1F6	FUSE - CONDENSER FAN	37
1F63	FUSE - EXH/RTN FAN V.F.D.	31
1F64	FUSE - EXH/RTN FAN V.F.D.	31
1F65	FUSE - EXH/RTN FAN V.F.D.	31
1F7	FUSE - CONTROL CIRCUIT	57
1F72	FUSE - TRANSFORMER CIRCUIT	37
1F73	FUSE - TRANSFORMER CIRCUIT	37
1F74	FUSE - TRANSFORMER CIRCUIT	37
1S1	SWITCH - CONTROL CIRCUIT	57
1S70	SWITCH - 24V TRANSFORMER	56
1S74	SWITCH - CONV. OUTLET	17
1T1	TRANSFORMER - CONTROL POWER	56
1T2	TRANSFORMER - 24 VAC	54
1T3	TRANSFORMER - 24 VAC	54
1T4	TRANSFORMER - 24 VAC	54
1U3	PHASE MONITOR	277
2B1	MOTOR - CONDENSOR FAN	48
2B17	COMPRESSOR	17
2B17HR13	HEATER - CRANKCASE	14
2B18	COMPRESSOR	28
2B18HR15	HEATER - CRANKCASE	25
2B2	MOTOR - CONDENSOR FAN	48
2B3	MOTOR - CONDENSOR FAN	48
2B4	MOTOR - CONDENSOR FAN	48
2B5	MOTOR - CONDENSOR FAN	48
2B6	MOTOR - CONDENSOR FAN	48
2B7	COMPRESSOR	22
2B7HR12	HEATER - CRANKCASE	19
2B8	COMPRESSOR	33
2B8HR14	HEATER - CRANKCASE	30
2T16	TRANSFORMER - CONV. OUTLET	13
3B10	MOTOR - EXHAUST/RTN FAN	23
3B9	MOTOR - SUPPLY FAN	23
3U74	V.F.D. - EXH/RTN FAN	25

CAUTION

USE COPPER CONDUCTORS ONLY!

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

ATTENTION

N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!

LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.

L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT ENDOMMAGER L'ÉQUIPEMENT.

PRECAUCIÓN

¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

TERMINAL BLOCK USAGE	
DEVICE DESIG	DESCRIPTION
1TB4,1TB5,1TB16,1TB17	CONTROLS - CUSTOMER CONNECTIONS
1TB6-1TB10	CONTROLS - FACTORY
4TB2	POWER - ELECTRIC HEAT OPTION

CONTACTOR COIL LOCATION		
DEVICE DESIG	DESCRIPTION	LINE NUMBER
1K3	CONTACTOR - COMPRESSOR	125/131
1K4	CONTACTOR - COMPRESSOR	148
1K5	CONTACTOR - COMPRESSOR	123
1K6	CONTACTOR - COMPRESSOR	140
1K7	CONTACTOR - CONDENSER FAN	133
1K8	CONTACTOR - CONDENSER FAN	135
1K9	CONTACTOR - CONDENSER FAN	150
1K10	CONTACTOR - CONDENSER FAN	152
1K16	CONTACTOR - SUPPLY FAN	86

NOTES:

1. UNLESS OTHERWISE NOTED, ALL SWITCHES ARE SHOWN AT 25°C (77°F), AT ATMOSPHERIC PRESSURE, AT 50% RELATIVE HUMIDITY, WITH ALL UTILITIES TURNED OFF, AND AFTER A NORMAL SHUTDOWN HAS OCCURRED.
2. DASHED LINES INDICATE RECOMMENDED FIELD WIRING BY OTHERS. DASHED LINE ENCLOSURES AND/OR DASHED DEVICE OUTLINES INDICATE COMPONENTS PROVIDED BY THE FIELD. PHANTOM LINE ENCLOSURES INDICATE ALTERNATE CIRCUITRY OR AVAILABLE SALES OPTIONS. SOLID LINE INDICATES WIRING BY TRANE CO.
3. NUMBERS ALONG THE RIGHT SIDE OF THE SCHEMATIC DESIGNATE THE LOCATION OF CONTACTS BY LINE NUMBER. AN UNDERLINED NUMBER INDICATES A NORMALLY CLOSED CONTACT. AN OPEN ARROWHEAD BELOW THE LINE NUMBER POINTING UPWARD INDICATES A TIMED CONTACT WHICH BEGINS TIMING WHEN ENERGIZED.

4 SEE APPLICABLE HEATING SECTION DIAGRAM FOR BALANCE OF CIRCUIT.

6 460V/60HZ (500VA/750VA/1000VA) TRANSFORMER SHOWN. SEE INSET 1A FOR 460V/60HZ (250VA), 200V/230V/575V/60HZ, 380V-415V/50HZ CONNECTIONS.

12 200V/460V/60HZ TRANSFORMERS SHOWN. SEE INSET 1B FOR 230V/575V/60HZ AND 380V-415V/50HZ CONNECTIONS.

13 200V/460V/60HZ TRANSFORMER SHOWN. SEE INSET 1C FOR 230V/575V/60HZ TRANSFORMER.

14 SEE APPLICABLE VARIABLE FREQUENCY DRIVE DIAGRAM FOR BALANCE OF CIRCUIT.

15 CUT 1U3 PHASE MONITOR JUMPER WIRE ON 380V-415V/50HZ APPLICATIONS ONLY.

DEVICE PREFIX LOCATION CODE	
AREA	LOCATION
1	INSIDE UNIT CONTROL BOX
2	CONDENSER SECTION
3	AIR HANDLER SECTION
4	HEATING SECTION
5	EXTERNAL FIELD MTD DEVICE

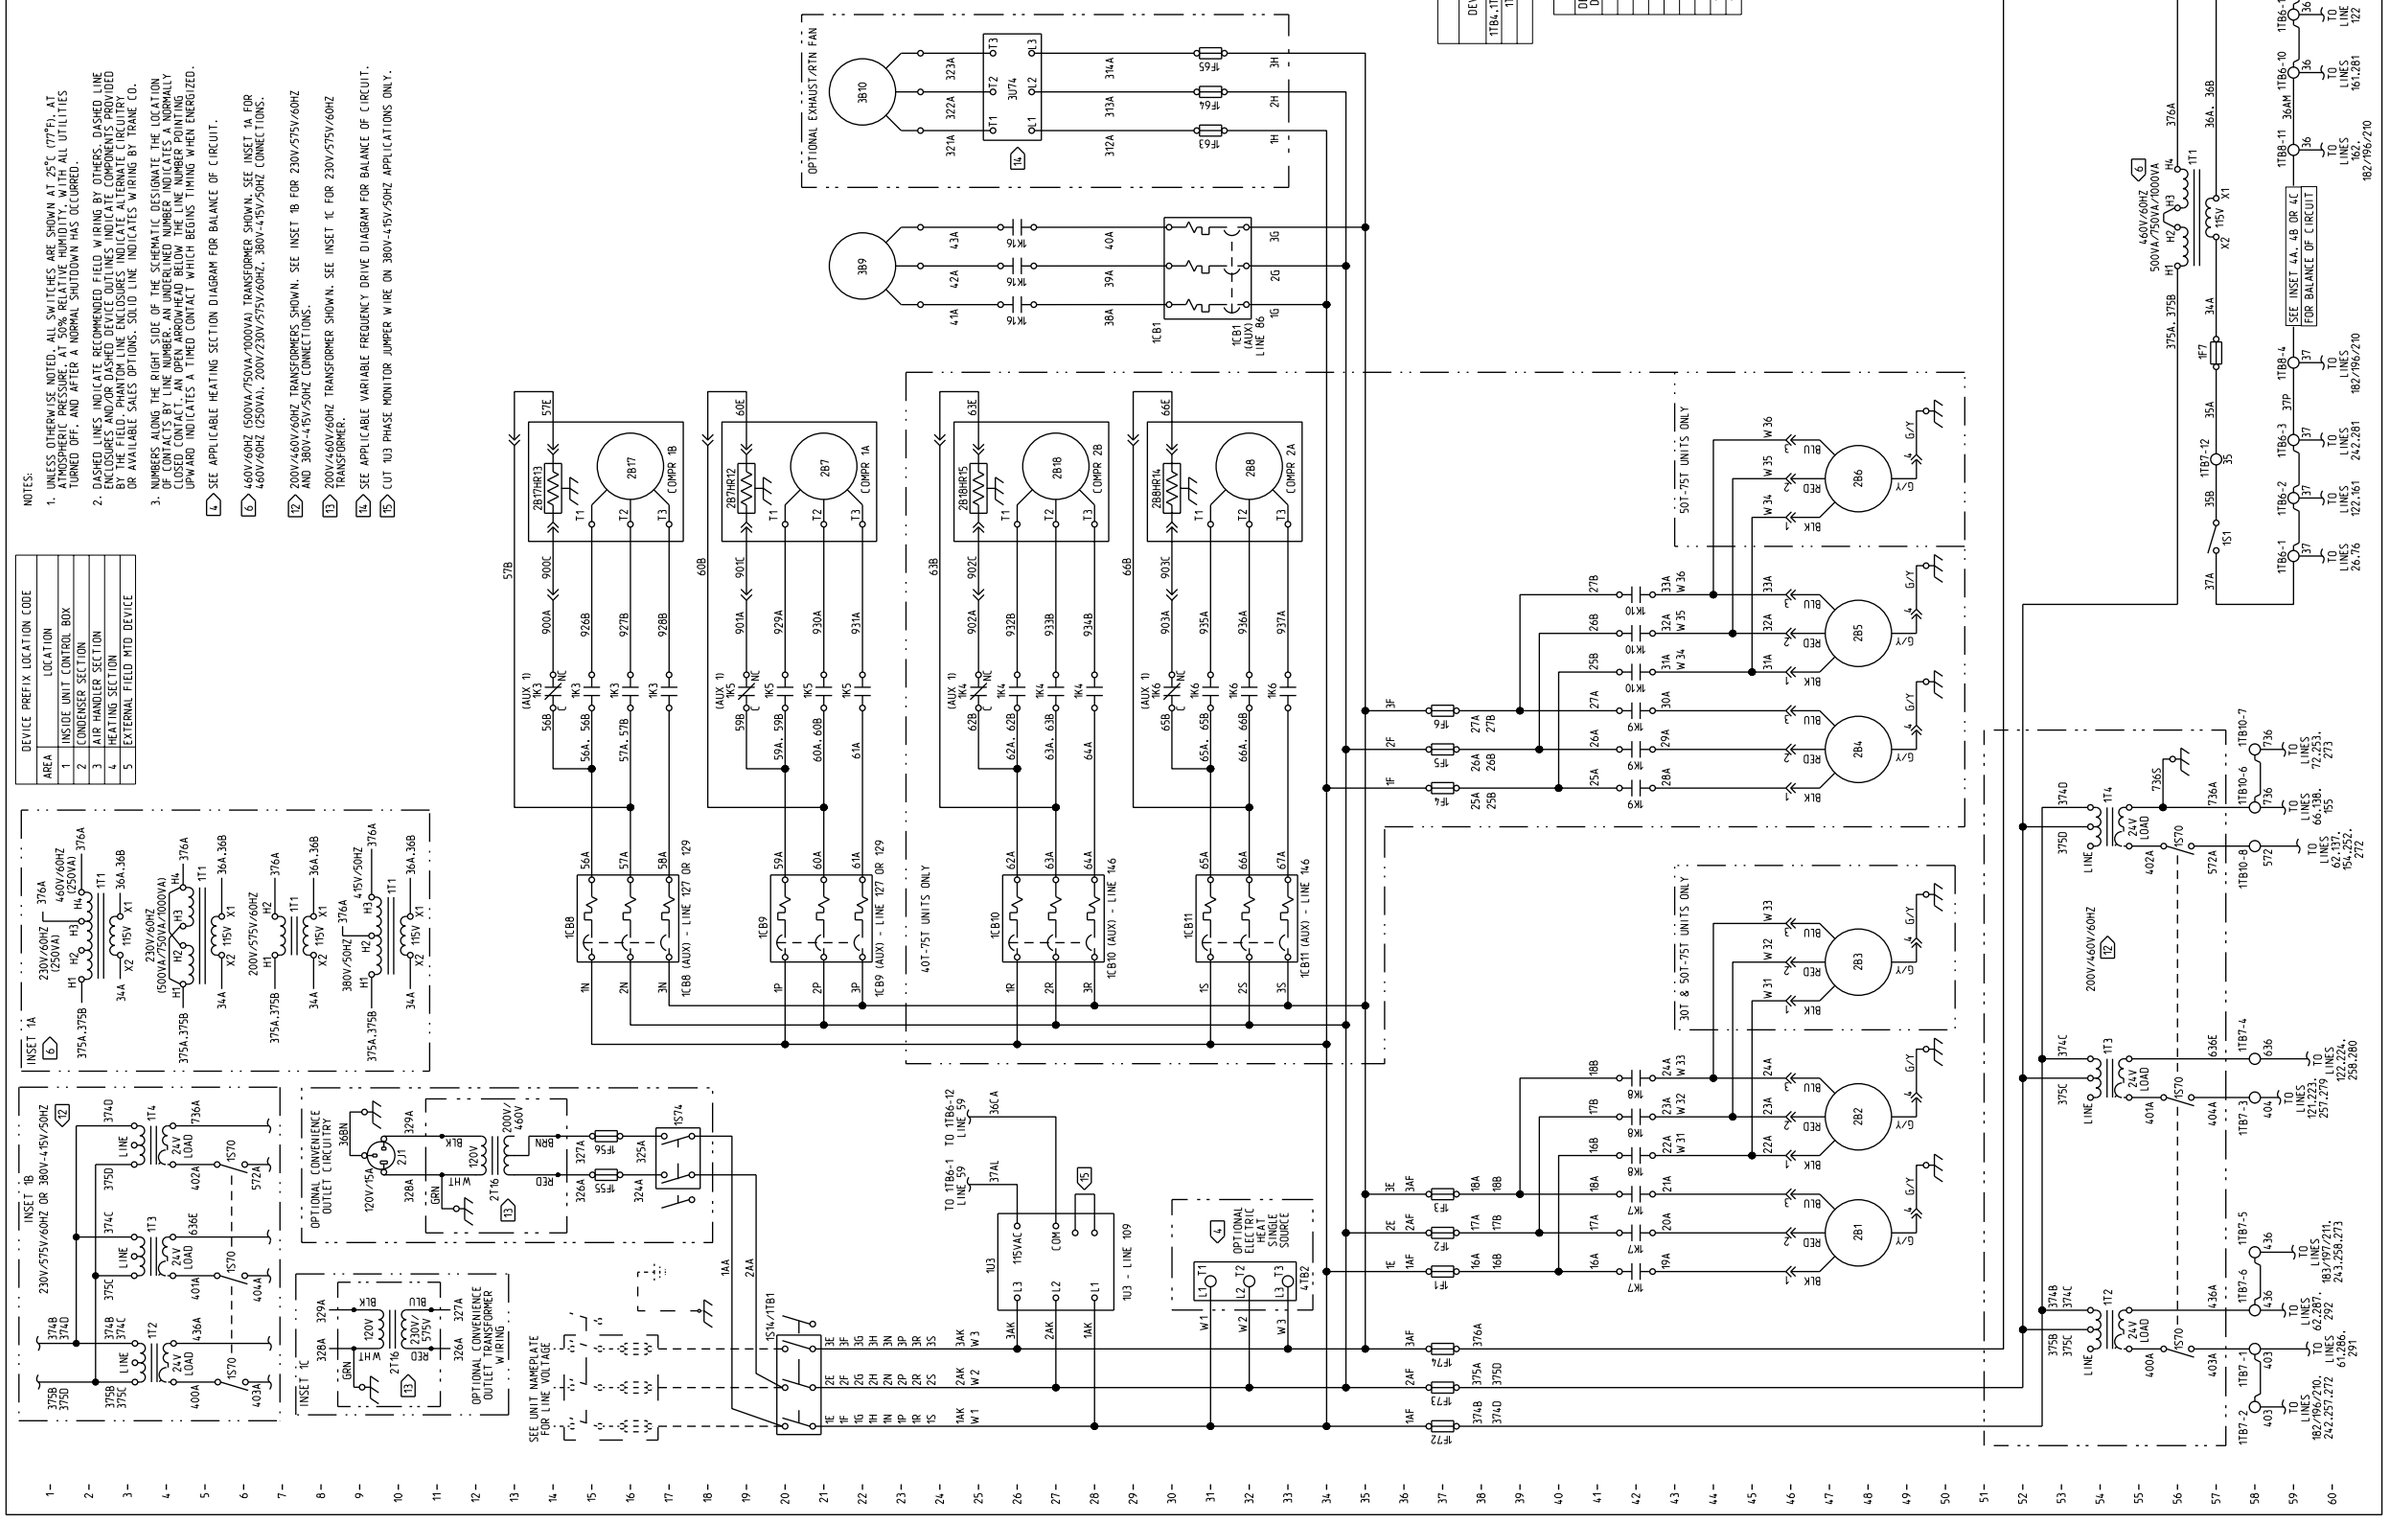

TRANE		FILE NUMBER: 2307-9104	DRAWING NUMBER: 2307-9107	SHEET: 1 OF 1	REV C
THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE CONSENT OF TRANE.		ROOFTOP PACKAGED AIR CONDITIONER DIAGRAM			
DRAWN BY: D. SHANNON	TRANE® DATE: 9-16-09	POWER SCHEMATIC - 20, 30-75 TON W/ EXHAUST/RETURN FAN VARIABLE FREQUENCY DRIVE SHEET 1 OF 5			
REPLACES: --	REVISION DATE: 07-Jan-10				
CAD SYSTEM USED: PRO/DIAGRAM	SIMILAR TO: --				