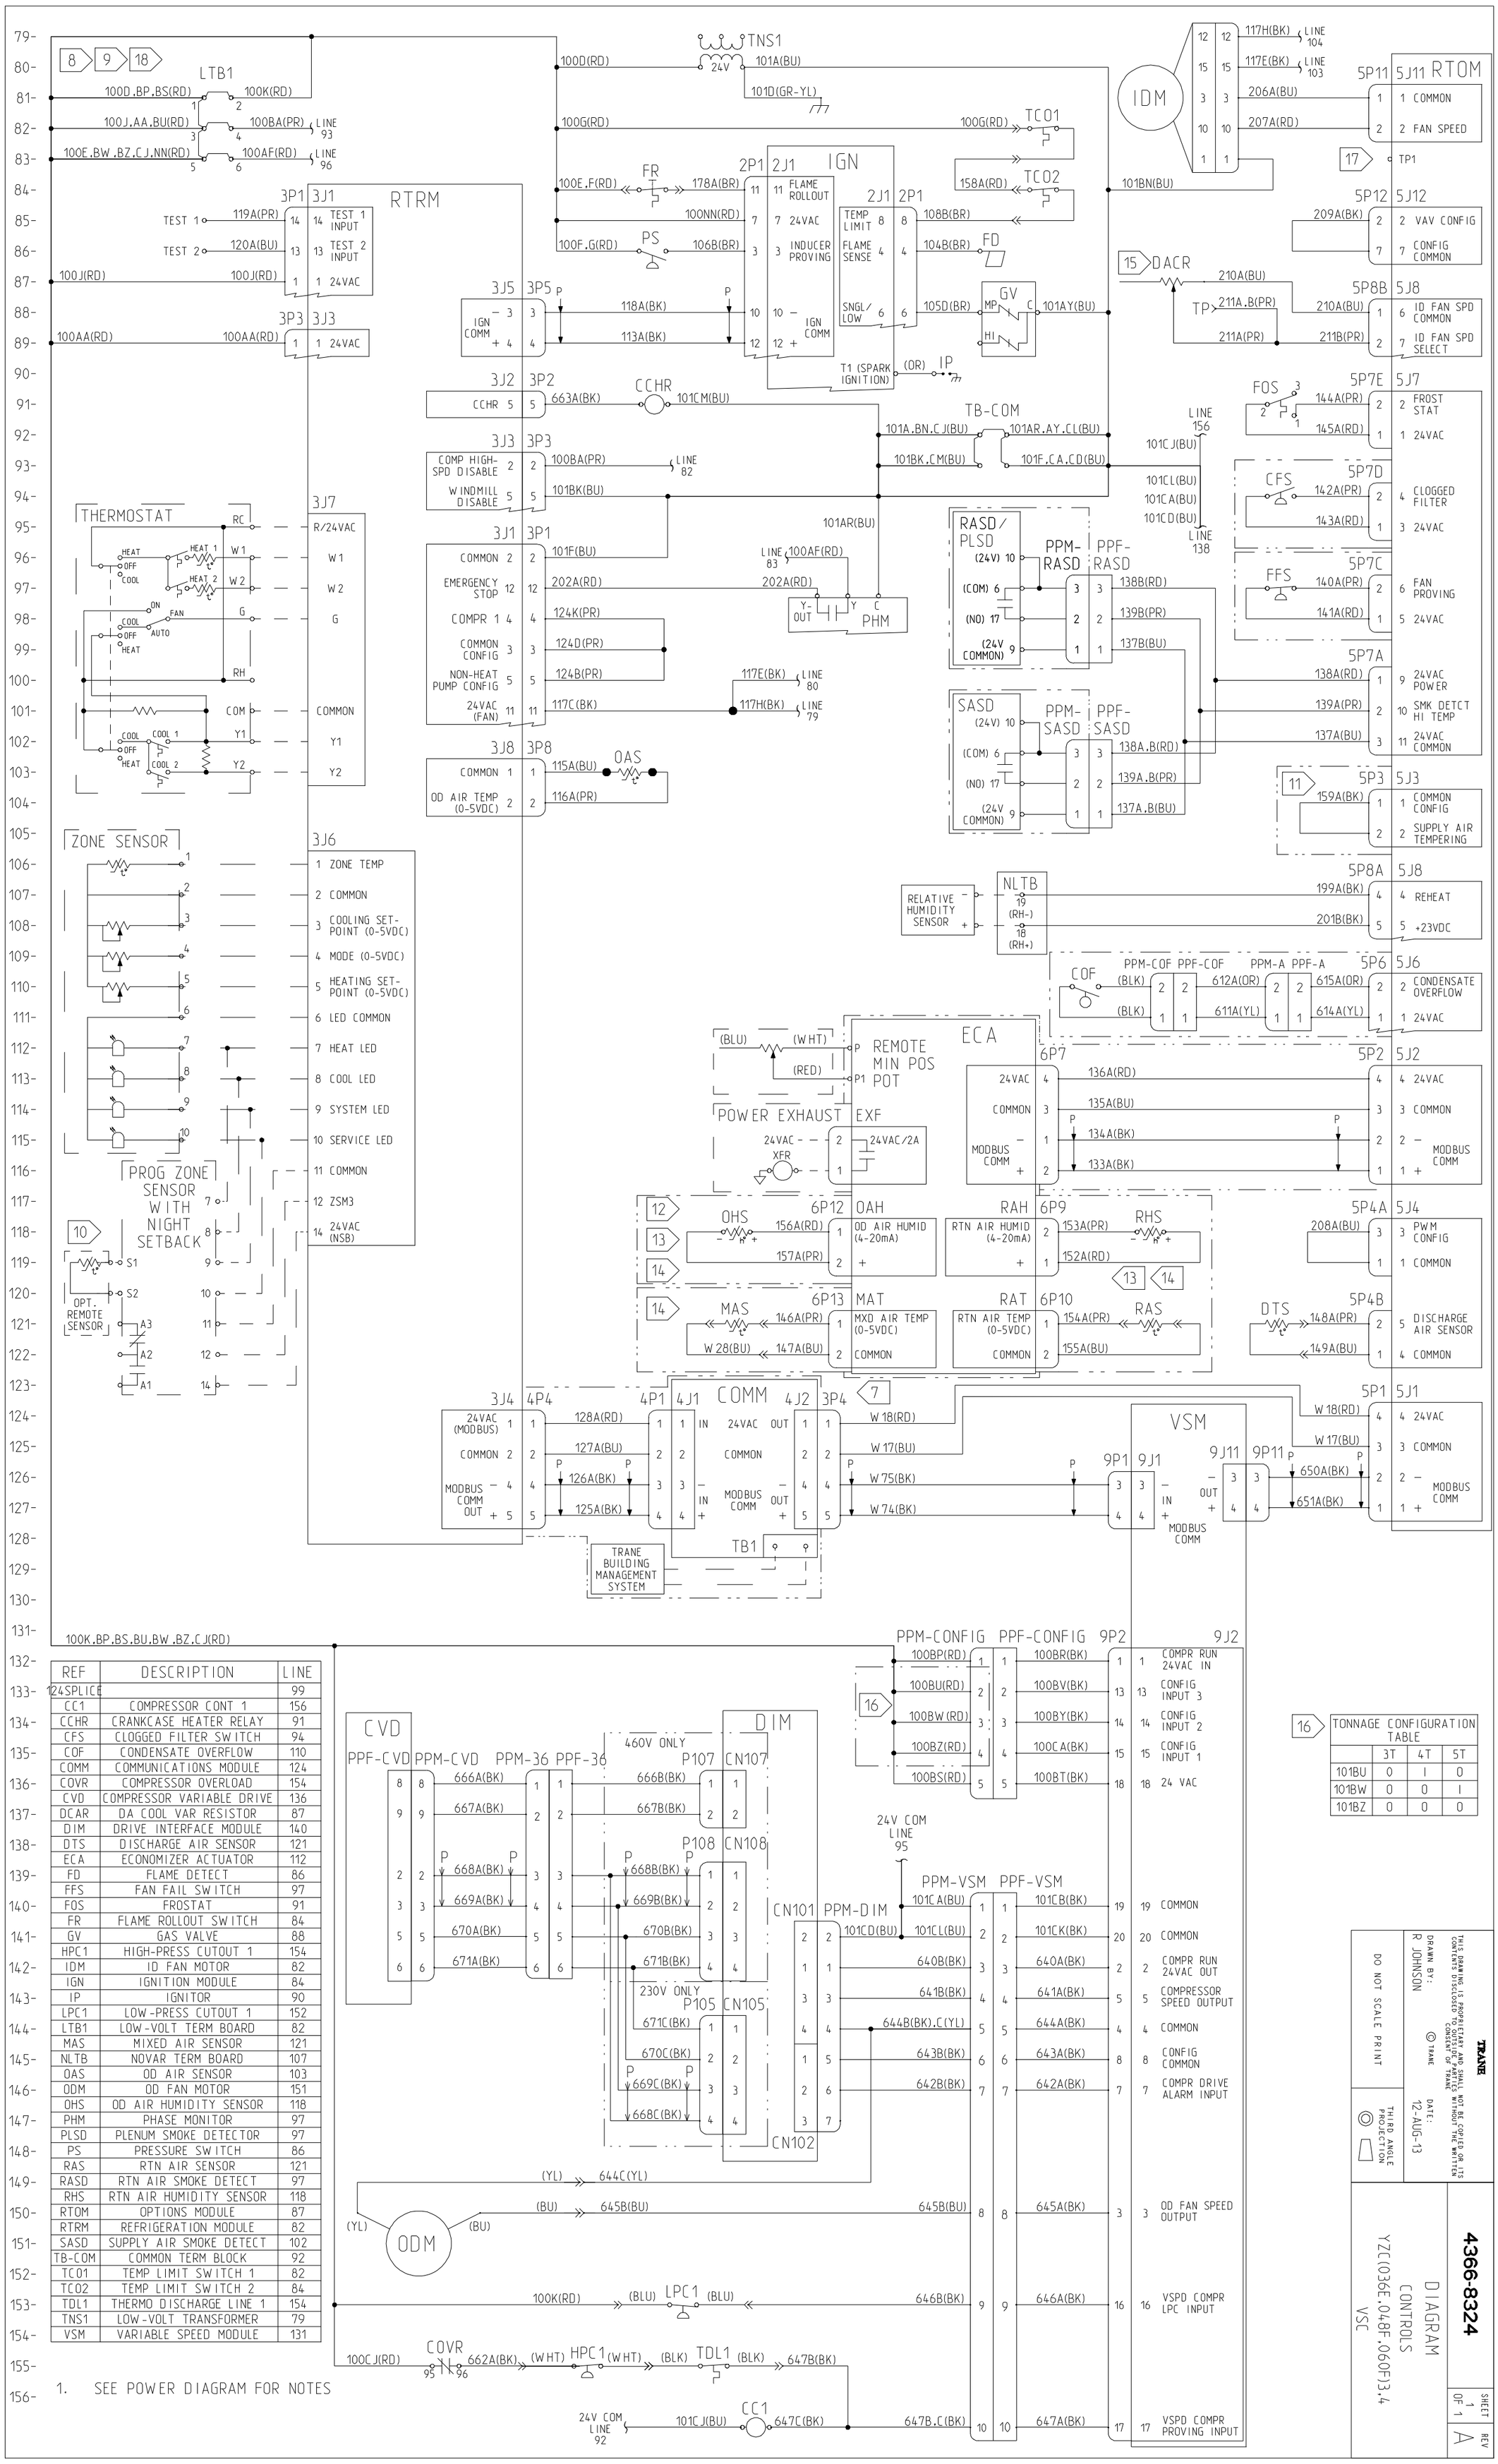


| REF | DESCRIPTION | LINE |
|---|---|---|
| 124SPLICE | | 99 |
| CC1 | COMPRESSOR CONT 1 | 156 |
| CCHR | CRANKCASE HEATER RELAY | 91 |
| CFS | CLOGGED FILTER SWITCH | 94 |
| COF | CONDENSATE OVERFLOW | 110 |
| COMM | COMMUNICATIONS MODULE | 124 |
| COVR | COMPRESSOR OVERLOAD | 154 |
| CVD | COMPRESSOR VARIABLE DRIVE | 136 |
| DCAR | DA COOL VAR RESISTOR | 87 |
| DIM | DRIVE INTERFACE MODULE | 140 |
| DTS | DISCHARGE AIR SENSOR | 121 |
| ECA | ECONOMIZER ACTUATOR | 112 |
| FD | FLAME DETECT | 86 |
| FFS | FAN FAIL SWITCH | 97 |
| FOS | FROSTAT | 91 |
| FR | FLAME ROLLOUT SWITCH | 84 |
| GV | GAS VALVE | 88 |
| HPC1 | HIGH-PRESS CUTOUT 1 | 154 |
| IDM | ID FAN MOTOR | 82 |
| IGN | IGNITION MODULE | 84 |
| IP | IGNITOR | 90 |
| LPC1 | LOW-PRESS CUTOUT 1 | 152 |
| LTB1 | LOW-VOLT TERM BOARD | 82 |
| MAS | MIXED AIR SENSOR | 121 |
| NLTB | NOVAR TERM BOARD | 107 |
| OAS | OD AIR SENSOR | 103 |
| ODM | OD FAN MOTOR | 151 |
| OHS | OD AIR HUMIDITY SENSOR | 118 |
| PHM | PHASE MONITOR | 97 |
| PLSD | PLENUM SMOKE DETECTOR | 97 |
| PS | PRESSURE SWITCH | 86 |
| RAS | RTN AIR SENSOR | 121 |
| RASD | RTN AIR SMOKE DETECT | 97 |
| RHS | RTN AIR HUMIDITY SENSOR | 118 |
| RTOM | OPTIONS MODULE | 87 |
| RTRM | REFRIGERATION MODULE | 82 |
| SASD | SUPPLY AIR SMOKE DETECT | 102 |
| TB-COM | COMMON TERM BLOCK | 92 |
| TCO1 | TEMP LIMIT SWITCH 1 | 82 |
| TCO2 | TEMP LIMIT SWITCH 2 | 84 |
| TDL1 | THERMO DISCHARGE LINE 1 | 154 |
| TNS1 | LOW-VOLT TRANSFORMER | 79 |
| VSM | VARIABLE SPEED MODULE | 131 |

1. SEE POWER DIAGRAM FOR NOTES

| TONNAGE CONFIGURATION TABLE | 3T | 4T | 5T |
|---|---|---|---|
| 101BU | 0 | 1 | 0 |
| 101BW | 0 | 0 | 1 |
| 101BZ | 0 | 0 | 0 |

TRANE

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE WRITTEN CONSENT OF TRANE

© TRANE

DRAWN BY: R JOHNSON

DATE: 12-AUG-13

DO NOT SCALE PRINT

THIRD ANGLE PROJECTION

4366-8324

DIAGRAM CONTROLS YZC(036E,048F,060F)3,4 VSC

SHEET 1 OF 1

REV A