

# **Product Catalog**

# Commercial Self-Contained Units SWUD

R-454B - 20 to 110 Tons







# Introduction

### **Commercial Self-Contained Units**



- Single cabinet construction with 1-inch aluminum sheets foam panel, double wall construction, and sturdy gage aluminum framework.
- · Horizontal or vertical airflow discharge configuration.
- Left hand/Right hand water connections.
- · Left hand electrical connections.
- Two independent circuits with two tandem fixed speed compressors in each.
- Fan wall with plenum fans with integrated motor, electronics, and VFD for efficient operation.
- Unit-mounted microprocessor control with human interface panel and touch screen.
- Waterside valve package option to enhance system efficiency.
- · Sight glasses with ports for viewing unit while running.
- 2-inch flat filter box inside unit casing.
- · Waterside economizer option.
- · Water flow switches included as standard.

# Copyright

This document and the information in it are the property of Trane, and may not be used or reproduced in whole or in part without written permission. Trane reserves the right to revise this publication at any time, and to make changes to its content without obligation to notify any person of such revision or change.

#### **Trademarks**

All trademarks referenced in this document are the trademarks of their respective owners.

©2025 Trane PKG-PRC028C-EN



# **Table of Contents**

Features and Benefits	4
Features	4
Optional Features	4
Benefits	4
Application Considerations	6
Self-Contained Acoustical Recommendations	6
Isolation Recommendations	7
Free Cooling Opportunities and Alternatives	9
Unit Operating Limits	9
A2L Application Considerations	9
Model Number Description	14
General Data	15
Controls	17
Available Inputs and Outputs for the Unit Module (on all units with controls)	
BACnet®/Building Automation System	18
Controls – Symbio™	
Standard Unit Control Features	
Control Sequences of Operation	
Supply Air Temperature Control Unit Sequence of Operation	20
Zone Sensor Options	21
Electrical Data	22
Selection Procedures	
Dimensional Data	24
Service Clearances	27
Weights	
Mechanical Specifications	
Standard Features	
Ontional Features	31



# **Features and Benefits**

#### **Features**

#### **Standard Features**

- 20 to 110 tons commercial water cooled, self-contained units.
- Single cabinet construction with 1-inch aluminum sheets foam panel, double wall construction and sturdy gage aluminum framework.
- Fully integrated, factory-installed, and commissioned microelectronic controls.
- Variable air volume (VAV) operation.
- Fan wall with ECM direct drive plenum fans.
- Emergency stop input.
- Units are shipped with R-454B refrigerant.
- Factory piped and tested, mechanically cleanable shell and tube water-cooled condenser.
- Sloped drain pans to provide complete condensate removal for IAQ.
- · Standard left hand electrical connections.
- · Expansion valves and filter driers are easily accessible.
- Access panels and clearance provided to clean both evaporator and waterside economizer coil fins.
- Panels meet UL1995, ASTM E84/UL 723 for flame spread and smoke develop rating.

#### **Standard Control Features**

- Durable unit-mounted touch screen display. The 7-inch WVGA 800 x 480 resolution touch-sensitive color screen is backlit, which enables viewing in poor light conditions including outdoor usage.
- · Phase reversal protection provided in each compressor.
- Compressor lead/lag on fixed speed compressors.
- · Fan failure detection.
- Occupied/unoccupied switching.
- · Programmable water purge during unoccupied mode.
- High leaving air temperature limit.
- · BACnet® communication by MSTP.

# **Optional Features**

- · Constant volume (CV) airflow operation.
- Waterside modulating with spring return temperature control valves include factory installed piping and control wiring.
- · Protective coatings for the evaporator coils.
- · Stainless steel sloped drain pan.
- Standard height plenum (or custom height, if requested).
- Non-fused external disconnect switch.
- · Left hand/right hand water connections.
- Medium efficiency throwaway filters. 2- and 4-inch filter racks for all sizes.
- BACnet®communication by IP with digit 37 as 5
- Air-Fi communications with digit 37 as 4

Note: A water flow switch (factory supplied) is required for installation.

### Factory-Installed or Ship-Separate Options

- Waterside economizer with factory-installed piping and controls.
- · Field-installed accessories.

#### **Benefits**

#### **Servicing Advantages**

Strategically placed service doors with easy access to critical components.

#### **Tenant Satisfaction**

- Complete HVAC system on each floor minimizes tenant inconvenience during routine maintenance.
- · Tenants can control system after hours to increase productivity and minimize expense.

#### **Lower Installed Cost**

- Single point power connection. Left hand electrical connections.
- Single point water connection. Left hand or right hand water connections for easier design and flexibility during installation.
- · Factory-commissioned and tested controls.
- Factory-installed options.

#### **Economical Operation**

- · Free cooling with optional waterside economizer.
- Energy savings with floor-by-floor system since only units on floors requiring cooling need to operate.
- Variable speed ECM direct drive plenum fans for increased efficiency and lower sound levels.
- Energy savings from the integrated water valve control using pump unloading.

#### **Acoustical Performance**

- Double wall insulated panels for quiet operation.
- Multiple compressor design reduces acoustical levels. Scroll compressor design smooths gas flow for quieter operation.

#### Indoor Air Quality (IAQ) Features

- Sloped drain pan in galvanized steel. Optional stainless steel sloped drain pan.
- Double wall insulated panel modular frame construction.
- · High-efficiency throwaway filter option.
- Easily cleanable evaporator, condensers, and waterside economizers.
- Filter access door allows easy removal to encourage frequent filter changing.

#### **Enhanced Serviceability**

- · Access doors for ease of service.
- Hinged and removable panels.
- Easy to adjust setpoints and operating parameters using the human interface panel on units.
- Refrigerant line sight glasses in view during operation.

#### **Competitive Advantage**

- Single cabinet construction with optimized footprints; compact cabinet to minimize mechanical room space requirements.
- Left hand electrical connections.
- · Optional left hand/right hand water connections meets the needs of the mechanical room.
- Up to 30 percent more efficient (full-load avg) than legacy Trane units.
- Low leaving air temp capability to reduce fan motor energy, improve acoustical performance, and minimize duct sizes.
- Latest generation of factory-installed and programmed Symbio™ 500 unit controller.

#### Warranty

 Warranty includes replacement parts for twelve (12) months from the date of installation or eighteen (18) months from the date of shipment from supplier to customer, whichever comes first.



# **Application Considerations**

#### **Self-Contained Acoustical Recommendations**


Successful acoustical results are dependent on many system design factors.

The following are general acoustical recommendations. For more information, or if there is concern about a particular installation, contact a professional acoustical consultant.

#### **Location and Orientation of the Mechanical Equipment Room**

- Locate the equipment room adjacent to stairwells, utility rooms, electrical closets, and rest rooms if possible, to minimize the acoustic effects and risk of workmanship or installation errors (see figure below).
- Place the discharge and return air ductwork over these less acoustically sensitive areas, using vertical or horizontal fresh air shafts.
- Consult code requirements for fresh air and smoke purge constraints.

Figure 1. Equipment room and location and orientation

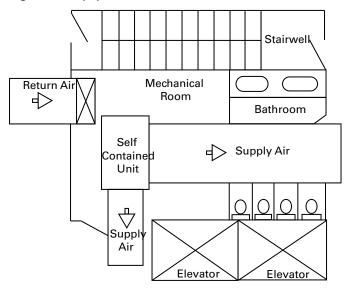

#### **Return Air Ductwork**

Duct the return air into the mechanical equipment room. Connect ductwork to the unit if local code dictates. The return air ductwork must have an elbow inside the equipment room. This elbow will reduce sound transmissions through the return duct. Extend the ductwork from the elbow far enough to block the line of sight to the exterior of the equipment room. Use a minimum ductwork length of 15 feet to the equipment room exterior. Line the duct with two-inch, three-pound density insulation. Use multiple, small return ducts for better acoustical performance to the occupied space.

#### **Supply Air Ductwork**

Insulate the supply air duct with two-inch, three-pound density insulation. Extend this lining at least 15 feet out from the equipment room wall, keeping the duct aspect ratio as small as possible. Minimize large flat panels since they transmit sound. In addition, small aspect ratios will minimize potential oil canning of the duct due to flow turbulence.

The flexible horizontal discharge plenum option helps avoid complicated ductwork transitions. Ductwork turning vanes typically improve pressure drop but degrade acoustical performance.

#### **Recommended Maximum Air Velocities**

The maximum recommended velocity for the discharge air duct is 2,000 fpm. The maximum recommended velocity for the return air duct is 1,000 fpm. Limit air velocities below these operating points to minimize the risk of flow turbulence that causes regenerated noise. Using round supply duct and static regain allows maximum discharge air velocities up to 3,000 fpm. Lining round supply duct also substantially lowers frequency noise attenuation. Flow regenerated noise potential increases dramatically at air velocities over 3,000 fpm.




#### **Equipment Room Construction Options**

The preferred equipment room wall construction is concrete block. If this is not feasible then a double stud offset wall is suggested (see figure below). This removes physical contact that would transmit sound through the equipment room wall to the occupied space. Interweave fiberglass insulation between the wall studs. Use two layers of drywall on each side of the wall.

Workmanship details are critical to acoustical performance. Seal all wall and floor penetrations by the ductwork, water piping, and equipment room access doors with a flexible material such as caulk and/or gasketing to stop noise and air leaks.

Locate the equipment room door away from acoustically sensitive areas like conference rooms. If possible, the door should swing out of the equipment room so that the low pressure in the equipment room pulls the door in to help maintain a tight seal.

Figure 2. Double stud offset wall with interwoven insulation

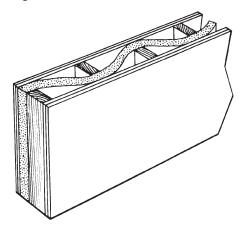

#### **Static Pressure Versus Acoustics**

Design the system to minimize the total static pressure required from the self-contained unit fan. Typically a change in static pressure of only 0.5 inches can reduce NC level by approximately 2 or 3 in the occupied space.

### **Isolation Recommendations**

#### Unit

The compressors are internally isolated. All fans are factory balanced. The unit fan and compressors are internally isolated. Therefore, external isolation is not required. Consult a vibration specialist before considering external or double vibration isolation.

#### **Ductwork**

Design duct connections to the unit using a flexible material. Consult local codes for approved flexible duct material to prevent fire hazard potential.

#### **Piping Connections**

Rubber isolator connectors are recommended for condenser piping to prevent vibration transmission to or from the building plumbing. The self-contained unit is internally isolated and does not require additional isolation. Confirm that proper system vibration isolation design prevents vibration transmission from the building plumbing to the unit. Properly isolate the drain line.

#### **Condenser Water Piping**

#### **Piping Location and Arrangement**

Provide at least 24 inches of clearance between the piping and the unit for service. Place the risers away from the side of the unit if possible. Allow for sufficient space for valves and unions between the piping and the self-contained unit.

Lay out condenser piping in reverse returns to help balance the system. This is accomplished by equalizing the supply and return pipe length. Multi-story buildings can use a direct return system with balancing valves at each floor. Install all heat



#### Application Considerations

exchangers and most cooling tower piping below the sump operating water level to prevent overflow during unit and/or system shut down.

#### **Recommended Pump Location**

Locate pump downstream of the cooling tower and upstream of the commercial self-contained unit. This provides smoother and more stable unit operation.

When the tower and pump are both roof mounted, provide the necessary net positive suction head pressure to prevent cavitation. Raise the tower or submerge the pump in a sump to provide positive suction. To prevent an on-line pump failure, use a standby pump to avoid a complete system shutdown.

Several partial capacity pumps or variable speed pumps can be used. Review the economics of these alternate pumping options.

#### **Strainers and Water Treatment**

Water strainers are required at the unit inlet to eliminate potential unit damage from dirty water. Each unit will be supplied with a field installed 20 mesh strainer. The unit also comes standard with differential pressure monitoring that can be used to alert owner when 20 mesh screen requires cleaning. Untreated or poorly treated water may result in equipment damage. Consult a water treatment specialist for treatment recommendations.

#### **Isolation Valves**

Install isolation valves at each unit before the strainer and after the condenser. This allows periodic servicing of the unit or strainer while allowing other units in the system to remain in operation.

#### **Pressure Gauges**

Install pressure gauges on the inlet and outlet of the self-contained unit. Select the gauge scale so the unit design operating point is approximately mid-scale.

#### **Thermometers**

Install thermometers on the condenser water inlet and outlet lines to each unit for system analysis. Trane® recommends using a thermometer temperature range of 40°F to 140°F, using a 2°F temperature increment.

#### **Drains**

Install a trapped drain in the low point of the mechanical equipment room floor to collect water from cleaning operations.

Note: Units are not internally trapped. Externally trapped drain must be added in the field.

#### **Condensing Pressure Control (Water-Cooled Condensers)**

Often cold condensing water applications between 35°F and 54°F require a condensing pressure control valve. To utilize this feature, the building water system must be capable of operating at reduced water flow rates through the SWUD units. It is imperative to install variable volume pumps or an external bypass in the water distribution system.

#### **Waterside Economizer Flow Control**

Units equipped with waterside economizer and intermediate piping package can be set up for variable or constant water flow.


Use constant water flow setup on water systems that are not capable of unloading water supply to the unit. The economizer and condenser valves will operate in complement to one another to provide continuous water flow.

Use variable water flow setup with water flow systems that can take advantage of pump unloading for energy savings. Since non-cooling operation restricts water flow during part load economizing or condensing temperature control, it is imperative to install variable volume pumps or an external bypass in the water distribution system.



Figure 3. Waterside economizer flow control



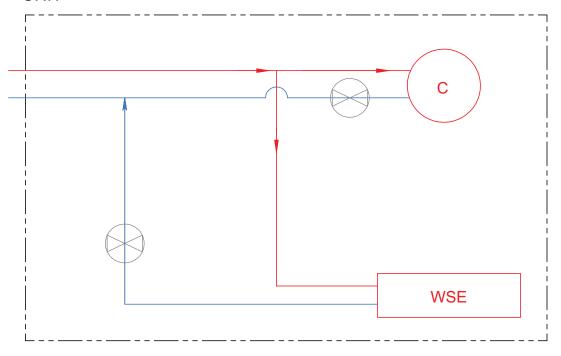

# **Free Cooling Opportunities and Alternatives**

Free cooling is available with waterside economizer options. The advantages are listed as follows:

#### Waterside Economizer

The waterside economizer substantially reduces the compressor energy requirements because it uses the cooling water before it enters the condensers. Additional equipment room space is not required since the coils are contained within the overall unit dimensions.

Disadvantages include higher airside pressure drop and a higher head on condenser water pumps.

# **Unit Operating Limits**

#### **Airflow**

The minimum recommended airflow for proper VAV system staging and temperature control is 35 percent of nominal design airflow. Adjusting VAV boxes with the appropriate minimum settings prevents the self-contained unit from operating in a surge condition at airflows below this point. Continuous operation in a surge condition can cause fan failure.

Note: Contact your local Trane sales office for minimum airflow conditions.

#### **Water Flow**

Use 3 gpm/ton for optimum unit capacity and efficiency. Use 2.5 gpm/ton to reduce pump energy, cooling tower, and piping costs. These reduced water flows may impact unit capacity and efficiency by one or two percent. Consult factory for unit specific water flow ranges.

# **A2L Application Considerations**

This product is listed to UL standard 60335-2-40, Household and Similar Electrical Appliances – Safety – Part 2-40: Particular Requirements for Electrical Heat Pumps, Air-Conditioners and Dehumidifiers, which defines safe design and use strategies for equipment using A2L refrigerants. This standard limits the refrigerant concentration in a space in the event of a refrigerant leak. To meet the requirements, the UL standard defines minimum room area, refrigerant charge limit, minimum circulation airflow



#### Application Considerations

and/or ventilation airflow requirements, and limits the use of ignition sources in spaces. The standard may require a unit refrigerant leak detection system.

For equipment with R-454B and charge amounts less than or equal to 3.91 lbs per circuit, this UL standard does not prescribe a room area limit and does not require a refrigerant leak detection system or any circulation airflow or ventilation airflow mitigation strategies. However, ignition sources in ductwork must be evaluated.

Depending on the application, a specific requirement of ANSI/ASHRAE Standard 15, Safety Standard for Refrigeration Systems, could be more stringent than UL 60335-2-40 requirements. See *Refrigeration Systems and Machinery Rooms Application Considerations for Compliance with ASHRAE® Standard 15-2022 Application Engineering Manual* (APP-APM001\*-EN) for more information.

#### **Ignition Sources in Ductwork**

Do not install open flames in the ductwork. Hot surfaces exceeding 700°C (1290°F) should not be installed in the ductwork unless the average airflow velocity is not less than 1.0 m\s (200 ft\min) across the heater and proof of airflow is verified before system is energized.

Electric heaters can exceed the surface temperature limit if airflow distribution is poor, or insufficient airflow is provided over the heater.

Surface temperatures of most gas heaters do not exceed the surface temperature limits due to ANSI construction requirements.

#### **Ignition Sources in Unit**

This unit does not contain any ignition sources. All potential ignition sources, (including factory or field installed accessory electric heaters, gas heaters, relays, and contactors) were evaluated during product UL listing.

# Minimum Room Area Limits (Refrigerant charge greater than 3.91 lb per circuit)

Equipment with R–454B charge amounts greater than 3.91 lb per circuit may require additional circulation or ventilation airflow mitigation strategies. In this case, two minimum room area (A<sub>min</sub>) thresholds:

- The first threshold defines when equipment serving a single room is required to provide circulation airflow, either continuous
  or activated by a leak detection system. A ducted system requires circulation airflow unless the smallest room it serves is
  larger than the adjusted A<sub>min</sub> threshold. This product contains a leak detection system if a circuit charge is greater than 3.91
  lbs. As a result, no further leak detection system evaluation is required.
- The second threshold defines when additional ventilation airflow is required. If the room area, A or TA, is below the adjusted A<sub>min</sub> or TA<sub>min</sub> threshold, additional ventilation is required to remove refrigerant in the event of a leak. See the UL 60335-2-40 Clause GG.8 and ANSI\ASHRAE Standard 15 Section 7 for natural and mechanical ventilation requirements.

Table 1. Minimum room area

		Minimum Room Area <sup>(a)</sup>				
Tonnage	Eff	m2	ft2			
20	S	40	427			
20	Н	42	450			
20	V	42	457			
25	S	46	491			
25	Н	49	532			
25	V	47	510			
30	S	50	536			
30	Н	57	611			
30	V	50	543			
40	S	71	765			
40	Н	73	791			
40	V	73	787			



Table 1. Minimum room area (continued)

		Minimum R	oom Area <sup>(a)</sup>
50	S	84	900
50	Н	100	1072
50	V	101	1083
55	S	81	873
55	Н	96	1038
55	V	99	1061
60	S	100	1072
60	Н	115	1233
60	V	116	1248
70	S	104	1121
70	Н	133	1428
70	V	139	1499
75	S	130	1398
75	Н	127	1372
75	V	126	1361
90	S	158	1705
90	Н	194	2091
105	S	178	1919
115	S	187	2009
130	S	169	1822

<sup>(</sup>a) Based on 2.5m ceiling height.

#### Minimum Room Area (Amin) Adjustments

Use equation below to adjust the minimum room area, as applicable, based on the unit's installation height, altitude, and occupancy level it serves.

A<sub>min.adj</sub> = Nameplate A<sub>min</sub> x Altitude Adj x Height Adj x F<sub>occ</sub>

Multiply the altitude adjustment factor in the table below by  $A_{min}$  listed on the unit nameplate or in the Installation, Operation, and Maintenance (IOM) manual.

Table 2. Altitude adjustment factor

Altitude (ft)	Sea Level to 2000	2001 to 4000	4001 to 6000	6001 to 8000	8001 to 10000	10001 to 12000	12001 to 14000	14001 to 15000	Over 15000
A <sub>min</sub> Adjustment	1	1.05	1.11	1.17	1.24	1.32	1.41	1.51	1.57

In addition,  $A_{min}$  can be adjusted if the unit is installed in a room at a height that is higher than the minimum height shown on the unit. To adjust  $A_{min}$ , multiply by the ratio of the unit minimum release height (in meters) / actual release height (in meters). Use 0.6 m in the ratio for unit minimum installation heights less than or equal to 0.6 m.

For institutional occupancies, ASHRAE Standard 15 applies an additional adjustment factor  $F_{occ}$  to the amount of a charge allowed in a space. To calculate the adjusted  $A_{min}$  for institutional occupancies, multiply the  $A_{min}$  on the nameplate by two.

#### **EXAMPLE 1: 20 Ton Packaged Rooftop Multi-Zone VAV System Serving an Institutional Occupancy Space**

The packaged unit serves 7600 ft.<sup>2</sup> of a nursing home located at an attitude of 4000 ft. The unit has two equally charged 10 ton refrigeration circuits. Each circuit has 12 lbs of refrigerant with a minimum room area requirement of 180 ft.<sup>2</sup> with a 2.2 m release height.

TA<sub>min.adj</sub> = 180 ft.<sup>2</sup> x 1.05 x 2 = 378 ft.<sup>2</sup>

No additional ventilation is required.

#### **EXAMPLE 2: 10 Ton Split System Serving a Single Commercial Occupancy Space**

The split system serves a 1500 ft. $^2$  manufacturing space at 5000 ft. altitude. The final installed charge of the single circuit 10 ton unit is 20 lb. The unit has an open return with a release height of 1 m and ducted supply air. The unit  $A_{min}$  is 660 ft. $^2$ .

A<sub>min.adj</sub> = 660 ft.<sup>2</sup> x 1.11 = 733 ft.<sup>2</sup>

No additional ventilation is required.

#### **Determining Room Area (A or TA)**

The room area (A) is the room area enclosed by the projection to the floor of the walls, partitions, and doors of the space that the equipment serves. For ducted systems, total room area (TA) of all rooms connected by ducts, may be used instead of A.

Rooms connected by drop ceilings only are not considered a single room.

Rooms on the same floor of the building, and connected by an open passageway, can be considered part of the same room if the passageway is a permanent opening, extends to the floor and is intended for people to walk through.

Adjacent rooms on the same floor of the building and connected by permanent openings in the walls and/or doors between rooms (including gaps between the wall and the floor), can be considered part of the same room if the openings meet the following criteria.

- The opening is permanent and cannot be closed.
- Openings extending to the floor, such as door gaps, need to be at least 20 mm above the floor covering surface.
- Natural ventilations opening areas must meet the requirements of ANSI\ASHRAE Standard 15-2022, Section 7.2.3.2.

Rooms that are connected by a mechanical ventilation system can be considered a single room area if the mechanical ventilation system meets the requirements of ANSIVASHRAE Standard 15-2022, Section 7.6.4.

# Leak Detection System (Refrigerant charge greater than 3.91 lb per circuit)

The leak detection system consists of one or more refrigerant detection sensors. When the system detects a leak, the following mitigation actions will be initiated until refrigerant has not been detected for at least 5 minutes:

- Energize the supply fan(s) to deliver a required minimum amount of circulation airflow.
- Disable compressor operation.
- Provide an output signal that can be used to fully open zone dampers and/or VAV boxes and disable electric heat in VAV boxes.
- Provide an output signal that can be used to energize additional mechanical ventilation (if needed).
- · Units without airflow proving will disable electric heat sources.

Building fire and smoke systems may override this function.

If the refrigerant sensor has a fault, is at the end of its life, or is disconnected, the unit will initiate the mitigation actions. Mitigation actions may be verified by disconnecting the sensor.

The refrigerant sensors do not need service. Use only manufacturer-approved sensors when replacement is required.

#### **A2L Mitigation Airflow**

Table 3. A2L mitigation airflow

Unit Tonnage	Total Refrigerant Charge (kg)	Min Airflow (m3h)
20	9.08	899
25	11.34	1123
30	13.6	1347
35	15.88	1572



## **Application Considerations**

Table 3. A2L mitigation airflow (continued)

Unit Tonnage	Total Refrigerant Charge (kg)	Min Airflow (m3h)
40	18.14	1796
45	20.4	2020
50	22.68	2246
55	24.94	2469
60	27.2	2693
65	29.48	2919
70	31.76	3145
75	34	3366
85	38.46	3808
90	40.82	4042
100	45.36	4491
110	49.9	4941



# **Model Number Description**

Digit 1, 2, 3, 4 — Unit Model	Digit 16 — Economizer	Digit 28 — Air Volume/Temp Control
<b>SWUD</b> = Self-Contained Water-Cooled Unitary Device	0 = No Economizer  W = With Water Side Economizer	<ul><li>A = VAV Control Scheme (Fixed DA Temp)</li><li>B = VAV Control Scheme (Return Air Reset)</li></ul>
Digit 5 — Refrigerant	H = 2-Position Damper Ventilation Interface  J = Airside Economizer Interface	C = VAV Control Scheme (Space Temp Reset)  D = CV Control Scheme
<b>5</b> = R-454B	<b>K</b> = Airside Economizer Interface W/Comparative Enthalpy	Digit 29 — Agency Listing
Digit 6, 7, 8 — Capacity	Digit 17 — Water Connections	0 = None E = ETL listing
<b>020</b> = 20 Tons	L = Left Hand Connections with Flow Switch	•
<b>025</b> = 25 Tons	R = Right Hand Connections with Flow Switch	Digit 30 — Options
<b>030</b> = 30 Tons	Disit 40 Hait Water Commentions	0 = None
<b>035</b> = 35 Tons	Digit 18 — Unit Water Connections	0 = None
<b>040</b> = 40 Tons	1 = Victaulic	2 = Compressor Service Valves
<b>045</b> = 45 Tons	I - Victaulic	Digit 31 — Space Sensor Options
<b>050</b> = 50 Tons	Digit 40 Air Digabanga	
<b>055</b> = 55 Tons	Digit 19 — Air Discharge	<b>0</b> = None
<b>060</b> = 60 Tons	H - Harizantal Discharge	1 = Space Sensor Only
<b>065</b> = 65 Tons	<ul><li>H = Horizontal Discharge</li><li>V = Vertical Discharge</li></ul>	
<b>070</b> = 70 Tons	V - Vertical Discharge	Digit 32 — Future Use
<b>075</b> = 75 Tons <b>085</b> = 85 Tons	Digit 20 — Electrical Connections	O. News
<b>090</b> = 90 Tons	•	<b>0</b> = None
100 = 100 Tons	L = Left Hand Connections	
110 = 110 Tons		Digit 33 — Industrial Options
110 10.10	Digit 21 — Unit Electrical Connections	O. News
Digit 9 — Unit Voltage	•	0 = None
	1 = Disconnect Switch	A = Protective Coating Evaporator Coil
<b>F</b> = 208–230/60/3	2 = Terminal Block	<b>B</b> = Protective Coating Evaporator Coil + WSE
<b>4</b> = 460/60/3	Digit 22 Proin Box	Digit 34 — Discharge Plenum
<b>5</b> = 575/60/3	Digit 22 — Drain Pan	3 3
Digit 10, 11 — Design Sequence	<b>G</b> = Galvanized Drain Pan	0 = None
	S = Stainless Steel Drain Pan	S = Standard Plenum with Field-Cut Holes
**	C Claimede Clock Brain'r an	Digit 25 Euturo Hoo
	Digit 23 — Future Use	Digit 35 — Future Use
Digit 12 — Fan Type	<b>0</b> = None	<b>0</b> = None
<b>1</b> = 1 Fan		
2 = 2 Fans	Digit 24 – Filter Type	Digit 36 — Future Use
<b>3</b> = 3 Fans	-	
<b>4</b> = 4 Fans	<b>A</b> = 2 inch - MERV 8	<b>0</b> = None
<b>5</b> = 5 Fans	B = 4 inch - MERV 8	
<b>6</b> = 6 Fans	C = 2 inch - Pre-MERV 8, 4 inch, Post-MERV 13	Digit 37 — Controller
<b>7</b> = 7 Fans	<b>D</b> = 2 inch - MERV 13	O O OLIVETY FOO DAO OLIVE MOTO
Digit 13 — Compressor Technology	<b>E</b> = 4 inch - MERV 13	3 = Symbio™ 500 - BACnet® MSTP
Digit 13 — Compressor recimology	<b>F</b> = 6 inch - MERV 15	4 = Symbio 500 - Air Fi
F = Fixed Speed	Digit 25 — Heater	5 = Symbio 500 - BACnet/IP
i – rixed opecu	g	Digit 38 — Future Use
Digit 44 Control Values	4 = Hydronic Remote	<b>9</b>
Digit 14 — Control Valves	<b>5</b> = Electric Remote (3 stages max, on/off)	0 = None
<b>0</b> = None	6 = Electric Remote SCR	
H = Head Pressure Control Valves	7 = Gas Remote	Digit 39 — Major Design Version
	8 = Steam Remote	J,
Digit 15 — Future Use	Digit 26 Chinning Mathed	<b>A</b> = 1.0
	Digit 26 — Shipping Method	
<b>0</b> = None	S = Single Piece	Digit 40 — Design Special
	Single Floor	3
		0 - None

Digit 27— Unit Isolators

0 = NoneA = Isopads

**0** = None

S = Design Special



# **General Data**

Table 4. SWUD water-cooled self-contained

Table 4. SWOD water												l		l	l	1
Tonnage	20	25	30	35	40	45	50	55	60	65	70	75	85	90	100	110
Compressor Data																
Quantity	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
Nominal Ton/Comp	5	6.25	7.5	8.75	10	11.25	12.5	13.75	15	16.25	17.5	18.75	21.25	22.5	25	27.5
Circuits	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
Evaporator Coil Data																
Rows	2	2	3	3	3	3	3	3	3	3	3	3	3	3	3	3
Sq. Ft.	28.65	28.65	28.65	28.65	35.42	37.5	39.58	40.63	40.63	50	51.11	52.78	52.78	68.33	68.33	68.33
Fins/in	12.0	12.0	12.0	12.0	12	12	12	12	12	12	12	12	12	12	12	12
Number of Coils	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Condenser Data																
Minimumum GPM w/o Econ	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Minimum GPM w/ Econ	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Maximum GPM	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Evaporator Fan Data			•										•			
Quantity	1	1	2	2	2	2	3	3	4	4	4	4	5	5	6	7
Diameter	500	500	500	500	500	500	500	500	500	500	500	500	500	500	500	500
Power consumption kW	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5
Minimum Design cfm(b)	4000	5000	6000	7000	7400	8600	10000	10800	12000	13000	13600	15200	16600	18000	20400	22600
Maximum Design cfm	7600	9500	11400	13300	14060	16340	19000	20520	22800	24700	25840	28880	31540	34200	38760	42940
Refrigerant Charge, lbs. R-4	54B(c)															
Circuit A	10.0	12.5	15.0	17.5	20.0	22.5	25.0	27.5	30.0	32.5	35.0	37.5	42.5	45.0	50.0	55.0
Circuit B	10.0	12.5	15.0	17.5	20.0	22.5	25.0	27.5	30.0	32.5	35.0	37.5	42.5	45.0	50.0	55.0
Total	20.0	25.0	30.0	35.0	40.0	45.0	50.0	55.0	60.0	65.0	70.0	75.0	85.0	90.0	100.0	110.0
Filter Data, Water-Cooled U	nits															
Number - Size (in.)		9-20	"x24"			1	2-20"x24	1"			15-20	)"x24"		2	1-20"x2	4"
Number of Compressor Tan	dems															
8T Fixed Speed Tandem	2	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
10T Fixed Speed Tandem	0	2	0	0	0	0	0	0	0	0	0	0	0	0	0	0
13T Fixed Speed Tandem	0	0	2	1	0	0	0	0	0	0	0	0	0	0	0	0
15T Fized Speed Tandem	0	0	0	1	2	1	0	0	0	0	0	0	0	0	0	0
20T Fixed Speed Tandem	0	0	0	0	0	1	2	1	0	0	0	0	0	0	0	0
23T Fixed Speed Tandem	0	0	0	0	0	0	0	1	1	0	0	0	0	0	0	0
26T Fixed Speed Tandem	0	0	0	0	0	0	0	0	1	2	1	1	0	0	0	0
30T Fixed Speed Tandem	0	0	0	0	0	0	0	0	0	0	1	0	1	0	0	0
37T Fixed Speed Tandem	0	0	0	0	0	0	0	0	0	0	0	1	1	2	1	0
45T Fixed Speed Tandem	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	2
Number of Fans/Unit																
No. of fans		1		2	2		:	3		4	١	-		5	6	7

Note: All performance data is provided in the Performance Selection Program. Contact Trane Sales at 770-988-8338 for more information.

<sup>(</sup>a) All performance data is provided in the Performance Selection Program. Contact Trane Sales at 770-988-8338 for more information.

<sup>(</sup>b) Minimum air flow at part load is 35% of full load design CFM.

<sup>(</sup>c) Refrigerant charge shown is a general guideline, charge to sub-cooling as described in IOM. Note that occasionally a TXV adjustment may need to be made but only after adequate sub-cooling has been reached.



#### **General Data**

#### Table 5. EER/IEER ratings

Tonnage	Model Number	EER	IEER	AHRI Net Cooling Capacity (MBH)
20	SWUD5020	18.7	21.3	252
25	SWUD5025	16.7	19.9	292
30	SWUD5030	17.9	22.6	387
35	SWUD5035	18.2	22.0	411
40	SWUD5040	18.2	21.9	458
45	SWUD5045	17.9	22.1	536
50	SWUD5050	18.8	22.8	625
55	SWUD5055	18.3	22.1	665
60	SWUD5060	18.2	21.7	743
65	SWUD5065	17.7	21.2	775
70	SWUD5070	17.3	21.7	839
75	SWUD5075	16.5	20.4	920
85	SWUD5085	16.6	20.6	987
90	SWUD590F	16.4	20.1	1096
100	SWUD5100	16.5	20.3	1234
110	SWUD5110	16.2	19.6	1371

#### Notes:

- 1. Cooling only.
- Cooling performance is rated at 80F EDB/67F EWB with 85 EWT for water-cooled performance and 95F Ambient for air-cooled performance.
   EER, IEER, and AHRI Net Cooling Capacity are tested in accordance with the AHRI 340/360 (I-P) and certified to 10 CFR Part 431 from the US Department of Energy.



# **Controls**

The Trane SWUD is controlled through Trane Symbio™ 500 controller programmed with specific controls sequences to meet the needs of the unit configuration and application.

The Trane SWUD includes Trane Symbio™ 500 unit controls and the TD-7 touch screen display.

Depending upon unit options, units can operate as follows:

- · Stand-alone
- Interface with BACnet® MS/TP building management system

Figure 4. Symbio™ 500



Figure 5. TD-7 display





#### **Controls**

# Available Inputs and Outputs for the Unit Module (on all units with controls)

#### **Binary Inputs**

- Emergency stop
- External auto/stop
- Unoccupied/occupied
- · Dirty filter

#### **Binary Outputs**

- VAV box drive max (VAV units only)
- Alarm
- Fan run status
- · Water pump request

# **BACnet®/Building Automation System**

The Symbio 500 controller utilizes the BACnet defined MS/TP protocol as defined in ASHRAE standard 135-2004. This controller works in standalone mode, with Tracer® SC+ or when connected to a third party building automation system that supports BACnet.

# Controls - Symbio™

#### **Enhanced BAS Integration and Connectivity**

- · Open standard communications
  - BACnet® MS/TP
- Securely access, troubleshoot, and monitor equipment from anywhere via Trane Connect™
- Open Optional communications (accessory required)
  - BACnet IP
  - BACnet over Zigbee (Air-Fi Wireless)

#### **Air-Fi® Wireless Communications**

The optional Air-Fi communications module allows the unit to communicate directly with a Tracer SC+ via BACnet over Zigbee wireless.

#### Standard Unit Control Features

Note: All set-up parameters are preset from the factory, requiring less start-up time during installation.

#### **Unit Features**

- Durable unit-mounted touch screen display. The 7-inch WVGA 800 x 480 resolution touch-sensitive color screen is backlit, which enables viewing in poor light conditions including outdoor usage.
- Compressor lead/lag
- · Fan failure detection
- Occupied/unoccupied switching
- Programmable water purge during unoccupied mode



# **Control Sequences of Operation**

#### **Occupied/Unoccupied Switching**

There are three ways to switch occupied/unoccupied:

- Field-supplied contact closure [hardwired binary input to field wiring terminal block (2TB3)] This input accepts a field supplied switch or contacts closure such as a time clock.
- BACnet BAS system can control the occupied/unoccupied request of the self- contained unit.
- · Through the TD-7 display via the on-board schedule.

#### Compressor Lead/Lag

Compressor lead/lag is present in the controls for all units. Balanced run hours is achieved by changing the fixed speed compressors sequence number when commanded to rotate.

#### **Emergency Stop Input**

A binary input is provided on the unit field wiring terminal block (2TB3) for installation of a field-provided switch or contacts to immediately shutdown all unit functions.

#### **External Stop Input**

A binary input is provided on the unit's field wiring terminal block (2TB3) for installation of a field-provided switch or contacts to safely shutdown all unit functions.

#### **Front Panel Auto Stop**

A binary value is located on the TD-7 which allows the user to start and stop the unit in a safe manner for maintenance. On the TD-7 home screen in the upper right hand corner the unit can be put into Auto to perform normally or Stop to perform a controlled shutdown and keep the unit off.

#### **Water Flow Control**

The standard configuration of a unit is with constant water flow. With compatible piping configurations, the unit can be configured to provide orderable option variable water flow, which maximizes energy saving by unloading the water pumping system.

#### **Head Pressure Control**

Water-cooled condensers — Units that are ordered with the optional flow control valves and configured for variable water flow will modulate a water valve to maintain both the user-defined refrigerant condenser pressure and refrigerant pressure differential setpoints. Refrigerant pressures will be referenced utilizing factory installed suction and discharge pressure sensors located at each circuit.

#### **Water Purge**

This user-definable feature allows the user to select a purge schedule to automatically circulate water through the economizer and condensers periodically during non-operational times. This allows fresh chemicals to circulate in waterside heat exchangers.

#### **Supply Air Static Pressure High Limit**

During normal operation, the supply air static is monitored. If at any time the static pressure exceeds the software high static limit (defaulted at 2.0 inches from the factory) the unit will immediately shut down and generate a diagnostic.

In order for the unit to resume operation, the Alarm Reset must be toggled from the TD-7. The software high static limit can be user adjusted at the TD-7.



# **Supply Air Temperature Control Unit Sequence of Operation**

#### **Occupied Supply Air Temperature Control**

#### **Cooling/Waterside Economizer**

During occupied cooling mode, the waterside economizer option and mechanical cooling are used to control the supply air temperature. The supply air temperature setpoint is user defined at the human interface panel.

After the fans run for 5 minutes, and a call for cooling is calculated, the Cooling Tower/Pump Command is turned on. After the Condenser Water flow switch closes proving flow, the compressors and/or economizer will be allowed to start.

Waterside economizing enables when the unit entering water temperature is less than the entering return air temperature. This is set at Waterside Economizer Enable Offset setpoint. The factory default is 7°F, but can be adjusted by the user in the TD-7 or BACnet.

The economizer acts as the first stage of cooling. If the economizer is unable to maintain the supply air setpoint, the unit controller will bring on the compressors as required to meet the setpoint. If the unit does not include an economizer, only mechanical cooling will satisfy cooling requirements.

#### Fixed Discharge Air Setpoint VAV (Ordered Option of Digit 28 Set to A)

The Discharge Air Cooling Setpoint BAS default valve of 55 degrees and the unit will control to this value when in the cooling mode. This option also includes the ability to change in the field the option to the Reset Based on Return Air functionality (Digit 28 = B).

#### Reset Based on Return Air Temperature VAV (Ordered Option of Digit 28 Set to B)

The Discharge Air Temperature is reset based off the return air temperature which will work to keep this temperature between its heating and cooling setpoints. This option also includes the ability to disable in the field the reset functionality and revert to the Fixed Discharge Air Setpoint functionality (Digit 28 = A).

#### Reset Based on Zone Temperature VAV (Ordered Option of Digit 28 Set to C)

The Discharge Air Temperature is reset based off the space temperature which will work to keep this temperature between its heating and cooling setpoints. This option also includes the ability to disable in the field the reset functionality and revert to the Fixed Discharge Air Setpoint functionality (Digit 28 = A).

#### Fixed Discharge Air Setpoint CV (Ordered Option of Digit 28 Set to D)

The Discharge Air Cooling Setpoint BAS default valve of 55 degrees and the unit will control to this value when in the cooling mode. This option also includes the ability to change in the field the option to the Reset Based on Zone Temperature functionality (Digit 28 = C).

#### **Building Automation Control of setpoint**

When a BAS system controls the Discharge Air Cooling Setpoint BAS at a priority level it will take precedence over locally calculated values in the Cooling Mode.

#### **Heat/Cool Mode**

The unit is in Cooling mode by default. The front end Building Automation System will switch the Heat Cool Mode Request Multistate Value between the Heating and Cooling modes to get the desired control.

#### **Heating Operation**

During occupied heating mode, the heat modulates to maintain the discharge air setpoint.



# **Zone Sensor Options**

## **Zone Temperature Sensor, BAYSENS077**



This zone sensor includes an internal thermistor and should be mounted in the zone, Model Number Digit 31=1. This sensor is available for use with all zone sensor options to provide remote sensing capabilities.

Additional sensors are also available for order using the Model Number Digit 31.



# **Electrical Data**

### **Selection Procedures**

- RLA = Rated Load Amps
- Compressor LRA = Locked Rotor Amps
- Compressor Input = VFD drive Input
- Compressor Output = VFD drive output
- Voltage utilization range is ±10%

#### **Determine Minimum Circuit Ampacity (MCA)**

MCA = 1.25 x Largest motor amps/VFD Input + the sum of the remaining motor amps.

#### Determine Max Fuse (MFS) and Max Circuit Breaker (MCB) Sizes

MFS and MCB = 2.25 x Largest motor amps (RLA)/VFD input) + the sum of the remaining motor amps.

If the rating value calculation does not equal a standard over current protective device rating, use the next lower standard rating as the maximum.

Table 6. Electrical service sizing data — motors

Digit 9 - Unit Voltage	Digit 9	Tonnage	Comp 1	Comp 2	Comp 3	Comp 4	Fan FLA	Qty Fans	Misc	MCA	МОР
460/60/3	4	20	7.1	7.1	7.1	7.1	7.1	1.00	1.00	38	45
460/60/3	4	25	9.1	9.1	9.1	9.1	7.1	1.00	1.00	47	56
460/60/3	4	30	11.9	11.9	11.9	11.9	7.1	2.00	1.00	66	77
460/60/3	4	35	12.4	12.4	11.9	11.9	7.1	2.00	1.00	67	79
460/60/3	4	40	12.4	12.4	12.4	12.4	7.1	2.00	1.00	68	80
460/60/3	4	45	15.4	15.4	12.4	12.4	7.1	2.00	1.00	75	90
460/60/3	4	50	15.4	15.4	15.4	15.4	7.1	3.00	1.00	88	103
460/60/3	4	55	19.4	19.4	15.4	15.4	7.1	3.00	1.00	97	116
460/60/3	4	60	20.6	20.6	19.4	19.4	7.1	4.00	1.00	115	135
460/60/3	4	65	20.6	20.6	20.6	20.6	7.1	4.00	1.00	117	137
460/60/3	4	70	24.0	24.0	20.6	20.6	7.1	4.00	1.00	124	148
460/60/3	4	75	32.8	32.8	20.6	20.6	7.1	4.00	1.00	144	177
460/60/3	4	85	32.8	32.8	24.0	24.0	7.1	5.00	1.00	158	191
460/60/3	4	90	32.8	32.8	32.8	32.8	7.1	5.00	1.00	176	208
460/60/3	4	100	38.5	38.5	32.8	32.8	7.1	6.00	1.00	196	234
460/60/3	4	110	38.5	38.5	38.5	38.5	7.1	7.00	1.00	214	253
208-230/60/3	F	20	16.0	16.0	16.0	16.0	13.5	1.00	2.00	84	100
208-230/60/3	F	25	21.2	21.2	21.2	21.2	13.5	1.00	2.00	105	127
208-230/60/3	F	30	24.4	24.4	24.4	24.4	13.5	2.00	2.00	133	157
208-230/60/3	F	35	28.7	28.7	24.4	24.4	13.5	2.00	2.00	142	171
208-230/60/3	F	40	28.7	28.7	28.7	28.7	13.5	2.00	2.00	151	179
208-230/60/3	F	45	33.3	33.3	28.7	28.7	13.5	2.00	2.00	161	195
208-230/60/3	F	50	33.3	33.3	33.3	33.3	13.5	3.00	2.00	184	218
208-230/60/3	F	55	40.8	40.8	33.3	33.3	13.5	3.00	2.00	201	242
208-230/60/3	F	60	45.9	45.9	40.8	40.8	13.5	4.00	2.00	241	287
208-230/60/3	F	65	45.9	45.9	45.9	45.9	13.5	4.00	2.00	251	297

Table 6. Electrical service sizing data — motors (continued)

Digit 9 - Unit Voltage	Digit 9	Tonnage	Comp 1	Comp 2	Comp 3	Comp 4	Fan FLA	Qty Fans	Misc	MCA	МОР
208-230/60/3	F	70	49.0	49.0	45.9	45.9	13.5	4.00	2.00	258	307
208-230/60/3	F	75	62.1	62.1	45.9	45.9	13.5	4.00	2.00	287	349
208-230/60/3	F	85	62.1	62.1	49.0	49.0	13.5	5.00	2.00	307	369
208-230/60/3	F	90	62.1	62.1	62.1	62.1	13.5	5.00	2.00	333	395
208-230/60/3	F	100	83.1	83.1	62.1	62.1	13.5	6.00	2.00	394	477
208-230/60/3	F	110	83.1	83.1	83.1	83.1	13.5	7.00	2.00	450	533
575/60/3	5	20	6.4	6.4	6.4	6.4	5.7	1.00	0.75	34	40
575/60/3	5	25	7.7	7.7	7.7	7.7	5.7	1.00	0.75	39	47
575/60/3	5	30	9.4	9.4	9.4	9.4	5.7	2.00	0.75	52	61
575/60/3	5	35	9.0	9.0	9.4	9.4	5.7	2.00	0.75	51	60
575/60/3	5	40	9.0	9.0	9.0	9.0	5.7	2.00	0.75	50	59
575/60/3	5	45	12.9	12.9	9.0	9.0	5.7	2.00	0.75	59	72
575/60/3	5	50	12.9	12.9	12.9	12.9	5.7	3.00	0.75	73	86
575/60/3	5	55	13.7	13.7	12.9	12.9	5.7	3.00	0.75	75	88
575/60/3	5	60	14.5	14.5	13.7	13.7	5.7	4.00	0.75	84	98
575/60/3	5	65	14.5	14.5	14.5	14.5	5.7	4.00	0.75	85	100
575/60/3	5	70	19.2	19.2	14.5	14.5	5.7	4.00	0.75	96	115
575/60/3	5	75	24.0	24.0	14.5	14.5	5.7	4.00	0.75	107	131
575/60/3	5	85	24.0	24.0	19.2	19.2	5.7	5.00	0.75	122	146
575/60/3	5	90	24.0	24.0	24.0	24.0	5.7	5.00	0.75	131	155
575/60/3	5	100	27.1	27.1	24.0	24.0	5.7	6.00	0.75	144	171
575/60/3	5	110	27.1	27.1	27.1	27.1	5.7	7.00	0.75	156	183

#### Notes:

- 1. MCA: Minimum Circuit Ampacity is 125 percent of the largest compressor RLA or Drive input current, plus 100 percent of the other compressor (s) RLA, plus the sum of the condenser fan RLA, plus any other load rated at 1 AMP or more.
- 2. Maximum Breaker Overcurrent Protection (MOP): 225 percent of the largest compressor RLA or VSD drive Input, plus 100% of the other compressor(s) RLA, plus the sum of the condenser fan Motor/Drive FLA, plus any other load rated at 1 AMP or more.
- 3. Recommended disconnect switch: 110 percent to 115 percent of the sum of the RLA of the compressors, VSD drive input, fan motor/drive, and controls FLA.
- 4. RLA: Rated in accordance with UL standard 1995.
- 5. Local codes may take precedence.
- 6. Fix speed compressor are across the line starting, the VSD compressors are controlled by VSD drive. Compressors will never start simultaneously.
- 7. Voltage utilization range is ±10 percent.



# **Dimensional Data**

Figure 6. Unit dimensions (in inches)


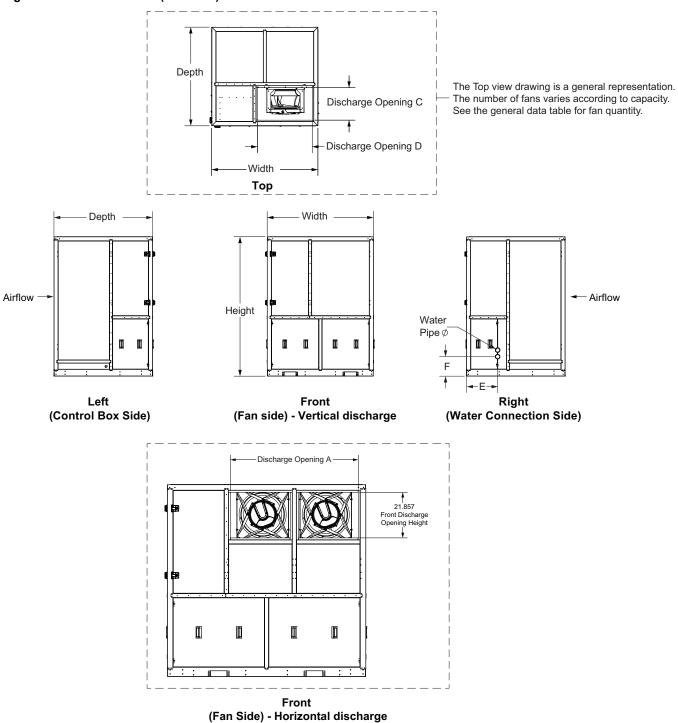


Table 7. Unit dimensions (in inches)

		Unit Size										
Dimension	20, 25, 30, and 35T	40, 45, 50, 55, and 60T	65, 70, 75, and 85T	90, 100, and 110T								
Width (in.)	70.00	95.00	111.00	140.00								
Depth (in.)	65.00	80.00	80.00	80.00								
Height (in.)	92.00	92.00	92.00	92.00								
Discharge Opening - Verti	cal discharge											
Discharge Opening C (in.)	21.42	36.50	36.50	36.50								
Discharge Opening D (in.)	36.17	61.22	77.16	106.00								
Discharge Opening - Horizontal discharge												
Discharge Opening A (in.)	36.24	61.24	79.09	107.96								

	Unit Size				
Dimension	20, 25, 30, and 35T	40T	45, 50, 55, 60, and 65T	70T	75, 85, 90, 100, and 110T
Water Pipe Ø	2.50 NPT	2.50 NPT	3.00 NPT	3.00 NPT	4.00 NPT
E	20.60	30.00	30.00	30.00	30.00
F	12.83	12.87	11.76	13.73	14.82


Figure 7. Condensate drain pipe location

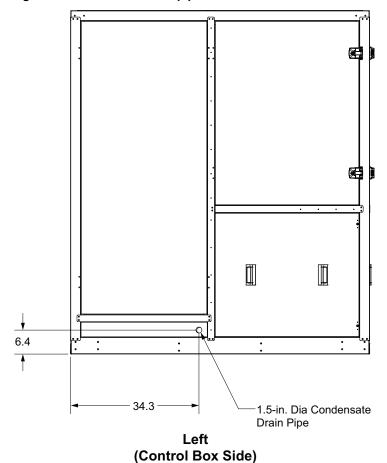

Note: Condensate drain connection always on the LEFT (Control Box) side.

#### **Dimensional Data**

Figure 8. Standard plenum (option)

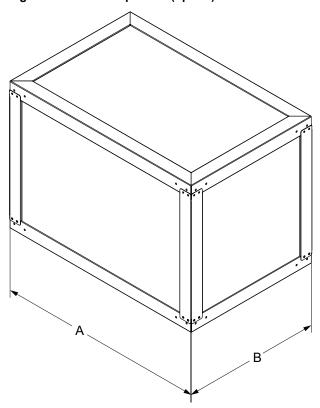

Note: Custom height plenums available upon request.

Table 8. Standard plenum (option)

Unit Size	Dim A (in.)	Dim B (in.)	Height (in.)
20, 25, 30, and 35T	42.92	28.55	30.00
40, 45, 50, 55, and 60T	67.77	43.40	30.00
65, 70, 75, and 85T	83.77	43.40	30.00
90, 100, and 110T	112.63	43.40	30.00

## **Service Clearances**

Figure 9. Service clearance

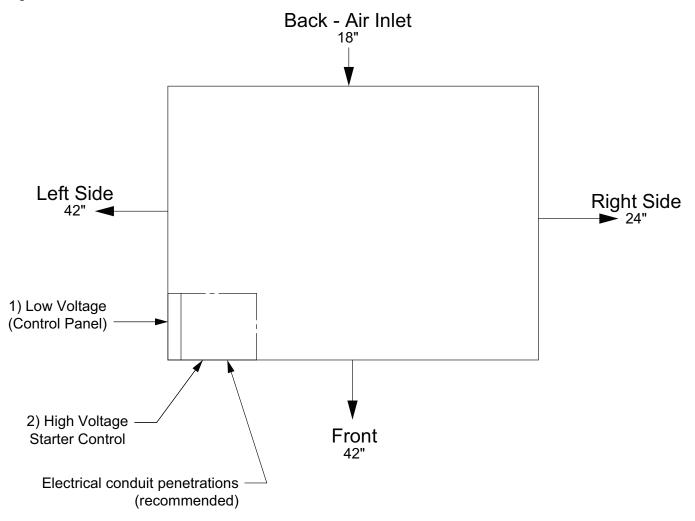


Table 9. Service/code clearance requirements

Side	Distance - in. (mm)	Purpose
Front	42	NEC Code Requirements; Fan, Compressor, Condenser, Service/Removal
Left	42	NEC Code Requirements
Right	24	Door Clearance
Back	18	Provides Uniform Airflow



# Weights

Table 10. Unit weights

IIi4 Oi	Base Weight	Waterside Economizer	
Unit Size	(lbs)	(lbs)	
20	2763	459	
25	2813	459	
30	2915	459	
35	2965	468	
40	3423	578	
45	3489	602	
50	3654	626	
55	3734	638	
60	3904	649	
65	4231	679	
70	4240	777	
75	4367	796	
85	4466	796	
90	5137	1055	
100	5237	1055	
110	5336	1055	



#### **Standard Features**

#### **Agency Listing**

Units have the Intertek UL agency listing.

#### **BACnet Communication Protocol**

- The BACnet® communication protocol is standard in the Symbio™ controller.
- Expands communication from the unit to a Tracer SC+ system controller or a third-party building automation system utilizing BACnet, allowing for external setpoint and configuration adjustment and monitoring of status and diagnostics.

#### Cabinet

- Framework is constructed of sturdy-gauge steel. Exterior panels are fabricated from 1-inch thick insulating foam core between two layers of aluminum panels.
- Removable panels allow service access to compressors, condensers, fans, coils, and valves. Panels are secured with
  quick-acting hinges that allow panel to act as door, or completely remove panel when necessary. The refrigerant sight
  glasses are accessible during operation.
- · Unit ships as a single piece.

#### Compressors

- Units contain two circuits with a set of tandem compressors per circuit.
- Scroll compressors are heavy duty suction cooled type with suction screen, centrifugal oil pump with dirt separator, oil
  charging valve, and oil sight glass.
- · Protective devices for low pressure, high pressure, and motor temperature are provided.
- The compressors are mounted on isolators for vibration isolation.
- Compressors are manufactured by an independent manufacturer.

#### Condenser

- · One condenser is provided for the entire unit.
- Shell and tube water-cooled design with removable heads and mechanically cleanable tubes. Tubes are 0.75-inch (19 mm)
   OD and constructed of copper.
- Condenser waterside working pressure is 150 psig.
- Shell and tube condenser is mechanically cleanable.

#### **Dirty Filter Switch**

- Factory-installed pressure sensor detects the pressure differential across the filters. When the differential pressure exceeds 0.9-inches (23 mm) WG, contact closure occurs.
- Field-installed indicator device may be wired to relay terminals to indicate when filter service is required. Contacts are rated at 115 Vac and powered by a field-supplied transformer.

#### **Evaporator**

- Evaporator coils are UL recognized as refrigerant containing component. Coils to be used with refrigerant R-454B have undergone cycle testing and safety listed with 420 psig rating.
- Tubes and return bends are constructed from seamless UNS C12200 copper conforming to ASTM B224 and ASTM E527.
  Properties shall be O50 light annealed, with a maximum grain size of 0.040 mm. Tubes are to be mechanically expanded into fins (secondary surface) for maximum heat transfer. Materials are to be 0.50-inch diameter x (0.016R) wall thickness, copper rifled tubes.
- Secondary surface (fins) are plate-fin design consisting of aluminum, with die- formed collars. Fin designs are flat, waffle, or sine-wave in a staggered tube pattern to meet performance requirements. Collars hold fin spacing at specified density and cover the entire tube surface.



- Aluminum properties are Alloy 1100 per ASTM B209, with O (soft) temper. Copper is Alloy 11000 per ASTM B152-06 with soft (anneal) temper. Fins are to be free of oils and oxidation.
- Headers are constructed of seamless UNS C12200, Type L (drawn) copper material sized to match specified connection size.
- Evaporator coils are designed with brass liquid distributors (as required), and copper sweat suction connections. Distributors are capped using soft-solder for ease of cap removal; suction connections are capped.
- Coil casing material consists of G90 galvanized steel (16 gauge). Intermediate tube supports are provided on all coils 48
  inches and longer fin length. Coil casings on top and bottom of coils have double-flange construction, allowing for vertical
  stacking of coils.
- · All coils are brazed with minimum 5 percent silver content (BCup-3) filler material for joint integrity.

#### **Filters**

- Standard filters are 2-inch MERV 8 (24-inch x 20-inch).
- Optional filters: 2-inch MERV 13, 4-inch MERV 8, 4-inch MERV 13 and 6-inch MERV 15 are available.

#### **Phase and Voltage Monitor**

- · Protects 3-phase equipment from phase loss, phase reversal, and low voltage.
- Fault conditions display a failure message on the TD-7 display and send the unit into an auto-stop condition.
- · cULus approved.

#### **Refrigerant Circuit**

- Refrigerant circuits have tandem compressors and include sight glasses, distributors, thermal expansion valves with adjustable superheat and external equalizer, and-high pressure relief valves with 0.50-inch (13 mm) flare connection.
- · The unit is provided with adequate means of frost control.
- Circuits are shipped with a full R-454B refrigerant charge.
- Compressors are mounted on rubber-in-shear isolators for vibration isolation.

#### **Refrigerant Leak Detection Sensors**

- Factory-installed leak detection system with one or more refrigerant detection sensors.
- When the system detects a leak, the unit controller will initiate mitigation actions.

#### Supply Fan

Fan wall arrangement with direct drive ECM plenum fans for increased efficiency.

#### **Unit Controls**

- Microprocessor controls control all unit functions. Trane Symbio™ 500 is the provided unit controller.
- Controls are factory-installed and mounted in the main control panel. All factory-installed controls are fully commissioned (run-tested) at the factory.
- Unit-mounted Tracer® TD-7 user-interface with a 7-inch WVGA 800 x 480 resolution, touch-sensitive color screen is
  provided. The screen is backlit, to enable viewing in poor light conditions. The TD-7 display is standard to provide the
  operator with full adjustment and display of control data functions.
- The unit control can be used as a standalone controller or as part of a building management system involving multiple units.

#### **Water Connections**

- The unit can be configured with left or right-hand water connections.
- · Water connections are designed for victaulic pipe couplings.

#### Water Flow Switch

· A water flow switch is factory mounted and wired within the condenser water pipe to the unit.

- When the flow switch detects a water flow loss prior to or during mechanical cooling, compressor operation locks out and a diagnostic code displays.
- If water flow is restored, the compressor operation automatically restores.

#### **Optional Features**

#### **Air Volume/Temperature Control**

#### Air Volume: Variable Air Volume Control Scheme

This option controls the VAV self-contained unit using factory- mounted, direct drive plenum fans with electronically commutated motors (ECM). The ECM safely varies the fan motor speed to allow the motor to meet the dynamic requirements at the motor shaft and meet the system static. The ECM receives 0 to 10 Vdc signal from the unit microprocessor based upon supply static pressure and causes the drive to accelerate or decelerate as required to maintain the supply static pressure setpoint. There are three types of temperature control available.

#### **Temperature Control: Fixed Discharge Air Temperature**

- This option includes a discharge air microprocessor controller and discharge air sensor. The microprocessor controller
  coordinates the optional waterside economizer control and the stages of cooling to maintain the fixed discharge air setpoint.
   From the factory the discharge air setpoint is fixed.
- There is an option on the unit to calculate the discharge air setpoint by comparing the return air temperature against the return air temperature setpoint. Based upon this calculation the setpoint is then reset between the discharge air reset setpoint max bas and discharge air reset setpoint min bas.

#### **Temperature Control: Return Air Reset**

- This option includes a discharge air microprocessor controller and discharge air sensor. The microprocessor controller coordinates the optional waterside economizer control and the stages of cooling to maintain the discharge air temperature setpoint. It is calculated by comparing the return air temperature against the return air temperature setpoint. Based upon this calculation the setpoint is then reset between the discharge air reset setpoint max bas and discharge air reset setpoint min bas.
- There is an option on the unit to use a fixed discharge air setpoint if desired.

#### **Temperature Control: Space Temperature Reset**

- This option includes a discharge air microprocessor controller and discharge air sensor. The microprocessor controller coordinates the optional waterside economizer control and the stages of cooling to maintain the discharge air temperature setpoint. It is calculated by comparing the space temperature against the space temperature setpoint. Based upon this calculation the setpoint is then reset between the discharge air reset setpoint max bas and discharge air reset setpoint min has
- · There is an option on the unit to use a fixed discharge air setpoint if desired.

#### Air Volume: Constant Volume Control Scheme

This option controls the VAV self-contained unit using factory- mounted, direct drive plenum fans with electronically commutated motors (ECM). The ECM safely varies the fan motor speed to allow the motor to meet the dynamic requirements at the motor shaft and meet the needed speed. The ECM receives 0-10 Vdc signal from the unit microprocessor to maintain the fixed speed setpoint. There is one type of temperature control available.

#### **Temperature Control: Fixed DA Temp**

- This option includes a discharge air microprocessor controller and discharge air sensor. The microprocessor controller coordinates the optional waterside economizer control and the stages of cooling to maintain the discharge air setpoint. From the factory the discharge air setpoint is fixed.
- There is an option on the unit to calculate the discharge air setpoint by comparing the space temperature against the space temperature setpoint. Based on this calculation, the setpoint will reset between the discharge air reset setpoint max bas and discharge air reset setpoint min bas.

#### Isopads

Isopads are furnished with the unit for vibration isolation.



#### **Non-fused External Disconnect Switch**

- The unit is supplied with an external disconnect switch that will be field-mounted.
- · If this option is not selected, the unit is supplied with a terminal block.

#### **Plenum**

Units include a ship-separate discharge plenum for field-cut holes with a standard height of 30 inches. Plenum is fabricated from 1-inch thick insulating foam core between two layers of aluminum panels.

#### **Protective Coating Coils**

- Evaporator coil A 3 to 5 mL of protective coating is applied to the coil using a multiple dip-and-bake process.
- Evaporator coil and water side economizer A 3 to 5 mL of protective coating is applied to the coils using a multiple dip-and-bake process.

#### Service Valves

Service valves are factory-installed on each circuit before and after the compressor to allow compressor isolation for servicing.

#### Stainless Steel Drain Pan

The drain pan is positively sloped, fabricated from 304L stainless steel, and insulated with 0.25-inch (6.35 mm) of 1-pound (0.5 kg) density fiberglass.

#### **Unit Flow Control**

Units equipped with optional water regulating valves can be configured at the TD-7 for variable or constant water flow.

#### **Constant Water Flow**

- Two-way modulating control shutoff valves are wired, controlled, and installed in the unit on each circuit. These valves are
  driven to their maximum value anytime the unit is powered up. The valves will spring-return closed in the event of a power
  failure.
- If the unit has the waterside economizer option, the water side economizer valves will modulate to maintain the discharge air setpoint when active and be fully closed when inactive. These valves always remain variable-flow due to the waterside economizer design.

#### Variable Water Flow

- Two-way modulating control shutoff valves are wired, controlled, and installed in the unit on each circuit. When the
  compressor is in operation, the valves modulate to maintain the differential pressure across the compressor and to maintain
  the head pressure below the design setpoint. The valve will be limited to stay between the factory-set minimum and
  maximum valve position.
- When the compressors in a circuit are not operational the valve will be fully closed. The valves will spring-return closed in the event of a power failure.
- If the unit has the waterside economizer option, the waterside economizer valves will modulate to maintain the discharge air setpoint when active and be fully closed when inactive.

#### **Waterside Economizer**

- Utilizes the cooling tower water to either pre-cool the entering air to aid the mechanical cooling process or provides total system cooling if the water temperature is low enough.
- Will enable when the entering water temperature of the unit is below the entering mixed air temperature of the unit by a
  minimum of 4°F plus the economizer's approach temperature. The approach temperature default is 4°F and is adjustable
  from 0 to 9°F.
- Will disable when the entering water temperature of the unit is not below the entering mixed air temperature of the unit by at least the water economizer approach temperature. The economizer acts as the first stage of cooling. If the economizer is unable to maintain the supply air setpoint, the unit control module brings on compressors as required to meet the setpoint.
- Includes a coil, modulating valves, controls, and piping with cleanouts. Coil construction is 0.50-inch (13 mm) OD seamless copper tubes expanded into aluminum fins. The evaporator and economizer coils share a common sloped (IAQ) drain pan. Drain pan options are either galvanized or stainless steel and insulated.

## Air-Fi® Wireless Communications Interface (WCI)

Field-installed Air-Fi Wireless Communications Interface provides wireless communication between the Tracer® SC+ and Symbio Unit Controllers.



**Notes** 



Trane - by Trane Technologies (NYSE: TT), a global innovator - creates comfortable, energy efficient indoor environments for commercial and residential applications. For more information, please visit trane.com or tranetechnologies.com.
Trane has a policy of continuous product and product data improvements and reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.