



**TRANE®**

# Installation, Operation, and Maintenance

## Trane Rental Services

### Temporary Transformers



#### ⚠ SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

January 2026

**TEMP-SVX005C-EN**

**TRANE**  
TECHNOLOGIES™



# Introduction

Read this manual thoroughly before operating or servicing this unit.

## Warnings, Cautions, and Notices

Safety advisories appear throughout this manual as required. Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

The three types of advisories are defined as follows:



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.



Indicates a situation that could result in equipment or property-damage only accidents.

## Important Environmental Concerns

Scientific research has shown that certain man-made chemicals can affect the earth's naturally occurring stratospheric ozone layer when released to the atmosphere. In particular, several of the identified chemicals that may affect the ozone layer are refrigerants that contain Chlorine, Fluorine and Carbon (CFCs) and those containing Hydrogen, Chlorine, Fluorine and Carbon (HCFCs). Not all refrigerants containing these compounds have the same potential impact to the environment. Trane advocates the responsible handling of all refrigerants.

## Important Responsible Refrigerant Practices

Trane believes that responsible refrigerant practices are important to the environment, our customers, and the air conditioning industry. All technicians who handle refrigerants must be certified according to local rules. For the USA, the Federal Clean Air Act (Section 608) sets forth the requirements for handling, reclaiming, recovering and recycling of certain refrigerants and the equipment that is used in these service procedures. In addition, some states or municipalities may have additional requirements that must also be adhered to for responsible management of refrigerants. Know the applicable laws and follow them.

## ⚠ WARNING

### Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses FIRE and ELECTROCUTION hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

## ⚠ WARNING

### Personal Protective Equipment (PPE) Required!

Failure to wear proper PPE for the job being undertaken could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the instructions below:

- Before installing/servicing this unit, technicians **MUST** put on all PPE required for the work being undertaken (Examples: cut resistant gloves/sleeves, butyl gloves, safety glasses, hard hat/bump cap, fall protection, electrical PPE and arc flash clothing). **ALWAYS** refer to appropriate Safety Data Sheets (SDS) and OSHA guidelines for proper PPE.
- When working with or around hazardous chemicals, **ALWAYS** refer to the appropriate SDS and OSHA/GHS (Global Harmonized System of Classification and Labelling of Chemicals) guidelines for information on allowable personal exposure levels, proper respiratory protection and handling instructions.
- If there is a risk of energized electrical contact, arc, or flash, technicians **MUST** put on all PPE in accordance with OSHA, NFPA 70E, or other country-specific requirements for arc flash protection, **PRIOR** to servicing the unit. **NEVER** PERFORM ANY SWITCHING, DISCONNECTING, OR VOLTAGE TESTING WITHOUT PROPER ELECTRICAL PPE AND ARC FLASH CLOTHING. ENSURE ELECTRICAL METERS AND EQUIPMENT ARE PROPERLY RATED FOR INTENDED VOLTAGE.

**⚠ WARNING****Follow EHS Policies!**

Failure to follow instructions below could result in death or serious injury.

- All Trane personnel must follow the company's Environmental, Health and Safety (EHS) policies when performing work such as hot work, electrical, fall protection, lockout/tagout, refrigerant handling, etc. Where local regulations are more stringent than these policies, those regulations supersede these policies.
- Non-Trane personnel should always follow local regulations.

**⚠ WARNING****Cancer and Reproductive Harm!**

This product can expose you to chemicals including lead and bisphenol A (BPA), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**Copyright**

This document and the information in it are the property of Trane, and may not be used or reproduced in whole or in part without written permission. Trane reserves the right to revise this publication at any time, and to make changes to its content without obligation to notify any person of such revision or change.

**Trademarks**

All trademarks referenced in this document are the trademarks of their respective owners.

**Revision History**

- Updated drawings throughout to meet standards



# Table of Contents

Model Number Description .....	5
Trane Rental Services Designator.....	5
General Information .....	6
Overview .....	6
Unit Description.....	6
Enclosure Types .....	6
Transformer Sizing Considerations .....	6
Dimensions and Weights.....	8
Primary/Secondary Transformers .....	9
Auto Transformers .....	24
Installation .....	33
Unloading, Handling, and Storage .....	33
Location.....	34
Atmosphere .....	34
Temperature .....	34
Ventilation .....	34
Mounting .....	34
Grounding .....	34
Tap Settings .....	34
Drying of Core and Coil Assembly.....	35
Precautions to Minimize Sound .....	35
Level .....	35
Mounting .....	36
Maintenance .....	37
Dry Type Transformer Maintenance Instructions .....	37



# Model Number Description

## Trane Rental Services Designator

Each autotransformer has a unique designator in addition to the manufacturer part number. All inquiries should reference the model number.

### Digit 1, 2, 3 — Rental Service Transformers

**RST** = Rental Service Transformers

### Digit 4 — Primary Voltage

**B** = 208

**C** = 240

**G** = 480

**J** = 600

**M** = 4160

**Q** = MULTI-TAP 4160/2400/480

**R** = MULTI-TAP 4160/2400/600/480

**Z** = MULTI-TAP 600/480/240/208

**Note:** All are referenced to 60 Hz, 3-phase systems.

### Digit 5, 6, 7, 8 — Transformer (kVA)

**0030** = 0030 kVA

**0050** = 0050 kVA

**0075** = 0075 kVA

**0150** = 0150 kVA

**0300** = 0300 kVA

**0500** = 0500 kVA

**0750** = 0750 kVA

**1000** = 1000 kVA

**1500** = 1500 kVA

### Digit 9 — Secondary Voltage

**B** = 208

**C** = 240

**G** = 480

**J** = 600

**M** = 4160

**Q** = MULTI-TAP 4160/2400/480

**R** = MULTI-TAP 4160/2400/600/480

**Z** = MULTI-TAP 600/480/240/208

**Note:** All are referenced to 60 Hz, 3-phase systems.

### Digit 10 — Manufacturer

**0** = Ward

**1** = Delcor

**2** = Trystar

**3** = Maddox

**4** = AES

### Digit 11, 12 — Incremental Designator

**AA**

**AD**

**AQ**

**AV**

**AX**

**XX**



# General Information

## Overview

This installation manual covers the transformers available to rent for temporary cooling solutions.

Transformers are provided to enable connection between the customer power supply and other Trane Rental equipment. This does not include the power supply voltage for the unit.

**Important:** *Trane Rental Services transformers are only for 60 Hz, 3-phase power applications.*

Trane Rental Services inventory of rental transformers changes periodically. Contact TRS if the transformers in this document do not meet the specific needs of a project (voltages higher than 4,160V, single phase applications). Trane Rental Services will check current inventory or may locate a transformer for the specific application.

## Unit Description

### **⚠ WARNING**

#### **Improper Cable Usage!**

**Failure to follow instructions below could result in unit dropping which could result in death or serious injury, and equipment or property-only damage.**

**Any electrical cable provided by Trane Rental Services is intended for use coil taps for 600V and below. Connections to any other voltage taps must be made with conductors provided by others.**

**All transformers must be installed per the National Electric Code (NEC) and/or applicable local codes.**

Trane Rental Services offers a wide variety of transformers to lease for temporary cooling needs. Transformers are designed to use Trane Rental Services equipment in applications where voltage provided is different than the equipment voltage.

Transformers come complete on forklift compatible bases and ready to install. Transformers are dry type and have NEMA 3R enclosures.

Some Trane Rental transformers are autotransformers. Autotransformers are not isolation transformers. There is no protection between the primary and secondary coils in the event of a short circuit. The customer is responsible to provide disconnects and overcurrent protection required by the NEC.

Primary and secondary are used to identify different coils. They do not indicate which coil is connected to supply or load. The electrical supply is always connected to the coil with the corresponding voltage, and likewise for the electrical load.

## Enclosure Types

**NEMA 3R** - Enclosure constructed for either indoor or outdoor use and provides a degree of protection to personnel against contact and to equipment against falling

dirt, rain, sleet, snow, and will be undamaged by the external formation of ice on the enclosure.

**Autotransformer** - An autotransformer is an electrical transformer where primary and secondary coils have some or all windings in common. The majority of the rental fleet is standard at 460V, 3-phase, 60 Hz. This will enable the autotransformer to be supplied for either a step up or step down application (208V or 575V primary - 460V secondary). These are sometimes referred to as multi-tap transformers.

## Transformer Sizing Considerations

The current on one side of a 3-phase transformer can be calculated by using the following relationship:

**Where:**

$$P = 3 \text{ phase power (in VA)}$$

$$I = \text{current (in Amperes)}$$

$$V = \text{voltage (in Volts)}$$

$$P = I \times V \times 1.73$$

$$I = P / (V \times 1.73)$$

Power on the secondary side and the power on the primary side are always equal to each other:

$$P_{\text{primary}} = P_{\text{secondary}}$$

**Therefore:**

$$I_{\text{primary}} \times V_{\text{primary}} \times 1.73 = I_{\text{secondary}} \times V_{\text{secondary}} \times 1.73$$

**Rearranging for general use:**

(can be used to find amperage on primary or secondary coil):

$$I_{\text{new}} = \frac{I_{\text{old}} \times V_{\text{old}}}{V_{\text{new}}}$$

**Example:**

A transformer has been installed a building 208V, 3 phase electrical service will be able to power the 480V, 3 phase rental equipment.

If rental equipment is connected to the transformer and will draw 65A at 480V, how many amps will be drawn from the building's electrical service at 208V?

$$V_{\text{old}} = 480V$$
$$I_{\text{old}} = 65A$$
$$I_{\text{new}} = \frac{I_{\text{old}} \times V_{\text{old}}}{V_{\text{new}}} = \frac{(65A) \times (480V)}{(280V)} = 150A$$
$$V_{\text{new}} = 208V$$

The power is the same no matter what side the user will calculate from:

- $480V \times 65A \times 1.73 = 53,976VA = 54kVA$
- $208V \times 150A \times 1.73 = 53,976VA = 54kVA$



## General Information

---

The transformer size selected must be greater than 54 kVA.

Avoid using a transformer at the maximum rating. It is acceptable to use a much larger transformer than needed, but exercise caution.



# Dimensions and Weights

## ⚠ WARNING

### Heavy Object!

Failure to follow instructions below could result in unit dropping which could result in death or serious injury, and equipment or property-only damage.

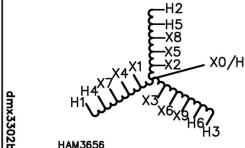
Be careful when lifting the heat pump. Use appropriate lifting tools.

Table 1. Unit weights and dimensions

Transformer kVA	Mfg	Wt (lb)	Length (inch)	Width (inch)	Height (inch)
30	Maddox (Multi-Tap)	317	36.2	19.6	41.3
50	Hammond	750	49.1	28	57.5
75	Trystar (step up)	1,100	55	32	47
150	Trystar (step down)	1,470	64	44	63
	Trystar (step up)	1,585	64	39	51
	Trystar (step up)	1,550	60	39	55
	Ward	1,900	36	42	48
300	Delcor	1,850	46	38	50
	Trystar	2,395	63	39	60
	Trystar	2,750	66	39	62
	Ward	2,600	41	46	56
500	Delcor	2,800	52	46	68
	Trystar	3,430	80	43	67
750 (600V)	Ward	3,600	46	54	60
750 (4160V)	Ward	4,400	48	58	60
750	Delcor	4,300	66	53	73
1000	Ward	5,000	48	58	60
	Delcor	5,000	79	54	82
	Trystar (step down)	8,000	132	62	78
1500	Trystar (step down)	9,000	132	62	78

## Primary/Secondary Transformers


Figure 1. 3PH Auto Transformer — RSTZ0030Z3



 <p style="text-align: center;"><b>THREE PHASE DRY TYPE AUTOTRANSFORMER</b> <b>AUTOTRANSFORMATEUR SEC TRIPHASÉ</b></p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <td style="width: 15%;">HV/HT</td> <td colspan="3">600Y/346V</td> <td colspan="3">480Y/277V</td> <td colspan="5"></td> </tr> <tr> <td>BIL</td> <td colspan="3">—</td> <td colspan="3"></td> <td colspan="5"></td> </tr> <tr> <td>TERM. BORNES</td> <td>HO</td><td>H1</td><td>H2</td><td>H3</td><td>H4</td><td>H5</td><td>H6</td> <td colspan="5"></td> </tr> <tr> <td>VOLTS</td> <td>CURRENT COURANT</td> <td colspan="3">% VOLTAGE TENSION NOMINALE</td> <td colspan="3">CONNECTION EACH PHASE</td> <td colspan="5"></td> </tr> <tr> <td>600Y/346V</td> <td>28.9</td> <td colspan="3">480Y/277V</td> <td colspan="3">HO H1 H2 H3</td> <td colspan="5"></td> </tr> <tr> <td>400Y/231V</td> <td>43.3</td> <td colspan="3">240Y/139V</td> <td colspan="3">HO H4 H5 H6</td> <td colspan="5"></td> </tr> <tr> <td>208Y/120V</td> <td>72.2</td> <td colspan="3">208Y/120V</td> <td colspan="3">X0 X7 X8 X9</td> <td colspan="5"></td> </tr> <tr> <td>400Y/231V</td> <td>83.3</td> <td colspan="3">240Y/139V</td> <td colspan="3">X0 X4 X5 X6</td> <td colspan="5"></td> </tr> <tr> <td>LV/BT</td> <td colspan="3">208Y/120V</td> <td colspan="3">240Y/139V</td> <td colspan="3">X0 X1 X2 X3</td> <td colspan="5"></td> </tr> <tr> <td>BIL</td> <td colspan="3">—</td> <td colspan="3"></td> <td colspan="3">X4 X5 X6 X7</td> <td colspan="5"></td> </tr> <tr> <td>TERM. BORNES</td> <td>X0</td><td>X1</td><td>X2</td><td>X3</td><td>X4</td><td>X5</td><td>X6</td><td>X7</td><td>X8</td><td>X9</td><td></td> </tr> </table>												HV/HT	600Y/346V			480Y/277V								BIL	—											TERM. BORNES	HO	H1	H2	H3	H4	H5	H6						VOLTS	CURRENT COURANT	% VOLTAGE TENSION NOMINALE			CONNECTION EACH PHASE								600Y/346V	28.9	480Y/277V			HO H1 H2 H3								400Y/231V	43.3	240Y/139V			HO H4 H5 H6								208Y/120V	72.2	208Y/120V			X0 X7 X8 X9								400Y/231V	83.3	240Y/139V			X0 X4 X5 X6								LV/BT	208Y/120V			240Y/139V			X0 X1 X2 X3								BIL	—						X4 X5 X6 X7								TERM. BORNES	X0	X1	X2	X3	X4	X5	X6	X7	X8	X9	
HV/HT	600Y/346V			480Y/277V																																																																																																																																																							
BIL	—																																																																																																																																																										
TERM. BORNES	HO	H1	H2	H3	H4	H5	H6																																																																																																																																																				
VOLTS	CURRENT COURANT	% VOLTAGE TENSION NOMINALE			CONNECTION EACH PHASE																																																																																																																																																						
600Y/346V	28.9	480Y/277V			HO H1 H2 H3																																																																																																																																																						
400Y/231V	43.3	240Y/139V			HO H4 H5 H6																																																																																																																																																						
208Y/120V	72.2	208Y/120V			X0 X7 X8 X9																																																																																																																																																						
400Y/231V	83.3	240Y/139V			X0 X4 X5 X6																																																																																																																																																						
LV/BT	208Y/120V			240Y/139V			X0 X1 X2 X3																																																																																																																																																				
BIL	—						X4 X5 X6 X7																																																																																																																																																				
TERM. BORNES	X0	X1	X2	X3	X4	X5	X6	X7	X8	X9																																																																																																																																																	
<p><b>Cust. Ref/ Réf. du client:</b> _____</p> <p><b>Serial No./ No. de série:</b> _____</p> <p><b>Part No./ No. de pièce:</b> <b>MIT-AUT-114</b></p> <p><b>kVA:</b> <b>30</b></p> <p><b>TYPE:</b> <b>K</b></p> <p><b>Cooling Refroidissement:</b> <b>ANN</b></p> <p><b>Temp. Rise Échauffement:</b> <b>130 °C</b></p> <p><b>Temp. Class Classe de Temp.:</b> <b>200 °C</b></p> <p><b>Frequency Fréquence:</b> <b>60 Hz</b></p> <p><b>Impédance % @ 150 °C:</b> <b>3.4</b></p> <p><b>Encl. Type/ Type de boîtier:</b> <b>3R</b></p> <p><b>Wt/ Poids:</b> <b>195/89</b></p> <p><b>Winding Enroulement:</b> <b>CU</b></p>																																																																																																																																																											
<p style="text-align: center;">SPACINGS BETWEEN ANY VENTILATED ENCLOSURE PANEL AND ANY ADJACENT WALL SHALL BE A MINIMUM OF 3 INCHES</p> <p style="text-align: center;">VOLTAGES SHOWN ARE FOR 3 PHASE, 4 WIRE SYSTEMS. NEUTRAL AND GROUND CONNECTIONS SHOULD BE MADE IN ACCORDANCE WITH LOCAL ELECTRICAL CODE AND STANDARDS REQUIREMENTS</p> <p style="text-align: center;">   HAM3656         </p>																																																																																																																																																											
<p style="text-align: center;">TITLE: <b>3PH AUTO TRANSFORMER</b> <b>NAMEPLATE INFORMATION</b></p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <td>1</td><td>20/08/05</td><td>WW</td><td colspan="2">HCN: 72936</td><td>DES: WWONG</td> </tr> <tr> <td>NO.</td><td>DATE</td><td>BY</td><td>REVISION</td><td colspan="2">SCALE: NTS</td> </tr> <tr> <td colspan="6" style="text-align: right;">10.0 Juen 2023/01/11 09:29</td> </tr> </table>												1	20/08/05	WW	HCN: 72936		DES: WWONG	NO.	DATE	BY	REVISION	SCALE: NTS		10.0 Juen 2023/01/11 09:29																																																																																																																																			
1	20/08/05	WW	HCN: 72936		DES: WWONG																																																																																																																																																						
NO.	DATE	BY	REVISION	SCALE: NTS																																																																																																																																																							
10.0 Juen 2023/01/11 09:29																																																																																																																																																											
<p style="text-align: right;"><b>EDBMIT-AUT-114</b></p> <p style="text-align: right;">SHEET 1 OF 2</p>																																																																																																																																																											



## Dimensions and Weights

Figure 2. 3PH Auto Transformer — RSTZ0030Z3

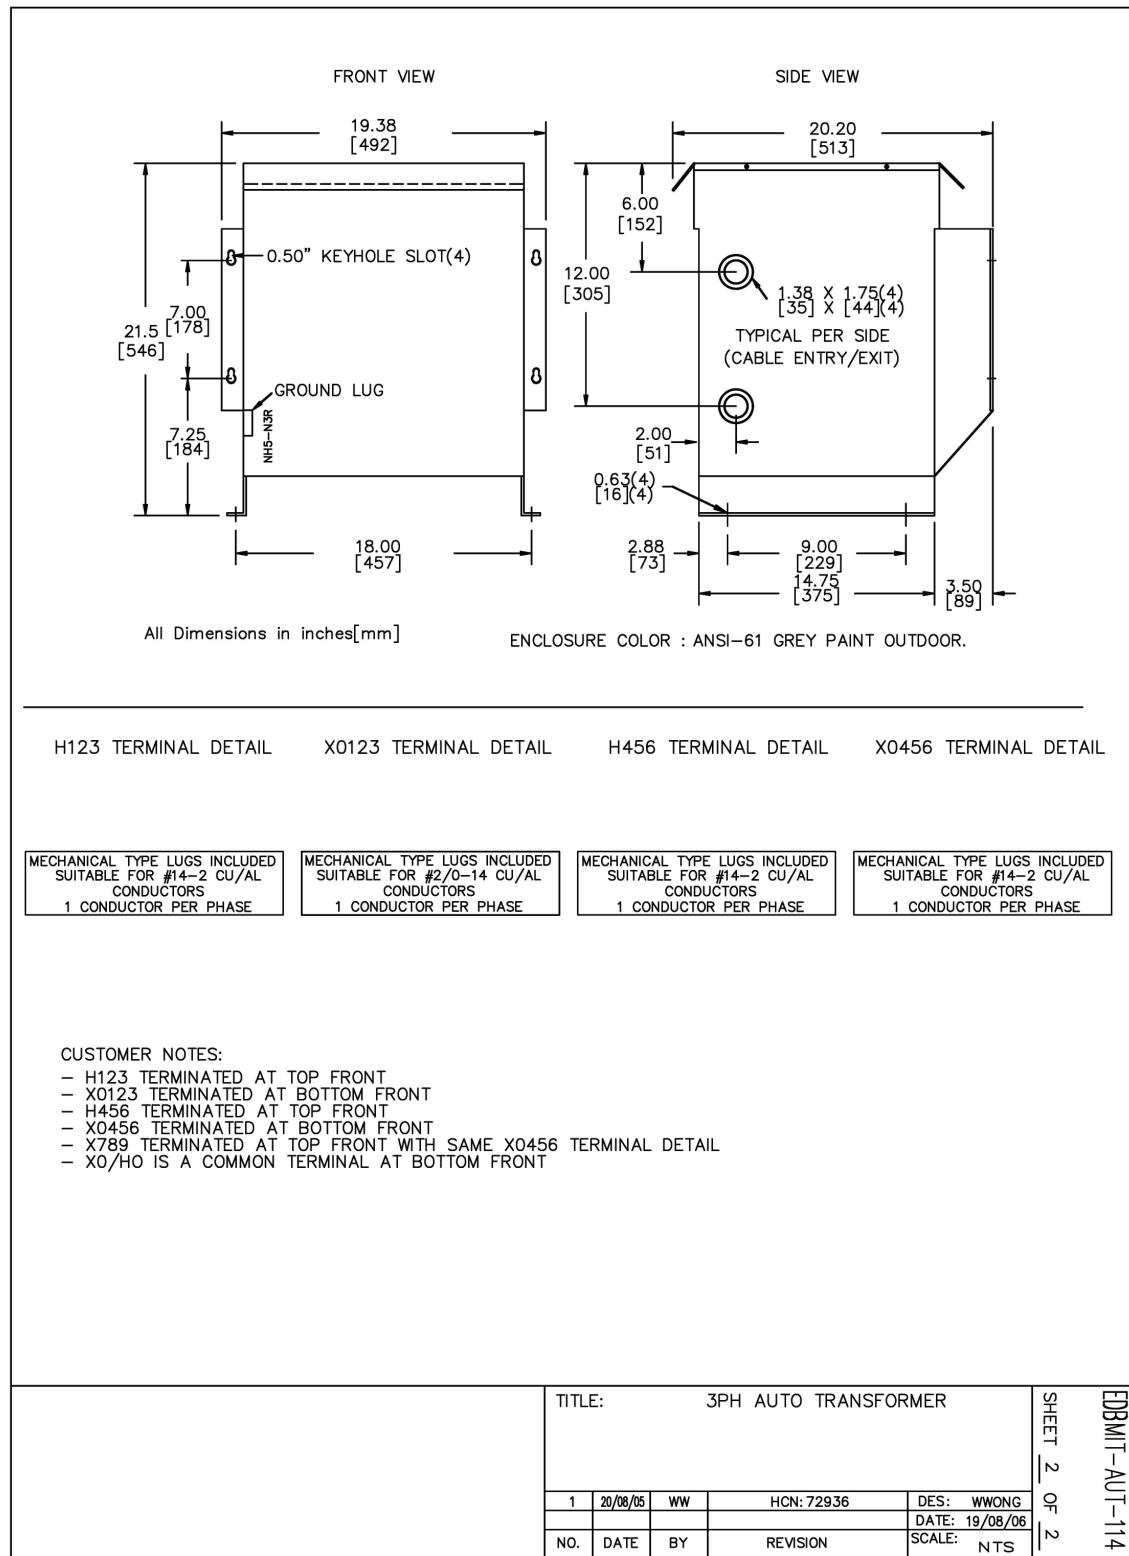


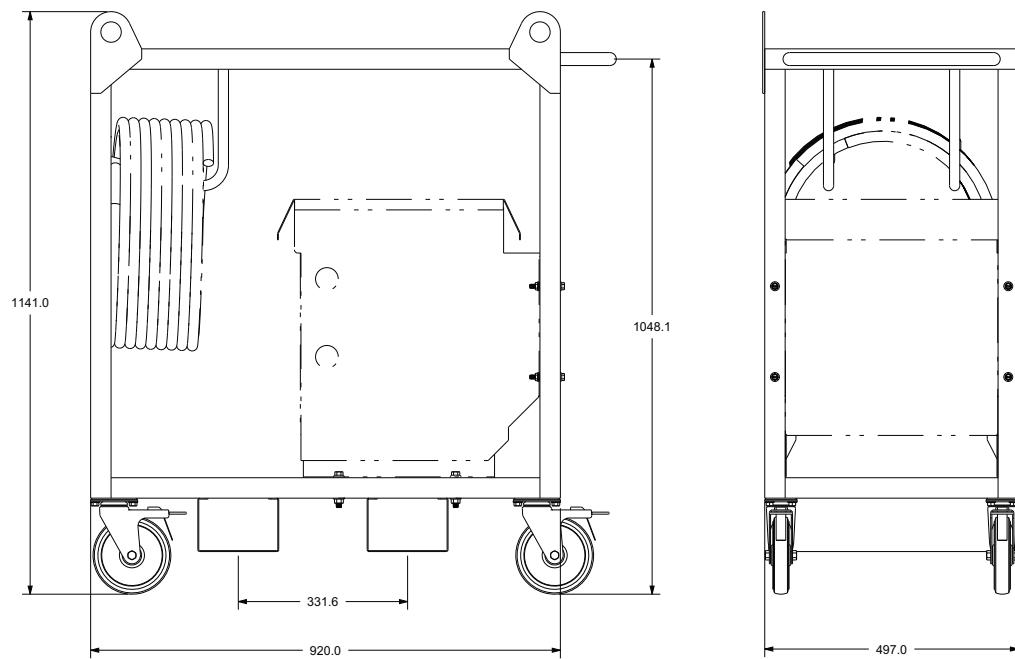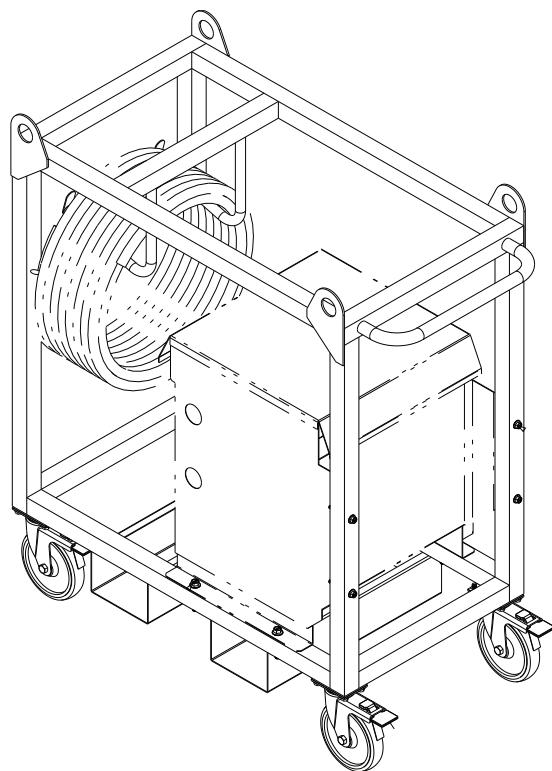**Figure 3. Assembly cart**



## Dimensions and Weights


**Figure 4. 50 kVA Step-up Transformer — RSTB0050G4**

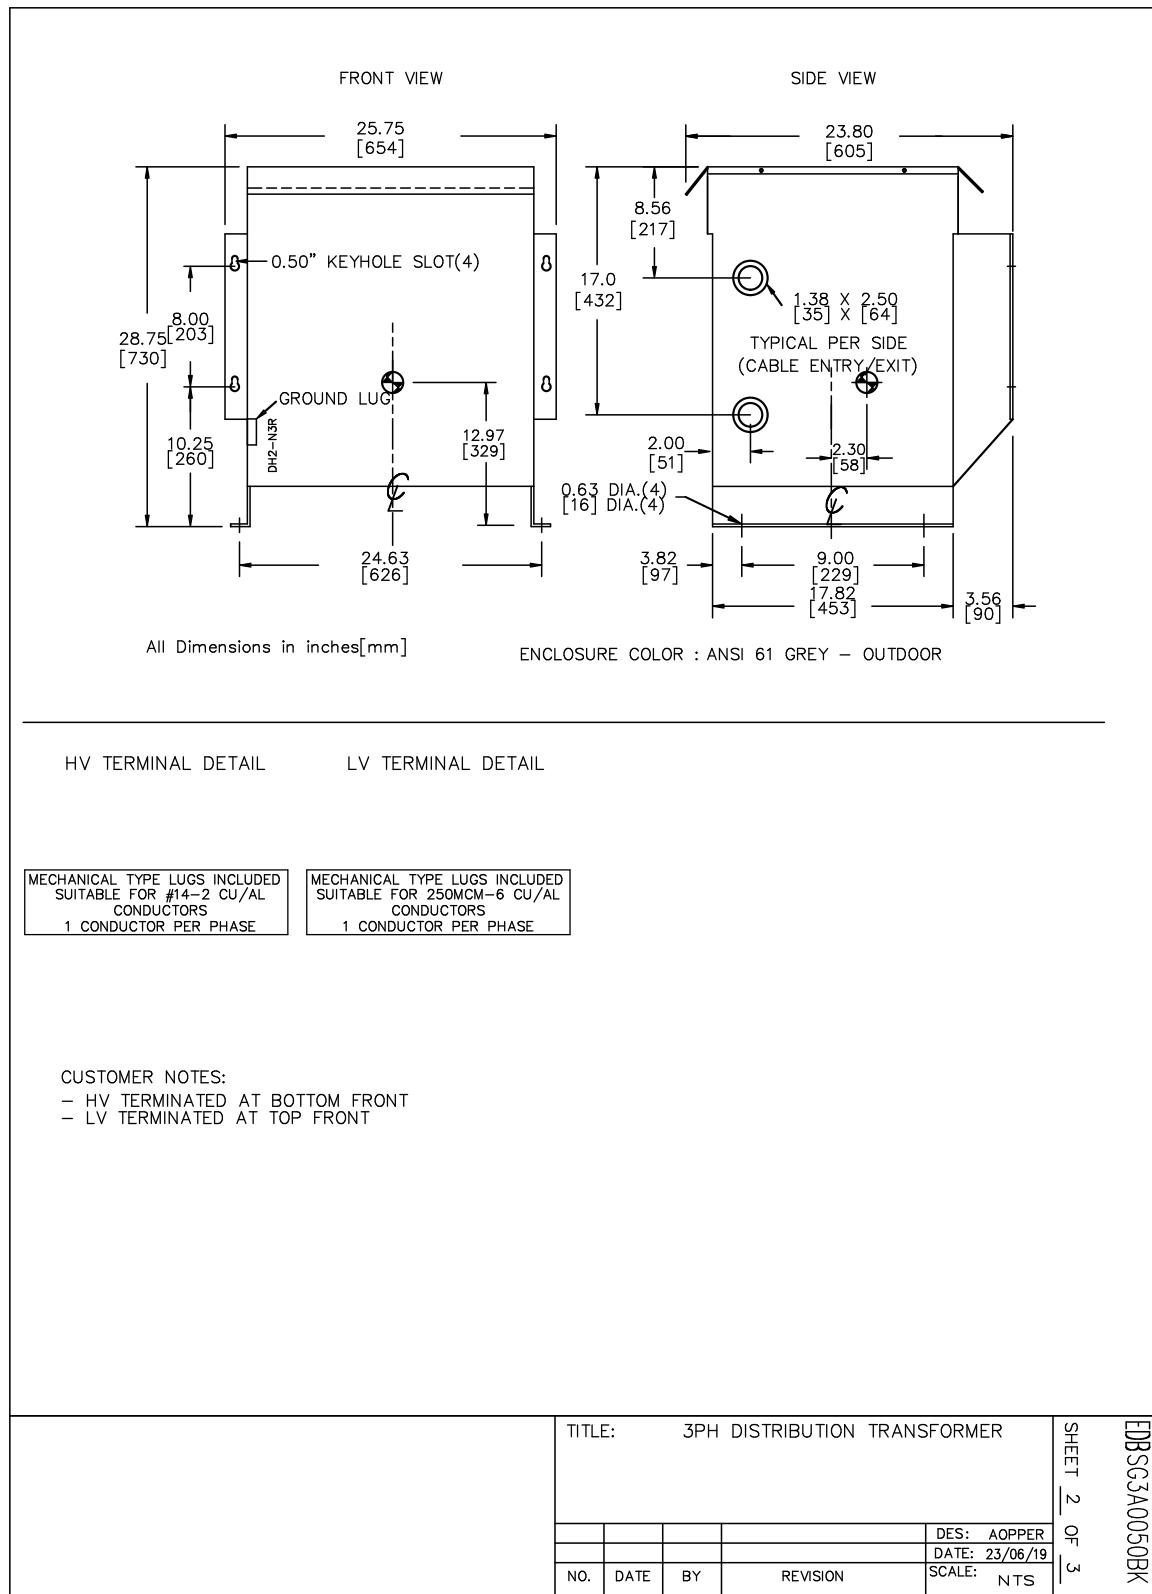**Figure 5. 50 kVA Step-up Transformer — RSTB0050G4**




## Dimensions and Weights


**Figure 6. 50 kVA Step-up Transformer — RSTB0050G4**

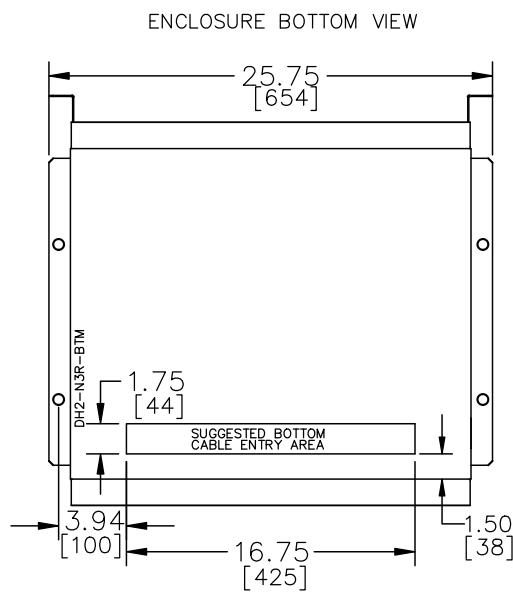

NOTE:  
WHEN BOTTOM CABLE ENTRY IS OPTED, THE  
SPACE USED FOR CONDUITS IN THE FRONT OF  
THE TRANSFORMER SHOULD NOT OBSTRUCT  
MORE THAN 50% OF THE FRONT AIR INTAKE  
AREA DEFINED BETWEEN THE BOTTOM PLATE  
AND THE SUPPORTING LEGS.  
SEE MANUAL FOR ADDITIONAL INFORMATION

		TITLE: 3PH DISTRIBUTION TRANSFORMER ENCLOSURE BOTTOM VIEW				SHEET 3 OF 3
						DES: AOPPER
						DATE: 23/06/19
NO.		DATE	BY	REVISION		SCALE: NTS


**Figure 7. 50 kVA Step-up transformer — RSTB0050G4**

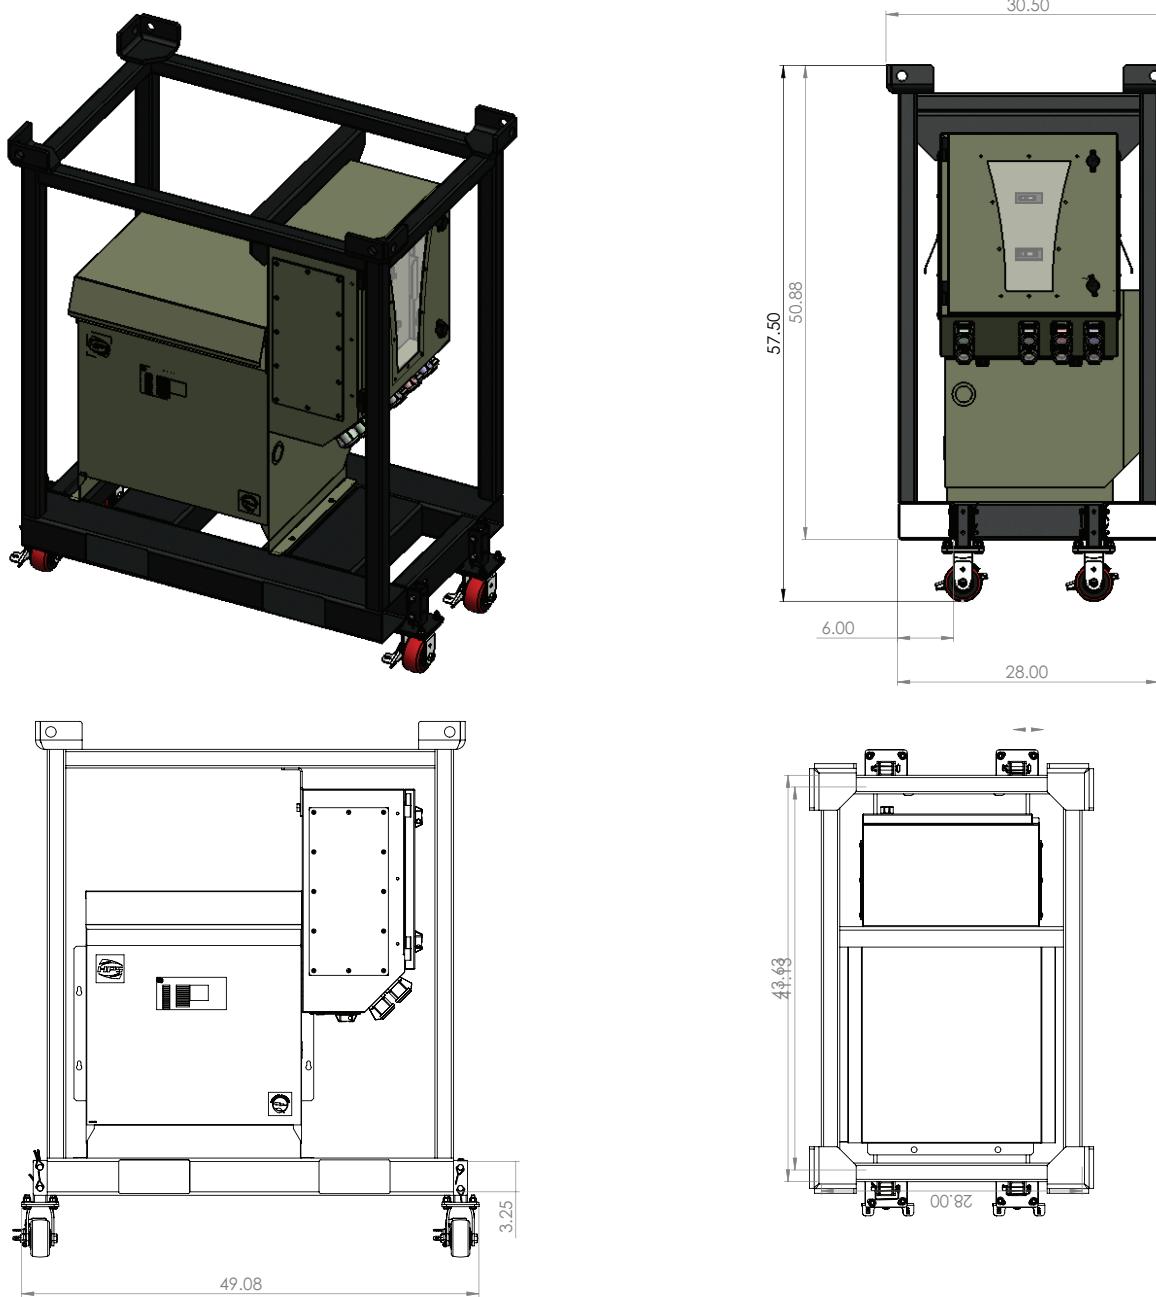




## Dimensions and Weights

Figure 8. 50 kVA Step-up transformer

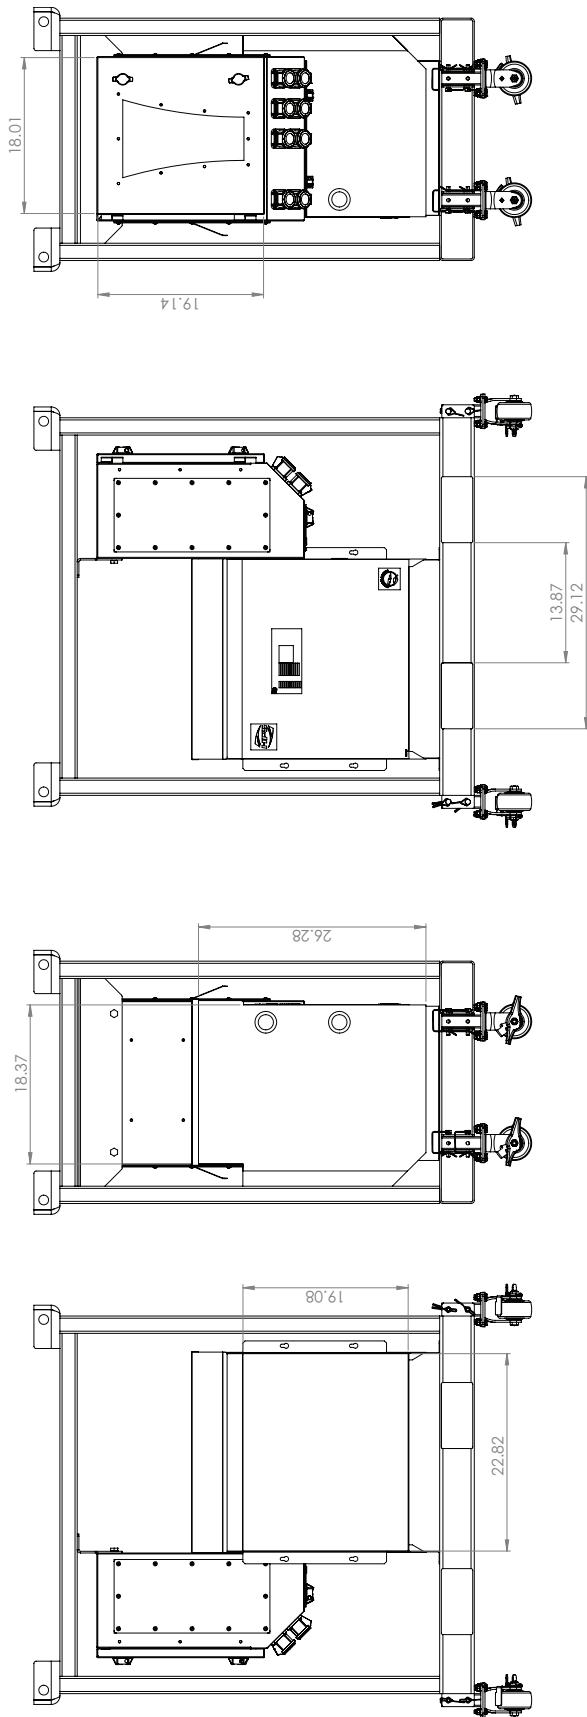

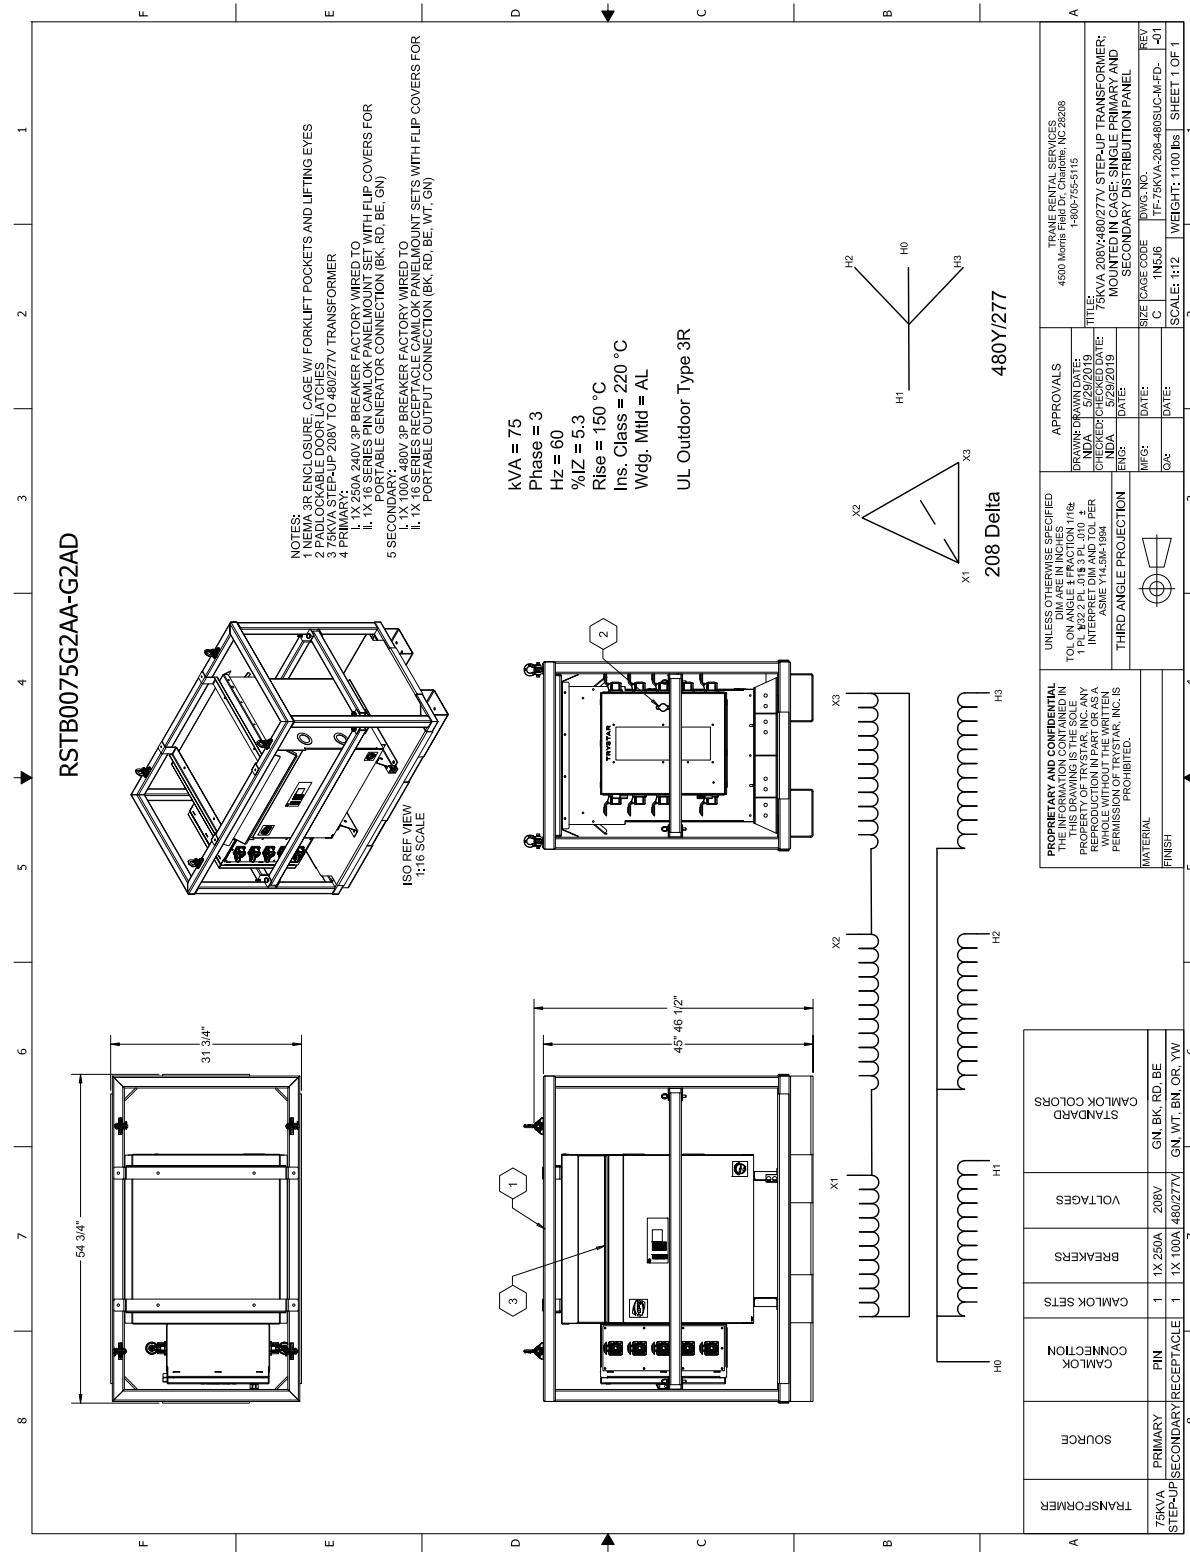**Figure 9. 75 kVA Step-up (208V to 480V) transformer RSTB0075G2AA-G2AD**




## Dimensions and Weights

Figure 10. 150 kVA Step-up (208V to 480V) transformer RSTB0150G2AQ-G2AV


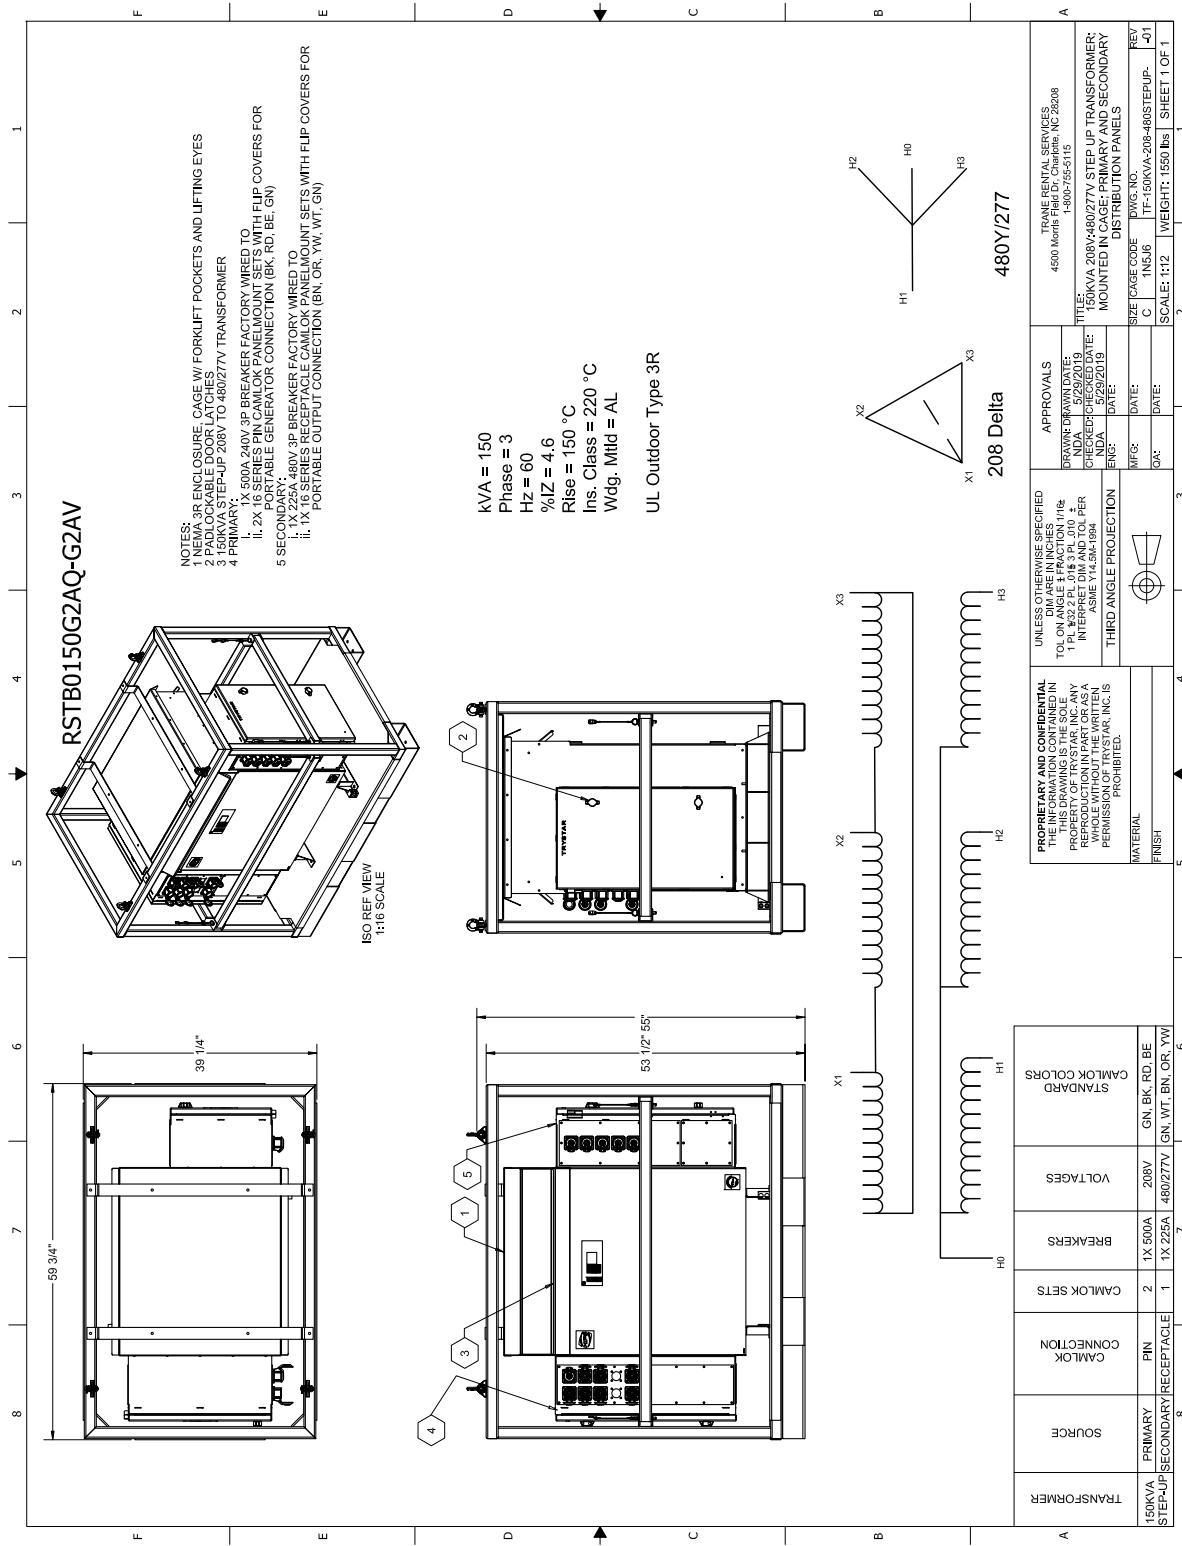



Figure 11. 300 kVA Step-up (208V to 480V) transformer RSTB0300G2AX-G2BE




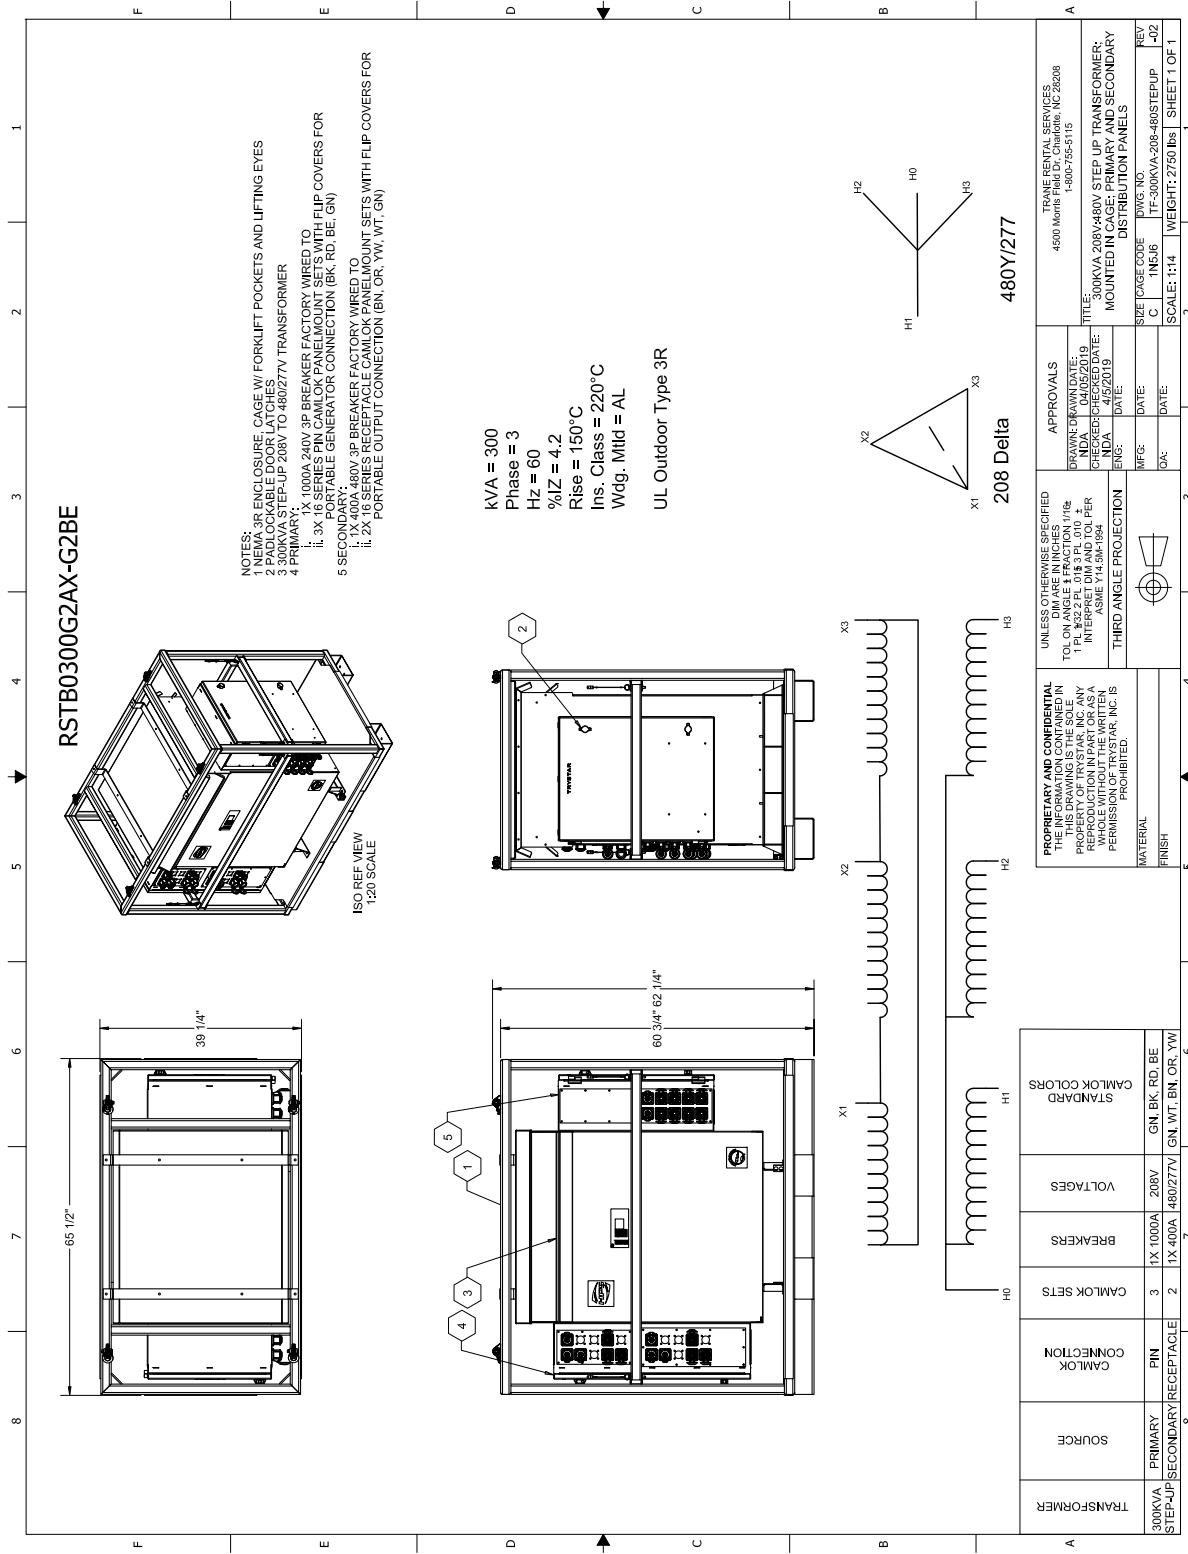

## Dimensions and Weights

Figure 12. 500 kVA Step-up (208V to 480V) transformer RSTB0500G2XX

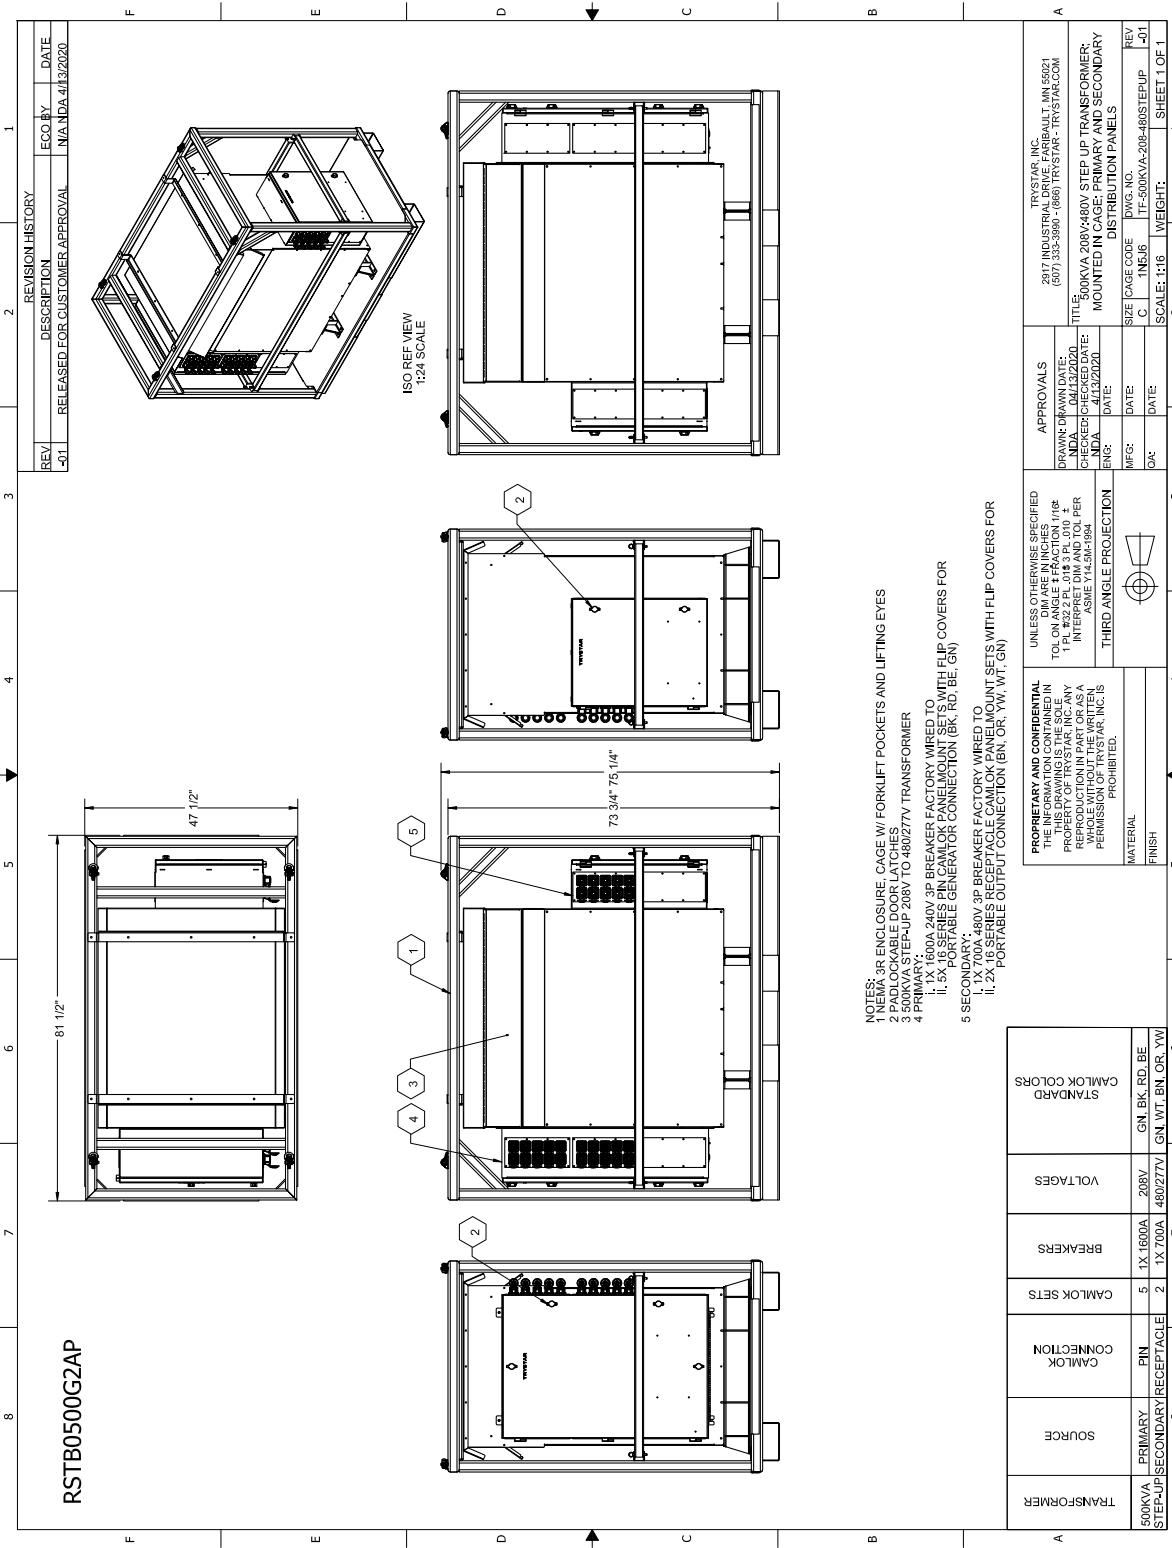

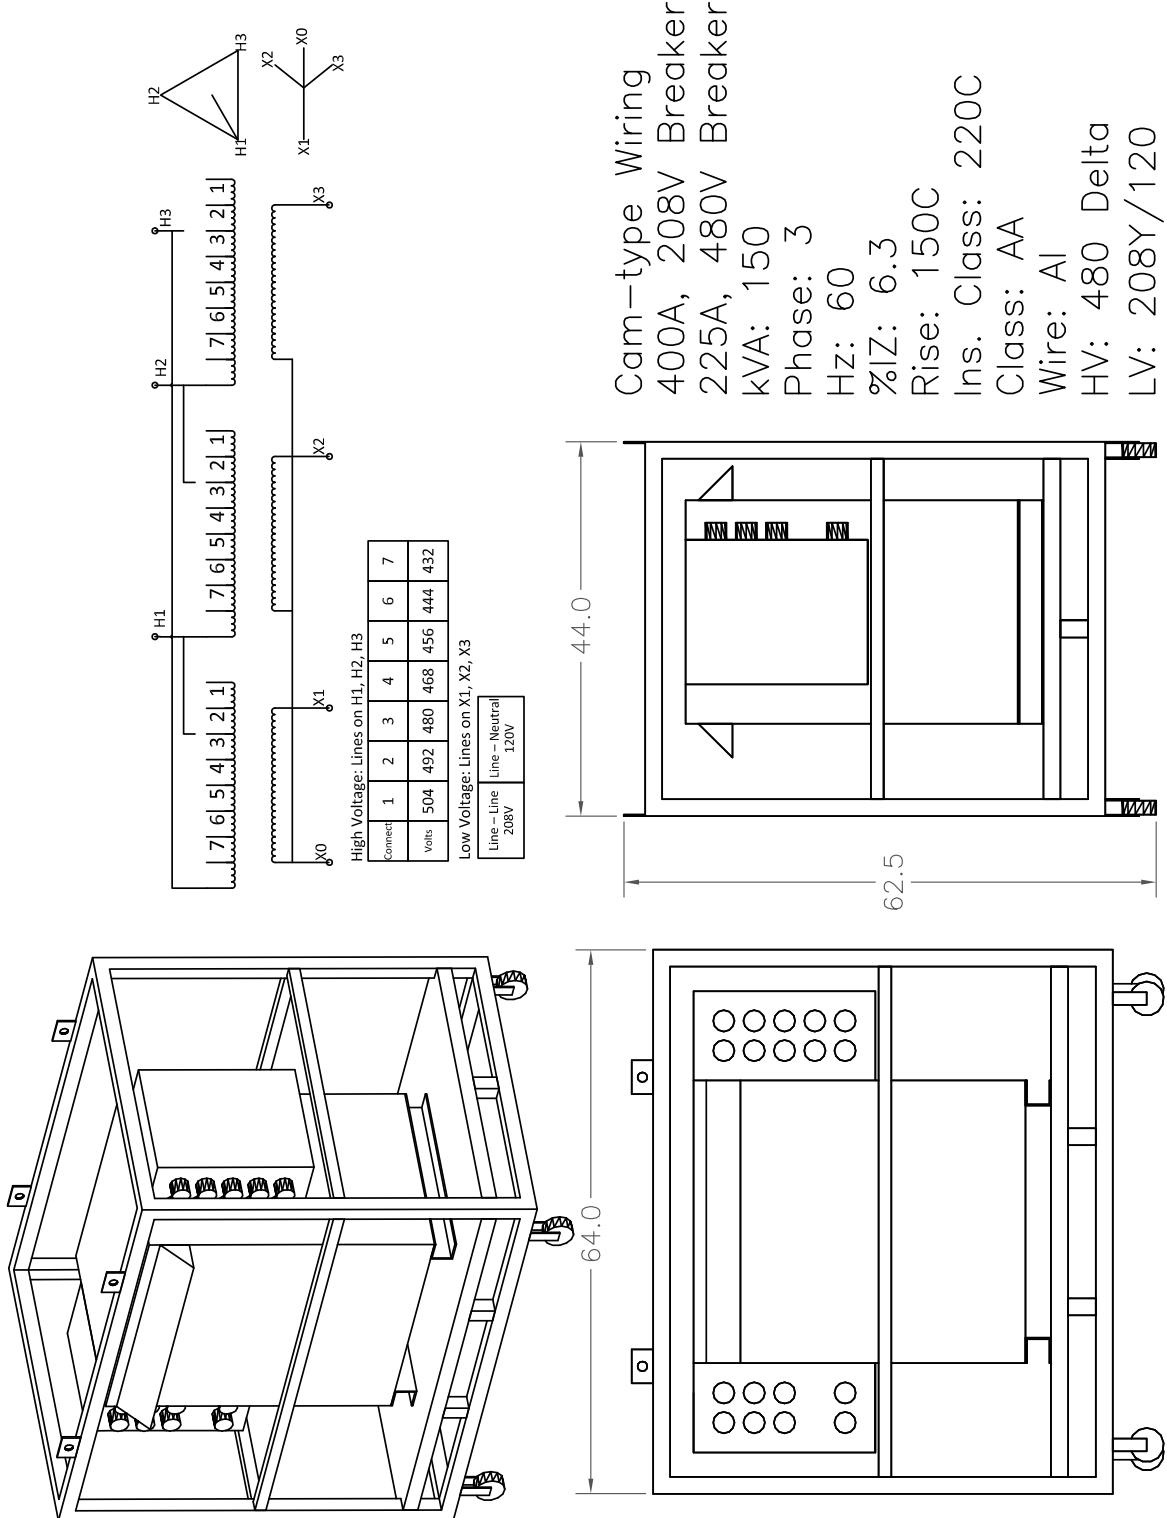**Figure 13. 150 kVA Step-down transformer (480/208 only) RSTG0150B2XX**


## Dimensions and Weights

Figure 14. 1000 kVA Step-down (4160V to 480V) transformer RSTM1000G2AA


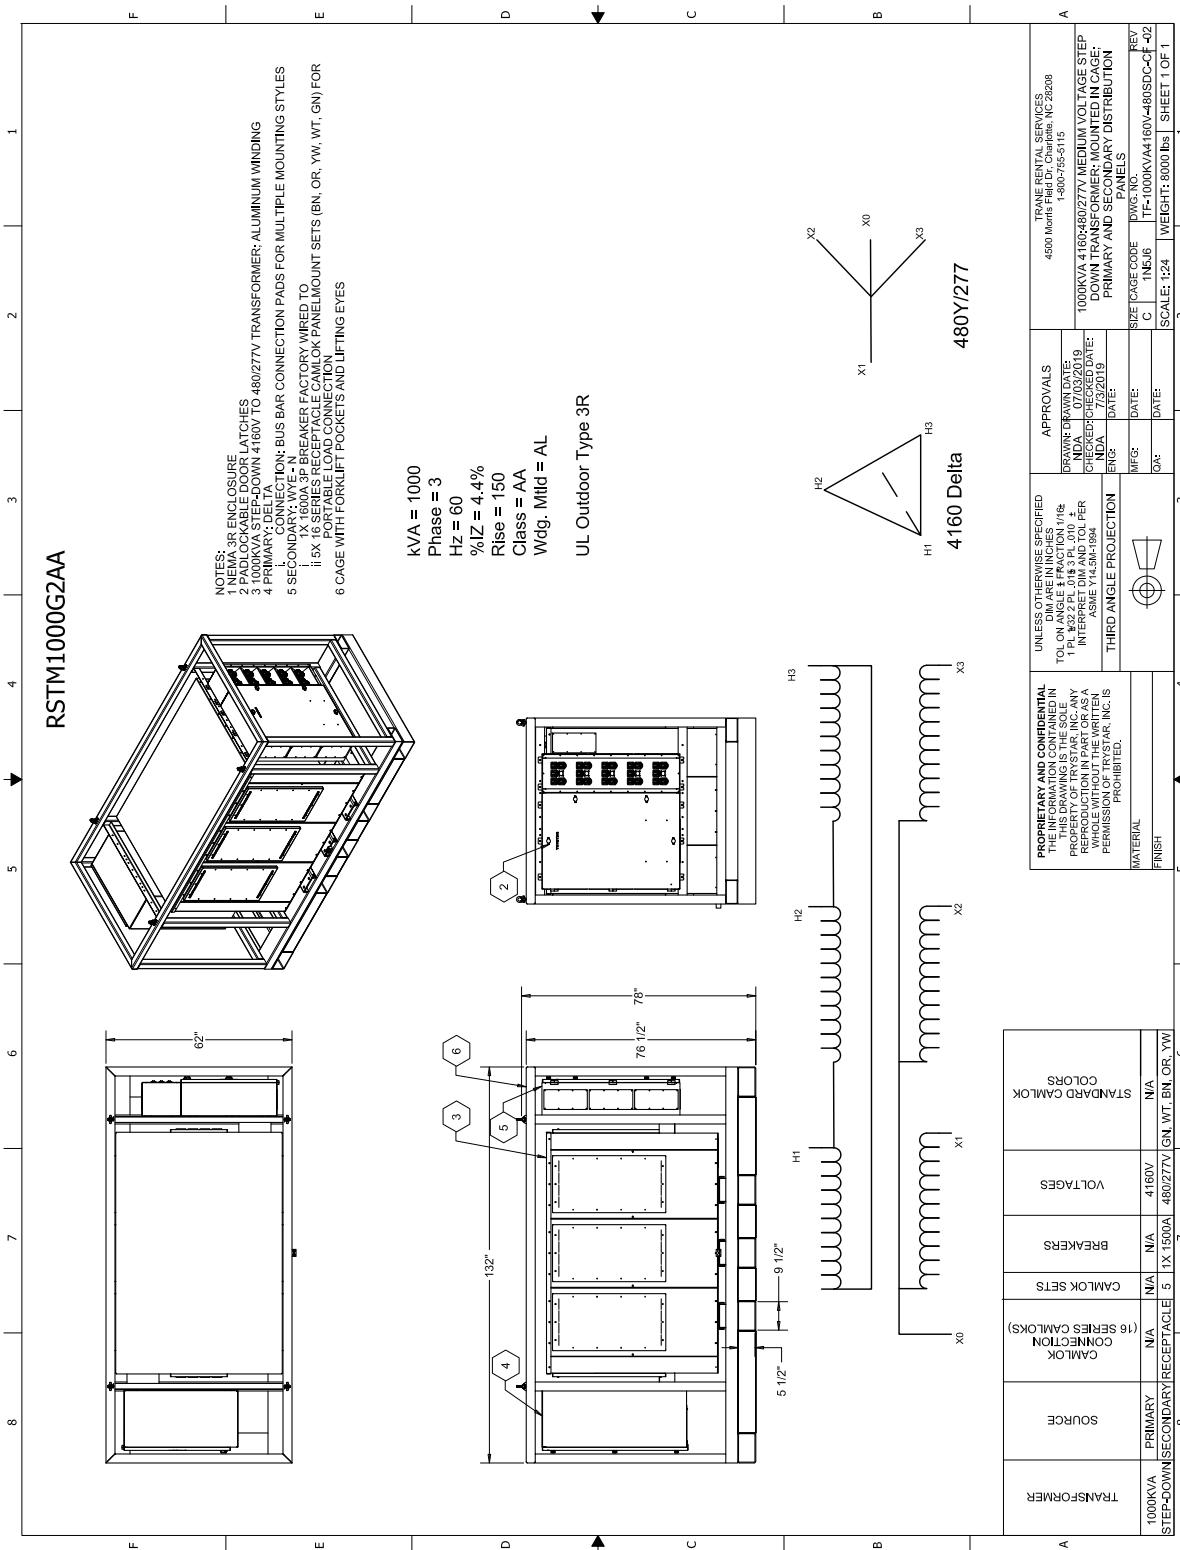


Figure 15. 1500 kVA Step-down (4160V to 480V) transformer RSTM1500G2AA

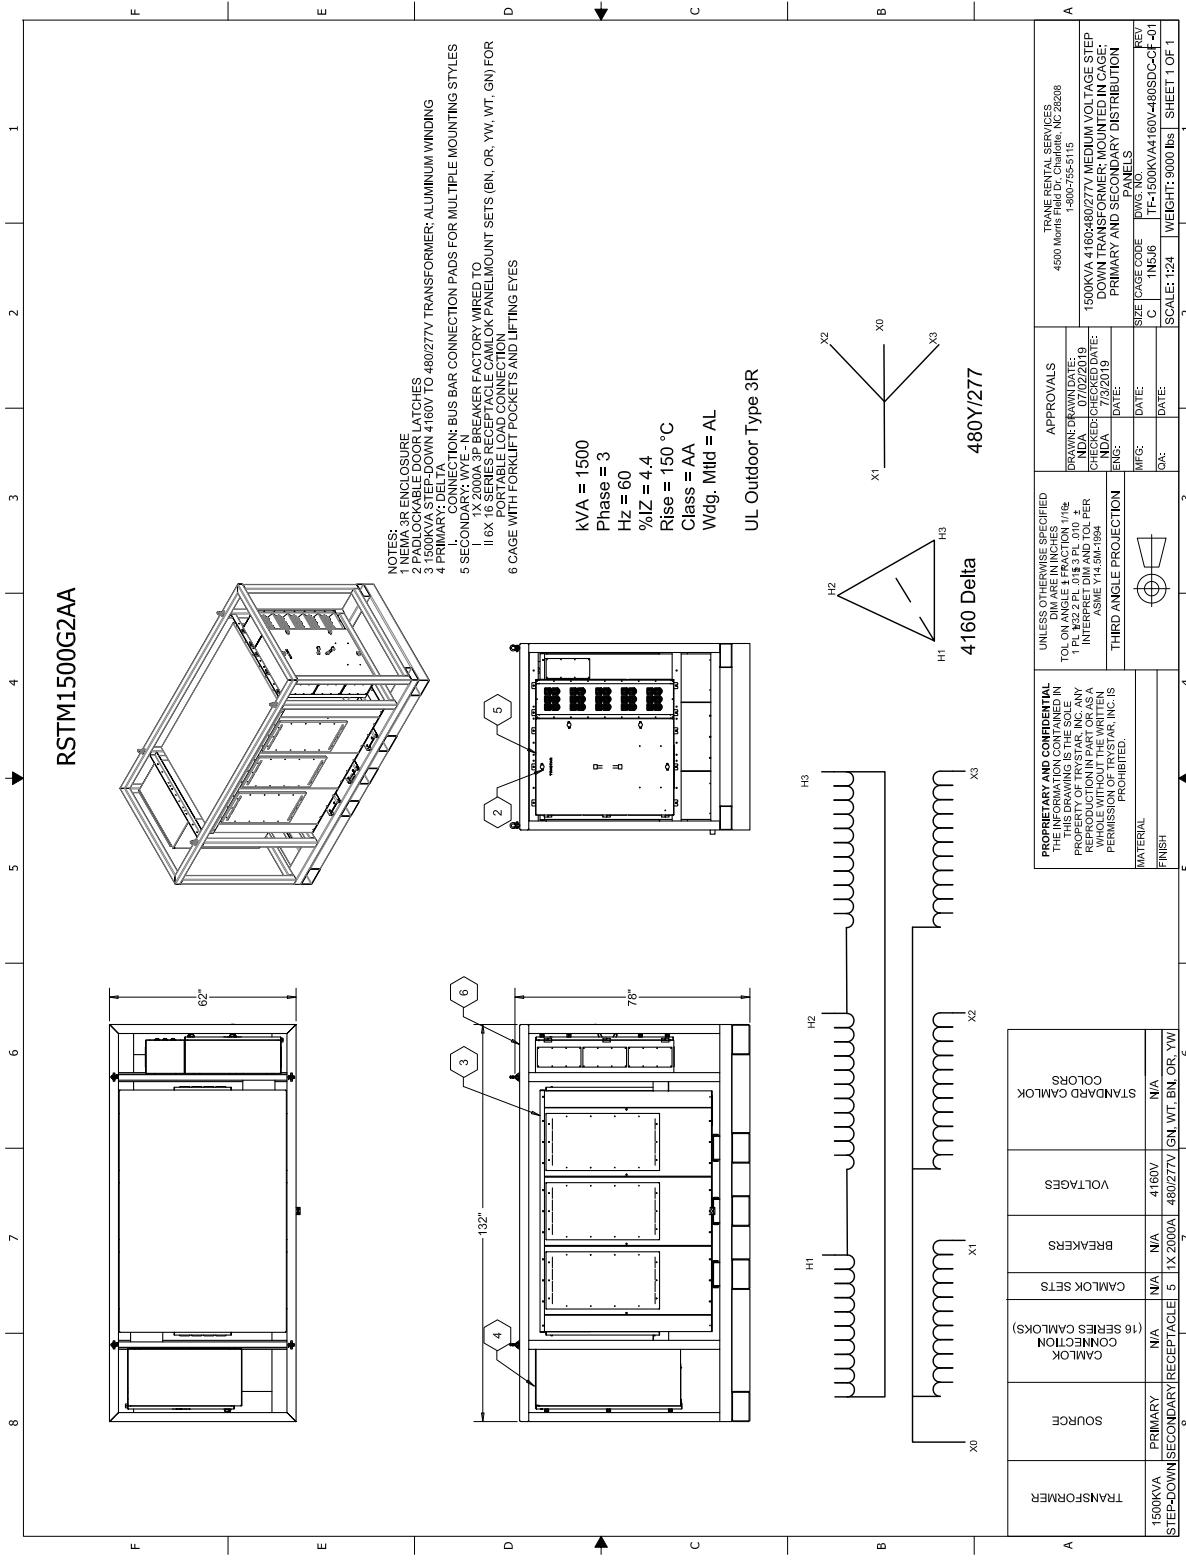

## Auto Transformers

Figure 16. 300 kVA Autotransformer (600 volts and lower) CSTZ0300Z0XX



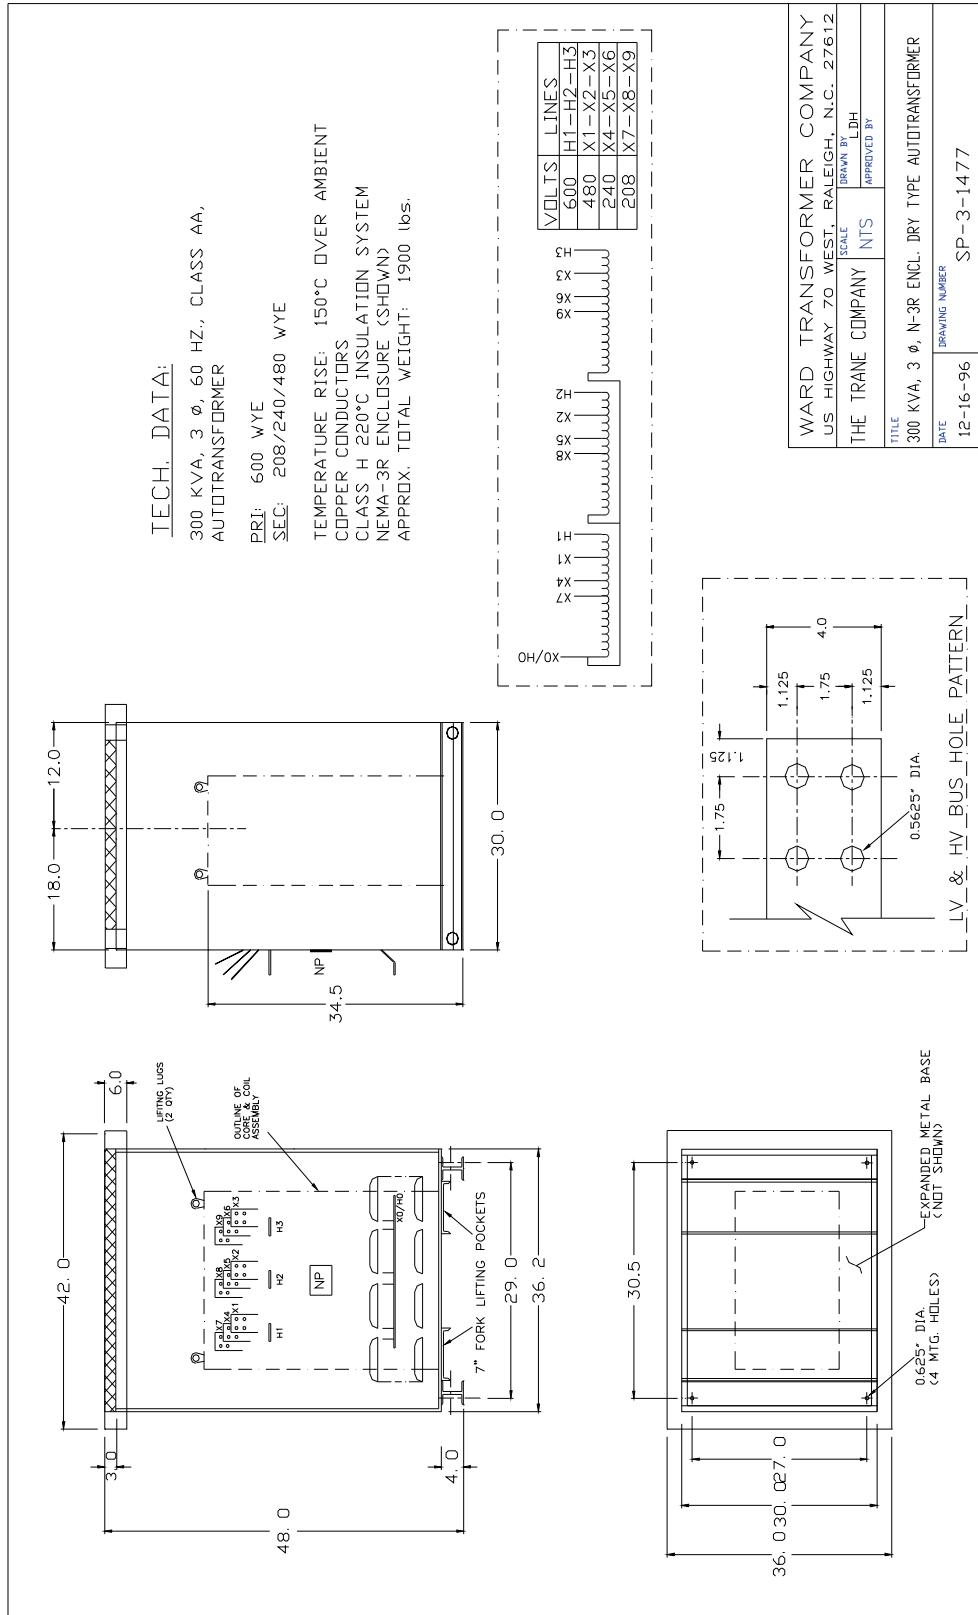


Figure 17. 300 kVA Autotransformer (600 volts and lower) CSTZ0300Z1XX

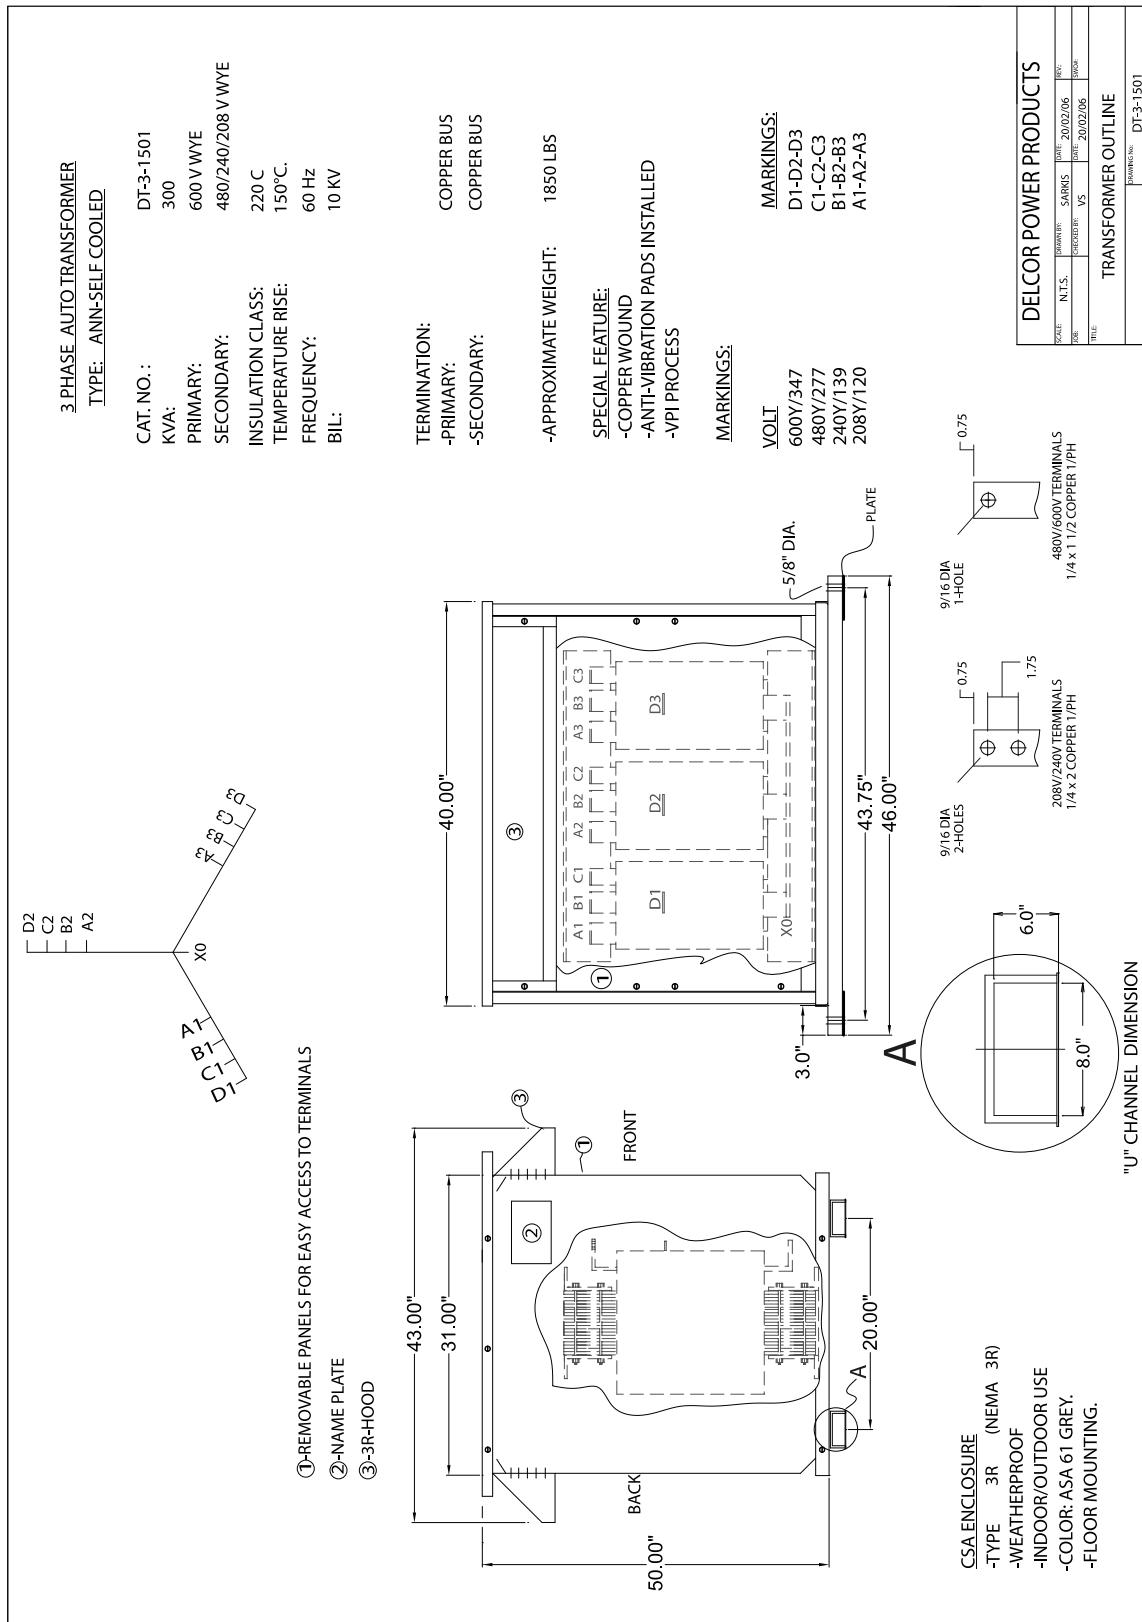


## Dimensions and Weights

Figure 18. 500 kVA Autotransformer (600 volts and lower) CSTZ0500Z0XX

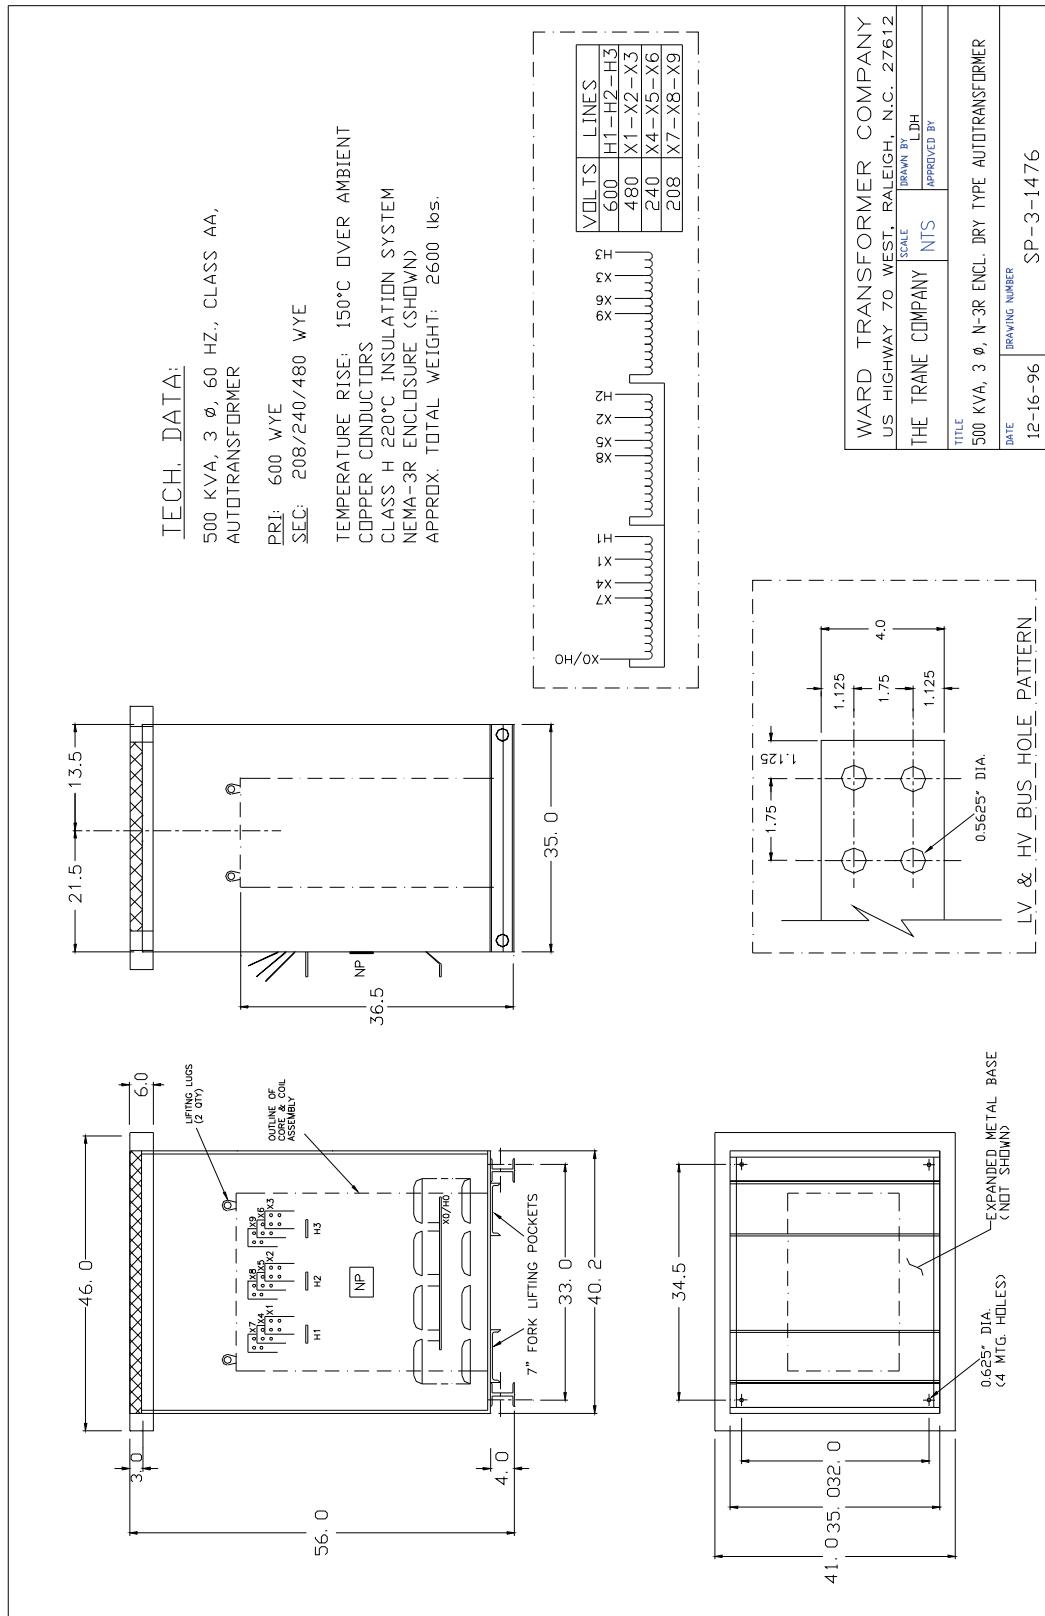


**Figure 19. 500 kVA Autotransformer (600 volts and lower) CSTZ0500Z1XX.**

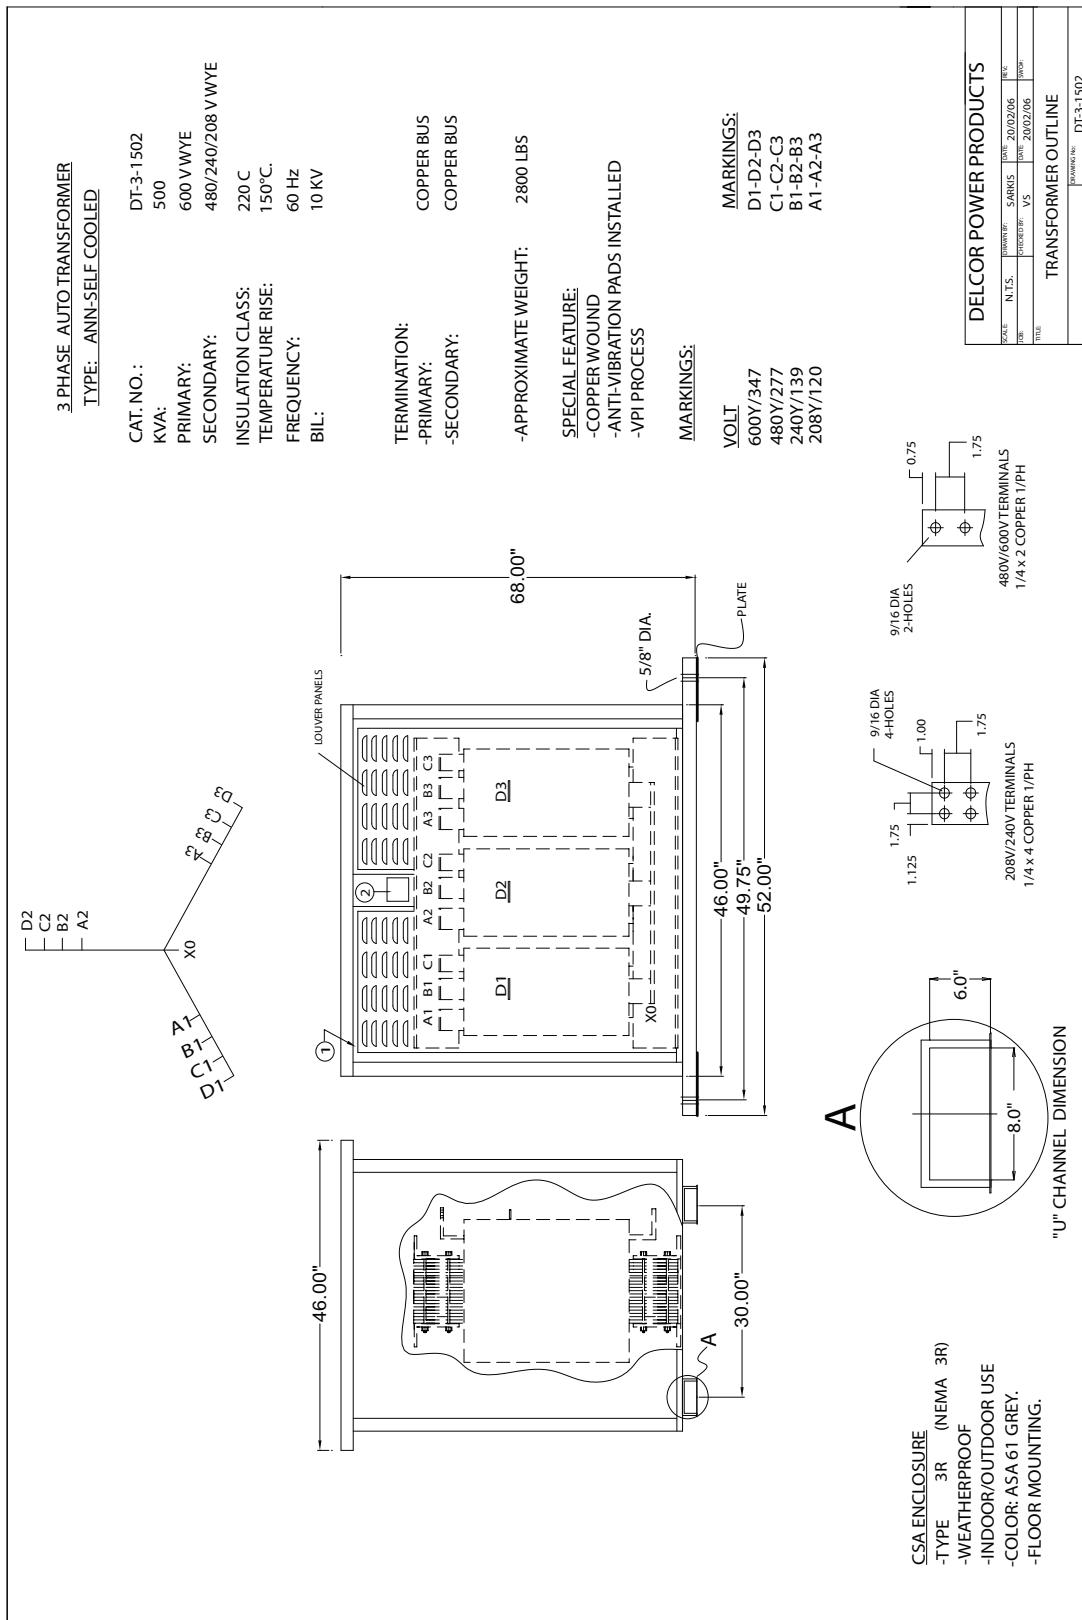




## Dimensions and Weights

**Figure 20. 750 kVA Autotransformer (600 volts and lower) CSTZ0750Z0XX**

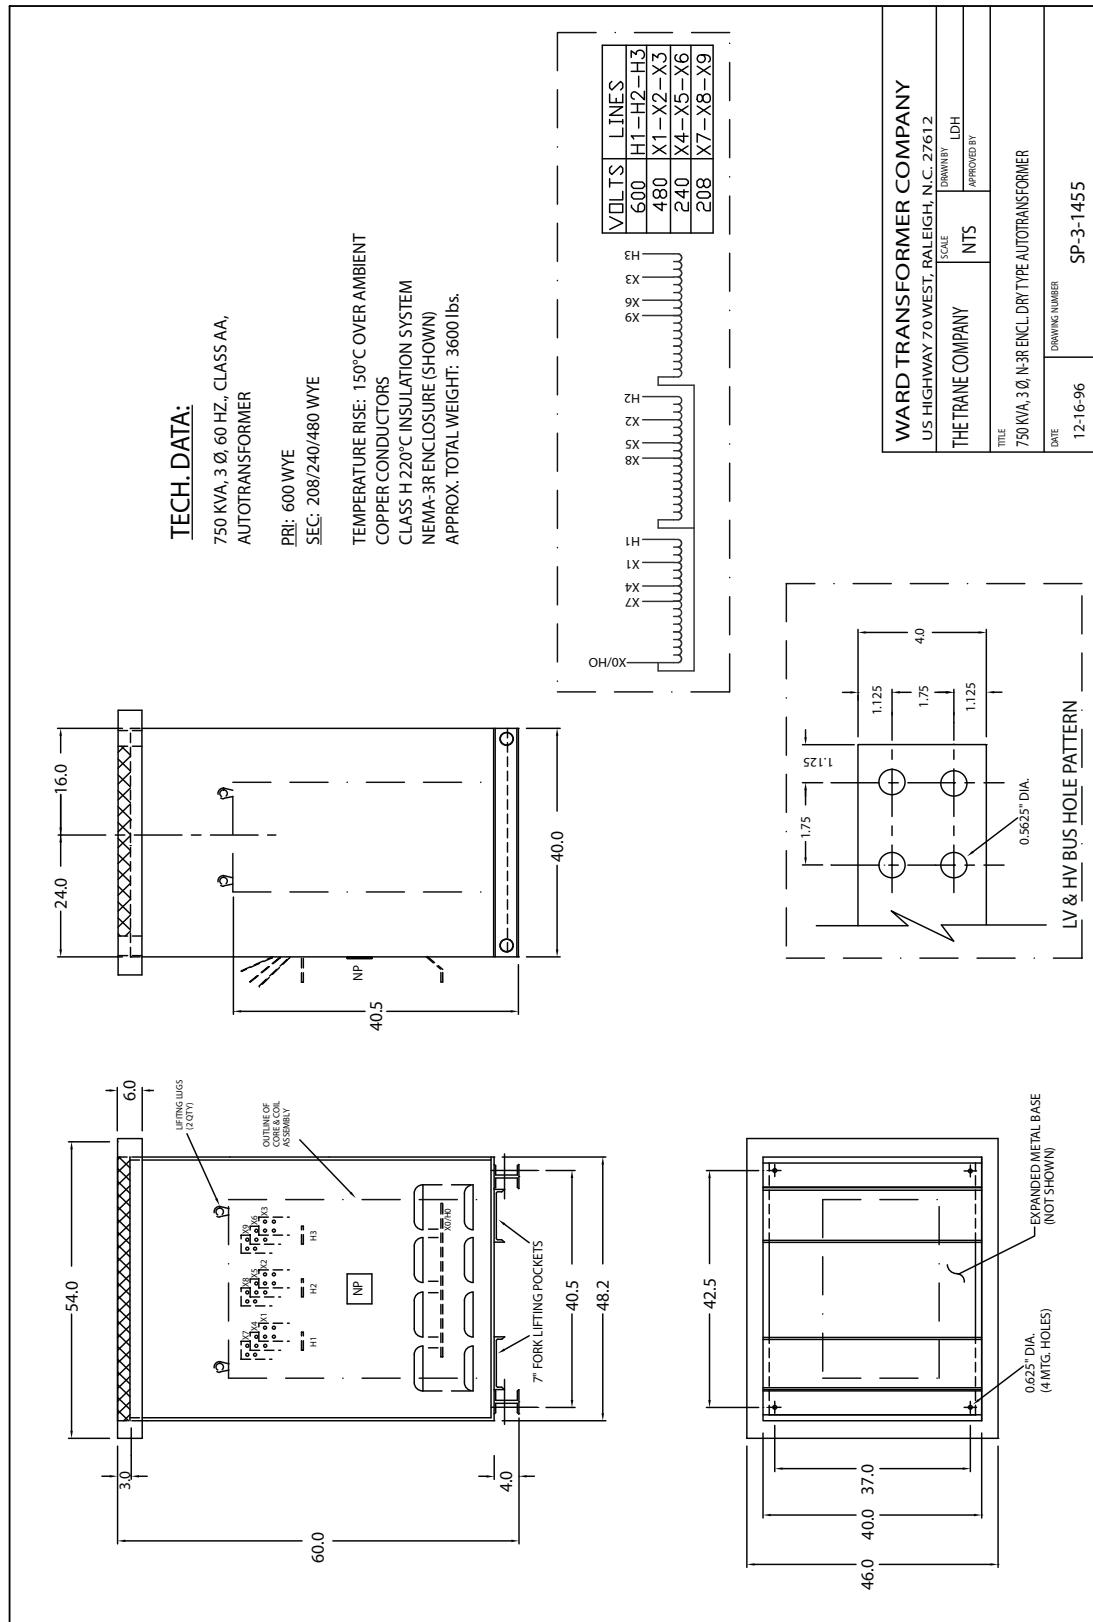


**Figure 21. 750 kVA Autotransformer (600 volts and lower) CSTZ0750Z1XX**

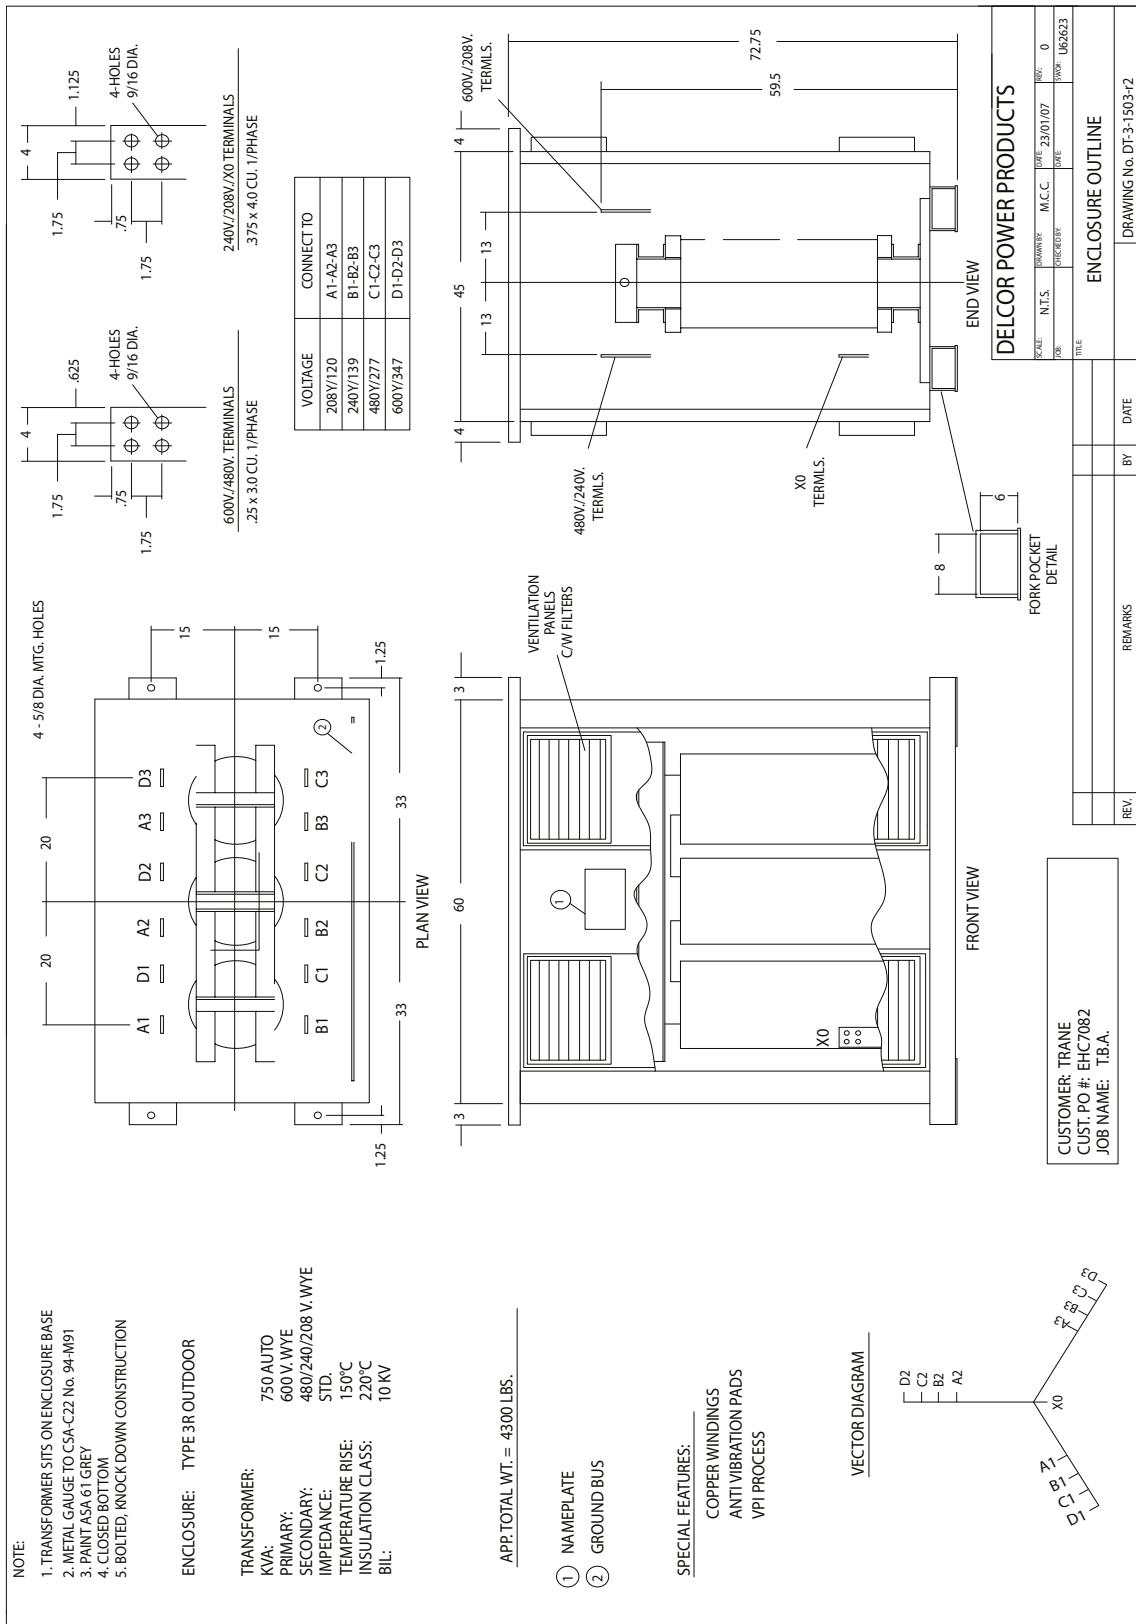




## Dimensions and Weights

Figure 22. 750 kVA Autotransformer (480 volts and above) CSTQ0750Q0XX

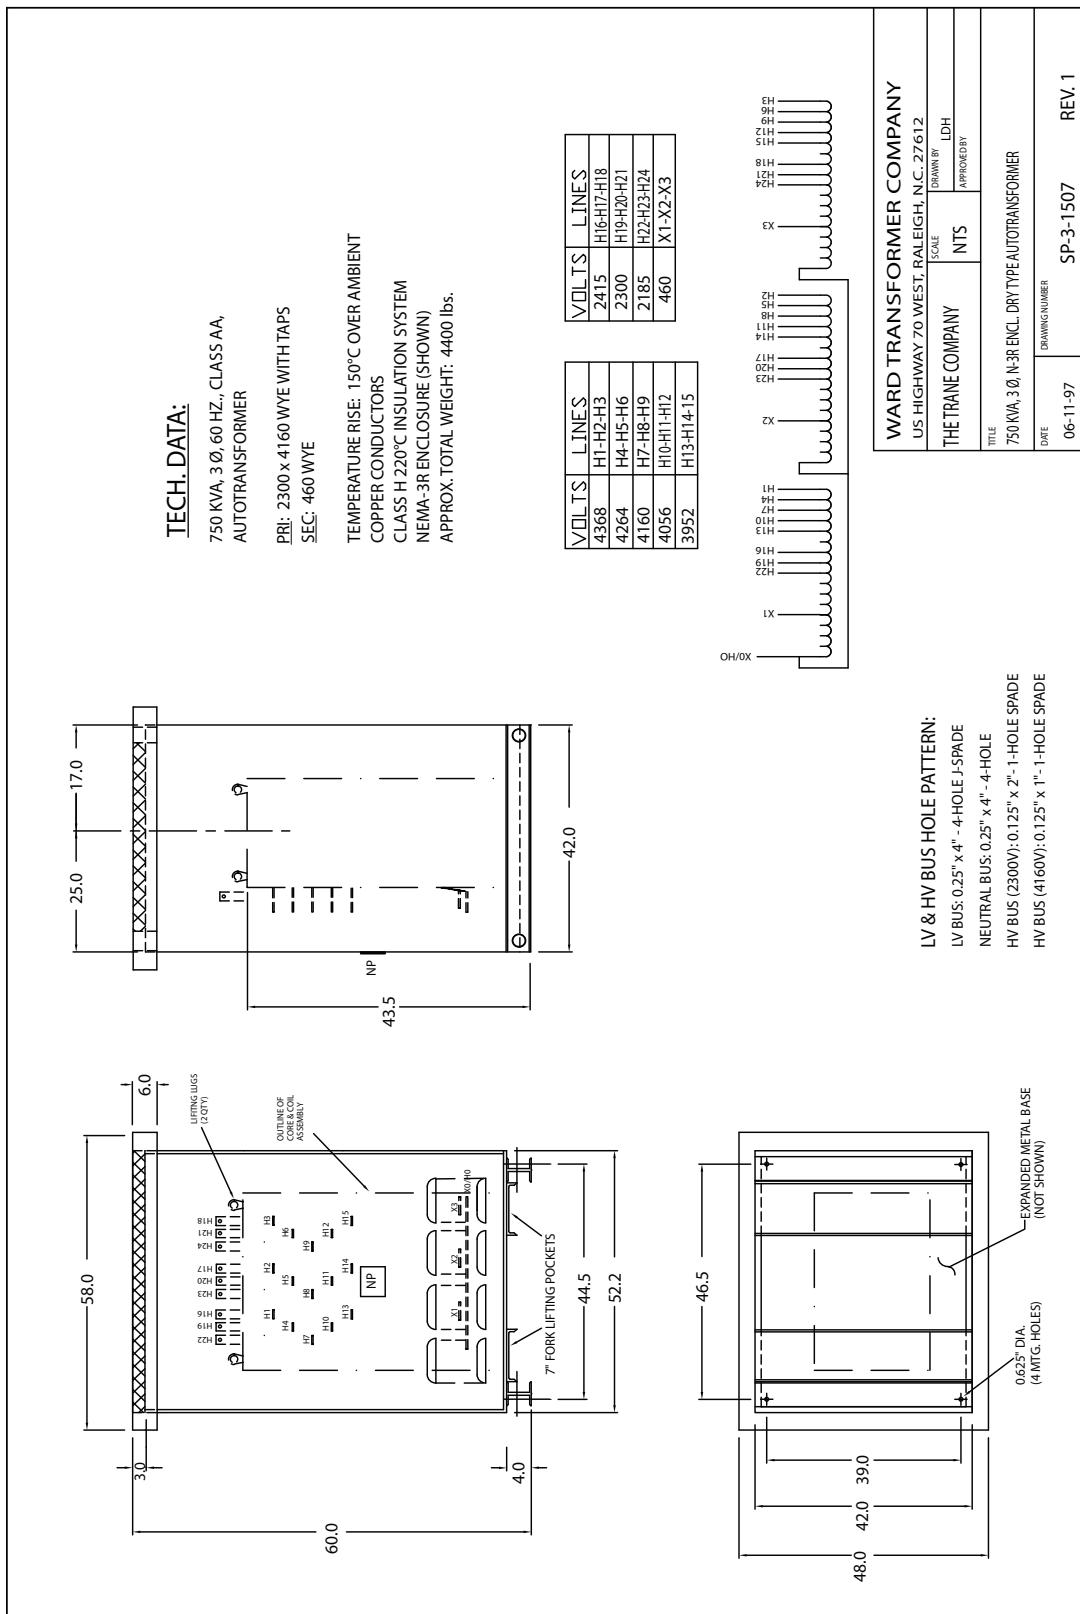


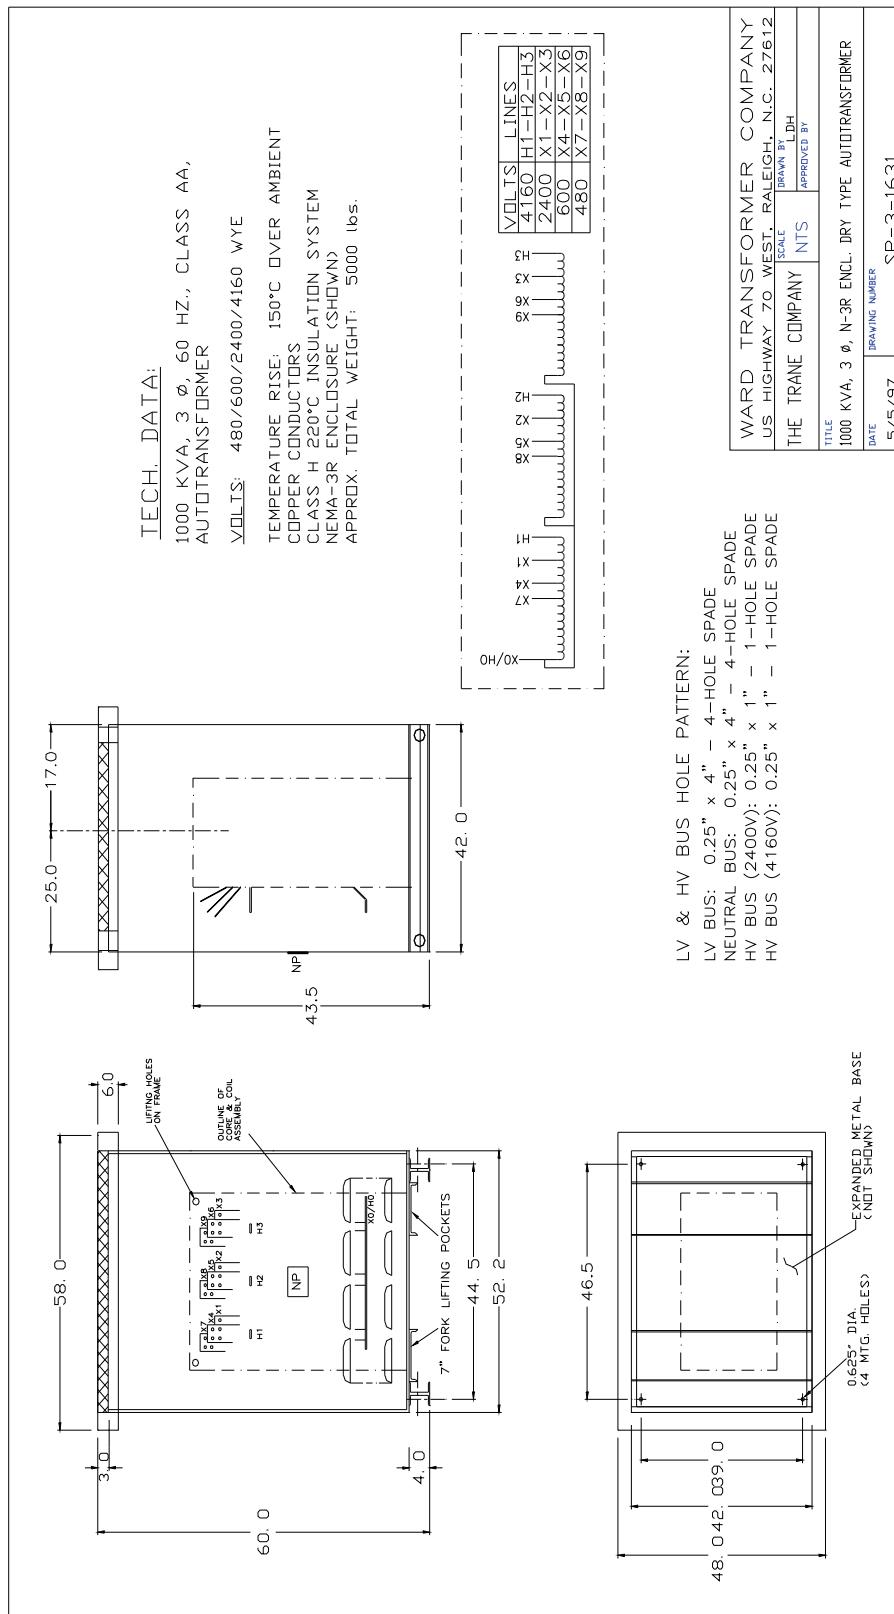**Figure 23. 1000 kVA Autotransformer (480 volts and above) CSTR1000R0XX**




## Dimensions and Weights

Figure 24. 1000 kVA Autotransformer (480 volts and above) CSTR1000R1XX

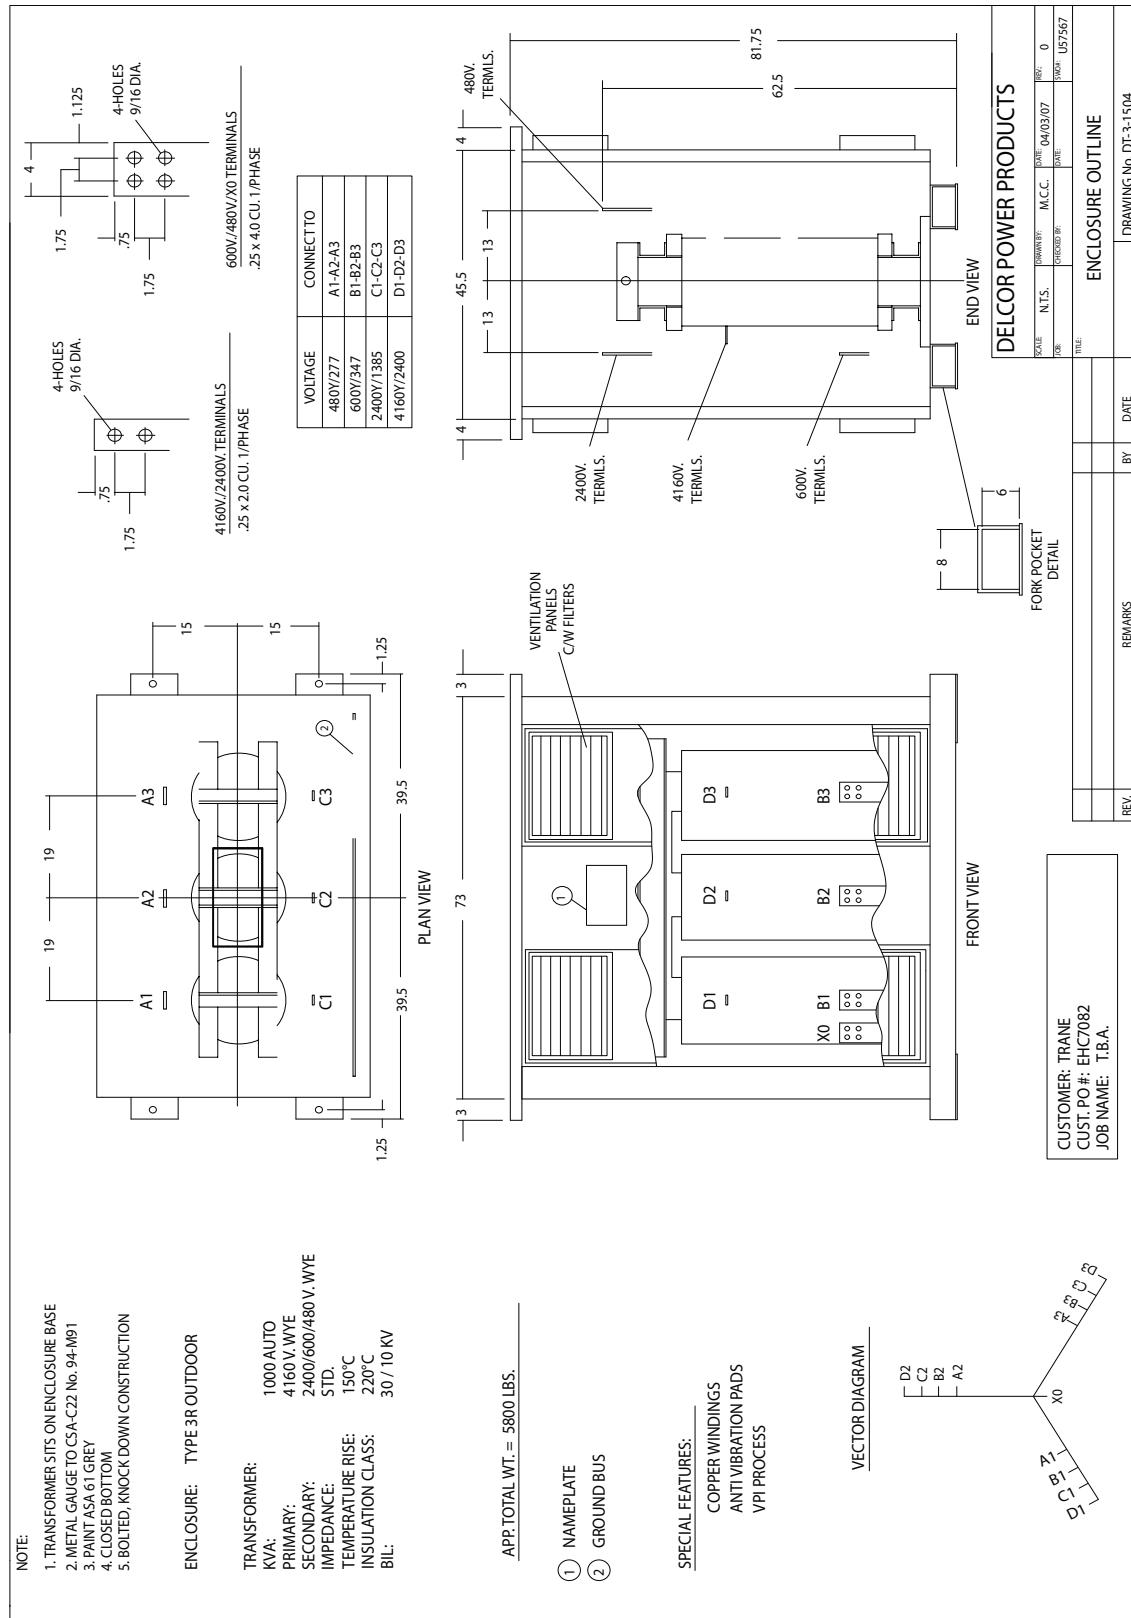



# Installation

All transformers must be installed per the National Electric Code (NEC) and/or applicable local codes. Canadian installation must conform to CSA and/or applicable local codes.

## ⚠ WARNING

### Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

## ⚠ WARNING

### Hazardous Voltage!

Failure to disconnect power before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. Verify that no power is present with a voltmeter.

## NOTICE

### Use Copper Conductors Only!

Failure to use copper conductors could result in equipment damage as the equipment was not designed or qualified to accept other types of conductors.

## ⚠ WARNING

### Improper Cable Usage!

Failure to follow instructions below could result in unit dropping which could result in death or serious injury, and equipment or property-only damage.

Any electrical cable provided by Trane Rental Services is intended for use coil taps for 600V and below. Connections to any other voltage taps must be made with conductors provided by others.

Table 2. Three-phase transformer full-load currents in amperes

Transformer kVA	Rated Phase to Phase Voltage					
	208	240	480	600	2400	4160
75	208.0	N/A	90.0	N/A	N/A	N/A
150	400.0	N/A	180.0	N/A	N/A	N/A
300	832.7	721.7	360.9	288.7	N/A	N/A
500	1387.9	1202.9	601.4	481.1	N/A	N/A
750 (600V)	2081.9	2081.9	1804.3	721.7	N/A	N/A
750 (4160V)	N/A	N/A	902.1	721.7	180.4	104.1
1000	N/A	N/A	1202.9	962.3	240.6	138.8
1500	N/A	N/A	1804.3	N/A	N/A	208.2

# Unloading, Handling, and Storage

## ⚠ WARNING

### Heavy Object!

Failure to follow instructions below could result in unit dropping which could result in death or serious injury, and equipment or property-only damage.

Be careful when lifting the heat pump. Use appropriate lifting tools.

Handle the transformer with care to prevent damage to the enclosure or the core and coil assembly. It is recommended to use a fork lift with forks extended completely under the entire unit. Forks should extend out past the opposite side a small amount for full pickup coverage. Alternately, use the lifting eyes or openings provided to lift the unit off an open truck or storage area.

**Note:** Check the nameplate weight before attempting to lift the transformer.

When lifting the transformer, verify the equipment and cables can handle the load. Where steel cables or nylon straps are used, it is recommended to use spreader bars to



## Installation

Keep the cable from damaging the enclosure of the transformer. If conditions allow, use convention slings or ropes.

Always have the transformer in the upright position when moving the unit. The transformer should never be slid across the ground or floor unless mounted on a skid or rollers designed for this purpose. Damage could result to the enclosure.

Dollies with casters or a flat base can make the operation of moving the equipment easier.

Always store the transformer in a warm dry location with uniform temperature to prevent condensation. Use a plastic cover to keep out dust and contaminates during storage.

## Location

### Atmosphere

NEMA 3R or outdoor design units require a rain shield or suitable housing for protection from the elements.

### Temperature

Temperature in the installation area must be normal for the rated design. Transformers are designed to operate at a maximum ambient air temperature of 40°C and a maximum temperature rise of 150°C.

At higher or lower ambient temperatures loading can be adjusted to its maximum value by the following values:

1. For each degree of C that the average ambient of 30°C exceeds the maximum load on the transformer must be reduced by 1% rating of the kVA.

**Example:** 300 kVA - 1% = 297 kVA

2. For each degree of C that the average ambient is less than 30°C the maximum load can be increased by .67% of the rated kVA.

**Example:** 300 kVA + 0.67% = 302 kVA

- Formula to convert from °F to °C:  
[(Temp. in °F - 32)/1.8]
- Formula to convert from °C to °F:  
[(Temp. in °C x 1.8) + 32]

### Ventilation

Place transformers in an area with good ventilation. Proper cooling of a dry type transformer depends on circulation of clean air free from dust, dirt, or corrosive elements. Filtered air is preferable and may be mandatory in some cases of extreme air pollution. This can help reduce the maintenance of the transformer.

- Height of the vault and location opening can affect the transformer loading due to airflow or lack of airflow.
- A minimum 12-inches should be provided on all sides of a dry type transformer and between adjacent units.
- Wall mount transformers should have at least 6-inches of space beneath the transformer to provide adequate ventilation.

- Free standing or floor mount transformers with bottom ventilation must be on the feet provided with a minimum clearance of 12-inches front to rear for access to proper air flow for bottom ventilation.

## Mounting

- Dry type transformers can be mounted on various surfaces and with different methods of mounting. The transformer should be mounted in an upright position. This will allow for effective ventilation.
- Confirm the surface where the transformer is mounted is strong enough to handle the weight of the unit. Before installation, check the nameplate for the weight.
- It is recommended the surface is flat and level. If not flat and level, additional noise from vibrations may be heard. Installation of a dry type transformer includes the need to supply impulse protective devices such as arresters. Dry types do not have the same impulse levels as their liquid filled counterpart. If units could be exposed to lightning strikes or heavy switching transients, proper protective equipment should be provided.

## Grounding

### ⚠ WARNING

#### Hazardous Voltage!

Failure to disconnect power before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. Verify that no power is present with a voltmeter.

The enclosure of the transformer and the core assembly should be permanently grounded in accordance with the latest National Electric Code requirements. In most cases it is improper to use the X0 terminal when bonding to ground. Local requirements may vary. Consult the electrical contractor for additional information.

## Tap Settings

Units are shipped without wiring lugs. For multi-tap autotransformers, wiring lugs are required to complete installation. It is the responsibility of the customer to have a qualified electrician, or licensed contractor, specify, supply, and install the wiring lugs.

Determination of the required lugs for installation will include, but may not be limited to, the terminal sizes and hole patterns on the transformer taps and the size and quantity of wire being used to connect the equipment. Refer to the Bus Terminal Dimensions table and drawing for each transformer for this information.

**Important:** Lugs will be required for wiring of both the primary and secondary coil.

Primary/secondary dedicated step-up or step-down units are equipped with cam-type electrical connections. Units

do not require lugs and cannot be hard wired. See the following table.

**Table 3. Transformer bus terminal dimensions for lug sizing (lugs not provided)**

Transformer Size	Mfg.	LV Bus	HV Bus
75 kVA Step Up Transformer (208/480 only)	Trystar	N/A (Cam-type connection)	N/A (Cam-type connection)
150 kVA Step Down Transformer (480/208 only)	Trystar	N/A (Cam-type connection)	N/A (Cam-type connection)
150 kVA Step Up Transformer (208/480 only)	Trystar	N/A (Cam-type connection)	N/A (Cam-type connection)
300 kVA Step Up Transformer (208/480 only)	Trystar	N/A (Cam-type connection)	N/A (Cam-type connection)
500 kVA Step Up Transformer (208/480 only)	Trystar	N/A (Cam-type connection)	N/A (Cam-type connection)
1000 kVA Step Down Transformer (4160/480 only)	Trystar	N/A (Cam-type connection)	0.5 in. dia. x 4 inch - 2 hole
1500 kVA Step Down Transformer (4160/480 only)	Trystar	N/A (Cam-type connection)	0.5625-inch dia x 4-inch - 2 hole
300 kVA AutoTransformer (600 volts and lower)	Ward	0.5625-inch dia. x 4-inch - 4 hole	0.5625-inch dia. x 4-inch - 4 hole
500 kVA AutoTransformer (600 volts and lower)	Ward	0.5625-inch dia. x 4-inch - 4 hole	0.5625-inch dia. x 4-inch - 4 hole
750 kVA AutoTransformer (600 volts and lower)	Ward	0.5625-inch dia. x 4-inch - 4 hole	0.5625-inch dia. x 4-inch - 4 hole
300 kVA AutoTransformer (600 volts and lower)	Delcor	0.5625-inch dia. x 2-inch - 2 hole	0.5625-inch dia. x 1.5-inch - 1 hole
300 kVA AutoTransformer (600 volts and lower)	Delcor	0.5625-inch dia. x 4-inch - 4 hole	0.5625-inch dia. x 2-inch - 2 hole
300 kVA AutoTransformer (600 volts and lower)	Delcor	0.5625-inch dia. x 4-inch - 4 hole	0.5625-inch dia. x 4-inch - 4 hole

Transformer Size	Mfg.	480/600V Bus	2300/2400V Bus	4160V Bus
750 kVA Autotransformer (above 600 volts)	Ward	0.25-inch dia. x 4-inch - 4 hole	0.125-inch dia x 2-inch - 1 hole	0.125-inch dia x 1-inch - 1 hole
1000 kVA Autotransformer (above 600 volts)	Ward	0.25-inch dia. x 4-inch - 4 hole	0.125-inch dia x 2-inch - 1 hole	0.2-inch dia. x 1-inch - 1 hole
1000 kVA Autotransformer (above 600 volts)	Delcor	0.5625-inch dia. x 4-inch - 4 hole	0.5625-inch dia. x 2-inch - 2 hole	0.5625-inch dia. x 2-inch - 2 hole

## Drying of Core and Coil Assembly

If the transformer has been stored outdoors or it has been subjected to an extended shut down under high humidity conditions, it may be required to dry the transformer out.

- Check the unit by a Megger for proper ratings based on the voltage to see if required.
- If readings are low, the transformer should be dried before applying rated voltage and loading the unit.

1. All free moisture should be blown or wiped from the coils, core and bus work. Apply heat using space heaters to help dry surface moisture in the enclosure. Use fans to blow the heated air up through the coils, bottom to top to help speed up the process. Do not exceed the insulation temperature rating or coil damage could occur.

**Important:** Heated air should pass through the ventilation ducts in the coil assembly.

2. Drying time will depend on the transformer size, voltage, and amount of moisture present. The higher the parameters, the longer to dry the transformer.
3. Check the winding insulation resistance during the process with a Megger. Insulation resistance will increase during the drying process and the heat should continue until it reaches a plateau. The resistance measurements should be taken in the same manner on all windings.

## Precautions to Minimize Sound Level

There are a number of installation precautions and mounting techniques that will help in the reduction of audible sound levels in energized transformers. Some of the more pertinent information and notes are below:

- Proper location is the first consideration in an installation to keep within or below the prescribed decibel limit of the area.



## Installation

---

- Keep the transformer away from the area that the noise would be the least tolerated.
- Avoid mounting the transformer in a room corner close to the ceiling. Three sided corners act as a megaphone and amplify the sound level.
- Avoid installing in corridors or corners in a stairwell. The transformer sound can be reflected from the walls. This added to the primary sounds of the transformer, can increase the decibel level buildup.
- Where feasible, experiment with the location of the transformer operation and position to determine which area is the best location and orientation for decreased sound level.
- Where necessary, the walls of the transformer room could be covered with a sound dampening material such as fiberglass, acoustical tile, kimsul, and similar materials to reduce the propagation of transformer noise to any adjacent areas.

**Note:** *It should be noted that such material has a major effect on the high harmonics of the transformer, but little effect on the normal hum associated with the unit. While special sound insulation materials are available for the 120 cps frequency range, cost may make them impractical for the application.*

## Mounting

Transformer mounting methods can be important in the control and reduction of the audible sound coming from the unit. Isolate noise and prevent mechanical transmission to the supporting enclosure, structure, and bus connections. This can be accomplished with a single or combination of installation techniques:

- Use solid mounting (reinforced concrete floor or wall) where the transformer can be a heavy solid mass which cannot be vibrated audibly.
- Install a flexible mounting technique on a structural frame, wall, ceiling, or column. Use special vibration or isolation pads called **flexible mounts** or **vibration dampeners**.

**Important:** *Avoid solid metal contact between the transformer and the supporting surface. The vibration of the pads will be short circuited. These pads can be furnished and installed by an electric contractor.*

- Use flexible connectors between the transformer bus and the raceway or system bus connections. This will help prevent the transmission of noise vibrations from the enclosure to the raceway system, panels, and other mechanical components. Between the enclosure and the raceways, flexible metal conduit, and non-metallic tubing can be used for these relatively short connections.
- Dry type transformers are provided with vibration dampening pads between the core and coil assembly mounting and the case. This mounting is tightly

secured with nuts and bolts for mechanical strength during shipping. After installation of the transformer, these should be loosened for effective vibration dampening and minimizing additional noise.

- Lifting eyes may contribute to the noise and should be removed after installation.



# Maintenance

## Dry Type Transformer Maintenance Instructions

Transformers require occasional maintenance for proper operation. Inspect the unit regularly to determine whether corrective measures should be taken.

1. Frequency of inspections depend on the area of installation. If the area is normally clean and dry, an annual inspection may be adequate. In other locations, if the area is contaminated with dust or chemical concerns, a three to six month interval is recommended. To start, check within three months to see if the unit is experiencing any problems
2. With the transformer de-energized (always check the main switch), access the inside of the transformer by removing the external panels and put them aside. Inspect for dirt on the coil surfaces and at areas where airflow could be restricted. If excessive dirt is found on the windings and insulators, clean the unit immediately. Dirt can cause tracking and poor air circulation, causing overheating.
3. To clean the winding ducts, force air through them. Carefully clean the top, sides, and bottom end of the coils. A vacuum cleaner is recommended to clean the coils in the first step of the process. Use a compressor to blow out the coils with clean, dry air.

**Note:** Air should not be over 30 psi.

4. Check for loose connections which could cause heating and loss of power. Check condition of the tap changer, terminal board, and general condition of the transformer.
5. Check for signs of insulation overheating and voltage creepage over the insulation surface. Evidence of overheating or creepage will be the change in color of insulation in some areas, tracing, or tracking with carbonization.
6. Monitor enclosure condition. If signs of rust or corrosion are evident, corrective measures should be taken where necessary.
7. In humid environments, if the unit shuts down for 12 to 24 hours, install small strip heaters to avoid the effects of possible condensation in the enclosure and on the coils.



## Notes

---



Notes

---

Trane - by Trane Technologies (NYSE: TT), a global innovator - creates comfortable, energy efficient indoor environments for commercial and residential applications. For more information, please visit [trane.com](http://trane.com) or [tranetechnologies.com](http://tranetechnologies.com).

Trane has a policy of continuous product and product data improvements and reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.