



Installation, Operation, and Maintenance


Upflow/Horizontal and Dedicated Downflow Gas-Fired, Direct/Non-Direct Vent, 2-Stage Condensing Variable Speed Furnaces

Upflow, Convertible to Horizontal Right or Horizontal Left

A952V040BU3SB
A952V060BU4SB
A952V080BU4SB
A952V080CU5SB
A952V100CU5SB
A952V120DU5SB

Downflow Only

A952V040BD3SB
A952V060BD3SB
A952V080BD4SB
A952V100CD5SB
A952V120DD5SB

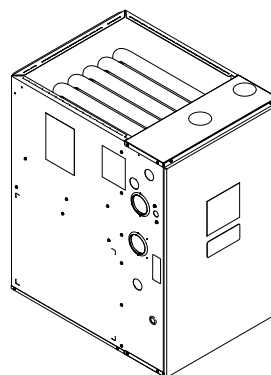

Note: Graphics in this document are for representation only. Actual model may differ in appearance.



FNR-SVX005A-EN

⚠ SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

Introduction

Read this manual thoroughly before operating or servicing this unit.

This document is customer property and is to remain with this unit. Return to the service information pack upon completion of work.

Warnings, Cautions, and Notices

Safety advisories appear throughout this manual as required. Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

The three types of advisories are defined as follows:



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.



Indicates a situation that could result in equipment or property-damage only accidents.

⚠ WARNING

Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring MUST be performed by qualified personnel. Improperly installed and grounded field wiring poses FIRE and ELECTROCUTION hazards. To avoid these hazards, you MUST follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

⚠ WARNING

Personal Protective Equipment (PPE) Required!

Failure to wear proper PPE for the job being undertaken could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, MUST follow precautions in this manual and on the tags, stickers, and labels, as well as the instructions below:

- **Before installing/servicing this unit, technicians MUST put on all PPE required for the work being undertaken (Examples; cut resistant gloves/sleeves, butyl gloves, safety glasses, hard hat/bump cap, fall protection, electrical PPE and arc flash clothing). ALWAYS refer to appropriate Safety Data Sheets (SDS) and OSHA guidelines for proper PPE.**
- **When working with or around hazardous chemicals, ALWAYS refer to the appropriate SDS and OSHA/GHS (Global Harmonized System of Classification and Labelling of Chemicals) guidelines for information on allowable personal exposure levels, proper respiratory protection and handling instructions.**
- **If there is a risk of energized electrical contact, arc, or flash, technicians MUST put on all PPE in accordance with OSHA, NFPA 70E, or other country-specific requirements for arc flash protection, PRIOR to servicing the unit. NEVER PERFORM ANY SWITCHING, DISCONNECTING, OR VOLTAGE TESTING WITHOUT PROPER ELECTRICAL PPE AND ARC FLASH CLOTHING. ENSURE ELECTRICAL METERS AND EQUIPMENT ARE PROPERLY RATED FOR INTENDED VOLTAGE.**

⚠ WARNING**Follow EHS Policies!**

Failure to follow instructions below could result in death or serious injury.

- All Trane personnel must follow the Environmental, Health and Safety (EHS) policies when performing work such as hot work, electrical, fall protection, and lockout/tagout. Where local regulations are more stringent than these policies, those regulations supersede these policies.
- Non-Trane personnel should always follow local regulations.

⚠ WARNING**Cancer and Reproductive Harm!**

This product can expose you to chemicals, including lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

⚠ WARNING**Safety Hazard!**

Failure to follow instructions below could result in death or serious injury or property damage.

This unit is not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Do not allow children to play or climb on the unit or to clean or maintain the unit without supervision.

⚠ WARNING**Fire Hazard!**

Failure to follow instructions below could result in death or serious injury or property damage.

For installations with flammable refrigeration system, the furnace must be powered at all times except during servicing. The furnace must be installed and connected according to installation instructions and wiring diagrams provided with the evaporator coil.

⚠ WARNING**Explosion Hazard!**

Failure to follow instruction below could result in death or serious injury or property damage.

Install a gas detector for leak warnings. The manufacturer does not test or endorse any specific brand or type of detector.

⚠ WARNING**Fire or Explosion Hazard!**

Failure to follow safety warnings exactly could result in serious injury, death, or or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion can result causing property damage, personal injury, or loss of life.

⚠ WARNING**Electrical Shock, Fire, or Explosion Hazard!**

Failure to follow the safety warnings exactly could result in dangerous operation, serious injury, death, or property damage.

Improper servicing could result in dangerous operation, serious injury, death, or property damage.

- Before servicing, disconnect all electrical power to the furnace.
- When servicing controls, label all wires prior to disconnecting. Reconnect wires correctly.
- Verify proper operation after servicing.

⚠ WARNING**Carbon Monoxide Poisoning!**

Failure to follow instructions below could result in death or serious injury, or property damage.

• To confirm the furnace is vented properly, do not replace factory-supplied venting components with field fabricated parts. Fabricating parts can result in damaged vents and components, allowing carbon monoxide to escape the venting system.

• Follow the service and/or periodic maintenance and installation and operation instructions for the furnace and the venting system. Do not attempt to change the venting system.

• Verify the blower door is in place and not ajar. Dangerous fumes could escape an improperly secured door.

• Inspect the chimney liner thoroughly to verify no cracks or other potential areas for flue gas leaks are present in the liner. Liner leaks will result in early damage to the chimney. Furnace venting into an unlined masonry chimney or concrete chimney is prohibited.

⚠ WARNING**Carbon Monoxide Poisoning!**

Failure to follow instructions below could cause result in death or serious injury, or property damage.

Follow the installation and operation instructions for the venting system. Do not attempt to change the venting system.

⚠ WARNING

Fire Hazard!

Failure to follow instructions below could result in death or serious injury or property damage. Do not install the furnace directly on carpet or other combustible material other than wood flooring. Use subbase (BAYBASE205) between the furnace and combustible flooring for vertical downflow applications. When the downflow furnace is installed vertically with a cased coil, a subbase is not required.

⚠ WARNING

Explosion Hazard!

Failure to follow instruction below could result in death or serious injury or property damage. Propane gas is heavier than air and can accumulate in low areas or confined spaces. Odorant fade may make it undetectable without a warning device. If a gas furnace is installed in a basement, excavated areas, or a confined space, it is strongly recommended to contact a gas supplier to install a gas detector for leak warnings. The manufacturer does not test or endorse any specific brand or type of detector.

⚠ WARNING

Electrical Shock Hazard!

Failure to follow instructions below could result in death or serious injury or property damage. Do not bypass the door switch or the panel loop permanently.

⚠ WARNING

Electrical Shock Hazard!

Failure to follow instructions below could result in death or serious injury or property damage.. Do not touch any components other than the Menu and Option buttons on IFC when setting up the system or during fault code recovery.

⚠ WARNING

Risk of Fire or Explosion!

Failure to follow instruction below could result in death or serious injury or property damage. Do NOT attempt to manually light the furnace.

⚠ WARNING

Electrical Shock Hazard!

Failure to follow instructions below could result in death or serious injury or property damage. Disconnect power to the unit before removing the blower door and wait at least 10 seconds for the IFC power supply to discharge to 0 volts.

⚠ WARNING

Safety Hazard!

Failure to follow instructions below could result in death or serious injury or property damage. These furnaces are not approved or intended for installation in trailers or recreational vehicles. Installation in manufactured (mobile) housing is only approved with BAYMFGH Kit.

⚠ WARNING

Explosion Hazard!

Failure to follow instruction below could result in death or serious injury or property damage. If electrical, fuel, or mechanical failures occur, shut off the gas supply at the manual valve on the supply piping before turning off the furnace's electrical power. Contact your dealer's designated service agency.

⚠ WARNING

Safety Hazard!

Failure to follow instructions below could result in death or serious injury or property damage. Do not use semi-rigid metallic gas connectors (flexible gas lines) within the furnace cabinet.

⚠ WARNING

High Voltage Moving Parts!

Failure to follow instructions below could result in death or serious injury or property damage due to high voltage electrical components, fast-moving fans, and combustible gas. During installation and servicing, turn off the main gas valve and disconnect the electrical supply. If operating checks must be performed with the unit operating, the technician must recognize these hazards and proceed safely.

⚠ WARNING

Safety Hazard!

Failure to follow instructions below could result in death or serious injury or property damage. Do not install the filter in the return duct directly above the furnace in horizontal applications. Install the filter remotely.

⚠ WARNING**Carbon Monoxide Poisoning Hazard!**

Failure to follow the steps outlined below for each appliance connected to the venting system being placed into operation could result in carbon monoxide poisoning or death.

The following steps shall be followed for each appliance connected to the venting system being placed into operation, while all other appliances connected to the venting system are not in operation:

- Seal any unused openings in the venting system.
- Inspect the venting system for proper size and horizontal pitch as required in the National Fuel Gas Code, ANSI Z223.1/NFPA 54 or the Natural Gas and Propane Installation Code, CSA B149.1 and these instructions. Determine there is no blockage or restriction, leakage, corrosion, or other deficiencies which could cause an unsafe condition.
- As far as practical, close all building doors and windows and all doors between the space in which the appliance(s) connected to the venting system are located and other spaces of the building.
- Close fireplace dampers.
- Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they are operating at maximum speed. Do not operate a summer exhaust fan.
- Follow the lighting instructions. Place the appliance being inspected into operation. Adjust the thermostat so appliance is operating continuously.
- Test for spillage from draft hood equipped appliances at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle.
- If improper venting is observed during any of the above tests, correct the venting system in accordance with the National Fuel Gas Code, ANSI Z223.1/NFPA and/or Natural Gas and Propane Installation Code, CSA B149.1 .
- After it has been determined that each appliance connected to the venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers, and any other gas-fired burning appliance to their previous conditions of use.

⚠ WARNING**Safety Hazard!**

Failure to follow instructions below could result in death or serious injury or property damage.

Turn off the power to the furnace before servicing filters to avoid contact with moving parts.

⚠ WARNING**Shock Hazard!**

Failure to follow instructions below could result in death or serious injury or property damage.
If a disconnect switch is present, always lock in the open position before servicing the unit.

⚠ WARNING**Electrical Shock Hazard!**

Failure to follow this warning could result in an electric shock, fire, injury, or death.

Ensure cabinet has an uninterrupted or unbroken ground in accordance with National Electrical Code, ANSI/NFPA 70 – latest edition and Canadian Electrical Code, CSA C22.1 or local codes in case of an electrical fault.

⚠ WARNING**Overheating and Explosion Hazard!**

Failure to follow this warning could result in property damage, personal injury, or death.

Should the gas supply fail to shut off or if overheating occurs, shut off the gas valve to the furnace before shutting off the electrical supply.

⚠ WARNING**Safety Hazard!**

Failure to follow instructions below could result in death or serious injury or property damage.

The vent for this appliance must not terminate over public walkways, near soffit or crawl space vents, or where condensate could cause damage or be detrimental to the operation of regulators, relief valves, or other equipment.

⚠ WARNING**Hot Surface!**

Failure to follow instructions below could result in minor to moderate injuries.

Do not touch igniter. It is extremely hot.

⚠ CAUTION**Improper Voltage Connection!**

Failure to follow instructions below could result in personal injury or equipment damage.

Do NOT connect the furnace line voltage to a GFCI-protected circuit.

⚠ CAUTION

Corrosion Hazard!

Failure to follow instructions below could result in minor to moderate injury or property damage. Do not install the furnace in a corrosive or contaminated atmosphere.

⚠ CAUTION

Sharp Edges!

Failure to follow instructions below could result in minor to moderate injury. The service procedure described in this document involves working around sharp edges. To avoid being cut, technicians **MUST** put on all necessary Personal Protective Equipment (PPE), including gloves and arm guards.

⚠ CAUTION

Valve Damage!

Failure to follow instructions below could result in minor to moderate injury or equipment damage. Use a backup wrench on the gas valve when installing gas piping to prevent damage to the valve and manifold assembly.

⚠ CAUTION

Freeze Damage!

Failure to follow instructions below could result in minor to moderate injury or property damage. Insulate vent pipes with 1/2 inch (12.7 mm) Armaflex-type insulation or equivalent when passing through unheated spaces exposed to freezing temperatures. Insulation is not needed if the space is heated enough to prevent freezing. If domestic water pipes are not protected from freezing, the space is considered heated. Schedule qualified personnel to inspect the temperature if the house is vacant during freezing weather. A furnace failure could lead to frozen water pipes.

⚠ CAUTION

Freeze Damage!

Failure to follow instructions below could result in minor to moderate injury or property damage. Take measures to prevent drains from freezing or causing slippery conditions. Excessive draining of condensate may cause saturated ground conditions that may result in damage to plants.

⚠ CAUTION

Ignition Function!

Failure to follow instructions below could result in minor to severe injury and result in poor ignition characteristics. Maintain manifold pressure in high altitude installations.

⚠ CAUTION

Water Damage!

Failure to follow instructions below could result in minor to moderate injury or property damage. Install an external overflow drain pan in all applications over a finished ceiling to prevent leaking condensate.

⚠ CAUTION

Furnace Service Caution!

Failure to follow instructions below could result in property damage or personal injury. Label all wires prior to disconnection when servicing controls. Verify proper operation after servicing. Wiring errors can cause improper and dangerous operation.

⚠ CAUTION

Do NOT Use as Construction Heater!

Failure to follow instructions below could result in property damage or personal injury. To prevent shortening its service life, do not use the furnace as a construction heater during the finishing phases of construction until the furnace installation guidelines are met. Condensate in the presence of chlorides and fluorides from paint, varnish, stains, adhesives, cleaning compounds, and cement, create a corrosive condition which may cause rapid deterioration of the heat exchanger.

⚠ CAUTION

Wiring Hazard!

Failure to follow instructions below could result in minor to moderate injury or property damage. The integrated furnace control is polarity sensitive. Connect the hot leg of the 120 VAC power to the black field lead.

⚠ CAUTION**Venting Required!**

Failure to follow instructions below could result in minor to moderate injury or property damage.

- Condensing furnaces may be vented through unused chimneys. Do not vent through chimneys used for wood-burning, oil furnaces, incinerators or any other gas appliance. If remaining free area between single wall flue pipe and masonry chimney is used for another gas appliance, venting area must be sufficient and that appliance must be connected to the chimney with separate entry openings.
- The single wall flue pipe joints must be sealed. The 90° elbow connection to the vertical pipe must be sealed to prevent condensate leakage to base of the masonry chimney.

⚠ CAUTION**Coil Requirement!**

Failure to follow instructions below could result in minor to moderate injury or property damage.

For 4GXC* and 4MXC* coils on upflow furnaces in vertical, horizontal left, or horizontal right orientations without a factory-installed metal drain pan shield, must use a MAY*FERCOLKITAA kit. Coils installed on upflow furnaces must have drain pans suitable for 400° F (205° C) or metal drain pan shield. Downflow furnaces do not require a metal drain pan shield or MAY*FERCOLKITAA kit.

NOTICE**Equipment Damage!**

Failure to follow instructions below could result in equipment damage.

UV light exposure can deteriorate plastic blower material, potentially damaging the blower housing. For units with plastic blower housings, do not install third-party UV air cleaners where the blower housing is exposed to UV light.

For more information, visit www.trane.com and www.americanstandardair.com or contact your installing dealer.

6200 Troup Highway

Tyler, TX 75707

Copyright

This document and the information in it are the property of Trane, and may not be used or reproduced in whole or in part without written permission. Trane reserves the right to revise this publication at any time, and to make changes to its content without obligation to notify any person of such revision or change.

Trademark

All trademarks referenced in this document are the trademarks of their respective owners.

Revision History

- This document supersedes A952V-SVX001-1B-EN.
- Updated Accessories, Product Specification, Wiring Diagrams, Heating and Cooling Airflow Tables, Furnace General Installation, Furnace Combustion Air Exhaust Options, Troubleshooting, and Belly Band Location chapters.
- Updated Safety Practices and Precautions topic in Furnace Installation Guidelines chapter.
- Updated Field Wiring topic in Electrical Connections chapter.
- Added Condensate management figure in Condensate Drain Instructions chapter.

Table of Contents

| | | | |
|--|----|--|-----|
| Accessories | 9 | Electrical Connections | 64 |
| Document Pack Contents | 10 | Field Wiring | 64 |
| Part List | 10 | Condensate Drain Instructions | 66 |
| Product Specification | 11 | Vertical Application | 66 |
| Furnace Installation Guidelines | 14 | Upflow furnace | 66 |
| Safety Practices and Precautions | 14 | Downflow furnace | 68 |
| General Guidelines | 14 | Horizontal Applications | 69 |
| Locations and Clearances | 15 | General Start-up and Adjustment | 71 |
| Dimensional Data | 16 | Preliminary Inspections | 71 |
| Wiring Diagrams | 18 | Lighting Instructions | 71 |
| Heating and Cooling Airflow Tables | 19 | To shut off | 71 |
| Furnace General Installation | 34 | Control and Safety Switch Adjustment | 71 |
| Furnace Panel Removal | 34 | Limit Switch Check Out | 71 |
| Horizontal Installation in an Attic or | | Furnace Combustion Air Exhaust | |
| Crawlspace | 34 | Options | 72 |
| Horizontal Installation Hanging Using | | Upflow Furnace in Upflow Position - Top | |
| Straps | 34 | Vented Combustion Air | 73 |
| Gas Piping | 34 | Upflow Furnace in Upflow Position - Left | |
| Combustion and Input Check | 36 | Side Vented Combustion Air | 73 |
| Gas Valve Adjustment | 37 | Upflow Furnace in Horizontal Left | |
| High Altitude Derate | 38 | Position - Top Vented Combustion | |
| General Venting | 39 | Air | 76 |
| 3-Inch Venting Requirements | 39 | Upflow Furnace in Horizontal Left | |
| Typical Venting | 40 | Position - Side Vented Combustion | |
| Special Case Venting | 41 | Air | 78 |
| Vent Terminations | 42 | Upflow Furnace in Horizontal Right | |
| Attaching Vent Piping | 43 | Position - Top Vented Combustion | |
| Maximum Vent Length Table | 45 | Air | 81 |
| Horizontal Venting | 45 | Upflow Furnace in Horizontal Right | |
| 3-inch Venting Requirements | 46 | Position - Left Side Vented Combustion | |
| Horizontal Venting Through Wall with | | Air | 83 |
| Concentric Vent Kit | 48 | Downflow Furnace - Top Vented | |
| Venting Through The Roof | 51 | Combustion Air | 86 |
| Air for Combustion and Ventilation | 53 | Downflow Furnace - Left Side Vented | |
| Duct Connections | 55 | Combustion Air | 87 |
| Supply Duct Connections | 56 | Integrated Furnace Control Menu | 90 |
| Return Duct Connections | 59 | Run Test Mode | 91 |
| Return Air Filters | 62 | Integrated Furnace Control Display | |
| Typical Upflow Return Air Filter | | Codes | 92 |
| Installations | 62 | Fault Code Recovery | 92 |
| Preparation for Upflow Bottom and | | Troubleshooting | 94 |
| Side Return Air Filter Installations | 62 | Belly Band Location | 111 |
| Return Air Filters For Furnace In | | Sequence of Operation | 112 |
| Horizontal Configuration | 63 | Periodic Servicing Requirements | 114 |
| Typical Downflow Furnace Return Air | | | |
| Filter Installations | 63 | | |

Accessories

Table 1. Accessories

| Model Number | Description | Use with |
|-----------------------------|---|---|
| MAYBFERCOLKITA | Heat Shield Kit for B-width 4GXCB or 4MCXB Coils | B width 4GXCB or 4MCXB Coils when installed with Upflow Furnace in all orientations. |
| MAYCFERCOLKITA | Heat Shield Kit for C-width 4GXCC or 4MCXC Coils | C width 4GXCC or 4MCXC Coils when installed with Upflow Furnace in all orientations. |
| MAYDFERCOLKITA | Heat Shield Kit for D-width 4GXCD or 4MCXD Coils | D width 4GXCD or 4MCXD Coils when installed with Upflow Furnace in all orientations. |
| BAYHANG | Horizontal Hanging Kit | All Upflow Furnaces |
| BAYVENT200B | Sidewall Vent Termination Kit | All Furnaces |
| BAYVENTCN200B | Sidewall Vent Termination Kit (Canada —CPVC) | All Furnaces |
| BAYAIR30AVENTA | Concentric Vent Kit | All Furnaces |
| BAYAIR30CNVENT | Concentric Vent Kit (Canada — CPVC) | All Furnaces |
| BAYREDUCE | Reducing Coupling (CPVC) | All Furnaces |
| BAYLIFTB ^(a) | Dual Return Kit (B size extension) | B Cabinet Upflow Furnaces |
| BAYLIFTC ^(a) | Dual Return Kit (C size extension) | C Cabinet Upflow Furnaces |
| BAYLIFTD ^(a) | Dual Return Kit (D size extension) | D Cabinet Upflow Furnaces |
| BAYBASE205 | Downflow Subbase | All Downflow Furnaces |
| BAYFLTR203 | Horizontal Filter Kit | B Cabinet Furnaces in Downflow/Horizontal |
| BAYFLTR204 | Horizontal Filter Kit | C Cabinet Furnaces in Downflow/Horizontal |
| BAYFLTR205 | Horizontal Filter Kit | D Cabinet Furnaces in Downflow/Horizontal |
| BAYFLTR206 | Filter Access Door Kit (Downflow only) | All Downflow Furnaces |
| BAYSF1165 ^{(a)(b)} | 1-in. SlimFit Cabinet with MERV 4 Filter | All Upflow Furnaces |
| BAYSF1255 ^(b) | 1-in. SlimFit Rack with MERV 4 Filter | All furnaces when used in side return application. B-Cabinet Furnaces only when in bottom return application. |
| FLRSF1255 | 1-in. Filter Replacement (Qty 12) | BAYSF1255 ^(b) |
| BAYLPSS400 ^(b) | Propane Conversion Kit with Stainless Steel Burners | All Furnaces |
| BAYBURNERSS | All Stainless Steel Natural Gas Burners - Set of Six | All Upflow Furnaces - Special Case |
| BAYMFGH200B | Manufactured/Mobile Housing Kit | All Furnaces |
| BAYCNDTRAP2A | Inline Condensate Trap Kit used with Special Venting on 2-in. Vent Pipe | All Furnaces |
| BAYCNDTRAP3A | Inline Condensate Trap Kit used with Special Venting on 3-in. Vent Pipe | All Furnaces |

^(a) Airflow greater than 1600 CFM, Furnace will require return air openings and filters on: (1) both sides, (2) one side and the bottom, or (3) just on the bottom.

^(b) Latest revision.

Document Pack Contents

Figure 1. Document Pack Contents

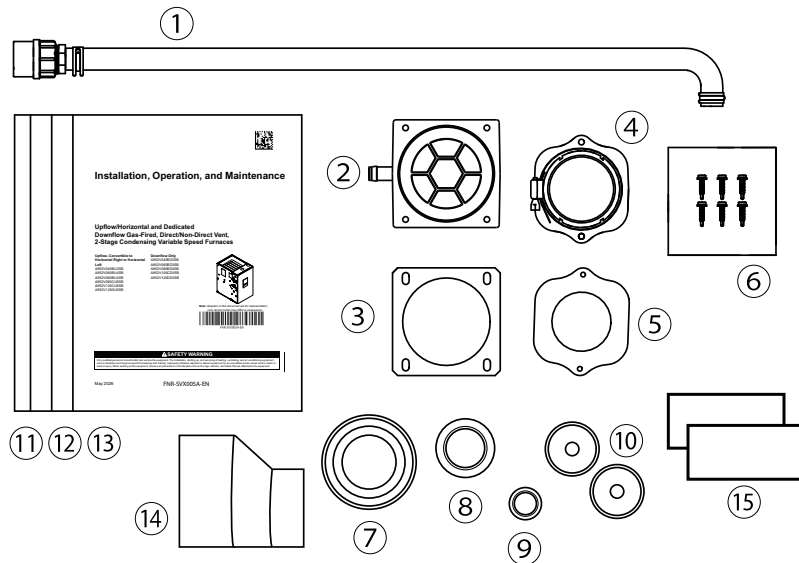


Table 2. Pack contents

| Item | Qty. | Description |
|------|------|---|
| 1 | 1 | Condensate Drain Tube Assembly |
| 2 | 1 | Inlet Vent (2-in. - ADP01586 and 3-in. - ADP01587) ^(a) |
| 3 | 1 | Inlet Vent Gasket |
| 4 | 1 | Outlet Vent Assembly |
| 5 | 1 | Outlet Vent Gasket |
| 6 | 6 | Screws |
| | 2 | Tinnerman Clips (not pictured) Note: <i>Tinnerman Clips should be kept with unit and are used if the door panel flange hole(s) become stripped.</i> |
| 7 | 1 | Condensate Trap Grommet |
| 8 | 1 | Plug - Condensate/Gas |
| 9 | 1 | Plug - Electrical |
| 10 | 2 | Grommet - Condensate/Gas |
| 11 | 1 | Installation, Operation, and Maintenance Manual |
| 12 | 1 | Owner Guide |
| 13 | 1 | Limited Warranty |
| 14 | 1 | 2 to 3-in. Coupling - CPL01544 ^(b) |
| 15 | 2 | Brand labels ^(c) |

Table 2. Pack contents (continued)

- ^(a) 3-in. inlet vent supplied with A952V120DU and A952V120DD only. 2-in. inlet vent supplied with all other models.
- ^(b) Supplied with A952V120DU and A952V120DD only.
- ^(c) Place appropriate brand label below the warning label on the front panel using stencil marks as guides.

Part List

- Igniter
- Flame Sensor
- In-shot Burner(s)
- Gas Valve
- Inducer Assembly
- Blower Motor
- Blower Wheel
- IFC (Integrated Furnace Control)
- Pressure Switch(es)
- Main Thermal Limit
- Roll-Out Switch(es)
- Reverse Air Switch(es)

Product Specification

Table 3. Models – A952V040BU3SB, A952V060BU4SB, A952V080BU4SB, A952V080CU5SB, A952V100CU5SB, and A952V120DU5SB

| Model | A952V040BU 3SB (a) | A952V060BU 4SB (a) | A952V080BU 4SB (a) | A952V080CU 5SB (a) | A952V100CU 5SB (a) | A952V120DU 5SB (a) |
|---|---------------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| Type | Upflow / Horizontal | | | | | |
| Ratings (b) | | | | | | |
| 1 st Stage Input BTUH | 26,000 | 39,000 | 52,000 | 52,000 | 65,000 | 78,000 |
| 1 st Stage Capacity BTUH (ICS) | 25,300 | 38,100 | 50,500 | 50,600 | 63,400 | 75,500 |
| 2 nd Stage Input BTUH | 40,000 | 60,000 | 80,000 | 80,000 | 100,000 | 120,000 |
| 2 nd Stage Capacity BTUH (ICS) (c) | 38,950 | 58,400 | 77,700 | 77,750 | 97,650 | 115,700 |
| 1 st Stage Temp. Rise (Min. - Max.) °F | 25 - 55 | | 30 - 60 | | 25 - 55 | 35 - 65 |
| 2 nd Stage Temp. Rise (Min. - Max.) °F | 30 - 60 | 35 - 65 | | | 30 - 60 | 40 - 70 |
| AFUE (%) (c) | 96.0 | | | | | |
| Return Air Temp. (Min. - Max.) °F | 45°F - 80°F | | | | | |
| CEE Tier | Tier 2 | | | | | |
| Energy Star Rating Before July 31, 2026 | US - All/Canada | | | | | |
| Energy Star Rating On or After July 31, 2026 | US - South | | | | | |
| Energy Star Orientation | Upflow / Horizontal | | | | | |
| Integrated Furnace Control | | | | | | |
| Input-Communication Protocol | 24 Volts | | | | | |
| Blower Drive | Direct | | | | | |
| Diameter - Width (in.) | 11 × 8 | | | 11 × 10 | | |
| No. Used | 1 | | | | | |
| Speeds (No.) | Variable | | | | | |
| CFM vs. in. w.g. | See Fan Performance Table | | | | | |
| Motor HP | 1/2 | 3/4 | | 1 | | |
| R.P.M. | Variable | | | | | |
| Volts / Ph / Hz | 120 / 1 / 60 | | | | | |
| FLA | 6.4 | 9.6 | | 10.5 | | |
| Combustion Fan - Type | PSC | | | | | |
| Drive - No. Speeds | Direct - 2 | | | | | |
| Motor RPM | 3300/2600 | | | | | |
| Volts/Ph/Hz | 120 / 1 / 60 | | | | | |
| FLA | 0.66 | | | | | |
| Inducer Orifice | 0.61 | 0.79 | 0.96 | 0.88 | 1.05 | 1.19 |
| Filter - Furnished? | No | | | | | |
| Type Recommended | High Velocity | | | | | |
| Hi Vel. (No.-Size-Thk.) | 1 - 16 × 25 - 1-in. | | | 1 - 20 × 25 - 1-in. | | 1 - 24 × 25 - 1-in. |
| Vent Outlet Dia - Min. (in.) (d) | 2 Round | | | | 3 Round | |
| Inlet Air Dia -Min. (in.) (d) | 2 Round | | | | 3 Round | |
| Heat Exchanger – Type | | | | | | |
| Fired | 409 Stainless Steel | | | | | |
| Unfired | 29-4C Stainless Steel | | | | | |
| Gauge (Fired) | 20 | | | | | |
| Orifices - Main | | | | | | |

Product Specification

Table 3. Models – A952V040BU3SB, A952V060BU4SB, A952V080BU4SB, A952V080CU5SB, A952V100CU5SB, and A952V120DU5SB (continued)

| Model | A952V040BU 3SB (a) | A952V060BU 4SB (a) | A952V080BU 4SB (a) | A952V080CU 5SB (a) | A952V100CU 5SB (a) | A952V120DU 5SB (a) |
|------------------------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| Nat. Gas (Qty. - Drill Size) | 2 - 45 | 3 - 45 | 4 - 45 | | 5 - 45 | 6 - 45 |
| Propane Gas (Qty. - Drill Size) | 2 - 56 | 3 - 56 | 4 - 56 | | 5 - 56 | 6 - 56 |
| Gas Valve | Redundant - Two Stage | | | | | |
| Pilot Safety Device – Type | 120 V SiNi Igniter | | | | | |
| Burners - Type - Qty | Inshot - 2 | Inshot - 3 | Inshot - 4 | | Inshot - 5 | Inshot - 6 |
| Power Conn. - V/Ph/Hz (e) | 120 / 1 / 60 | | | | | |
| Ampacity (Amps) | 8.8 | 12.8 | | 13.9 | | |
| Max. Overcurrent Protection (Amps) | 15 | | | | | |
| Pipe Conn. Size (in.) | 1/2 | | | | | |

(a) Central Furnace heating designs are certified to ANSI Z21.47 / CSA 2.3 - latest edition.

(b) For U.S. Applications, above input ratings (BTUH) are up to 2,000 feet, derate 4% per 1,000 feet for elevations above 2,000 feet above sea level. For Canadian applications, above input ratings (BTUH) are up to 4,500 feet, derate 4% per 1,000 feet for elevations above 4,500 feet above sea level.

(c) Based on U.S. government standard tests.

(d) Refer to Vent Length Table in the Installer's Guide.

(e) The above wiring specifications are in accordance with National Electrical Code; however, installations must comply with local codes.

Table 4. Models – A952V040BD3SB, A952V060BD3SB, A952V080BD4SB, A952V100CD5SB, and A952V120DD5SB

| Model | A952V040BD 3SB (a) | A952V060BD 3SB (a) | A952V080BD 4SB (a) | A952V100CD 5SB (a) | A952V120DD 5SB (a) |
|---|---------------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| Type | Downflow | | | | |
| Ratings (b) | | | | | |
| 1 st Stage Input BTUH | 26,000 | 39,000 | 52,000 | 65,000 | 78,000 |
| 1 st Stage Capacity BTUH (ICS) | 25,300 | 37,700 | 50,300 | 63,300 | 75,800 |
| 2 nd Stage Input BTUH | 40,000 | 60,000 | 80,000 | 100,000 | 120,000 |
| 2 nd Stage Capacity BTUH (ICS) (c) | 38,850 | 57,850 | 77,350 | 97,150 | 116,100 |
| 1 st Stage Temp. Rise (Min. - Max.) °F | 25 - 55 | | 30 - 60 | | |
| 2 nd Stage Temp. Rise (Min. - Max.) °F | 30 - 60 | 35 - 65 | | | |
| AFUE (%) (c) | 96.0 | | | | |
| Return Air Temp. (Min. - Max.) °F | 45°F - 80°F | | | | |
| CEE Tier | Tier 2 | | | | |
| Energy Star Rating Before July 31, 2026 | US - All/Canada | | | | |
| Energy Star Rating On or After July 31, 2026 | US - South | | | | |
| Energy Star Orientation | Downflow | | | | |
| Integrated Furnace Control | | | | | |
| Input-Communication Protocol | 24 Volts | | | | |
| Blower Drive | Direct | | | | |
| Diameter - Width (in.) | 11 × 8 | | | 11 × 10 | |
| No. Used | 1 | | | | |
| Speeds (No.) | Variable | | | | |
| CFM vs. in. w.g. | See Fan Performance Table | | | | |
| Motor HP | 1/2 | 3/4 | | 1 | |
| R.P.M. | Variable | | | | |
| Volts / Ph / Hz | 120 / 1 / 60 | | | | |
| FLA | 6.4 | | 9.6 | 10.5 | |
| Combustion Fan - Type | PSC | | | | |
| Drive - No. Speeds | Direct - 2 | | | | |
| Motor RPM | 3300/2600 | | | | |
| Volts/Ph/Hz | 120 / 1 / 60 | | | | |

Table 4. Models – A952V040BD3SB, A952V060BD3SB, A952V080BD4SB, A952V100CD5SB, and A952V120DD5SB (continued)

| Model | A952V040BD 3SB (a) | A952V060BD 3SB (a) | A952V080BD 4SB (a) | A952V100CD 5SB (a) | A952V120DD 5SB (a) |
|------------------------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| FLA | 0.66 | | | | |
| Inducer Orifice | 0.61 | 0.79 | 0.96 | 1.05 | 1.19 |
| Filter - Furnished? | No | | | | |
| Type Recommended | High Velocity | | | | |
| Hi Vel. (No.-Size-Thk.) | 1 - 16 × 25 - 1-in. | | | 1 - 20 × 25 - 1-in. | 1 - 24 × 25 - 1-in. |
| Vent Outlet Dia - Min. (in.) (d) | 2 Round | | | 3 Round | |
| Inlet Air Dia -Min. (in.) (d) | 2 Round | | | 3 Round | |
| Heat Exchanger – Type | | | | | |
| Fired | 409 Stainless Steel | | | | |
| Unfired | 29-4C Stainless Steel | | | | |
| Gauge (Fired) | 20 | | | | |
| Orifices - Main | | | | | |
| Nat. Gas (Qty. - Drill Size) | 2 - 45 | 3 - 45 | 4 - 45 | 5 - 45 | 6 - 45 |
| Propane Gas (Qty. - Drill Size) | 2 - 56 | 3 - 56 | 4 - 56 | 5 - 56 | 6 - 56 |
| Gas Valve | Redundant - Two Stage | | | | |
| Pilot Safety Device – Type | 120 V SiNi Igniter | | | | |
| Burners - Type - QTY | Inshot - 2 | Inshot - 3 | Inshot - 4 | Inshot - 5 | Inshot - 6 |
| Power Conn. - V/Ph/Hz (e) | 120 / 1 / 60 | | | | |
| Ampacity (Amps) | 8.8 | | 12.8 | 13.9 | |
| Max. Overcurrent Protection (Amps) | 15 | | | | |
| Pipe Conn. Size (in.) | 1/2 | | | | |

(a) Central Furnace heating designs are certified to ANSI Z21.47 / CSA 2.3 - latest edition.

(b) For U.S. Applications, above input ratings (BTUH) are up to 2,000 feet, derate 4% per 1,000 feet for elevations above 2,000 feet above sea level. For Canadian applications, above input ratings (BTUH) are up to 4,500 feet, derate 4% per 1,000 feet for elevations above 4,500 feet above sea level.

(c) Based on U.S. government standard tests.

(d) Refer to Vent Length Table in the Installer's Guide.

(e) The above wiring specifications are in accordance with National Electrical Code; however, installations must comply with local codes.

Furnace Installation Guidelines

The following sections give general guidelines for the installation of the gas furnaces.

Safety Practices and Precautions

The following safety practices and precautions must be followed during the installation, servicing, and operation of this furnace.

1. Use only with the type gas approved for this furnace. Refer to the furnace rating plate.
2. Install the furnace only in a location and position as specified in “Locations and Clearances,” p. 15 of these instructions.
3. Provide adequate combustion and ventilation air to the furnace space as specified in “Air for Combustion and Ventilation,” p. 53 of these instructions.
4. Combustion products must be discharged outdoors. Connect this furnace to an approved vent system only, as specified in the “General Venting,” p. 39 section of these instructions.
5. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections, as specified in the “Gas Piping,” p. 34 section of these instructions.
6. Always install the furnace to operate within the furnace intended temperature-rise range with a duct system which has an external static pressure within the allowable range, as specified on the unit rating plate. Airflow within temperature rise for cfm versus static is shown in this document accompanying this furnace.
7. When a furnace is installed so that the supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by a duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.
8. A gas-fired furnace for installation in a residential garage must be installed as specified in “Locations and Clearances,” p. 15 section of these instructions.
9. The furnace may be used for temporary heating of buildings or structures under construction only when the following conditions have been met:
 - a. The furnace venting system must be complete and installed per manufacturer instructions.
 - b. The furnace is controlled only by a room Comfort Control (no field jumpers).
 - c. The furnace return air duct must be complete and sealed to the furnace.
 - d. The furnace input rate and temperature rise must be verified to be within the nameplate marking.

- e. A minimum 4-inch MERV 11 air filter must be in place.
 - f. 100% of the furnace combustion air requirement must come from outside the structure.
 - g. The Furnace return air temperature range is between 45 and 80 Fahrenheit.
80% models = 55°F
90%+ models = 45°F
 - h. Clean the furnace, duct work, and components upon substantial completion of the construction process, and verify furnace operating conditions including ignition, input rate, temperature rise, and venting, according to the manufacturer instructions.
10. The installer must verify that at least one carbon monoxide alarm has been installed within the residential living space or home following the alarm manufacturer instructions and applicable local codes before putting the appliance into operation.
 11. **In the Commonwealth of Massachusetts, this product must be gas piped by a Licensed Plumber or Gas Fitter.**

This furnace is certified to leak 1% or less of nominal air conditioning cfm delivered when pressurized to 0.5-inch water column with all inlets, outlets, and drains sealed.

General Guidelines

The manufacturer assumes no responsibility for equipment installed in violation of any code or regulation.

It is recommended that Manual J of the Air Conditioning Contractors Association (ACCA) or A.R.I. 230 be followed in estimating heating requirements. When estimating heating requirements for installation at Altitudes above 2000 ft., remember the gas input must be reduced. See “Combustion and Input Check,” p. 36.

Material in this shipment has been inspected at the factory and released to the transportation agency without known damage. Inspect exterior of carton for evidence of rough handling in shipment. Unpack carefully after moving equipment to approximate location. If damage to contents is found, report the damage immediately to the delivering agency.

Codes and local utility requirements governing the installation of gas fired equipment, wiring, plumbing, and flue connections must be adhered to. In the absence of local codes, the installation must conform with latest edition of the National Fuel Gas Code ANSI Z223.1 / NFPA 54 • National Installation Code, CAN/CGA B149.1. The latest code may be obtained from the American Gas Association, 400 N. Capitol St. NW, Suite 450 Washington, D.C. 20001, 1-855-999-9870 or www.aga.org.

These furnaces have been classified as CATEGORY IV furnaces in accordance with latest edition of ANSI Z21.47

standards • CSA 2.3. Category IV furnaces operate with positive vent static pressure and with a flue loss less than 17 percent. These conditions require special venting systems, which must be gas tight and water tight. These Category IV Direct Vent furnaces are approved for installation in Manufactured/ Mobile housing when used with BAYMFGH200B.

A manufactured (mobile) home installation must conform with the *Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280*, or when this standard is not applicable, the *Standard for Model Manufactured Home Installation, NFPA 225*, or the *Canadian Standard for Manufactured Homes, CSA Z240 MH*.

Locations and Clearances

The location of the furnace is normally selected by the architect, the builder, or the installer. However, before the furnace is moved into place, be sure to consider the following requirements:

1. Is the location selected as near the chimney or vent and as centralized for heat distribution as practical?
2. Do all clearances between the furnace and enclosure equal or exceed the minimums stated in the table below?


Table 5. Location and clearances

| Minimum clearance to combustible materials (in.) | |
|--|---|
| Closet | |
| Sides | 0 |
| Back | 1 |
| Top | 1 |
| Front | 0 |
| Bottom | 0 |
| Flue | 0 |
| 24-in. minimum front clearance recommended for service | |
| Horizontal Closet and Alcove | |
| Right Side | 0 |
| Left Side | 0 |
| Back | 1 |
| Top | 1 |
| Bottom | 0 |
| Flue | 0 |
| Horizontal Flue (discharge on left) | |
| Closet | |
| Right Side | 0 |
| Left Side | 0 |
| Rear | 1 |
| Top | 1 |
| Bottom | 0 |
| Flue | 0 |

3. Is there sufficient space for servicing the furnace and other equipment? A minimum of 24 inches front accessibility to the furnace must be provided. Any access door or panel must permit removal of the largest component.
4. Are there at least 3 inches of clearance between the furnace combustion air openings in the front panel and any closed panel or door provided?
5. Are the ventilation and combustion air openings large enough and will they remain unobstructed? If outside air is used, are the openings set 12-inch above the highest snow accumulation level?
6. Allow sufficient height in supply plenum above the furnace to provide for cooling coil installation, if the cooling coil is not installed at the time of this furnace installation.
7. The furnace shall be installed so electrical components are protected from water.
8. A vertical downflow furnace without a coil, must use BAYBASE205 when installed on combustible flooring.
9. If the furnace is installed in a garage, it must be installed so that the burners, and the ignition source are located not less than 18 inches above the floor and the furnace must be located or protected to avoid physical damage from vehicles.
10. The gas furnace must not be located where excessive exposure to contaminated combustion air will result in safety and performance related problems. Avoid the following contaminants:
 - Permanent wave solutions
 - Chlorinated waxes and cleaners
 - Chlorine based swimming pool chemicals
 - Water softening chemicals
 - De-icing salts or chemicals
 - Carbon tetrachloride
 - Halogen type refrigerants
 - Cleaning solvents (such as perchloroethylene)
 - Printing inks, paint removers, varnishes, etc.
 - Hydrochloric acid, Cements and glues
 - Antistatic fabric softeners for clothes dryers
 - Masonry acid washing materials

Important: *The furnace must be installed level. The only allowable variation would be slightly to the left and/or forward in upflow or downflow installations or slightly toward the front in horizontal installations. This is necessary for proper condensate drainage.*

Figure 3. Downflow cabinets — 17.5-inch, 21-inch, and 24.5-inch

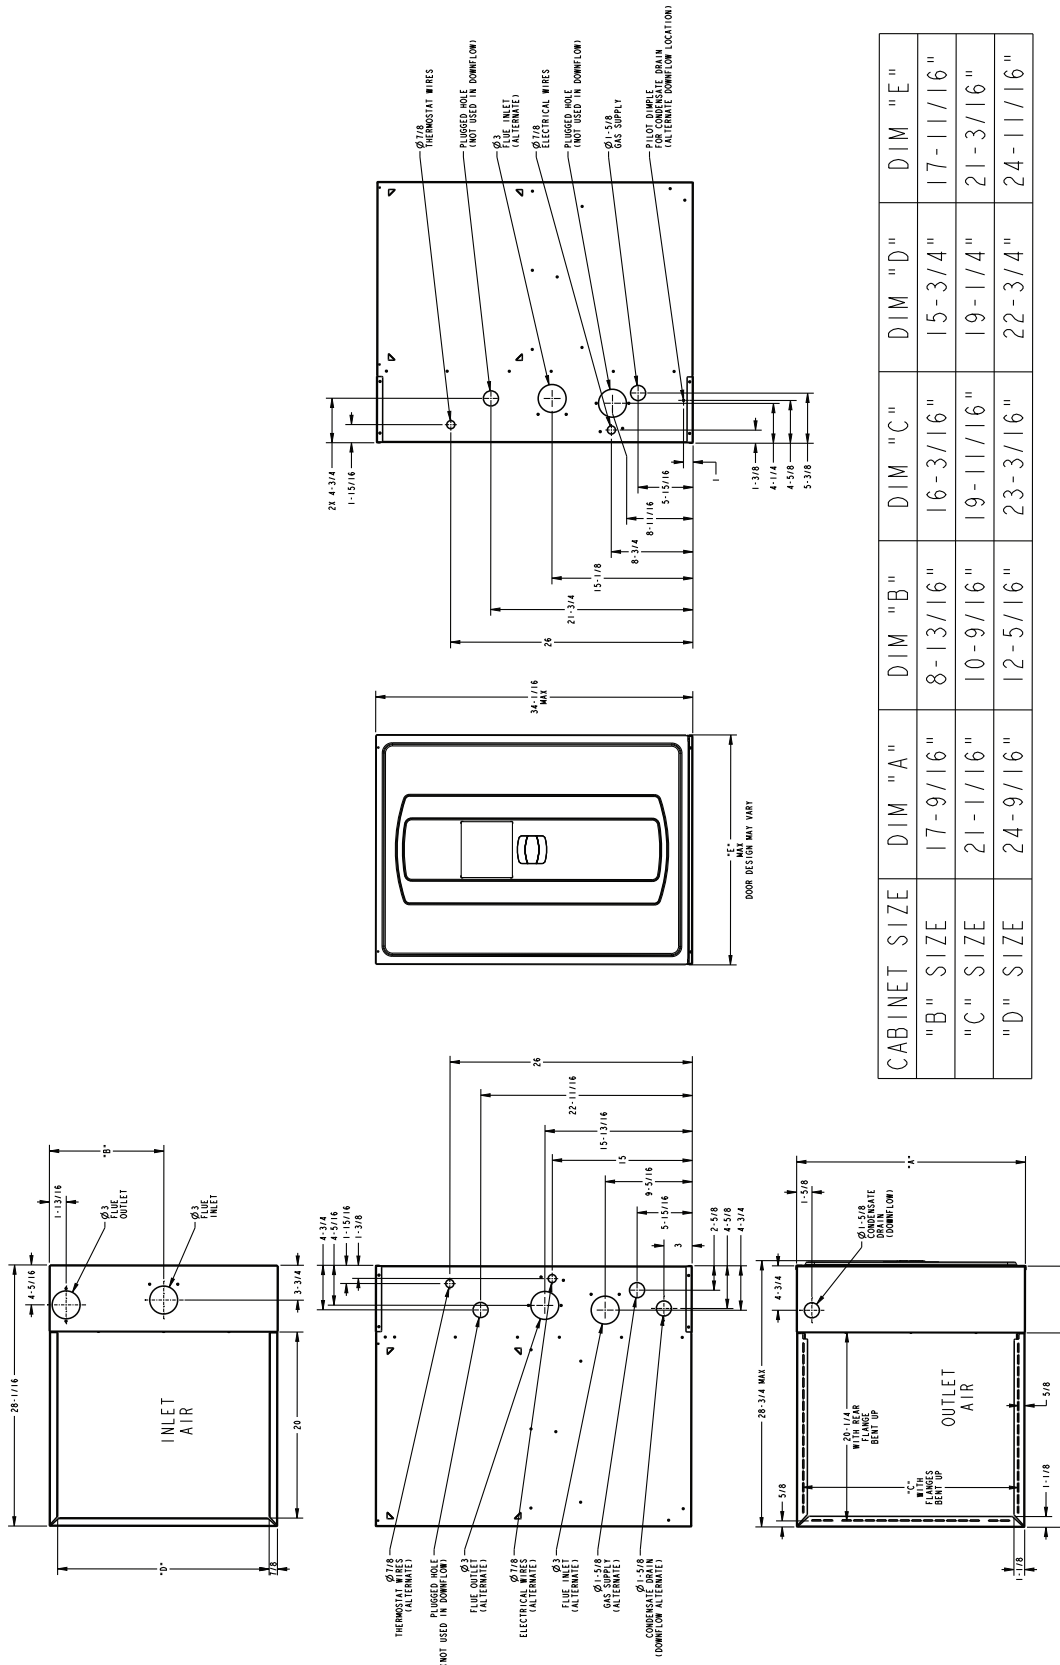

| CABINET SIZE | DIM "A" | DIM "B" | DIM "C" | DIM "D" | DIM "E" |
|--------------|----------|----------|-----------|---------|-----------|
| "B" SIZE | 17-9/16" | 8-13/16" | 16-3/16" | 15-3/4" | 17-11/16" |
| "C" SIZE | 21-1/16" | 10-9/16" | 19-11/16" | 19-1/4" | 21-3/16" |
| "D" SIZE | 24-9/16" | 12-5/16" | 23-3/16" | 22-3/4" | 24-11/16" |

Wiring Diagrams

Figure 4. Wiring diagram – A952V


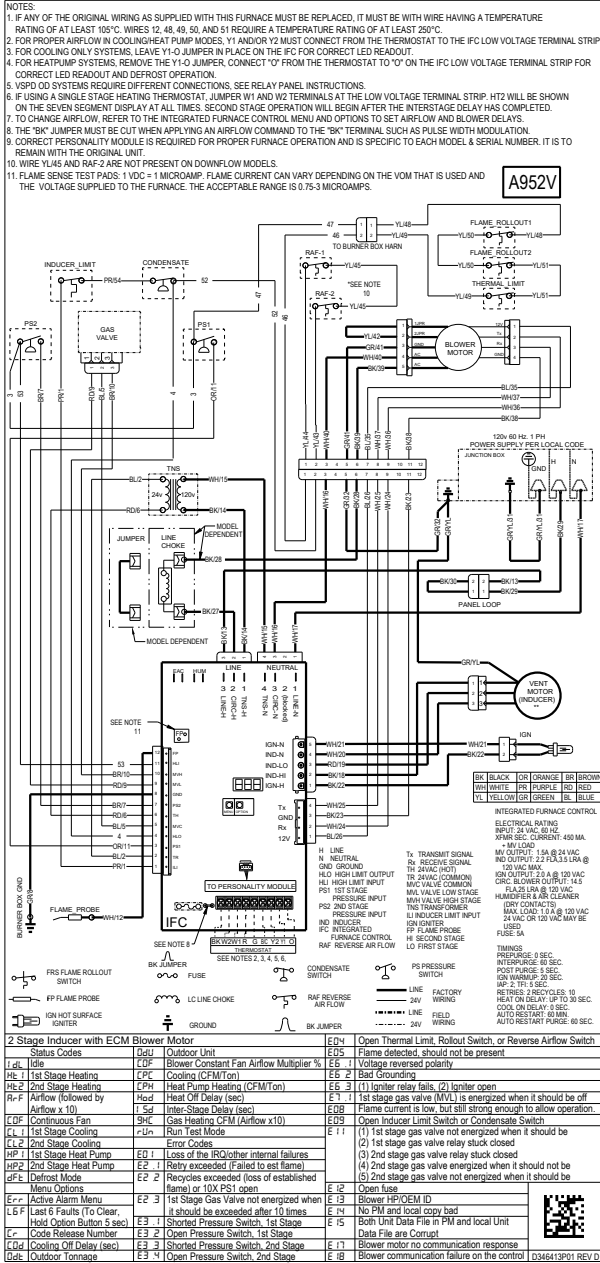


Figure 5. Ladder diagram – A952V

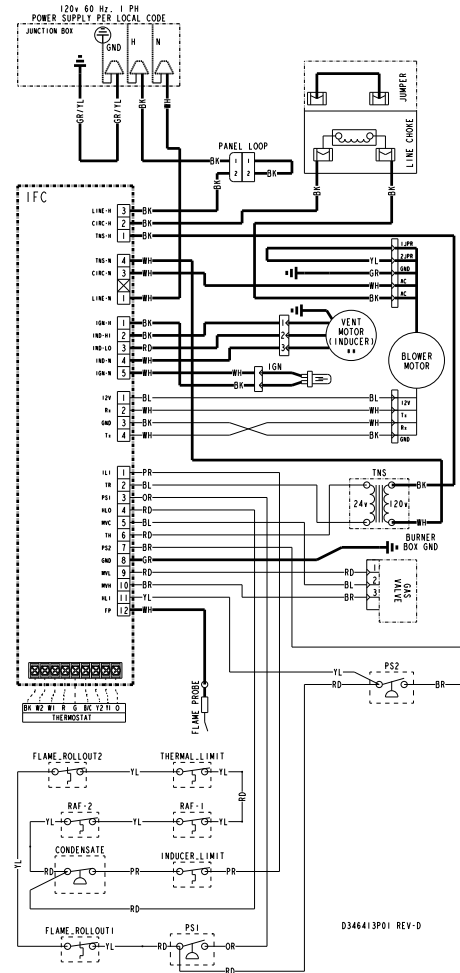

Heating and Cooling Airflow Tables

Table 6. A952V040BU3S heating airflow

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|-----------------------|----------------|-------------|--------------------------------------|----------|----------|----------|----------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 650 | 1 st Stage | 468 | CFM / Watts | 468/27 | 452/58 | 437/90 | 421/121 | 406/152 |
| | | | Temp. Rise | 49 | 51 | 54 | 56 | 58 |
| | 2 nd Stage | 650 | CFM / Watts | 633/48 | 636/92 | 639/135 | 643/179 | 646/223 |
| | | | Temp. Rise | 57 | 57 | 57 | 56 | 56 |
| 830 | 1 st Stage | 598 | CFM / Watts | 552/41 | 600/76 | 647/112 | 694/147 | 741/183 |
| | | | Temp. Rise | 43 | 39 | 36 | 32 | 28 |
| | 2 nd Stage | 830 | CFM / Watts | 760/82 | 786/132 | 813/182 | 840/232 | 866/282 |
| | | | Temp. Rise | 48 | 46 | 45 | 43 | 41 |
| 880 ^(a) | 1 st Stage | 634 | CFM / Watts | 583/48 | 635/83 | 687/118 | 739/153 | 791/189 |
| | | | Temp. Rise | 39 | 36 | 33 | 30 | 27 |
| | 2 nd Stage | 880 | CFM / Watts | 792/94 | 817/142 | 842/189 | 867/237 | 892/284 |
| | | | Temp. Rise | 44 | 44 | 43 | 43 | 42 |
| 1200 | 1 st Stage | 864 | CFM / Watts | 753/86 | 785/129 | 818/171 | 850/213 | 882/256 |
| | | | Temp. Rise | 30 | 29 | 28 | 27 | 26 |
| | 2 nd Stage | 1200 | CFM / Watts | 1022/191 | 1044/250 | 1065/309 | 1087/368 | 1109/427 |
| | | | Temp. Rise | 34 | 33 | 33 | 32 | 32 |

^(a) Factory Setting

Table 7. A952V040BD3S heating airflow

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|-----------------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 650 | 1 st Stage | 468 | CFM / Watts | 464/26 | 453/55 | 442/84 | 431/113 | 420/142 |
| | | | Temp. Rise | 51 | 52 | 53 | 54 | 55 |
| | 2 nd Stage | 650 | CFM / Watts | 662/37 | 655/79 | 649/120 | 642/162 | 635/203 |
| | | | Temp. Rise | 54 | 55 | 55 | 56 | 56 |
| 880 ^(a) | 1 st Stage | 634 | CFM / Watts | 616/40 | 607/78 | 599/115 | 591/152 | 583/190 |
| | | | Temp. Rise | 38 | 38 | 39 | 40 | 40 |
| | 2 nd Stage | 880 | CFM / Watts | 811/67 | 818/121 | 826/176 | 834/230 | 841/284 |
| | | | Temp. Rise | 45 | 44 | 44 | 43 | 42 |
| 950 | 1 st Stage | 684 | CFM / Watts | 635 / 47 | 643 / 106 | 650 / 165 | 658 / 224 | 666 / 283 |
| | | | Temp. Rise | 37 | 37 | 36 | 36 | 35 |
| | 2 nd Stage | 950 | CFM / Watts | 859 / 88 | 865 / 144 | 871 / 200 | 877 / 256 | 884 / 312 |
| | | | Temp. Rise | 42 | 41 | 41 | 41 | 41 |
| 1250 | 1 st Stage | 900 | CFM / Watts | 824 / 82 | 843 / 130 | 861 / 178 | 880 / 226 | 898 / 274 |
| | | | Temp. Rise | 28 | 28 | 27 | 26 | 26 |
| | 2 nd Stage | 1200 | CFM / Watts | 1082 / 192 | 1092 / 253 | 1102 / 314 | 1111 / 375 | 1121 / 436 |
| | | | Temp. Rise | 33 | 33 | 33 | 33 | 33 |

^(a) Factory Setting

Heating and Cooling Airflow Tables

Table 8. A952V040BU3S / A952V040BD3S cooling airflow

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (in. W. C.) VS. CFM/WATTS | | | | |
|------------------------|---------------------------|--|----------|----------|----------|----------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1.5 | 450 | 675/47 | 675/81 | 675/121 | 675/166 | 675/215 |
| | 420 | 630/40 | 630/72 | 630/111 | 630/154 | 630/202 |
| | 400 | 600/36 | 600/67 | 600/105 | 600/147 | 600/193 |
| | 370 | 555/30 | 555/60 | 555/96 | 555/136 | 555/181 |
| | 350 | 525/27 | 525/56 | 525/90 | 525/130 | 525/174 |
| | 330 | 495/24 | 495/51 | 495/85 | 495/124 | 495/167 |
| | 310 | 465/21 | 465/48 | 465/80 | 465/118 | 465/161 |
| | 290 | 435/19 | 435/44 | 435/76 | 435/113 | 435/155 |
| 2.0 | 450 | 900/94 | 900/137 | 900/186 | 900/240 | 900/298 |
| | 420 | 840/79 | 840/120 | 840/166 | 840/218 | 840/273 |
| | 400 | 800/70 | 800/109 | 800/154 | 800/204 | 800/258 |
| | 370 | 740/58 | 740/95 | 740/138 | 740/185 | 740/236 |
| | 350 | 700/51 | 700/86 | 700/127 | 700/173 | 700/223 |
| | 330 | 660/44 | 660/78 | 660/118 | 660/162 | 660/211 |
| | 310 | 620/38 | 620/71 | 620/109 | 620/152 | 620/199 |
| | 290 | 580/33 | 580/64 | 580/101 | 580/142 | 580/188 |
| 2.5 | 450 | 1125/167 | 1125/219 | 1125/278 | 1125/341 | 1125/408 |
| | 420 | 1050/139 | 1050/188 | 1050/244 | 1050/304 | 1050/368 |
| | 400 | 1000/123 | 1000/170 | 1000/223 | 1000/281 | 1000/343 |
| | 370 | 925/100 | 925/145 | 925/195 | 925/250 | 925/308 |
| | 350 | 875/87 | 875/129 | 875/178 | 875/230 | 875/287 |
| | 330 | 825/121 | 825/160 | 825/205 | 825/254 | 825/308 |
| | 310 | 775/101 | 775/139 | 775/182 | 775/229 | 775/281 |
| | 290 | 725/88 | 725/123 | 725/164 | 725/210 | 725/260 |
| 3.0 (a) | 450 | 1350/272 | 1350/334 | 1350/402 | 1298/440 | 1198/450 |
| | 420 | 1260/226 | 1260/284 | 1260/348 | 1260/417 | 1198/450 |
| | 400 | 1200/198 | 1200/254 | 1200/315 | 1200/381 | 1198/450 |
| | 370 | 1110/161 | 1110/213 | 1110/271 | 1110/333 | 1110/399 |
| | 350 ^(a) | 1050/139 | 1050/188 | 1050/244 | 1050/304 | 1050/368 |
| | 330 | 990/119 | 990/166 | 990/219 | 990/277 | 990/338 |
| | 310 | 930/102 | 930/146 | 930/197 | 930/252 | 930/311 |
| | 290 | 870/86 | 870/128 | 870/176 | 870/229 | 870/285 |

^(a) Factory Setting.

Table 9. A952V060BD3S heating airflow

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|-----------------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 900 | 1 st Stage | 711 | CFM / Watts | 677 / 48 | 677 / 93 | 677 / 138 | 677 / 183 | 677 / 228 |
| | | | Temp. Rise | 52 | 52 | 52 | 52 | 51 |
| | 2 nd Stage | 900 | CFM / Watts | 859 / 89 | 856 / 138 | 853 / 188 | 849 / 237 | 846 / 286 |
| | | | Temp. Rise | 62 | 62 | 63 | 63 | 63 |
| 1030 ^(a) | 1 st Stage | 814 | CFM / Watts | 787 / 71 | 775 / 115 | 763 / 160 | 751 / 204 | 739 / 249 |
| | | | Temp. Rise | 44 | 45 | 46 | 47 | 49 |
| | 2 nd Stage | 1030 | CFM / Watts | 976 / 126 | 967 / 179 | 957 / 232 | 947 / 285 | 938 / 338 |
| | | | Temp. Rise | 55 | 55 | 56 | 57 | 58 |
| 1130 | 1 st Stage | 893 | CFM / Watts | 864 / 85 | 855 / 133 | 846 / 181 | 836 / 229 | 827 / 277 |
| | | | Temp. Rise | 40 | 41 | 41 | 42 | 43 |
| | 2 nd Stage | 1130 | CFM / Watts | 1066 / 162 | 1053 / 218 | 1040 / 275 | 1026 / 331 | 1013 / 388 |
| | | | Temp. Rise | 50 | 51 | 52 | 53 | 53 |
| 1350 | 1 st Stage | 1067 | CFM / Watts | 1032 / 140 | 1013 / 193 | 993 / 245 | 974 / 297 | 955 / 349 |
| | | | Temp. Rise | 34 | 35 | 35 | 36 | 36 |
| | 2 nd Stage | 1350 | CFM / Watts | 1245 / 279 | 1233 / 332 | 1221 / 386 | 1209 / 440 | 1197 / 494 |
| | | | Temp. Rise | 43 | 44 | 44 | 44 | 45 |

^(a) Factory Setting

Table 10. A952V060BD3S cooling airflow

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (in. W. C.) vs. CFM/WATTS | | | | |
|------------------------|---------------------------|--|-----------|-----------|-----------|-----------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1.5 | 450 | 671 / 47 | 673 / 84 | 671 / 121 | 665 / 161 | 656 / 202 |
| | 420 | 625 / 41 | 628 / 75 | 626 / 111 | 621 / 149 | 611 / 190 |
| | 400 | 595 / 37 | 598 / 70 | 597 / 105 | 591 / 142 | 582 / 182 |
| | 370 | 548 / 32 | 552 / 63 | 552 / 96 | 547 / 132 | 538 / 171 |
| | 350 | 518 / 28 | 522 / 58 | 522 / 91 | 517 / 126 | 508 / 164 |
| | 330 | 487 / 25 | 491 / 54 | 491 / 86 | 487 / 120 | 479 / 158 |
| | 310 | 456 / 23 | 461 / 50 | 461 / 81 | 457 / 115 | 449 / 152 |
| | 290 | 424 / 20 | 430 / 47 | 431 / 77 | 427 / 110 | 419 / 147 |
| 2.0 | 450 | 894 / 91 | 890 / 136 | 881 / 181 | 871 / 228 | 873 / 282 |
| | 420 | 838 / 78 | 838 / 121 | 834 / 166 | 827 / 212 | 816 / 258 |
| | 400 | 797 / 69 | 798 / 111 | 795 / 154 | 788 / 198 | 777 / 244 |
| | 370 | 737 / 58 | 738 / 97 | 736 / 138 | 729 / 179 | 719 / 223 |
| | 350 | 696 / 51 | 698 / 89 | 696 / 127 | 690 / 168 | 680 / 210 |
| | 330 | 656 / 45 | 658 / 81 | 656 / 118 | 651 / 157 | 641 / 198 |
| | 310 | 615 / 39 | 618 / 73 | 616 / 109 | 611 / 147 | 602 / 187 |
| | 290 | 574 / 34 | 577 / 67 | 577 / 101 | 572 / 138 | 562 / 177 |

Heating and Cooling Airflow Tables

Table 10. A952V060BD3S cooling airflow (continued)

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (in. W. C.) VS. CFM/WATTS | | | | |
|------------------------|---------------------------|--|------------|------------|------------|------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 2.5 | 450 | 1119 / 161 | 1117 / 218 | 1111 / 274 | 1101 / 332 | 1088 / 390 |
| | 420 | 1036 / 131 | 1034 / 184 | 1029 / 237 | 1020 / 291 | 1008 / 346 |
| | 400 | 997 / 119 | 996 / 170 | 990 / 221 | 982 / 273 | 970 / 326 |
| | 370 | 922 / 98 | 922 / 146 | 917 / 194 | 909 / 243 | 898 / 293 |
| | 350 | 873 / 86 | 873 / 131 | 869 / 177 | 861 / 224 | 850 / 272 |
| | 330 | 823 / 74 | 823 / 118 | 819 / 161 | 812 / 206 | 801 / 253 |
| | 310 | 772 / 64 | 773 / 105 | 770 / 147 | 764 / 190 | 753 / 235 |
| | 290 | 722 / 55 | 723 / 94 | 721 / 134 | 715 / 175 | 704 / 218 |
| 3.0 ^(a) | 450 | 1336 / 262 | 1331 / 328 | 1323 / 395 | 1312 / 462 | 1299 / 529 |
| | 420 | 1250 / 217 | 1246 / 280 | 1239 / 342 | 1228 / 405 | 1215 / 469 |
| | 400 | 1192 / 191 | 1189 / 251 | 1182 / 311 | 1172 / 371 | 1159 / 432 |
| | 370 | 1105 / 156 | 1102 / 212 | 1096 / 268 | 1087 / 324 | 1074 / 382 |
| | 350 ^(a) | 1046 / 135 | 1044 / 188 | 1039 / 241 | 1030 / 296 | 1017 / 351 |
| | 330 | 987 / 116 | 986 / 167 | 981 / 217 | 972 / 269 | 960 / 322 |
| | 310 | 927 / 99 | 927 / 147 | 922 / 195 | 914 / 245 | 903 / 295 |
| | 290 | 868 / 85 | 868 / 130 | 864 / 175 | 856 / 222 | 845 / 270 |

^(a) Factory Setting.

Table 11. A952V060BU4S heating airflow

| Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|-----------------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Heating | Airflow Setting | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 990 | 1 st Stage | 782 | CFM / Watts | 776 / 70 | 769 / 109 | 762 / 149 | 756 / 188 | 749 / 227 |
| | | | Temp. Rise | 45 | 45 | 45 | 45 | 46 |
| | 2 nd Stage | 990 | CFM / Watts | 1002 / 126 | 996 / 172 | 990 / 219 | 984 / 266 | 979 / 313 |
| | | | Temp. Rise | 55 | 55 | 55 | 55 | 55 |
| 1090 | 1 st Stage | 861 | CFM / Watts | 842 / 88 | 823 / 126 | 805 / 164 | 786 / 202 | 768 / 240 |
| | | | Temp. Rise | 42 | 43 | 43 | 44 | 44 |
| | 2 nd Stage | 1090 | CFM / Watts | 1130 / 160 | 1117 / 206 | 1105 / 253 | 1092 / 300 | 1079 / 347 |
| | | | Temp. Rise | 49 | 49 | 49 | 50 | 50 |
| 1160 ^(a) | 1 st Stage | 916 | CFM / Watts | 863 / 105 | 860 / 143 | 858 / 181 | 855 / 219 | 853 / 257 |
| | | | Temp. Rise | 41 | 41 | 41 | 41 | 41 |
| | 2 nd Stage | 1160 | CFM / Watts | 1139 / 181 | 1133 / 231 | 1128 / 281 | 1122 / 331 | 1116 / 381 |
| | | | Temp. Rise | 48 | 48 | 49 | 49 | 49 |
| 1300 | 1 st Stage | 1027 | CFM / Watts | 1105 / 135 | 1084 / 173 | 1063 / 210 | 1042 / 248 | 1021 / 285 |
| | | | Temp. Rise | 32 | 32 | 33 | 34 | 34 |
| | 2 nd Stage | 1300 | CFM / Watts | 1319 / 246 | 1307 / 300 | 1295 / 353 | 1283 / 407 | 1272 / 461 |
| | | | Temp. Rise | 41 | 42 | 42 | 42 | 43 |

^(a) Factory Setting

Table 12. A952V060BU4S cooling airflow

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (in. W. C.) VS. CFM/WATTS | | | | |
|------------------------|---------------------------|--|------------|------------|------------|------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1.5 | 450 | 663 / 46 | 673 / 82 | 666 / 118 | 640 / 154 | 596 / 191 |
| | 420 | 620 / 40 | 629 / 74 | 621 / 109 | 594 / 143 | 548 / 179 |
| | 400 | 581 / 35 | 580 / 66 | 566 / 98 | 528 / 130 | 507 / 170 |
| | 370 | 549 / 31 | 556 / 63 | 546 / 94 | 517 / 127 | 469 / 162 |
| | 350 | 520 / 28 | 526 / 58 | 515 / 89 | 486 / 122 | 437 / 155 |
| | 330 | 492 / 25 | 497 / 54 | 485 / 84 | 454 / 116 | 404 / 150 |
| | 310 | 463 / 23 | 467 / 51 | 454 / 80 | 423 / 111 | 372 / 145 |
| | 290 | 434 / 20 | 437 / 47 | 424 / 76 | 391 / 107 | 339 / 140 |
| 2.0 | 450 | 878 / 90 | 892 / 135 | 889 / 179 | 868 / 222 | 829 / 266 |
| | 420 | 820 / 76 | 834 / 119 | 830 / 160 | 808 / 202 | 767 / 244 |
| | 400 | 769 / 65 | 777 / 105 | 770 / 144 | 742 / 182 | 724 / 229 |
| | 370 | 725 / 57 | 736 / 95 | 730 / 133 | 706 / 172 | 663 / 210 |
| | 350 | 687 / 50 | 697 / 87 | 691 / 124 | 666 / 161 | 622 / 198 |
| | 330 | 649 / 44 | 658 / 80 | 651 / 115 | 625 / 151 | 580 / 187 |
| | 310 | 611 / 39 | 619 / 73 | 611 / 107 | 584 / 141 | 538 / 177 |
| | 290 | 573 / 34 | 580 / 66 | 571 / 99 | 543 / 132 | 495 / 167 |
| 2.5 | 450 | 1096 / 159 | 1114 / 212 | 1114 / 264 | 1096 / 316 | 1061 / 367 |
| | 420 | 1023 / 132 | 1040 / 183 | 1039 / 233 | 1020 / 282 | 983 / 330 |
| | 400 | 975 / 117 | 989 / 165 | 989 / 214 | 969 / 261 | 932 / 308 |
| | 370 | 902 / 96 | 917 / 142 | 914 / 187 | 893 / 231 | 854 / 276 |
| | 350 | 854 / 84 | 868 / 128 | 864 / 171 | 843 / 214 | 803 / 256 |
| | 330 | 806 / 73 | 819 / 115 | 815 / 156 | 792 / 197 | 751 / 238 |
| | 310 | 758 / 63 | 770 / 103 | 765 / 142 | 742 / 182 | 700 / 221 |
| | 290 | 710 / 54 | 722 / 92 | 716 / 130 | 691 / 167 | 648 / 206 |
| 3.0 | 450 | 1318 / 259 | 1339 / 321 | 1342 / 381 | 1327 / 441 | 1295 / 500 |
| | 420 | 1229 / 215 | 1249 / 273 | 1250 / 330 | 1234 / 387 | 1201 / 443 |
| | 400 | 1170 / 188 | 1189 / 244 | 1190 / 299 | 1173 / 354 | 1138 / 408 |
| | 370 | 1081 / 153 | 1099 / 206 | 1099 / 258 | 1081 / 309 | 1045 / 360 |
| | 350 | 1023 / 132 | 1040 / 183 | 1039 / 233 | 1020 / 282 | 983 / 330 |
| | 330 | 965 / 114 | 981 / 162 | 979 / 210 | 959 / 257 | 921 / 303 |
| | 310 | 907 / 97 | 922 / 143 | 919 / 189 | 898 / 233 | 860 / 278 |
| | 290 | 849 / 83 | 863 / 126 | 859 / 169 | 838 / 212 | 798 / 255 |

Heating and Cooling Airflow Tables

Table 12. A952V060BU4S cooling airflow (continued)

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (in. W. C.) VS. CFM/WATTS | | | | |
|------------------------|---------------------------|--|------------|------------|------------|------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 3.5 | 450 | 1546 / 399 | 1570 / 468 | 1575 / 536 | 1563 / 604 | 1534 / 670 |
| | 420 | 1439 / 329 | 1462 / 394 | 1466 / 459 | 1453 / 523 | 1422 / 586 |
| | 400 | 1369 / 287 | 1390 / 350 | 1394 / 412 | 1379 / 474 | 1347 / 534 |
| | 370 | 1264 / 231 | 1284 / 291 | 1286 / 349 | 1270 / 407 | 1237 / 464 |
| | 350 | 1194 / 199 | 1214 / 256 | 1215 / 312 | 1198 / 367 | 1164 / 422 |
| | 330 | 1125 / 170 | 1144 / 224 | 1144 / 278 | 1127 / 331 | 1092 / 383 |
| | 310 | 1058 / 144 | 1074 / 196 | 1074 / 247 | 1055 / 297 | 1019 / 347 |
| | 290 | 991 / 122 | 1005 / 171 | 1004 / 219 | 984 / 267 | 947 / 314 |
| 4.0 ^(a) | 450 | 1779 / 584 | 1805 / 661 | 1814 / 736 | 1805 / 811 | 1778 / 885 |
| | 420 | 1654 / 479 | 1679 / 552 | 1686 / 623 | 1675 / 694 | 1647 / 765 |
| | 400 | 1571 / 417 | 1596 / 487 | 1602 / 556 | 1590 / 624 | 1560 / 692 |
| | 370 | 1449 / 335 | 1472 / 401 | 1476 / 466 | 1463 / 530 | 1432 / 593 |
| | 350 ^(a) | 1369 / 287 | 1390 / 350 | 1394 / 412 | 1379 / 474 | 1347 / 534 |
| | 330 | 1289 / 244 | 1309 / 304 | 1312 / 364 | 1296 / 422 | 1263 / 480 |
| | 310 | 1209 / 206 | 1229 / 263 | 1230 / 320 | 1214 / 376 | 1180 / 431 |
| | 290 | 1130 / 172 | 1149 / 227 | 1149 / 280 | 1132 / 333 | 1097 / 386 |

^(a) Factory Setting

Table 13. A952V080BU4S heating airflow

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|-----------------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1200 | 1 st Stage | 864 | CFM / Watts | 914 / 90 | 882 / 131 | 849 / 172 | 816 / 213 | 783 / 255 |
| | 2 nd Stage | | Temp. Rise | 51 | 53 | 55 | 57 | 59 |
| | 1 st Stage | 907 | CFM / Watts | 1207 / 206 | 1206 / 258 | 1205 / 309 | 1204 / 361 | 1203 / 412 |
| | 2 nd Stage | | Temp. Rise | 60 | 60 | 60 | 60 | 60 |
| 1260 ^(a) | 1 st Stage | 958 | CFM / Watts | 940 / 104 | 912 / 141 | 885 / 178 | 858 / 215 | 831 / 253 |
| | 2 nd Stage | | Temp. Rise | 50 | 51 | 53 | 54 | 56 |
| | 1 st Stage | 1051 | CFM / Watts | 1260 / 232 | 1261 / 287 | 1262 / 342 | 1263 / 397 | 1264 / 452 |
| | 2 nd Stage | | Temp. Rise | 57 | 57 | 57 | 57 | 57 |
| 1330 | 1 st Stage | 1200 | CFM / Watts | 983 / 118 | 932 / 151 | 881 / 184 | 830 / 218 | 779 / 251 |
| | 2 nd Stage | | Temp. Rise | 47 | 50 | 53 | 55 | 58 |
| | 1 st Stage | 1260 | CFM / Watts | 1360 / 263 | 1347 / 322 | 1333 / 380 | 1320 / 439 | 1306 / 497 |
| | 2 nd Stage | | Temp. Rise | 53 | 53 | 54 | 54 | 55 |
| 1460 | 1 st Stage | 1330 | CFM / Watts | 1029 / 155 | 1068 / 195 | 1107 / 235 | 1146 / 275 | 1185 / 314 |
| | 2 nd Stage | | Temp. Rise | 45 | 44 | 42 | 40 | 39 |
| | 1 st Stage | 1460 | CFM / Watts | 1420 / 377 | 1439 / 433 | 1458 / 489 | 1477 / 546 | 1496 / 602 |
| | 2 nd Stage | | Temp. Rise | 51 | 50 | 49 | 49 | 48 |

^(a) Factory Setting

Table 14. A952V080BD4S heating airflow

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|---------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1200 | 1st Stage | 864 | CFM / Watts | 807 / 81 | 795 / 126 | 782 / 171 | 769 / 216 | 757 / 261 |
| | | | Temp. Rise | 57 | 58 | 59 | 60 | 61 |
| | 2nd Stage | 1200 | CFM / Watts | 1125 / 191 | 1103 / 241 | 1082 / 291 | 1060 / 341 | 1039 / 391 |
| | | | Temp. Rise | 64 | 65 | 66 | 67 | 69 |
| 1260 | 1st Stage | 907 | CFM / Watts | 835 / 94 | 822 / 137 | 809 / 180 | 796 / 222 | 783 / 265 |
| | | | Temp. Rise | 55 | 56 | 57 | 58 | 59 |
| | 2nd Stage | 1260 | CFM / Watts | 1188 / 219 | 1161 / 272 | 1135 / 326 | 1108 / 380 | 1082 / 433 |
| | | | Temp. Rise | 60 | 62 | 63 | 64 | 66 |
| 1330 ^(a) | 1st Stage | 958 | CFM / Watts | 895 / 109 | 880 / 152 | 865 / 195 | 850 / 238 | 835 / 281 |
| | | | Temp. Rise | 51 | 52 | 54 | 55 | 57 |
| | 2nd Stage | 1330 | CFM / Watts | 1242 / 258 | 1219 / 309 | 1196 / 359 | 1173 / 410 | 1150 / 461 |
| | | | Temp. Rise | 57 | 59 | 60 | 61 | 62 |
| 1480 | 1st Stage | 1066 | CFM / Watts | 977 / 127 | 962 / 178 | 948 / 230 | 934 / 281 | 920 / 332 |
| | | | Temp. Rise | 47 | 48 | 49 | 50 | 51 |
| | 2nd Stage | 1480 | CFM / Watts | 1342 / 329 | 1327 / 388 | 1313 / 448 | 1298 / 507 | 1284 / 567 |
| | | | Temp. Rise | 53 | 54 | 54 | 55 | 56 |

^(a) Factory Setting

Table 15. A952V080BU4S / A952V080BD4S cooling airflow

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (IN. W. C.) VS. CFM/WATTS | | | | |
|------------------------|---------------------------|--|------------|------------|------------|------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 2.0 | 450 | 891 / 91 | 899 / 136 | 892 / 179 | 872 / 222 | 837 / 264 |
| | 420 | 834 / 77 | 840 / 120 | 833 / 161 | 812 / 201 | 777 / 242 |
| | 400 | 785 / 67 | 785 / 106 | 780 / 146 | 753 / 183 | 737 / 228 |
| | 370 | 738 / 58 | 743 / 96 | 735 / 134 | 713 / 171 | 677 / 209 |
| | 350 | 700 / 51 | 704 / 88 | 696 / 124 | 674 / 160 | 637 / 197 |
| | 330 | 661 / 45 | 665 / 80 | 657 / 115 | 635 / 150 | 597 / 186 |
| | 310 | 623 / 40 | 627 / 73 | 618 / 107 | 595 / 141 | 558 / 176 |
| | 290 | 585 / 35 | 588 / 67 | 579 / 99 | 556 / 132 | 518 / 167 |
| 2.5 | 450 | 1108 / 158 | 1119 / 212 | 1115 / 264 | 1097 / 315 | 1065 / 365 |
| | 420 | 1035 / 132 | 1045 / 184 | 1040 / 233 | 1021 / 281 | 988 / 328 |
| | 400 | 987 / 117 | 997 / 166 | 991 / 214 | 972 / 260 | 938 / 305 |
| | 370 | 915 / 97 | 923 / 143 | 917 / 187 | 897 / 231 | 862 / 274 |
| | 350 | 867 / 85 | 874 / 129 | 868 / 171 | 847 / 213 | 812 / 255 |
| | 330 | 819 / 74 | 826 / 116 | 819 / 156 | 798 / 196 | 762 / 237 |
| | 310 | 771 / 64 | 777 / 104 | 770 / 143 | 748 / 181 | 712 / 220 |
| | 290 | 724 / 55 | 729 / 93 | 721 / 130 | 699 / 167 | 662 / 205 |

Heating and Cooling Airflow Tables

Table 15. A952V080BU4S / A952V080BD4S cooling airflow (continued)

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (IN. W. C.) VS. CFM/WATTS | | | | |
|------------------------|---------------------------|--|------------|------------|------------|------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 3.0 | 450 | 1326 / 256 | 1341 / 319 | 1340 / 379 | 1325 / 438 | 1295 / 496 |
| | 420 | 1238 / 213 | 1252 / 272 | 1250 / 329 | 1233 / 385 | 1203 / 440 |
| | 400 | 1180 / 187 | 1193 / 244 | 1190 / 299 | 1173 / 352 | 1141 / 405 |
| | 370 | 1093 / 153 | 1104 / 206 | 1100 / 258 | 1082 / 308 | 1049 / 357 |
| | 350 | 1035 / 133 | 1046 / 184 | 1041 / 233 | 1022 / 281 | 988 / 328 |
| | 330 | 978 / 114 | 987 / 163 | 981 / 210 | 962 / 256 | 928 / 301 |
| | 310 | 920 / 98 | 928 / 144 | 922 / 189 | 902 / 233 | 867 / 276 |
| | 290 | 862 / 84 | 870 / 127 | 863 / 170 | 842 / 211 | 807 / 253 |
| 3.5 | 450 | 1546 / 392 | 1565 / 462 | 1567 / 531 | 1555 / 597 | 1529 / 663 |
| | 420 | 1443 / 323 | 1460 / 390 | 1461 / 455 | 1447 / 518 | 1419 / 580 |
| | 400 | 1374 / 283 | 1390 / 347 | 1391 / 410 | 1376 / 470 | 1347 / 530 |
| | 370 | 1272 / 229 | 1287 / 290 | 1285 / 348 | 1269 / 405 | 1239 / 461 |
| | 350 | 1204 / 198 | 1217 / 256 | 1215 / 311 | 1198 / 366 | 1167 / 419 |
| | 330 | 1137 / 169 | 1149 / 225 | 1145 / 278 | 1127 / 329 | 1095 / 380 |
| | 310 | 1069 / 144 | 1080 / 197 | 1075 / 247 | 1057 / 296 | 1024 / 345 |
| | 290 | 1002 / 122 | 1011 / 172 | 1006 / 219 | 987 / 266 | 953 / 312 |
| 4.0 ^(a) | 450 | 1769 / 570 | 1791 / 648 | 1797 / 724 | 1788 / 799 | 1765 / 872 |
| | 420 | 1650 / 469 | 1670 / 543 | 1674 / 615 | 1664 / 686 | 1639 / 755 |
| | 400 | 1571 / 409 | 1590 / 481 | 1593 / 550 | 1581 / 618 | 1555 / 684 |
| | 370 | 1453 / 330 | 1470 / 397 | 1471 / 462 | 1458 / 525 | 1430 / 588 |
| | 350 ^(a) | 1374 / 283 | 1390 / 347 | 1391 / 410 | 1376 / 470 | 1347 / 530 |
| | 330 | 1296 / 241 | 1311 / 303 | 1310 / 362 | 1294 / 420 | 1264 / 477 |
| | 310 | 1219 / 204 | 1232 / 263 | 1230 / 319 | 1213 / 374 | 1182 / 428 |
| | 290 | 1141 / 171 | 1153 / 227 | 1150 / 280 | 1132 / 332 | 1100 / 383 |

^(a) Factory Setting

Table 16. A952V080CU5S heating airflow

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|---------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1190 | 1st Stage | 857 | CFM / Watts | 837 / 67 | 821 / 109 | 804 / 150 | 787 / 192 | 771 / 233 |
| | | | Temp. Rise | 55 | 56 | 57 | 58 | 59 |
| | 2nd Stage | 1190 | CFM / Watts | 1114 / 126 | 1127 / 188 | 1140 / 250 | 1153 / 311 | 1167 / 373 |
| | | | Temp. Rise | 64 | 63 | 62 | 61 | 60 |
| 1450 ^(a) | 1st Stage | 1044 | CFM / Watts | 967 / 90 | 993 / 144 | 1018 / 198 | 1044 / 252 | 1070 / 305 |
| | | | Temp. Rise | 47 | 46 | 45 | 44 | 43 |
| | 2nd Stage | 1450 | CFM / Watts | 1359 / 216 | 1377 / 290 | 1395 / 364 | 1413 / 439 | 1431 / 513 |
| | | | Temp. Rise | 52 | 51 | 50 | 50 | 49 |

Table 16. A952V080CU5S heating airflow (continued)

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|---------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1560 | 1st Stage | 1123 | CFM / Watts | 1059 / 108 | 1057 / 164 | 1055 / 221 | 1053 / 278 | 1051 / 335 |
| | | | Temp. Rise | 43 | 43 | 43 | 43 | 43 |
| | 2nd Stage | 1560 | CFM / Watts | 1466 / 263 | 1473 / 344 | 1481 / 425 | 1489 / 506 | 1497 / 587 |
| | | | Temp. Rise | 47 | 47 | 47 | 47 | 47 |
| 1700 | 1st Stage | 1224 | CFM / Watts | 1266 / 133 | 1170 / 193 | 1075 / 253 | 979 / 313 | 884 / 372 |
| | | | Temp. Rise | 36 | 39 | 42 | 46 | 49 |
| | 2nd Stage | 1700 | CFM / Watts | 1773 / 355 | 1731 / 436 | 1689 / 518 | 1646 / 599 | 1604 / 681 |
| | | | Temp. Rise | 40 | 41 | 42 | 43 | 44 |

(a) Factory Setting

Table 17. A952V080CU5S cooling airflow

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (IN. W. C.) VS. CFM/WATTS | | | | |
|------------------------|---------------------------|--|------------|------------|------------|------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 3.0 | 450 | 1334 / 181 | 1346 / 241 | 1356 / 303 | 1362 / 366 | 1366 / 431 |
| | 420 | 1246 / 152 | 1258 / 207 | 1267 / 265 | 1273 / 325 | 1277 / 387 |
| | 400 | 1187 / 134 | 1199 / 187 | 1208 / 243 | 1213 / 300 | 1216 / 359 |
| | 370 | 1099 / 110 | 1111 / 160 | 1118 / 212 | 1122 / 266 | 1124 / 322 |
| | 350 | 1041 / 96 | 1051 / 143 | 1058 / 193 | 1061 / 244 | 1062 / 298 |
| | 330 | 983 / 83 | 992 / 128 | 997 / 175 | 999 / 225 | 999 / 277 |
| | 310 | 925 / 71 | 932 / 114 | 936 / 159 | 936 / 207 | 935 / 257 |
| | 290 | 867 / 61 | 873 / 101 | 874 / 144 | 872 / 190 | 870 / 238 |
| 3.5 | 450 | 1557 / 273 | 1567 / 342 | 1575 / 413 | 1581 / 485 | 1584 / 559 |
| | 420 | 1453 / 227 | 1464 / 292 | 1473 / 358 | 1479 / 426 | 1483 / 496 |
| | 400 | 1384 / 200 | 1395 / 261 | 1405 / 325 | 1411 / 390 | 1415 / 457 |
| | 370 | 1280 / 163 | 1292 / 220 | 1301 / 279 | 1308 / 341 | 1311 / 403 |
| | 350 | 1212 / 141 | 1224 / 195 | 1232 / 252 | 1238 / 310 | 1241 / 371 |
| | 330 | 1143 / 121 | 1155 / 173 | 1163 / 227 | 1168 / 282 | 1171 / 340 |
| | 310 | 1075 / 104 | 1086 / 152 | 1093 / 204 | 1097 / 257 | 1099 / 312 |
| | 290 | 1007 / 88 | 1017 / 134 | 1022 / 182 | 1025 / 233 | 1026 / 286 |
| 4.0 | 450 | 1781 / 392 | 1788 / 470 | 1794 / 550 | 1797 / 632 | 1798 / 715 |
| | 420 | 1661 / 325 | 1670 / 398 | 1677 / 473 | 1682 / 550 | 1684 / 628 |
| | 400 | 1582 / 285 | 1592 / 355 | 1600 / 427 | 1605 / 500 | 1608 / 575 |
| | 370 | 1463 / 231 | 1474 / 296 | 1483 / 363 | 1489 / 432 | 1493 / 502 |
| | 350 | 1384 / 200 | 1395 / 261 | 1405 / 325 | 1411 / 390 | 1415 / 457 |
| | 330 | 1305 / 171 | 1317 / 229 | 1326 / 290 | 1332 / 352 | 1336 / 416 |
| | 310 | 1226 / 146 | 1238 / 201 | 1247 / 258 | 1253 / 317 | 1256 / 377 |
| | 290 | 1148 / 123 | 1160 / 174 | 1168 / 228 | 1173 / 284 | 1176 / 342 |

Heating and Cooling Airflow Tables

Table 17. A952V080CU5S cooling airflow (continued)

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (IN. W. C.) VS. CFM/WATTS | | | | |
|------------------------|---------------------------|--|------------|------------|-------------|-------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 4.5 | 450 | 2008 / 542 | 2010 / 629 | 2011 / 719 | 2011 / 810 | 2008 / 902 |
| | 420 | 1872 / 448 | 1877 / 530 | 1881 / 614 | 1883 / 699 | 1882 / 786 |
| | 400 | 1781 / 392 | 1788 / 470 | 1794 / 550 | 1797 / 632 | 1798 / 715 |
| | 370 | 1647 / 317 | 1656 / 390 | 1663 / 464 | 1668 / 540 | 1670 / 618 |
| | 350 | 1557 / 273 | 1567 / 342 | 1575 / 413 | 1581 / 485 | 1584 / 559 |
| | 330 | 1468 / 233 | 1479 / 298 | 1488 / 366 | 1494 / 434 | 1498 / 504 |
| | 310 | 1379 / 198 | 1391 / 259 | 1400 / 323 | 1406 / 388 | 1410 / 454 |
| | 290 | 1290 / 166 | 1302 / 224 | 1311 / 284 | 1318 / 345 | 1321 / 408 |
| 5.0 ^(a) | 450 | 2235 / 726 | 2233 / 823 | 2229 / 922 | 2224 / 1023 | 2216 / 1124 |
| | 420 | 2083 / 599 | 2084 / 690 | 2084 / 783 | 2082 / 877 | 2077 / 972 |
| | 400 | 1982 / 523 | 1986 / 610 | 1987 / 699 | 1987 / 789 | 1985 / 880 |
| | 370 | 1832 / 422 | 1838 / 503 | 1842 / 585 | 1844 / 669 | 1844 / 754 |
| | 350 ^(a) | 1731 / 363 | 1739 / 439 | 1745 / 517 | 1749 / 597 | 1750 / 678 |
| | 330 | 1632 / 309 | 1641 / 381 | 1648 / 455 | 1653 / 531 | 1656 / 608 |
| | 310 | 1532 / 261 | 1543 / 329 | 1551 / 399 | 1557 / 471 | 1560 / 543 |
| | 290 | 1433 / 219 | 1445 / 283 | 1453 / 348 | 1460 / 416 | 1464 / 484 |

^(a) Factory Setting

Table 18. A952V100CU5S heating airflow

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|---------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1590 | 1st Stage | 1145 | CFM / Watts | 1111 / 135 | 1097 / 184 | 1083 / 234 | 1068 / 283 | 1054 / 333 |
| | | | Temp. Rise | 52 | 52 | 52 | 52 | 53 |
| | 2nd Stage | 1590 | CFM / Watts | 1564 / 323 | 1550 / 397 | 1536 / 470 | 1522 / 544 | 1508 / 618 |
| | | | Temp. Rise | 58 | 58 | 58 | 58 | 59 |
| 1980 | 1st Stage | 1426 | CFM / Watts | 1393 / 232 | 1383 / 286 | 1372 / 340 | 1362 / 394 | 1352 / 447 |
| | | | Temp. Rise | 41 | 41 | 42 | 42 | 42 |
| | 2nd Stage | 1980 | CFM / Watts | 1959 / 597 | 1936 / 681 | 1913 / 764 | 1891 / 847 | 1868 / 930 |
| | | | Temp. Rise | 46 | 46 | 47 | 47 | 47 |
| 2060 ^(a) | 1st Stage | 1483 | CFM / Watts | 1451 / 260 | 1447 / 310 | 1443 / 360 | 1438 / 410 | 1434 / 460 |
| | | | Temp. Rise | 39 | 40 | 40 | 40 | 40 |
| | 2nd Stage | 2060 | CFM / Watts | 2047 / 655 | 2034 / 737 | 2021 / 818 | 2008 / 900 | 1995 / 982 |
| | | | Temp. Rise | 44 | 44 | 44 | 45 | 45 |
| 2150 | 1st Stage | 1548 | CFM / Watts | 1495 / 285 | 1477 / 352 | 1458 / 419 | 1439 / 486 | 1421 / 553 |
| | | | Temp. Rise | 38 | 39 | 39 | 40 | 40 |
| | 2nd Stage | 2150 | CFM / Watts | 2102 / 745 | 2087 / 801 | 2073 / 857 | 2058 / 913 | 2044 / 969 |
| | | | Temp. Rise | 43 | 43 | 43 | 44 | 44 |

^(a) Factory Setting

Table 19. A952V100CD5S heating airflow

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|---------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1520 | 1st Stage | 1094 | CFM / Watts | 1093 / 126 | 1092 / 183 | 1090 / 240 | 1089 / 296 | 1088 / 353 |
| | | | Temp. Rise | 53 | 53 | 53 | 52 | 52 |
| | 2nd Stage | 1520 | CFM / Watts | 1484 / 296 | 1477 / 370 | 1469 / 444 | 1461 / 518 | 1453 / 592 |
| | | | Temp. Rise | 60 | 60 | 61 | 61 | 61 |
| 1880 | 1st Stage | 1296 | CFM / Watts | 1234 / 186 | 1238 / 243 | 1242 / 299 | 1247 / 356 | 1251 / 413 |
| | | | Temp. Rise | 47 | 47 | 47 | 47 | 47 |
| | 2nd Stage | 1800 | CFM / Watts | 1693 / 449 | 1688 / 533 | 1684 / 618 | 1679 / 702 | 1674 / 786 |
| | | | Temp. Rise | 53 | 53 | 53 | 53 | 53 |
| 1870 ^(a) | 1st Stage | 1346 | CFM / Watts | 1279 / 214 | 1268 / 268 | 1256 / 321 | 1245 / 375 | 1234 / 428 |
| | | | Temp. Rise | 45 | 45 | 46 | 46 | 47 |
| | 2nd Stage | 1870 | CFM / Watts | 1768 / 505 | 1772 / 591 | 1775 / 678 | 1778 / 765 | 1781 / 852 |
| | | | Temp. Rise | 51 | 50 | 50 | 50 | 50 |
| 2100 | 1st Stage | 1512 | CFM / Watts | 1453 / 277 | 1429 / 344 | 1405 / 411 | 1381 / 478 | 1358 / 545 |
| | | | Temp. Rise | 40 | 40 | 41 | 41 | 42 |
| | 2nd Stage | 2100 | CFM / Watts | 1969 / 723 | 1956 / 789 | 1944 / 854 | 1931 / 920 | 1918 / 986 |
| | | | Temp. Rise | 45 | 45 | 46 | 46 | 46 |

^(a) Factory Setting

Table 20. A952V100CU5S / A952V100CD5S cooling airflow

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (IN. W. C.) VS. CFM/WATTS | | | | |
|------------------------|---------------------------|--|------------|------------|------------|------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 2.5 | 450 | 1152 / 111 | 1149 / 158 | 1147 / 208 | 1144 / 260 | 1140 / 314 |
| | 420 | 1076 / 93 | 1072 / 138 | 1070 / 185 | 1068 / 234 | 1063 / 286 |
| | 400 | 1060 / 89 | 1056 / 133 | 1053 / 180 | 1044 / 227 | 1021 / 272 |
| | 370 | 949 / 68 | 944 / 108 | 941 / 151 | 939 / 197 | 934 / 246 |
| | 350 | 898 / 60 | 892 / 98 | 890 / 139 | 886 / 184 | 882 / 232 |
| | 330 | 847 / 52 | 841 / 88 | 837 / 128 | 834 / 172 | 829 / 219 |
| | 310 | 796 / 45 | 788 / 80 | 785 / 118 | 782 / 161 | 777 / 207 |
| | 290 | 744 / 39 | 736 / 72 | 732 / 109 | 729 / 151 | 723 / 197 |
| 3.0 | 450 | 1378 / 178 | 1376 / 234 | 1374 / 292 | 1371 / 352 | 1367 / 413 |
| | 420 | 1288 / 148 | 1285 / 201 | 1284 / 256 | 1281 / 312 | 1277 / 370 |
| | 400 | 1228 / 131 | 1225 / 181 | 1223 / 233 | 1220 / 288 | 1216 / 344 |
| | 370 | 1137 / 107 | 1134 / 154 | 1132 / 203 | 1129 / 254 | 1125 / 308 |
| | 350 | 1076 / 93 | 1072 / 138 | 1070 / 185 | 1068 / 234 | 1063 / 286 |
| | 330 | 1016 / 80 | 1011 / 123 | 1009 / 168 | 1006 / 215 | 1002 / 266 |
| | 310 | 954 / 69 | 949 / 109 | 947 / 152 | 944 / 198 | 939 / 247 |
| | 290 | 893 / 59 | 887 / 97 | 884 / 138 | 881 / 183 | 877 / 230 |

Heating and Cooling Airflow Tables

Table 20. A952V100CU5S / A952V100CD5S cooling airflow (continued)

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (IN. W. C.) VS. CFM/WATTS | | | | |
|---------------------------|------------------------------|--|------------|------------|-------------|-------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 3.5 | 450 | 1601 / 269 | 1599 / 334 | 1597 / 401 | 1594 / 469 | 1589 / 538 |
| | 420 | 1497 / 223 | 1495 / 284 | 1493 / 347 | 1490 / 411 | 1486 / 476 |
| | 400 | 1428 / 196 | 1425 / 254 | 1424 / 314 | 1421 / 375 | 1417 / 438 |
| | 370 | 1323 / 159 | 1320 / 213 | 1319 / 269 | 1316 / 327 | 1312 / 386 |
| | 350 | 1253 / 138 | 1250 / 189 | 1248 / 242 | 1246 / 298 | 1242 / 355 |
| | 330 | 1183 / 118 | 1179 / 167 | 1177 / 218 | 1175 / 271 | 1171 / 326 |
| | 310 | 1112 / 101 | 1108 / 147 | 1106 / 195 | 1103 / 246 | 1099 / 299 |
| | 290 | 1041 / 86 | 1037 / 129 | 1034 / 175 | 1032 / 223 | 1027 / 274 |
| 4.0 | 450 | 1820 / 387 | 1818 / 461 | 1816 / 537 | 1812 / 614 | 1807 / 692 |
| | 420 | 1703 / 320 | 1701 / 390 | 1699 / 461 | 1696 / 533 | 1691 / 606 |
| | 400 | 1625 / 280 | 1623 / 347 | 1621 / 414 | 1618 / 483 | 1614 / 554 |
| | 370 | 1507 / 227 | 1505 / 288 | 1503 / 352 | 1500 / 416 | 1496 / 482 |
| | 350 | 1428 / 196 | 1425 / 254 | 1424 / 314 | 1421 / 375 | 1417 / 438 |
| | 330 | 1348 / 168 | 1346 / 222 | 1344 / 279 | 1341 / 338 | 1337 / 398 |
| | 310 | 1268 / 142 | 1265 / 194 | 1263 / 248 | 1261 / 304 | 1257 / 361 |
| | 290 | 1188 / 120 | 1184 / 168 | 1182 / 219 | 1180 / 272 | 1176 / 328 |
| 4.5 | 450 | 2036 / 537 | 2034 / 620 | 2030 / 705 | 2026 / 791 | 2020 / 879 |
| | 420 | 1907 / 443 | 1905 / 521 | 1902 / 600 | 1898 / 681 | 1892 / 763 |
| | 400 | 1820 / 387 | 1818 / 461 | 1816 / 537 | 1812 / 614 | 1807 / 692 |
| | 370 | 1689 / 313 | 1687 / 381 | 1685 / 452 | 1682 / 523 | 1677 / 596 |
| | 350 | 1601 / 269 | 1599 / 334 | 1597 / 401 | 1594 / 469 | 1589 / 538 |
| | 330 | 1512 / 229 | 1510 / 291 | 1508 / 354 | 1505 / 419 | 1501 / 485 |
| | 310 | 1423 / 194 | 1420 / 252 | 1419 / 312 | 1416 / 373 | 1412 / 436 |
| | 290 | 1333 / 163 | 1331 / 217 | 1329 / 273 | 1326 / 331 | 1322 / 391 |
| 5.0 ^(a) | 450 | 2248 / 721 | 2245 / 814 | 2241 / 909 | 2235 / 1004 | 2228 / 1100 |
| | 420 | 2107 / 594 | 2105 / 681 | 2101 / 769 | 2096 / 858 | 2089 / 948 |
| | 400 | 2012 / 519 | 2010 / 601 | 2007 / 685 | 2002 / 770 | 1996 / 856 |
| | 370 | 1868 / 418 | 1866 / 494 | 1864 / 572 | 1860 / 651 | 1854 / 731 |
| | 350 ^(a) | 1771 / 358 | 1770 / 430 | 1767 / 504 | 1764 / 579 | 1759 / 655 |
| | 330 | 1674 / 305 | 1672 / 373 | 1670 / 443 | 1667 / 514 | 1662 / 586 |
| | 310 | 1576 / 257 | 1574 / 321 | 1572 / 387 | 1569 / 454 | 1565 / 523 |
| | 290 | 1477 / 215 | 1475 / 275 | 1473 / 337 | 1471 / 400 | 1466 / 465 |

^(a) Factory Setting

Table 21. A952V120DU5S heating airflow

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|---------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1560 | 1st Stage | 1123 | CFM / Watts | 1138 / 115 | 1158 / 176 | 1178 / 236 | 1198 / 297 | 1218 / 358 |
| | | | Temp. Rise | 61 | 60 | 59 | 58 | 57 |
| | 2nd Stage | 1560 | CFM / Watts | 1654 / 291 | 1637 / 360 | 1621 / 430 | 1604 / 499 | 1587 / 568 |
| | | | Temp. Rise | 65 | 66 | 67 | 67 | 68 |
| 1850 | 1st Stage | 1332 | CFM / Watts | 1371 / 182 | 1383 / 251 | 1394 / 320 | 1406 / 389 | 1417 / 457 |
| | | | Temp. Rise | 51 | 50 | 50 | 49 | 49 |
| | 2nd Stage | 1850 | CFM / Watts | 1980 / 456 | 1951 / 539 | 1922 / 621 | 1893 / 704 | 1864 / 787 |
| | | | Temp. Rise | 55 | 56 | 57 | 58 | 58 |
| 1950 ^(a) | 1st Stage | 1404 | CFM / Watts | 1440 / 208 | 1450 / 283 | 1461 / 357 | 1471 / 431 | 1482 / 505 |
| | | | Temp. Rise | 48 | 48 | 48 | 47 | 47 |
| | 2nd Stage | 1950 | CFM / Watts | 2075 / 527 | 2037 / 611 | 1999 / 696 | 1961 / 781 | 1923 / 865 |
| | | | Temp. Rise | 52 | 53 | 54 | 55 | 56 |
| 2250 | 1st Stage | 1620 | CFM / Watts | 1669 / 315 | 1674 / 388 | 1680 / 460 | 1685 / 533 | 1691 / 605 |
| | | | Temp. Rise | 42 | 42 | 41 | 41 | 41 |
| | 2nd Stage | 2250 | CFM / Watts | 2280 / 795 | 2197 / 819 | 2114 / 842 | 2032 / 865 | 1949 / 888 |
| | | | Temp. Rise | 48 | 50 | 52 | 54 | 56 |

^(a) Factory Setting

Table 22. A952V120DD5S heating airflow

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|---------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 1750 | 1st Stage | 1160 | CFM / Watts | 1234 / 137 | 1240 / 198 | 1246 / 258 | 1252 / 319 | 1258 / 380 |
| | | | Temp. Rise | 56 | 56 | 56 | 55 | 55 |
| | 2nd Stage | 1750 | CFM / Watts | 1687 / 327 | 1673 / 407 | 1659 / 487 | 1645 / 568 | 1631 / 648 |
| | | | Temp. Rise | 63 | 64 | 64 | 65 | 65 |
| 1850 | 1st Stage | 1332 | CFM / Watts | 1305 / 158 | 1311 / 221 | 1318 / 284 | 1325 / 347 | 1332 / 410 |
| | | | Temp. Rise | 53 | 53 | 53 | 52 | 52 |
| | 2nd Stage | 1850 | CFM / Watts | 1788 / 380 | 1771 / 464 | 1754 / 549 | 1738 / 633 | 1721 / 718 |
| | | | Temp. Rise | 60 | 60 | 61 | 61 | 62 |
| 1950 | 1st Stage | 1404 | CFM / Watts | 1324 / 179 | 1510 / 246 | 1697 / 313 | 1884 / 380 | 2070 / 447 |
| | | | Temp. Rise | 53 | 46 | 39 | 32 | 25 |
| | 2nd Stage | 1950 | CFM / Watts | 1891 / 424 | 1862 / 524 | 1833 / 624 | 1803 / 724 | 1774 / 824 |
| | | | Temp. Rise | 56 | 57 | 58 | 60 | 61 |

Heating and Cooling Airflow Tables

Table 22. A952V120DD5S heating airflow (continued)

| Furnace Heating Airflow (CFM), Power (Watts), and Temp. Rise (°F) vs. External Static Pressure with Filter (iwc) | | | | | | | | |
|--|---------------|----------------|-------------|--------------------------------------|------------|------------|------------|------------|
| Airflow Setting | Heating Stage | Target Airflow | | External Static Pressure (in. W. C.) | | | | |
| | | | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 2250 ^(a) | 1st Stage | 1620 | CFM / Watts | 1598 / 266 | 1484 / 316 | 1371 / 366 | 1257 / 416 | 1144 / 466 |
| | | | Temp. Rise | 44 | 47 | 49 | 52 | 54 |
| | 2nd Stage | 2250 | CFM / Watts | 2080 / 708 | 2100 / 768 | 2120 / 828 | 2140 / 888 | 2160 / 948 |
| | | | Temp. Rise | 51 | 51 | 51 | 51 | 51 |

^(a) Factory Setting

Table 23. A952V120DU5S / A952V120DD5S cooling airflow

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (IN. W. C.) VS. CFM/WATTS | | | | |
|------------------------|---------------------------|--|------------|------------|------------|------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 3.0 | 450 | 1336 / 163 | 1346 / 221 | 1353 / 280 | 1359 / 341 | 1363 / 401 |
| | 420 | 1247 / 136 | 1257 / 191 | 1265 / 247 | 1270 / 303 | 1274 / 360 |
| | 400 | 1189 / 120 | 1198 / 173 | 1205 / 226 | 1211 / 280 | 1214 / 335 |
| | 370 | 1101 / 99 | 1109 / 148 | 1116 / 198 | 1120 / 249 | 1123 / 300 |
| | 350 | 1043 / 86 | 1050 / 133 | 1056 / 180 | 1060 / 229 | 1062 / 279 |
| | 330 | 985 / 75 | 991 / 119 | 996 / 164 | 999 / 211 | 1000 / 259 |
| | 310 | 926 / 65 | 931 / 106 | 935 / 149 | 937 / 194 | 937 / 240 |
| | 290 | 869 / 56 | 872 / 95 | 874 / 136 | 875 / 178 | 874 / 223 |
| 3.5 | 450 | 1558 / 244 | 1567 / 312 | 1574 / 380 | 1579 / 449 | 1582 / 519 |
| | 420 | 1454 / 203 | 1464 / 266 | 1471 / 331 | 1477 / 396 | 1480 / 461 |
| | 400 | 1385 / 179 | 1395 / 239 | 1403 / 301 | 1408 / 363 | 1412 / 425 |
| | 370 | 1282 / 146 | 1292 / 202 | 1299 / 259 | 1305 / 317 | 1309 / 376 |
| | 350 | 1213 / 127 | 1223 / 180 | 1230 / 235 | 1235 / 290 | 1239 / 346 |
| | 330 | 1145 / 109 | 1154 / 160 | 1161 / 211 | 1166 / 264 | 1169 / 317 |
| | 310 | 1077 / 94 | 1085 / 141 | 1091 / 190 | 1095 / 240 | 1098 / 291 |
| | 290 | 1009 / 80 | 1016 / 125 | 1021 / 171 | 1024 / 218 | 1026 / 267 |
| 4.0 | 450 | 1783 / 349 | 1789 / 426 | 1793 / 505 | 1796 / 583 | 1797 / 662 |
| | 420 | 1663 / 290 | 1670 / 362 | 1676 / 435 | 1680 / 509 | 1683 / 582 |
| | 400 | 1583 / 254 | 1591 / 323 | 1598 / 393 | 1603 / 463 | 1606 / 534 |
| | 370 | 1464 / 207 | 1473 / 270 | 1481 / 335 | 1486 / 401 | 1490 / 466 |
| | 350 | 1385 / 179 | 1395 / 239 | 1403 / 301 | 1408 / 363 | 1412 / 425 |
| | 330 | 1306 / 153 | 1316 / 211 | 1324 / 269 | 1330 / 328 | 1333 / 387 |
| | 310 | 1228 / 131 | 1237 / 185 | 1245 / 240 | 1250 / 295 | 1254 / 352 |
| | 290 | 1150 / 111 | 1159 / 161 | 1166 / 213 | 1171 / 266 | 1174 / 319 |

Table 23. A952V120DU5S / A952V120DD5S cooling airflow (continued)

| Outdoor Tonnage (tons) | Airflow Setting (CFM/ton) | External Static Pressure (IN. W. C.) VS. CFM/WATTS | | | | |
|---------------------------|------------------------------|--|------------|------------|------------|-------------|
| | | 0.1 | 0.3 | 0.5 | 0.7 | 0.9 |
| 4.5 | 450 | 2009 / 482 | 2011 / 569 | 2011 / 657 | 2011 / 745 | 2009 / 833 |
| | 420 | 1873 / 399 | 1877 / 480 | 1880 / 562 | 1882 / 644 | 1882 / 727 |
| | 400 | 1783 / 349 | 1789 / 426 | 1793 / 505 | 1796 / 583 | 1797 / 662 |
| | 370 | 1648 / 283 | 1655 / 354 | 1661 / 427 | 1666 / 500 | 1668 / 573 |
| | 350 | 1558 / 244 | 1567 / 312 | 1574 / 380 | 1579 / 449 | 1582 / 519 |
| | 330 | 1469 / 209 | 1478 / 273 | 1486 / 338 | 1491 / 403 | 1495 / 469 |
| | 310 | 1380 / 177 | 1390 / 237 | 1398 / 299 | 1403 / 361 | 1407 / 423 |
| | 290 | 1292 / 149 | 1301 / 206 | 1309 / 263 | 1315 / 322 | 1318 / 380 |
| 5.0 ^(a) | 450 | 2238 / 645 | 2234 / 742 | 2230 / 839 | 2225 / 937 | 2220 / 1035 |
| | 420 | 2085 / 533 | 2085 / 623 | 2084 / 714 | 2082 / 805 | 2080 / 897 |
| | 400 | 1984 / 466 | 1986 / 551 | 1987 / 638 | 1987 / 725 | 1986 / 813 |
| | 370 | 1833 / 376 | 1838 / 456 | 1841 / 536 | 1844 / 617 | 1844 / 698 |
| | 350 ^(a) | 1733 / 323 | 1739 / 399 | 1744 / 475 | 1748 / 551 | 1750 / 628 |
| | 330 | 1633 / 276 | 1641 / 347 | 1647 / 419 | 1651 / 491 | 1654 / 564 |
| | 310 | 1533 / 234 | 1542 / 300 | 1549 / 368 | 1554 / 436 | 1558 / 505 |
| | 290 | 1434 / 196 | 1444 / 258 | 1452 / 322 | 1457 / 386 | 1461 / 451 |

^(a) Factory Setting

Furnace General Installation

The following sections give general instructions for the installation of the gas furnaces.

Furnace Panel Removal

Note: Use a 1/4-inch nut driver to remove the two screws on the front panel.


Horizontal Installation in an Attic or Crawlspace

The S-Series upflow condensing furnace may be installed in an attic or crawl space in the horizontal let or right position for needed airflow direction. The horizontal furnace installation in an attic should be on a service platform large enough to allow for proper clearances on all sides and service access to the front of the furnace. See “Locations and Clearances,” p. 15. Line contact is only permissible between lines formed by intersections of the top and two sides of the furnace casing and building joists, studs, or framing.

The furnace may be placed horizontally in a crawl space on a pad or other noncombustible material which will raise the unit for sufficient protection from moisture.

The Furnace must be supported at both ends and the middle when installed horizontally. The Furnace must also be elevated approximately 6 inches to allow clearance for the condensate drain to exit the cabinet in the *horizontal position*.

Figure 6. Horizontal installation in an attic or crawlspace

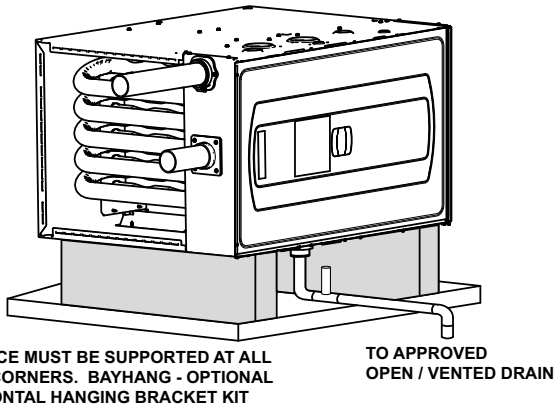


Note: The overflow stand pipe termination must be even with or slightly below the bottom of the condensate trap.
Note: Water from the overflow pipe must drain into the emergency drain pan.

Horizontal Installation Hanging Using Straps

The furnace may be installed hanging in a horizontal position using straps. The furnace should be supported at

both ends and have an additional support in the center of the furnace in front.

Figure 7. Horizontal installation hanging using straps

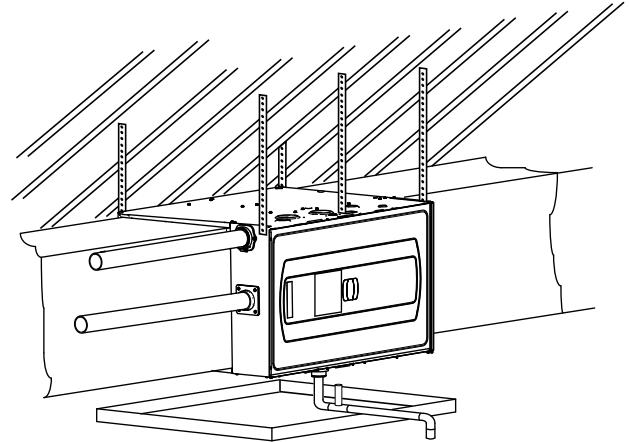

Gas Piping

Important: When converting the gas piping from the factory default, the plug must be removed from the new gas piping location and swapped with the grommet from the default location. The upflow furnace default is left side gas piping. The downflow furnace default is right side gas piping.

Figure 8. Upflow furnace with gas piping on left side

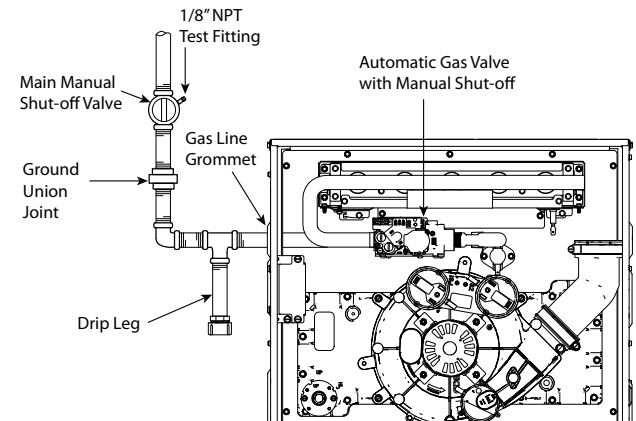


Figure 9. Upflow furnace with gas piping on right side

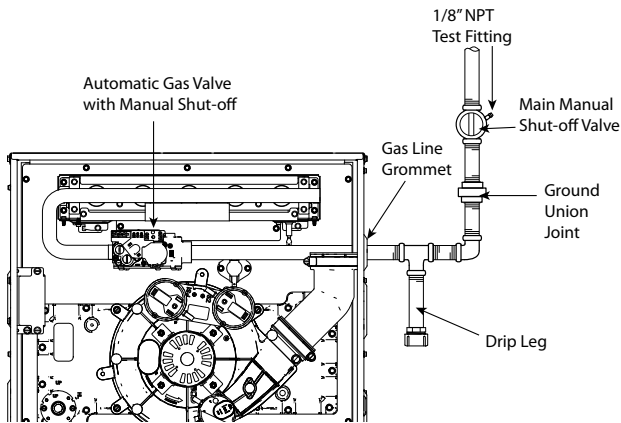


Figure 10. Downflow furnace with gas piping on left side

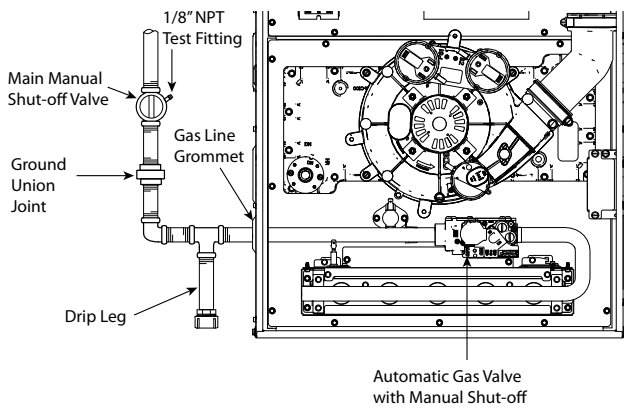


Figure 11. Downflow furnace with gas piping on right side

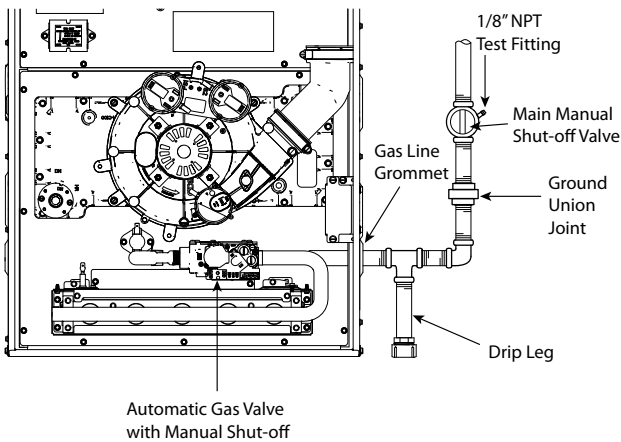


Figure 12. Horizontal left furnace with gas piping out left side

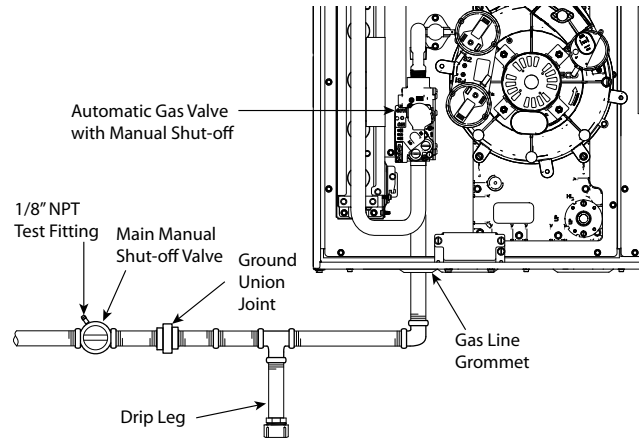


Figure 13. Horizontal left furnace with gas piping out right side



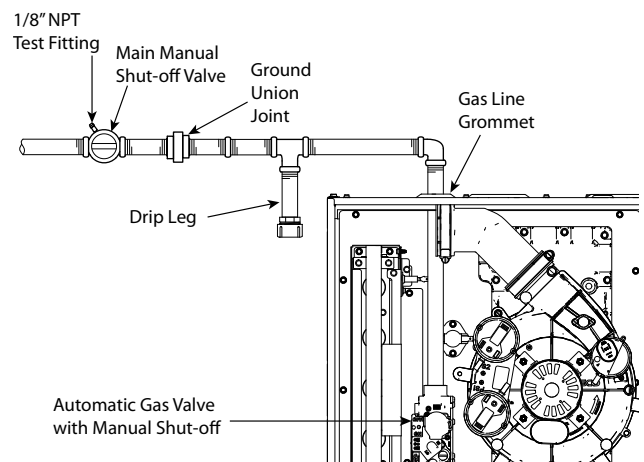


Figure 14. Horizontal right furnace with gas piping out left side

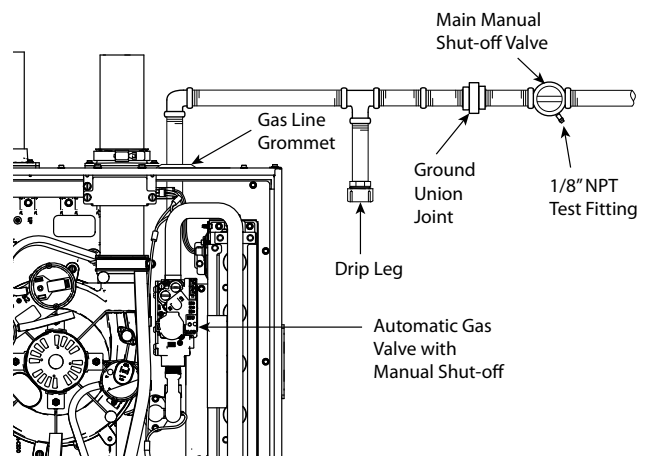

Furnace General Installation

Figure 15. Horizontal right furnace with gas piping out right side

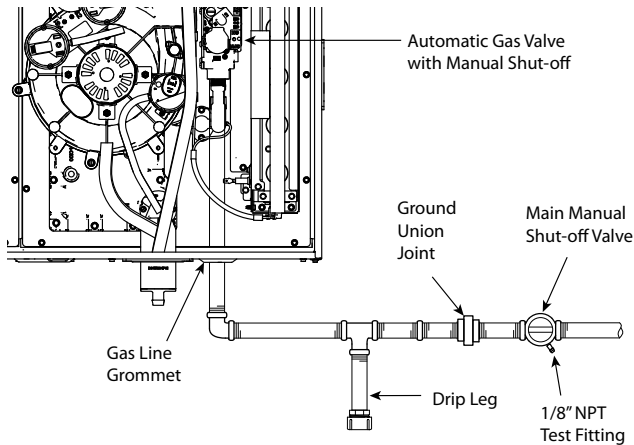

The upflow/horizontal furnace is shipped standard for left side installation of gas piping. An opening with plug is provided on the right side for an alternate gas piping arrangement.

The installation of piping shall be in accordance with piping codes and the regulations of the local gas company. Pipe joint compound must be resistant to the chemical reaction with liquefied petroleum gases.

Important: If local codes allow the use of flexible gas appliance connector, always use a new listed connector. Do not use a connector which has previously serviced another gas appliance.

Refer to the piping table for delivery sizes. Connect gas supply to the unit, using a ground joint union and a manual shut-off valve. National codes require a condensation drip leg to be installed ahead of the gas valve.

The furnace and its individual shut-off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa).

The furnace must be isolated from the gas supply piping by closing its individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psig (3.5 kPa).

Note: Maximum pressure to the gas valve for natural gas is 13.8-in. W.C. Minimum pressure is 5.0-in. W.C. Maximum pressure to the gas valve for propane is 13.8-in. W.C. Minimum pressure is 10.0-in. W.C.

Table 24. Table of cubic feet per hour of gas for various pipe sizes and lengths (natural gas only)

| Pipe size | Length of pipe | | | | | | |
|-----------|----------------|-----|-----|-----|-----|-----|-----|
| | 10 | 20 | 30 | 40 | 50 | 60 | 70 |
| 1/2 | 131 | 90 | 72 | 62 | 55 | 50 | 46 |
| 3/4 | 273 | 188 | 151 | 129 | 114 | 104 | 95 |
| 1 | 514 | 353 | 284 | 243 | 215 | 195 | 179 |

Table 24. Table of cubic feet per hour of gas for various pipe sizes and lengths (natural gas only) (continued)

| Pipe size | Length of pipe | | | | | | |
|-----------|----------------|-----|-----|-----|-----|-----|-----|
| | 10 | 20 | 30 | 40 | 50 | 60 | 70 |
| 1-1/4 | 1060 | 726 | 583 | 499 | 442 | 400 | 368 |

Note: This table is based on Pressure Drop of 0.3 inch W.C. and 0.6 SP. GR. Gas.

All gas fittings must be checked for leaks using a soapy solution before lighting the furnace. **DO NOT CHECK WITH AN OPEN FLAME!**

For propane conversions on all S-Series Furnaces, use BAYLPSS400* conversion kit with stainless steel burners.

When installing our furnaces in a manufactured house, use Manufactured Housing Accessory Kit, BAYMFGH200B.

Table 25. Orifice sizes

| Input Rating (BTUH) | Number of Burners | Main Burner Orifice Drill Size | |
|---------------------|-------------------|--------------------------------|-------------|
| | | Nat. Gas | Propane Gas |
| 40,000 | 2 | 45 | 56 |
| 60,000 | 3 | 45 | 56 |
| 80,000 | 4 | 45 | 56 |
| 100,000 | 5 | 45 | 56 |
| 120,000 | 6 | 45 | 56 |

Combustion and Input Check

1. Make sure all gas appliances are off except the furnace.
2. Clock the gas meter with the furnace operating (determine the dial rating of the meter) for one revolution.
3. Match the "Sec" column in the gas flow table with the time clocked.
4. Read the "Flow" column opposite the number of seconds clocked.
5. Use the following factors if necessary:
 - a. For 1 Cu. Ft. Dial Gas Flow CFH = Chart Flow Reading ÷ 2
 - b. For 1/2 Cu Ft. Dial Gas Flow CFH = Chart Flow Reading ÷ 4
 - c. For 5 Cu. Ft. Dial Gas Flow CFH = 10X Chart Flow Reading ÷ 4
6. Multiply the final figure by the heating value of the gas obtained from the utility company and compare to the nameplate rating. This must not exceed the nameplate rating.

Table 26. Gas flow in cubic feet per hour

| 2 Cubic Foot Dial | | | | | | | |
|-------------------|------|------|------|------|------|------|------|
| Sec. | Flow | Sec. | Flow | Sec. | Flow | Sec. | Flow |
| 30 | 244 | 46 | 159 | 64 | 114 | 100 | 73 |
| 31 | 236 | 47 | 156 | 66 | 111 | 104 | 70 |
| 32 | 229 | 48 | 153 | 68 | 108 | 108 | 68 |
| 33 | 222 | 49 | 149 | 70 | 105 | 112 | 65 |
| 34 | 215 | 50 | 146 | 72 | 102 | 116 | 63 |
| 35 | 209 | 51 | 144 | 74 | 99 | 120 | 61 |
| 36 | 203 | 52 | 141 | 76 | 96 | 130 | 56 |
| 37 | 198 | 53 | 138 | 78 | 94 | 140 | 52 |
| 38 | 193 | 54 | 136 | 80 | 92 | 150 | 49 |
| 39 | 188 | 55 | 133 | 82 | 89 | 160 | 46 |
| 40 | 183 | 56 | 131 | 84 | 87 | 170 | 43 |
| 41 | 179 | 57 | 128 | 86 | 85 | 180 | 41 |
| 42 | 174 | 58 | 126 | 88 | 83 | 190 | 39 |
| 43 | 170 | 59 | 124 | 90 | 81 | 200 | 37 |
| 44 | 166 | 60 | 122 | 94 | 78 | — | — |
| 45 | 163 | 62 | 118 | 98 | 75 | — | — |

Note: Excerpted from NFPA 54/ANSI Z223.1 Table A.11.1.1

Gas Valve Adjustment

Changes can be made by adjusting the manifold pressure, or changing orifices (orifice change may not always be required). To adjust the manifold pressure:

- Turn off all electrical power to the system.
- Loosen (Do Not remove) the pressure tap test set screw one turn with 3/32-inch hex wrench.
 - The pressure tap adjustment kit (KIT07611) contains a 3/32-inch hex wrench, a 5/16-inch hose and a connector and can be ordered through Global Parts.
- Attach a manifold pressure gauge with flexible tubing to the outlet pressure boss marked "OUT P" on White-Rodgers gas valve model 36J.
- Turn on system power and energize valve.

Important: Adjust 2nd stage on the gas valve before attempting to adjust 1st stage.


- Adjust 2nd stage gas heat by removing the high (HI) adjustment regulator cover screw.
 - To increase outlet pressure, turn the regulator adjust screw clockwise.
 - To decrease outlet pressure, turn the regulator adjust screw counterclockwise.
 - Adjust regulator until pressure shown on manometer matches the pressure specified in the table.

The input of no more than nameplate rating and no less than 93% of the nameplate rating, unless the unit is derated for high altitude.

- Replace and tighten the regulator cover screw securely.
- Adjust 1st stage gas heat by removing the low (LO) adjustment regulator cover screw.
 - To increase outlet pressure, turn the regulator adjust screw clockwise.
 - To decrease outlet pressure, turn the regulator adjust screw counterclockwise.
 - Adjust regulator until pressure shown on manometer matches the pressure specified in the table.

The input of no more than nameplate rating and no less than 93% of the nameplate rating, unless the unit is derated for high altitude.
 - Replace and tighten the regulator cover screw securely.
 - Cycle the valve several times to verify regulator setting.
 - Repeat Step 5 to Step 7 if needed.
 - Turn off all electrical power to the system.
 - Remove the manometer and flexible tubing and tighten the pressure tap screw.
 - Using a leak detection solution or soap suds, check for leaks at the pressure outlet boss and pressure tap test screw.
 - Turn on system power and check operation of the unit.

Figure 16. Gas valve adjustment

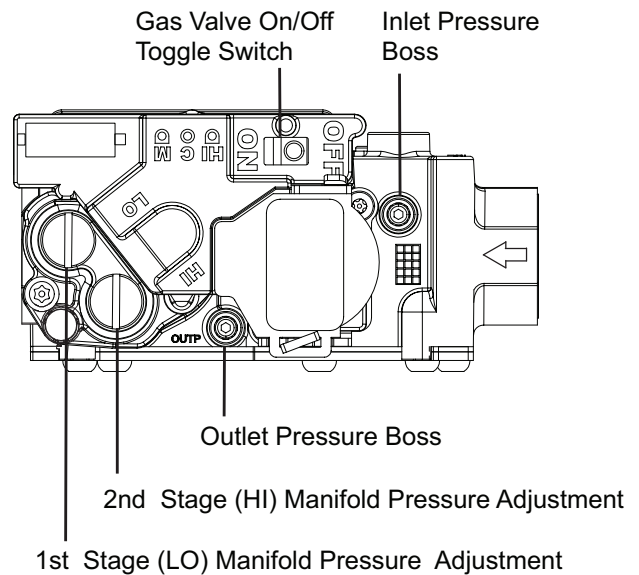

Furnace General Installation

Table 27. Fuel manifold pressure settings (in. w.c.)

| Fuel | 2 nd Stage Max. | 1 st Stage Max. |
|-------------|----------------------------|----------------------------|
| Natural Gas | 3.5 | 1.7 |
| Propane Gas | 10.0 | 6.0 |

High Altitude Derate

Input ratings (BTUH) of these Furnaces are based on sea level operation and should not be changed at elevations up to 2,000 ft. (610 m).

If the installation is 2,000 ft. (610 m) or above, the Furnace input rate (BTUH) shall be reduced 4% for each 1,000 ft. above sea level.

Installations of this furnace at altitudes above 2,000 ft. (610 m) shall be made utilizing the Vent Length table and/or Part Numbers for Replacement Orifices table in these installation instructions.

The Furnace input rate shall be checked by clocking the gas flow rate (CFH) and multiplying by the heating value obtained from the local utility supplier for the gas being delivered at the installed altitude. Input rate changes can be made by adjusting the Manifold Pressure (min 3.0 - max 3.7-in. W.C. - Natural Gas) or changing orifices (orifice change may not always be required).

If the desired input rate can not be achieved with a change in Manifold Pressure, then the orifices must be changed. Propane installations will require an orifice change.

Important: Reinstall the replacement orifices to the same depth as the orifices supplied with the equipment.

See the table for help in selecting orifices if orifice change is required. Furnace input rate and temperature rise should be checked again after changing orifices to confirm the proper rate for the altitude.

Table 29. Altitude above sea level and orifice required at other elevations

| Orifice Twist Drill Size If Installed at Sea Level | 2000 | 3000 | 4000 | 5000 | 6000 | 7000 | 8000 | 9000 | 10000 |
|--|------|------|------|------|------|------|------|------|-------|
| 42 | 42 | 43 | 43 | 43 | 44 | 44 | 45 | 46 | 47 |
| 43 | 44 | 44 | 44 | 45 | 45 | 46 | 47 | 47 | 48 |
| 44 | 45 | 45 | 45 | 46 | 47 | 47 | 48 | 48 | 50 |
| 45 | 46 | 47 | 47 | 47 | 48 | 48 | 49 | 49 | 50 |
| 46 | 47 | 47 | 47 | 48 | 48 | 49 | 49 | 50 | 51 |
| 47 | 48 | 48 | 49 | 49 | 49 | 50 | 50 | 51 | 52 |
| 54 | 54 | 55 | 55 | 55 | 55 | 55 | 56 | 56 | 56 |
| 55 | 55 | 55 | 55 | 56 | 56 | 56 | 56 | 56 | 57 |
| 56 | 56 | 56 | 57 | 57 | 57 | 58 | 59 | 59 | 60 |
| 57 | 58 | 59 | 59 | 60 | 60 | 61 | 62 | 63 | 63 |
| 58 | 59 | 60 | 60 | 61 | 62 | 62 | 63 | 63 | 64 |

Note: From National Fuel Gas Code — Table E.1.1(d)

The vent length table shows the required vent lengths for installations at various altitudes. Installations above 12,000 feet are not allowed.

Table 28. Part numbers for replacement orifices

| Drill Size | Part Number | Drill Size | Part Number |
|------------|-------------|------------|-------------|
| 44 | ORF00501 | 54 | ORF00555 |
| 45 | ORF00644 | 55 | ORF00693 |
| — | — | 56 | ORF00907 |
| 47 | ORF00910 | — | — |
| — | — | 58 | ORF01338 |
| 49 | ORF00503 | 59 | ORF01339 |

Turn the main Gas Valve toggle switch within the unit to the **OFF** position. Turn the external gas valve to **ON**. Purge the air from the gas lines. After purging, check all gas connections for leaks with a soapy solution — **DO NOT CHECK WITH AN OPEN FLAME**. Allow 5 minutes for any gas that might have escaped to dissipate.

Propane Gas being heavier than air may require forced ventilation. Turn the toggle switch on the Gas Valve in the unit to the **ON** position.

The table in next page lists the main burner orifices used with the furnace. If a change of orifices is required to correct the furnace input rating refer to the part number for replacement orifices table.

Installation of this furnace at altitudes above 2000 ft. (610m) shall be in accordance with local codes, or in the absence of local codes, the *National Fuel Gas Code, ANSI Z223.1/NFPA 54* or *National Standard of Canada, Natural Gas and Propane Installation Code, CSA B149.1*.

General Venting

Furnace exhaust must be vented to the outdoors. These furnaces are induced draft vented and must not be connected to any vent serving another appliance. Please note that these furnaces use positive-pressure vent systems.

Proper venting is essential to obtain maximum efficiency from a condensing Furnace. Proper installation of the vent system is necessary to assure drainage of the condensate and prevent deterioration of the vent system.

ETL has certified the design of condensing Furnaces for a minimum of 0-inch clearance from combustible materials to single wall plastic vent pipe.

The recommended system is assembled from 2-inch or 3-inch plastic pipe and fittings found in the Approved Vent Pipe Materials Table. Where the system is routed to the outdoors through an existing masonry chimney containing flue products from another gas appliance, or where required by local codes, then 3-inch venting of Type 29- 4C stainless steel must be used in place of PVC material.

These Furnaces have been classified as CATEGORY IV Furnaces in accordance with ANSI Z21.47 "latest edition" standards. Category IV - a central furnace that operates with a positive vent static pressure and with a flue loss less than 17 percent. These conditions require special venting systems, which must be gas tight and water tight.

Note: When an existing Furnace is removed from a venting system serving other gas appliances, the venting system is likely to be too large to properly vent the remaining attached appliances.

Important:

- These Furnaces may be installed as Direct Vent (sealed combustion) or as Nondirect Vent (single pipe). The Furnaces are shipped DIRECT VENT with sealed combustion.
- Products installed in Canada must use vent systems that are certified to the Standard for Type BH Gas Venting Systems (ULC S636) for Class II-A venting systems (up to 65°C). Components of the vent system must not be interchanged with other vent systems or unlisted pipe or fittings. Plastic components, specified primers, and glues must be from a single system manufacturer and not intermixed with other system manufacturer vent system parts. In addition, the first three feet of the vent pipe must be visible for inspection.

When the vent pipe is exposed to temperatures below freezing, e.g., when it passes through unheated spaces, etc., the pipe must be insulated with 1/2-inch (12.7 mm) thick Armaflex-type insulation or equal.

If the space is heated sufficiently to prevent freezing, then the insulation will not be required. If domestic water pipes

are not protected from freezing then the space meets the condition of a heated space.


3-Inch Venting Requirements

Important:

- To determine if your application requires 3-inch venting, see “;”.
- Horizontal venting application must use the 2-inch × 3-inch offset reducing coupling. Vertical venting applications do not require the reducing coupling to be offset.


Note: If your furnace comes with a factory supplied 2-inch × 3-inch offset reducing coupling it is used for 3-inch vent pipe installation. Make sure the marking TOP is located on the top side of the pipe in horizontal venting applications. The straight side of the coupling must be on bottom for proper drainage of condensate.

Figure 17. Horizontal coupling

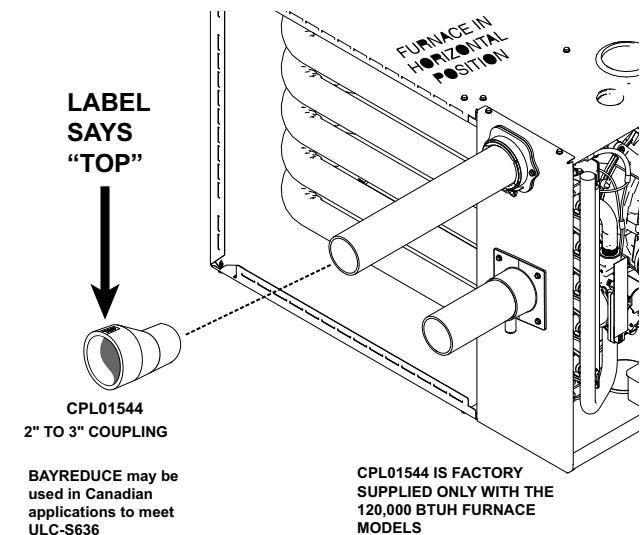

Note: For Canadian applications, BAYREDUCE 2-inch × 3-inch offset reducing coupling meets ULC-S636 requirements. Make sure the marking TOP is located on the top side of the pipe. The straight side of the coupling must be on bottom for proper drainage of condensate in horizontal venting.

Figure 18. Vertical coupling

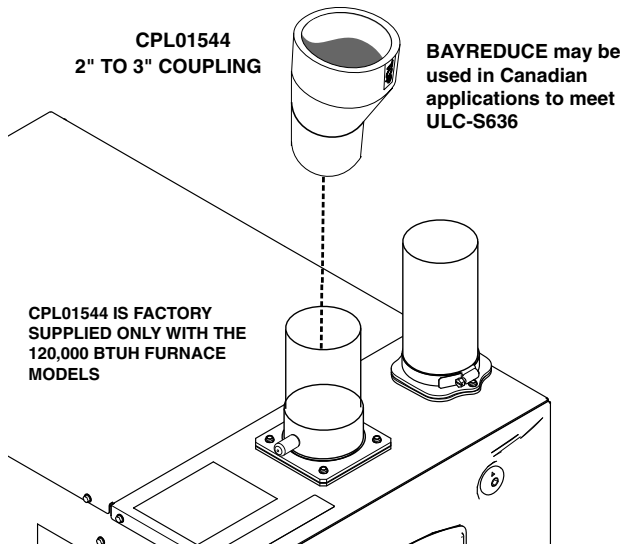

Typical Venting

This combustion air intake has a built-in condensate collection system. Condensate that may collect is drained by field supplied 1/2-inch ID tubing. The tubing must be routed to form a trap and water seal (see [Figure 20, p. 40](#), [Figure 21, p. 40](#), and [Figure 22, p. 41](#)).

A field supplied hose clamp is recommended but not be required. The tubing is not under pressure.

Combustion air piping must be square cut and de-burred for proper drainage. For side entry combustion inlet applications, ensure the drain is pointed downwards.

Figure 19. Condensing furnace vent



Figure 20. Upflow top entry

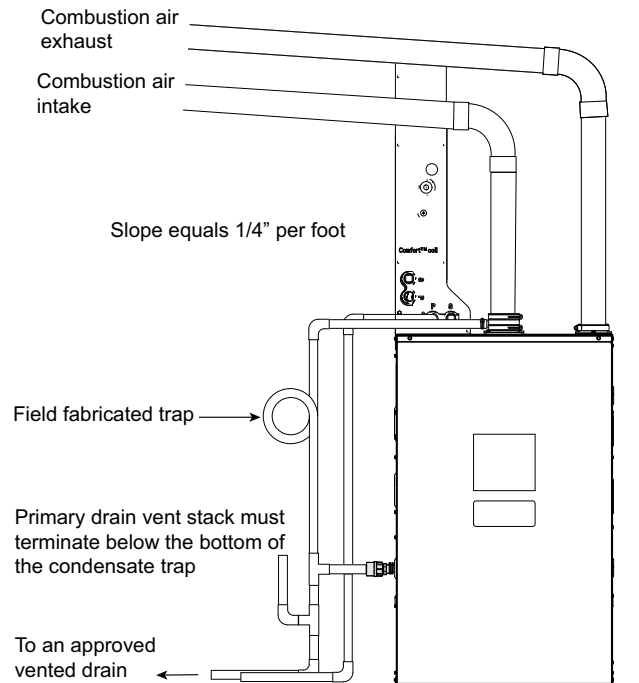


Figure 21. Horizontal top entry


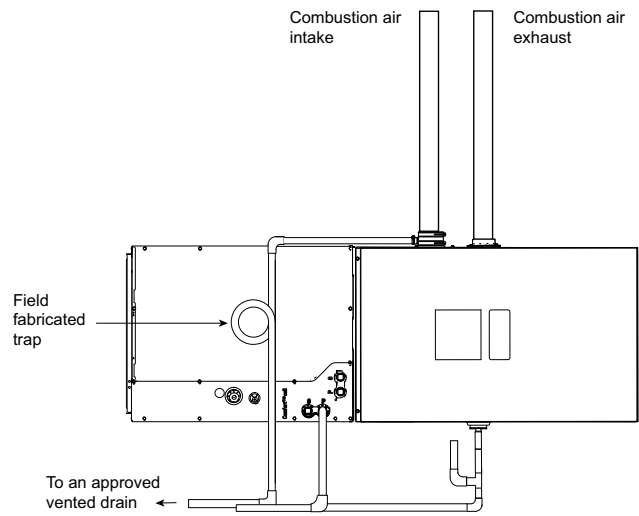


Figure 22. Upflow side entry

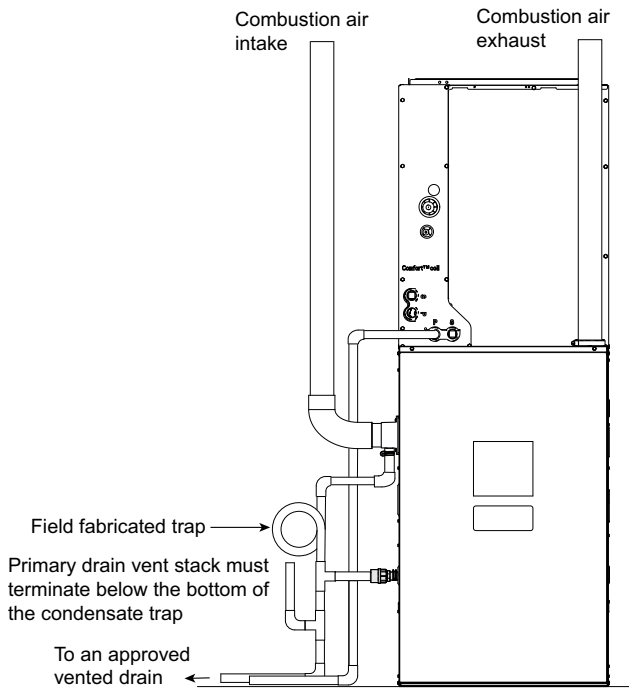

Special Case Venting

Special instructions for direct vent furnace air intake.

In certain applications, particularly when the furnace is located in a basement, there are certain conditions that can be met where warm humid air from the outside is drawn into combustion air piping. If the area where the piping is located is conditioned below 70° F, condensation could occur inside the piping and ultimately drain into the furnace compartment, which could lead to premature component failure.

We recommend following one of the options to prevent this condition from occurring and possibly damaging components within the furnace:


Note: Inlet air piping is not considered to be part of the venting system. The inlet air piping may be made from PVC.

Option 1

If possible, slope the inlet combustion air piping away from the furnace. Condensation that may occur will now drain outside of the home. The combustion air outlet piping must remain sloped back to the furnace.

Note: Combustion air drain fitting must remain capped if not using the drain function. See “Condensate Drain Instructions,” p. 66.

Figure 23. Option 1

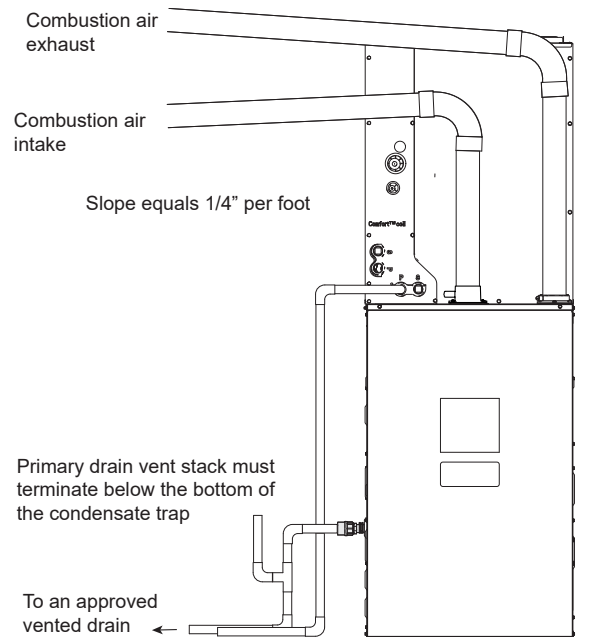


Option 2 – Top combustion air intake

If sloping the combustion air intake pipe is not possible, install a DWV Tee as close to the furnace as possible with drain and trap to prevent condensation from occurring in the furnace cabinet. Do not tee AC condensate and combustion air condensate trap together.

Note: Combustion air drain fitting must remain capped if not using the drain function. See “Condensate Drain Instructions,” p. 66.

Figure 24. Option 2

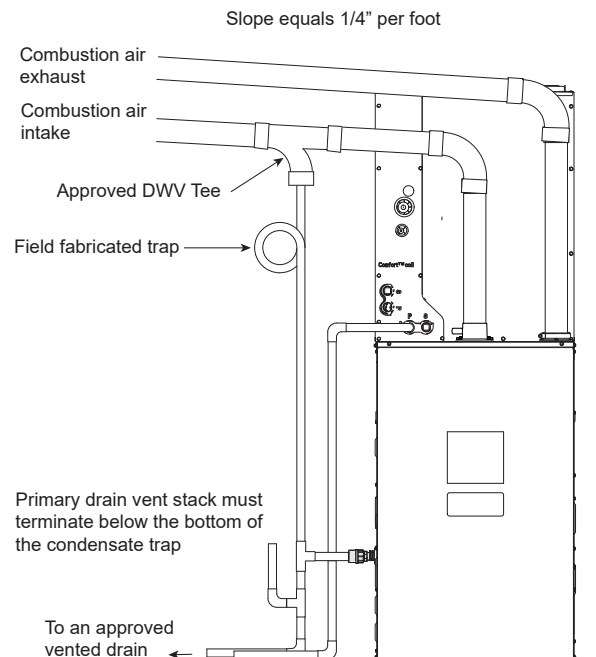


Furnace General Installation

Option 3 – Side combustion air intake

If sloping the combustion air intake pipe is not possible, install an approved DWV Tee as close to the furnace as possible with drain and trap.

Note: Combustion air drain fitting must remain capped if not using the drain function. See “Condensate Drain Instructions,” p. 66.

Figure 25. Option 3

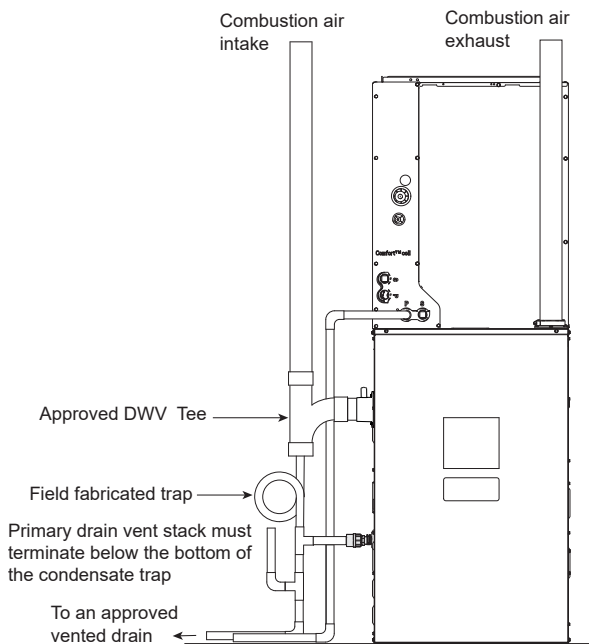

Vent Terminations

Direct Vent Application: The Furnaces must be vented to the exterior of the house and combustion air MUST come through the inlet air pipe from OUTSIDE AIR.

Note: BAYVENT* accessories can be used for inlet and outlet terminals when the pipes do not exit the structure together. For Canadian applications, venting systems must meet ULC-S636 requirements.

Non-direct Vent Application: The Furnace shall be vented to the exterior of the house, but combustion air may enter from the surrounding area as long as combustion air requirements are met. (See “Air for Combustion and Ventilation,” p. 53)

Vent terminations

- BAYVENT200B
- BAYAIR30AVENTA

Vent terminations — Canadian applications. Meets ULC-S636 requirements

- BAYVENTCN200B
- BAYAIR30CNVENT

Furnace Vent / Inlet Pipe Installation In Two Pressure Zone Configurations are not allowed

Note: For single pressure zone applications, see “Horizontal Venting,” p. 45 section.


The following are Examples Only.

Example 1

Example 1 shows the vent pipe exhausting through the roof and the inlet air coming from the interior of the house. The inlet air coming from the interior of the house must meet combustion requirements for area, etc., as shown in the section “Air for Combustion and Ventilation,” p. 53.

Note: If only the flue gas pipe is to the outside of the structure, a straight section of pipe (long enough to exit the Furnace cabinet) must be attached to the inlet air side with an elbow (which is 5 to 10 equiv. ft.) installed on the end to prevent dust and debris from falling directly into the Furnace.

Figure 26. Example 1

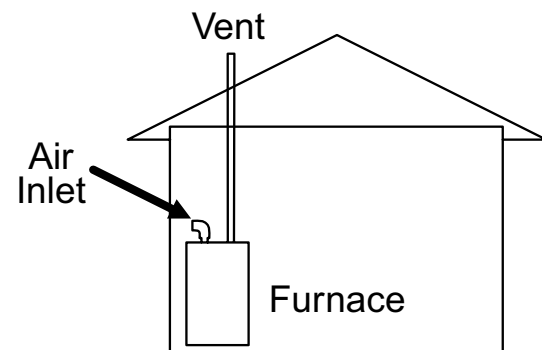


Example 2

The inlet air does not have to come from outside the structure. Example 2 shows the inlet air, may come from the attic if the requirements for combustion air are met as shown in the section “Air for Combustion and Ventilation,” p. 53.

Note: If only the flue gas pipe is to the outside of the structure, a straight section of pipe (long enough to exit the Furnace cabinet) must be attached to the inlet air side with an elbow (which is 5 to 10 equiv. ft.) installed on the end to prevent dust and debris from falling directly into the Furnace.

Figure 27. Example 2

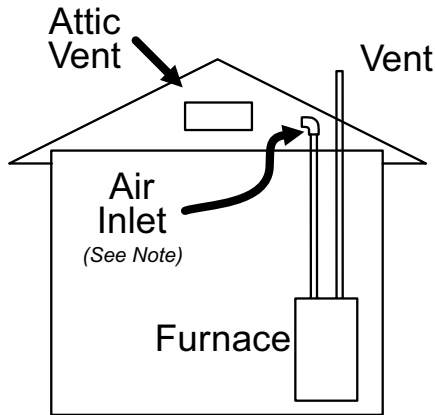

Attaching Vent Piping

Vent Fitting Material – Plastic

Gas and liquid tight single wall vent fittings, designed for resistance to corrosive flue condensate, MUST be used throughout.

Listed in the Approved Vent Pipe Materials table are designations for different types of 2-inch and 3-inch size pipe and fittings that meet these requirements. The materials listed are various grades of PVC, CPVC, ABS, PolyPro® by DuraVent, Z-Dens by Novaflex Group, Innoflue® by Centrotherm, ECCO™ polypropylene venting system, and PolyFlue™ polypropylene venting systems.

Important: Products installed in Canada must use vent systems that are certified to the Standard for Type BH Gas Venting Systems (ULC S636) for Class II-A venting systems (up to 65°C). Components of the vent system must not be interchanged with other vent systems or unlisted pipe or fittings. Plastic components, specified primers, and glues must be from a single system manufacturer and not intermixed with other system manufacturer's vent system parts. In addition, the first three feet of the vent pipe must be visible for inspection.

Pipe Joints

All joints must be fastened and sealed per manufacturer instructions and local and national codes to prevent escape of combustion products into the building.

Manufactured Modular Venting Systems

⚠ WARNING

Carbon Monoxide Poisoning!

Failure to follow instructions below could result in death or serious injury, or property damage. Refer to the Approved Vent Pipe Materials table for manufactured modular venting systems approved for use with this product. Follow the manufacturer's installation instructions when installing the venting system.

⚠ WARNING

Carbon Monoxide Poisoning!

Failure to follow instructions below could result in death or serious injury, or property damage. Do not use cement on polypropylene venting systems. Follow the manufacturer's installation instructions when installing the venting system.

Note: For manufactured modular venting systems that are approved with this product see PVC vent fitting material table. Do not drill into polypropylene venting pipes.

Bonding of PVC

Note: It is recommended that the first joints from the Furnace be connected and sealed with high temperature RTV. This will enable the pipes to be removed later without cutting.

Be sure to properly support these joints.

Commercially available solvent cement for PVC must be used to join PVC pipe fittings. Follow instructions on container carefully.

Pipe and Fitting – ASTM D1785, D2466, D2661, & D2665

PVC Primer and Solvent Cement – ASTM D2564

Procedure for Cementing Joints – Ref ASTM D2855

1. Cut pipe square, remove ragged edges and burrs. Chamfer end of pipe, then clean fitting socket and pipe joint area of all dirt, grease, moisture or chips.
2. After checking pipe and socket for proper fit, wipe socket and pipe with cleaner-primer. Apply a liberal coat of primer to inside surface of socket and outside of pipe.
DO NOT ALLOW PRIMER TO DRY BEFORE APPLYING CEMENT
3. Apply a thin coat of cement evenly in the socket. Quickly apply a heavy coat of cement to the pipe end and insert pipe into fitting with a slight twisting movement until it bottoms out.
4. Hold the pipe in the fitting for 30 seconds to prevent tapered socket from pushing the pipe out of the fitting.

Furnace General Installation

5. Wipe all excess cement from the joint with a rag. Allow 15 minutes before handling. Cure time varies according to fit, temperature and humidity.

Connection of the pipe and collar of the combustion air inlet should just be a friction fit. It is recommended that the inlet air joint be sealed with RTV type sealant to allow the joint to be separated for possible future service. The inlet and vent pipes must be properly supported throughout the entire length.

Note: Follow venting instructions carefully when using PVC cement.

Important: All joints must be water tight. Flue condensate is somewhat acidic, and leaks can cause equipment damage.

Figure 28. Sealing inlet air pipe

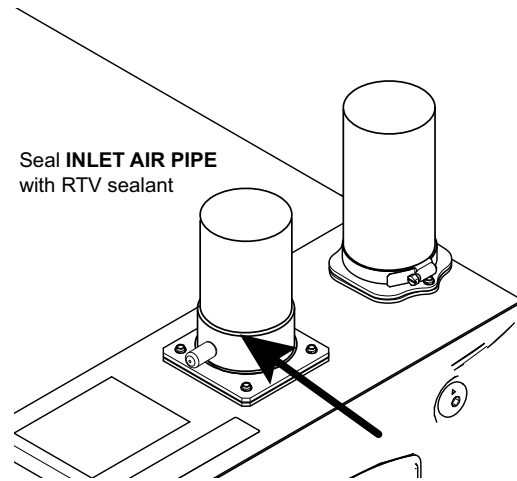


Table 30. Approved vent pipe materials

| PVC Vent Fitting Material | | | |
|---|---|--------------------------|------------|
| These fittings are available from your Gas Furnace Distributors. | | | |
| ANSI/UL 1738 APPROVED VENT PIPE MATERIAL | | | |
| ASTM STANDARD | PIPE TYPE | ALLOWABLE TEMPERATURE °F | MARKING |
| N/A | N/A | 158 | UL 1738 |
| PVC | | | |
| ASTM STANDARD | PIPE TYPE | ALLOWABLE TEMPERATURE °F | MARKING |
| F891 | CELLULAR CORE ^(a) | 158 | ASTM F891 |
| D2665 | DWV PIPE | 158 | ASTM D2665 |
| D1785 | SCH 40, 80, 120 | 158 | ASTM 1785 |
| D2241 | SDR SERIES | 158 | ASTM D2241 |
| CPVC | | | |
| ASTM STANDARD | PIPE TYPE | ALLOWABLE TEMPERATURE °F | MARKING |
| D2846 | CPVC 41 | 212 | ASTM D2846 |
| F441 | SCH 40, 80 | 212 | ASTM F441 |
| F442 | SDR SERIES | 212 | ASTM F442 |
| ABS | | | |
| ASTM STANDARD | PIPE TYPE | ALLOWABLE TEMPERATURE °F | MARKING |
| D2661 | SCH 40 DWV | 180 | ASTM D2661 |
| F628 | SCH 40 DWV CELLULAR CORE ^(a) | 180 | ASTM F628 |
| PolyPro® by DuraVent, Z-Dens by Novaflex Group, InnoFlue® by Centrotherm, System 1738 by IPEX, ECCO™ polypropylene venting system, and PolyFlue™ polypropylene venting systems. | | | |
| ASTM STANDARD | PIPE TYPE | ALLOWABLE TEMPERATURE °F | MARKING |
| N/A | N/A | 230 | ULC-S636 |

^(a) Beginning March 1, 2024, PVC Cellular Core and ABS Cellular Core vent materials are not approved.

Maximum Vent Length Table

Table 31. Maximum vent length

| Model | 1.5-inch Pipe | 2-inch Pipe | 2.5-inch Pipe | 3-inch Pipe | 4-inch Pipe |
|--------------------------|---------------|-------------|---------------|-------------|-------------|
| Altitude 0-2,000 FT. | | | | | |
| A952V040B, A952V060B | 50 | 200 | 200 | 200 | 250 |
| A952V080B, A952V080C | 30 | 100 | 200 | 200 | 250 |
| A952V100C | (a) | 50 | 100 | 200 | 250 |
| A952V120D | (a) | (a) | (a) | 200 | 250 |
| Altitude 2,001- 5400 FT | | | | | |
| A952V040B, A952V060B | 50 | 200 | 200 | 200 | 250 |
| A952V080B, A952V080C | 20 | 80 | 120 | 120 | 200 |
| A952V100C | (a) | 50 | 100 | 150 | 200 |
| A952V120D | (a) | (a) | (a) | 200 | 250 |
| Altitude 5,401-7,800 FT | | | | | |
| A952V040B, A952V060B | 25 | 100 | 150 | 150 | 200 |
| A952V080B, A952V080C | (a) | 50 | 70 | 70 | 140 |
| A952V100C | (a) | (a) | (a) | 100 | 200 |
| A952V120D | (a) | (a) | (a) | 100 | 200 |
| Altitude 7,801-10,100 FT | | | | | |
| A952V040B, A952V060B | (a) | 50 | 90 | 90 | 180 |
| A952V080B, A952V080C | (a) | (a) | (a) | 50 | 100 |
| A952V100C | (a) | (a) | (a) | 50 | 100 |
| A952V120D | (a) | (a) | (a) | 50 | 100 |

Notes:

1. Installation Instructions must be followed for installation of the venting system.
2. Maximum Total Equivalent Length In Feet for Vent or Inlet Air, not combined total.
3. For PolyPro® by Duravent, Z-DENS by Novaflex Group, InnoFlue® by Centrotherm, and Polyflue™ manufactured modular venting systems that are in the approved vent pipe material table, fitting equivalent vent lengths may be different from what is shown in Note 5. Refer to the venting system manufacturer's installation instruction for appropriate venting diameters and equivalent lengths.
4. Minimum vent length for all models: 15ft equivalent.
5. DO NOT MIX PIPE DIAMETERS IN THE SAME LENGTH OF PIPE OUTSIDE THE FURNACE CABINET (except adapters at the top of the furnace). If different inlet and vent pipe sizes are used, the vent pipe must adhere to the maximum length limit shown in the table above (See Note 6 below for exception). The inlet pipe can be of a larger diameter, but never smaller than the vent pipe.
6. MAXIMUM PIPE LENGTHS MUST NOT BE EXCEEDED. THE LENGTH SHOWN IS NOT A COMBINED TOTAL, IT IS THE MAXIMUM LENGTH OF EACH (Vent or Inlet air pipes).
7. One SHORT radius 90° elbow is equivalent to 10ft of 4-inch pipe, 10ft of 3-inch pipe, or 8ft of 2-inch pipe. One LONG radius elbow is equivalent to 6ft of 4-inch pipe, 7ft of 3-inch pipe, or 5ft of 2-inch pipe. Two 45° elbows equal one 90° LONG elbow. One MITERED elbow is equivalent to 12ft of 3-inch pipe or 12ft of 2-inch pipe.
8. The termination tee or bend must be included in the total number of elbows. If the BAYAIR30AVENTA or BAYAIR30CNVENT termination kit is used, the equivalent length of pipe is 5ft. For BAYVENT200B and BAYVENTCN200B the equivalent length is 0ft.
9. For Canadian applications, venting systems must meet ULC-S636 requirements.
10. The INLET AIR of one pipe systems require the installation of a minimum of one 90° elbow (to prevent dust and debris from falling straight into the furnace).

(a) Not allowed

Horizontal Venting

Note: Ensure that vent piping is sloped 1/4-inch per foot and that piping is supported properly to prevent sags and condensate pooling.

3-inch Venting Requirements

Important:


- To determine if your application requires 3-inch venting, see “.”.
- Horizontal venting application must use the 2-inch × 3-inch offset reducing coupling. Vertical venting applications do not require the reducing coupling to be offset.

When the vent pipe is exposed to temperatures below freezing, e.g., when it passes through unheated spaces, etc., the pipe must be insulated with 1/2-inch (12.7 mm) thick Armaflex-type insulation or equal.

If the space is heated sufficiently to prevent freezing, then the insulation will not be required. If domestic water pipes are not protected from freezing then the space meets the condition of a heated space.


Note: If your furnace comes with a factory supplied 2-inch × 3-inch offset reducing coupling it is used for 3-inch vent pipe installation. Make sure the marking **TOP** is located on the top side of the pipe in horizontal venting applications. The straight side of the coupling must be on bottom for proper drainage of condensate.

Figure 29. Horizontal venting

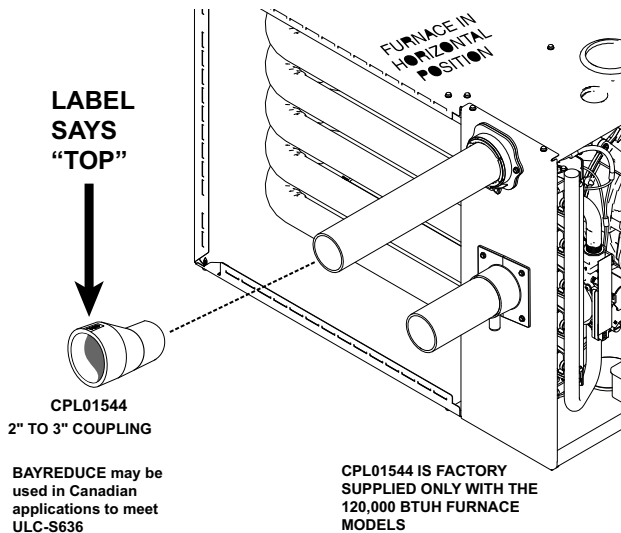

Note: For Canadian applications, BAYREDUCE 2-inch × 3-inch offset reducing coupling meets ULC-S636 requirements. Make sure the marking **TOP** is located on the top side of the pipe. The straight side of the coupling must be on bottom for proper drainage of condensate in horizontal venting.

Figure 30. Vertical venting

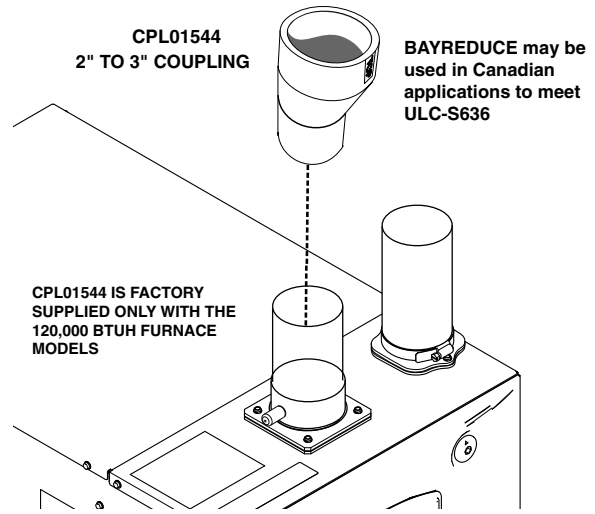


Combustible Material Wall

A minimum clearance of 1-inch to combustible materials must be maintained when using single wall stainless steel venting.

Shield material to be a minimum of 24 gauge stainless or aluminized sheet metal. Minimum dimensions are 12-inch × 12-inch. Shield must be fastened to both inside and outside of wall. Use screws or anchor type fasteners suited to the outside or inside wall surfaces.

Figure 31. Combustible material wall

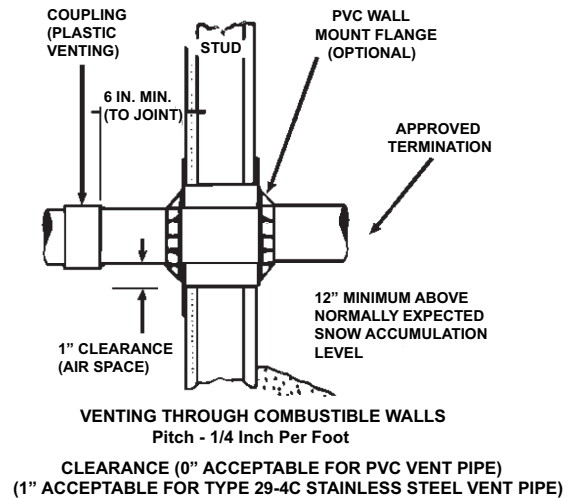

Non-combustible Material Wall

The hole through the wall must be large enough to maintain pitch of vent and properly seal.

Use cement mortar seal on inside and outside of wall.

Figure 32. Non-combustible material wall

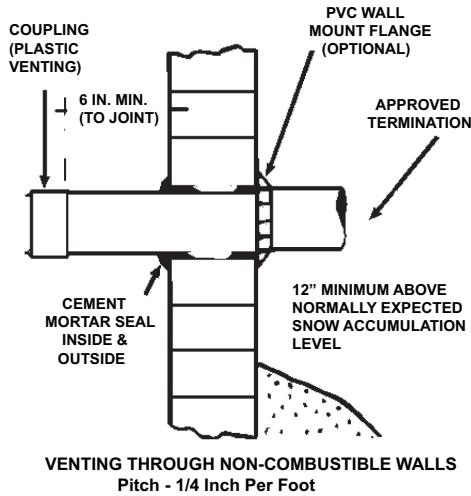


Figure 34. Configurations one pipe venting systems — type 2


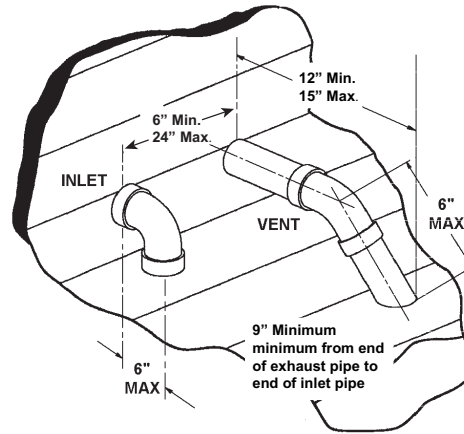


Figure 35. Configurations one pipe venting systems — type 3

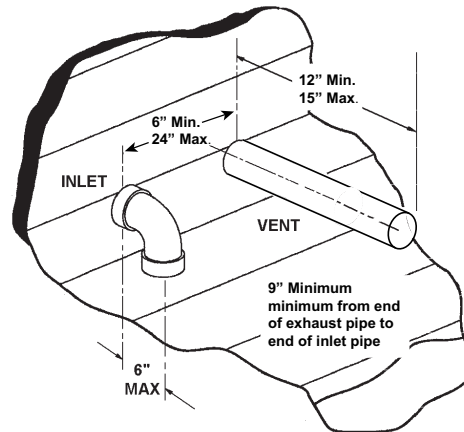

Horizontal Venting Through Wall

The vent for this appliance shall not terminate:

1. Over public walkways.
2. Near soffit vents or crawl space vents or other areas where condensate or vapor could create a nuisance or hazard or cause property damage; or
3. Where condensate vapor could cause damage or could be detrimental to the operation of regulators, relief valves, or other equipment.

Possible configurations for two pipe venting systems located in the same pressure zone:

Important: Maintain 12-inch minimum clearance above highest anticipated snow level or grade, whichever is greater.

Note: All distances are centerline to centerline.

Figure 33. Configurations one pipe venting systems — type 1

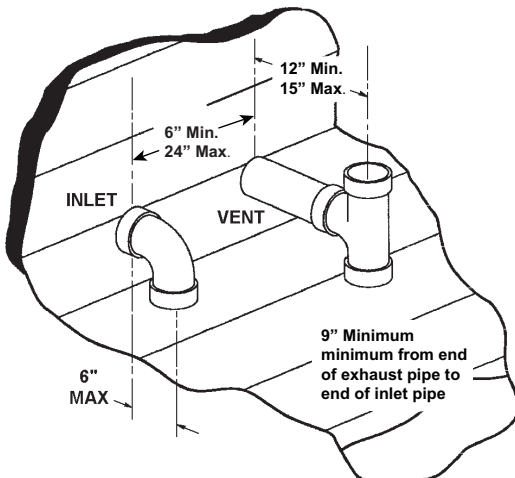


Figure 36. Configurations one pipe venting systems — type 4

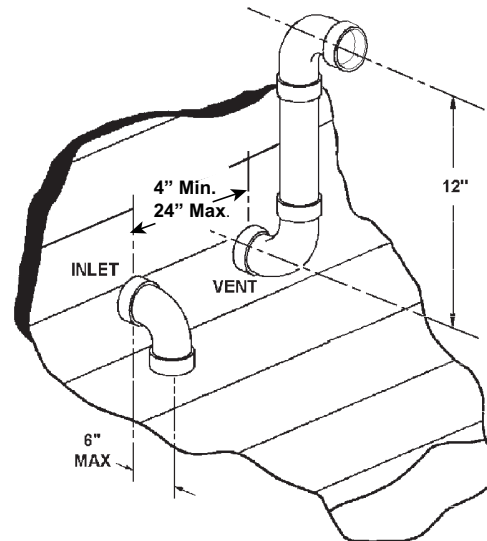


Figure 37. Configurations one pipe venting systems — type 5


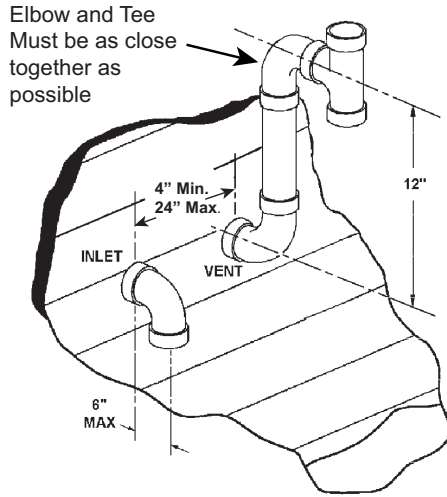


Figure 38. Configurations one pipe venting systems — type 6

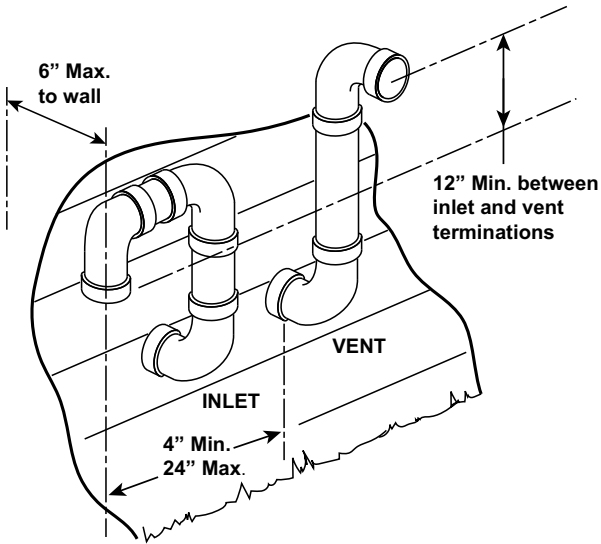

Horizontal Venting Through Wall with Concentric Vent Kit

These Furnaces may be installed as direct vent (as shipped) or as nondirect vent. Installation must conform to national, state, and local codes.

The BAYVENT200B, BAYVENTCN200B, BAYAIR30AVENTA, and BAYAIR30CNVENT vent and inlet terminals kits must be located at least 12-inch minimum above normally expected snow accumulation level.

Avoid areas where staining or condensate drippage may be a problem.

Location of the vent/wind terminal should be chosen to meet the requirements for either direct or non-direct vent applications.

Pitch — Venting through the wall must maintain 1/4-inch per foot pitched upward to insure that condensate drains back to the Furnace.

Flue Gas Degradation — The moisture content of the flue gas may have a detrimental effect on some building materials. This can be avoided by using the roof or chimney venting option. When wall venting is used on any surface that can be affected by moisture, it is recommended that a corrosion resistant shield (24 inches square) be used behind the vent terminal. This shield can be wood, plastic, sheet metal, etc. Also, silicone caulk all cracks, seams and joints within 3 feet of the vent terminal.

The vent for this appliance shall not terminate

1. Over public walkways; or
2. Near soffit vents or crawl space vents or other areas where condensate or vapor could create a nuisance or hazard or cause property damage; or
3. Where condensate vapor could cause damage or could be detrimental to the operation of regulators, relief valves, or other equipment.

For Canadian installations, if you used a ULC-S636 approved manufactured modular venting system, a copy of the manufacturer instructions should remain with the system. The installation instruction can be obtained from the vent termination manufacturer. BAYVENTCN200B and BAYAIR30CNVENT meet ULC-S636 requirements.

Note: For Canadian applications, horizontal vent termination kits must meet ULC-S636.

Figure 39. BAYVENT200B / BAYVENTCN200B


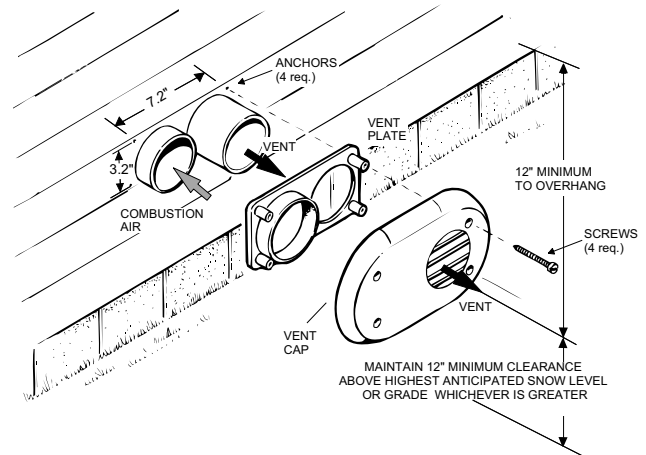


Figure 40. BAYAIR30AVENTA / BAYAIR30CNVENT (Sidewall)

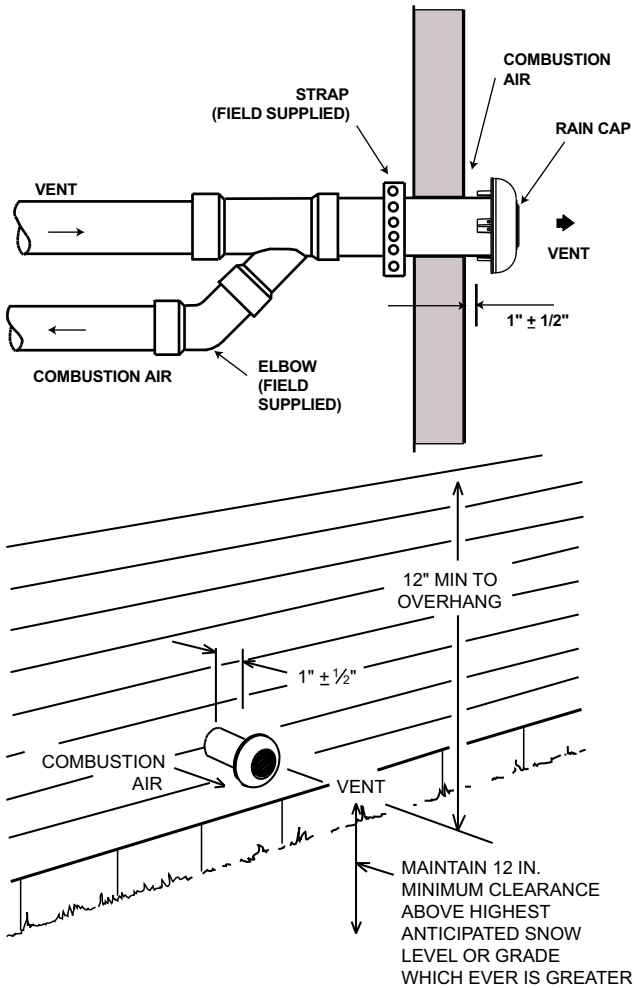

Important: *The Commonwealth of Massachusetts requires compliance with regulation 248 CMR 4.00 and 5.00 for installation of through – the – wall vented gas appliances as follows:*

For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

1. **Installation of carbon monoxide detectors** — At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gasfitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed

on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors.

- a. In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.
 - b. In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.
2. **Approved carbon monoxide detectors** — Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.
 3. **Signage** — A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "Gas Vent Directly Below. Keep Clear Of All Obstructions".
 4. **Inspection** — The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2) (a)1 through 4.

This appliance requires a special venting system. If BAYAIR30AVENTA or BAYVENT200B are used, a copy of the installation instructions for the kit shall remain with the appliance or equipment at the completion of installation. The venting system installation instructions can be obtained from the manufacturer by writing to the following address:

Trane and American Standard
 6200 Troup Highway
 Tyler, TX 75707

Attention: Manager of Field Operations Excellence

Horizontal Vent Clearances

Figure 41. Horizontal vent clearances

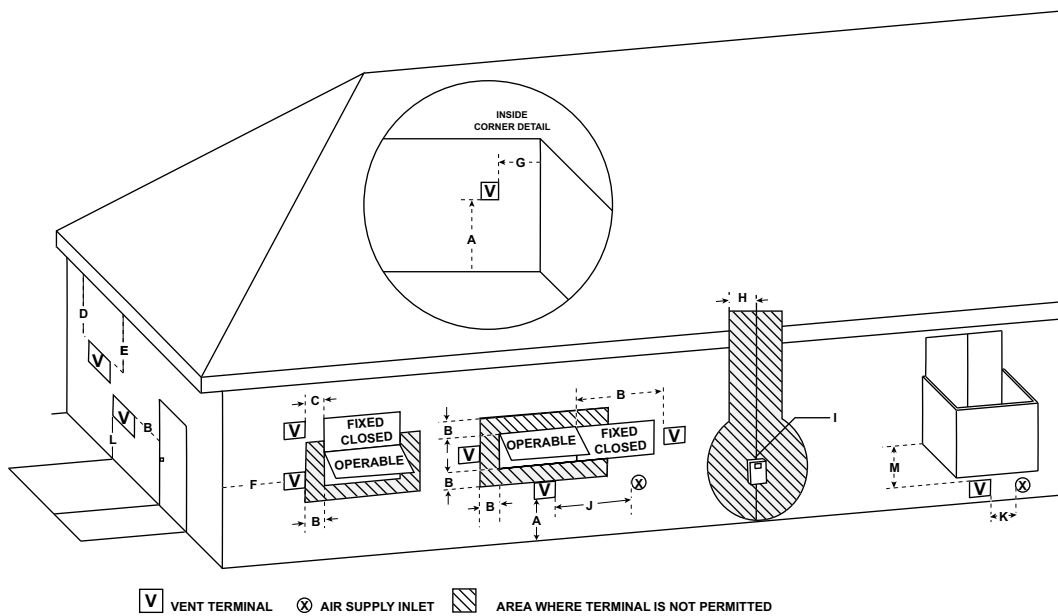


Table 32. Vent termination clearances - direct/non-direct

| Vent Termination Clearances- Direct/Non-Direct | | | | |
|--|--|---|--|--|
| | | Canadian Installations | US Installations Non-Direct | US Installations Direct |
| A= | Clearance above grade, veranda, porch, deck, or balcony | 12 inches (30 cm) | | |
| B= | Clearance to window or door that may be opened | 12 inches (30 cm) for appliances > 10,000 BTUH (3 kw) and ≤ 100,000 BTUH (30 kw), 36 inches (91 cm) for appliances > 100,000 BTUH (30 kw) | 4 feet (1.2m) below or to the side of opening; 1 foot (0.3m) above opening | 9 inches (23 cm) for appliances > 10,000 BTUH (3 kw) and ≤ 50,000 BTUH (15 kw), 12 inches (30 cm) for appliances > 50,000 BTUH (15 kw) |
| C= | Clearance to permanently closed window | (a) | (a) | (a) |
| D= | Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (61 cm) from the center line of the terminal | (a) | (a) | (a) |
| E= | Clearance to unventilated soffit | (a) | (a) | (a) |
| F= | Clearance to outside corner | (a) | (a) | (a) |
| G= | Clearance to inside corner | (a) | (a) | (a) |
| H= | Clearance to each side of center line extended above meter/regulator assembly | 3 feet (91 cm) with a height 15 feet (4.5 m) above the meter/regulator assembly | (a) | (a) |
| I= | Clearance to service regulator vent outlet | 3 feet (91 cm) | (a) | (a) |
| J= | Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance | 12 inches (30 cm) for appliances > 10,000 BTUH (3 kw) and ≤ 100,000 BTUH (30 kw), 36 inches (91 cm) for appliances > 100,000 BTUH (30 kw) | 4 feet (1.2 m) below or to side of opening; 1 foot (300 m) above opening | 9 inches (23 cm) for appliances > 10,000 BTUH (3 kw) and ≤ 50,000 BTUH (15 kw); 12 inches (30 cm) for appliances > 50,000 BTUH (15 kw) |
| K= | Clearance to a mechanical air supply inlet | 6 feet (1.83m) | 3 feet (91 cm) above if within 10 feet (3m) horizontally | 3 feet (91 cm) above if within 10 feet (3m) horizontally |

Table 32. Vent termination clearances - direct/non-direct (continued)

| Vent Termination Clearances- Direct/Non-Direct | | | | |
|--|---|---|--|-------------------------|
| | | Canadian Installations | US Installations Non-Direct | US Installations Direct |
| L= | Clearance above a paved sidewalk or paved driveway located on public property | 7 feet (2.13 m) and not located above public walkways or other areas where condensate or vapor can cause a nuisance or hazard | | |
| M= | Clearance under veranda, porch, deck, or balcony | 12 inches (30 cm) if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor | 12 inches (30 cm) where the area beneath the veranda, porch, deck, or balcony is open on not less than two sides. The vent terminal is prohibited in this location where only one side is open | |

Notes:

1. The Canadian venting installations must be in accordance with local codes or in the absence of local codes with the current CSA B149.1 Natural Gas and Propane Installation Code.
2. The US venting installations must be in accordance with local codes or in the absence of local codes with the current ANSI Z223.1/NFPA 54 National Fuel Gas Code.

(a) Clearance in accordance with local installation codes and the requirements of the gas supplier.

Venting Through The Roof

Support Horizontal pipe every 3-feet with the first support as close to the furnace as possible. Induced draft blower, housing, and furnace must not support the weight of the flue pipe.

Figure 42. Vent support example


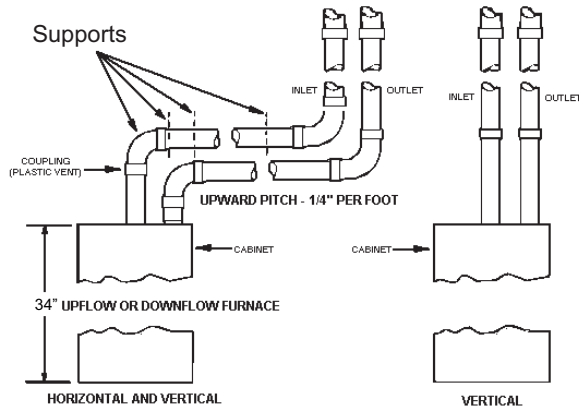


Figure 43. Venting through roof

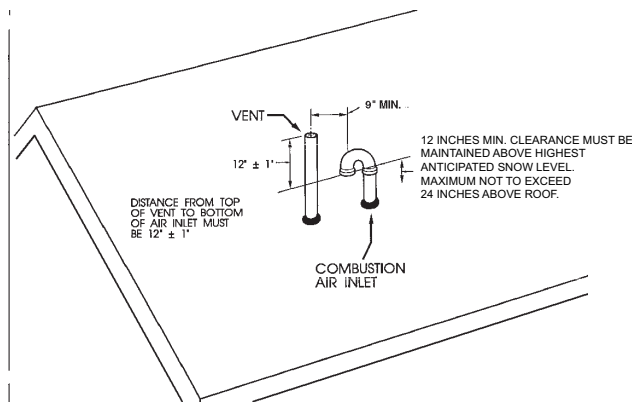

Note: All measurements are from centerline to centerline.

Figure 44. BAYAIR30AVENTA / BAYAIR30CNVENT

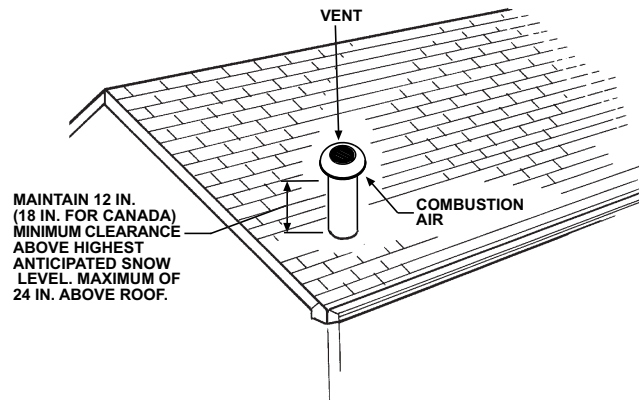


Figure 45. BAYAIR30AVENTA / BAYAIR30CNVENT


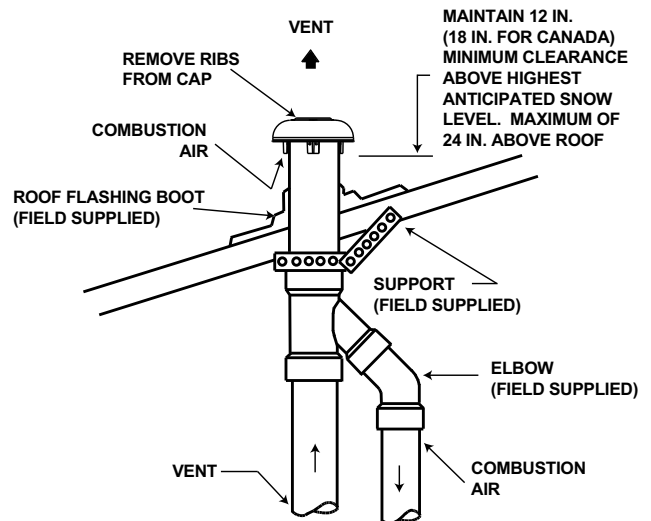


Figure 46. Manufactured home ceiling vent installation example

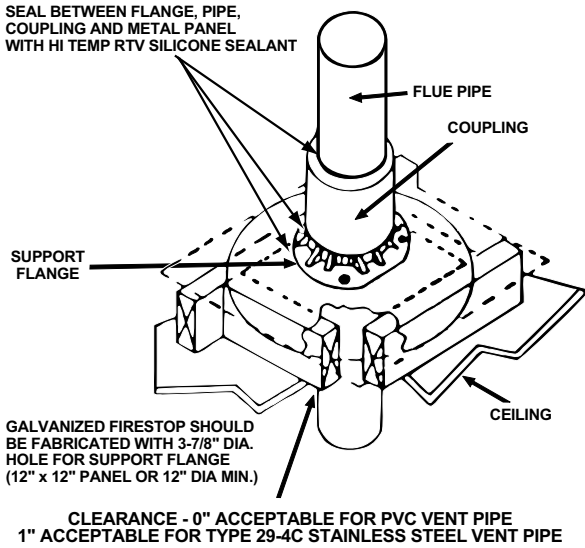


When penetrating roof with PVC vent pipe, a flexible flashing may be used for a weather tight seal. Lubricate flexible seal on flashing before PVC pipe is pushed through the seal. (Field Supplied)

Notes:

- No vent cap is the preferred method for vertical vent termination in extremely cold climates.
- In extreme climate conditions, insulate the exposed pipe above the roof line with Armaflex type insulation.

Figure 47. Manufactured home floor vent installation example

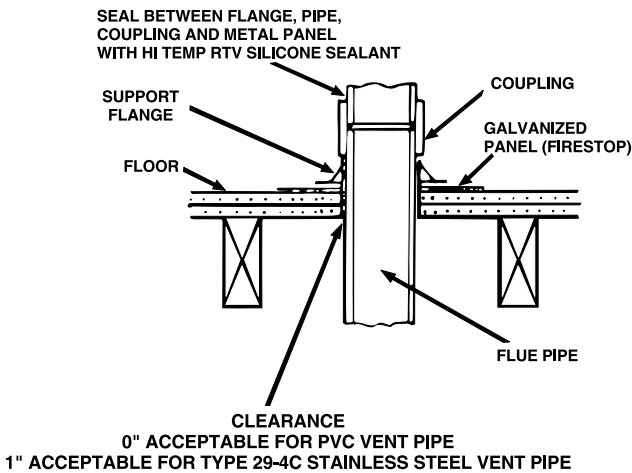


Venting Through an UNUSED Chimney

Venting Routed Through a Masonry Chimney

Important:

- Refer to Section 12.6.8 of NFPA 54 / ANSI 223.1 2012 when routing vent piping through a chimney.
- The single wall flue pipe joints must be sealed.
The 90 degree elbow connection to vertical pipe must be sealed to prevent condensate leakage to base of masonry chimney.

Figure 48. PVC plastic venting through unused chimney

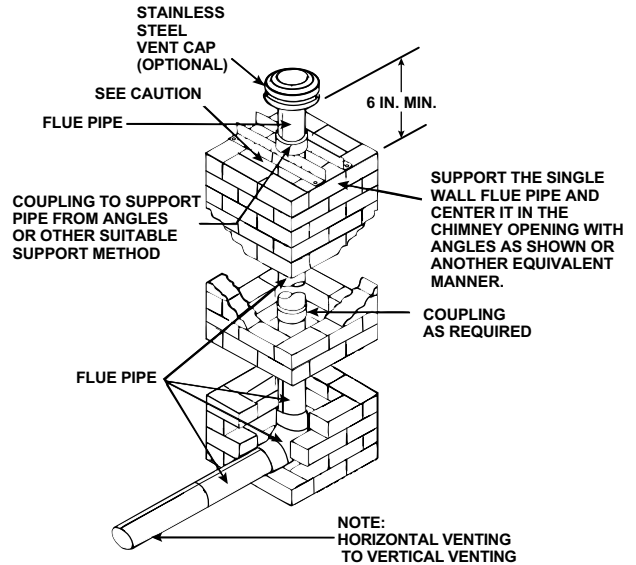

Vent Fitting Material – Stainless Steel

Gas and liquid tight single wall metal vent fitting, designed for resistance to corrosive flue condensate such as Type 29-4C MUST be used throughout.

These fittings and fitting accessories are to be field supplied.

Direction of Stainless Steel Fitting


All stainless steel fitting must be installed with male end towards the Furnace.

All horizontal stainless steel sections must be positioned with the seam on top.

All long horizontal sections must be supported to prevent sagging.

All pipe joints must be fastened and sealed to prevent escape of combustion products into the building.

Figure 49. Type 29–4C stainless steel venting through unused chimney

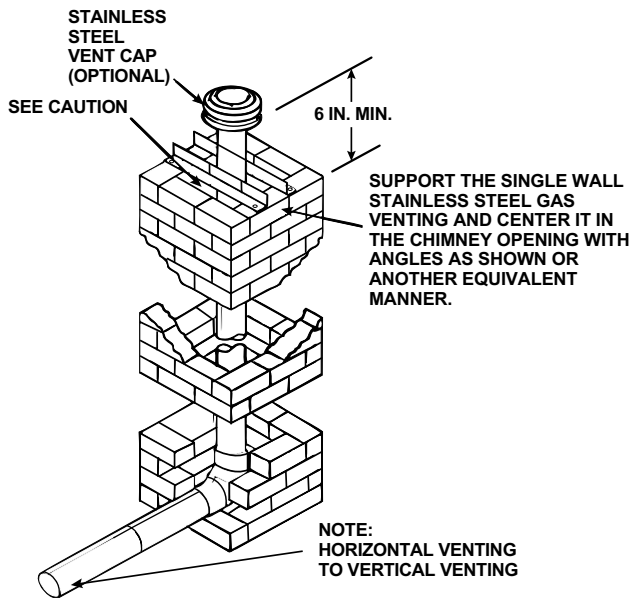


Downward Venting

Furnace may be in vertical or horizontal configuration.

Notes:

1. Condensate trap for vent pipe must be a minimum of 6 inches in height.
2. Condensate trap for vent and inlet pipe must be connected into a condensate drain pump; an open or vented drain; or it can be connected to the outlet hose of the Furnace condensate trap. Outdoor draining of the Furnace and coil condensate is permissible if allowed by local codes.
3. The condensate trap should be primed at initial start up prior to heating season operation.

Figure 50. Downward venting

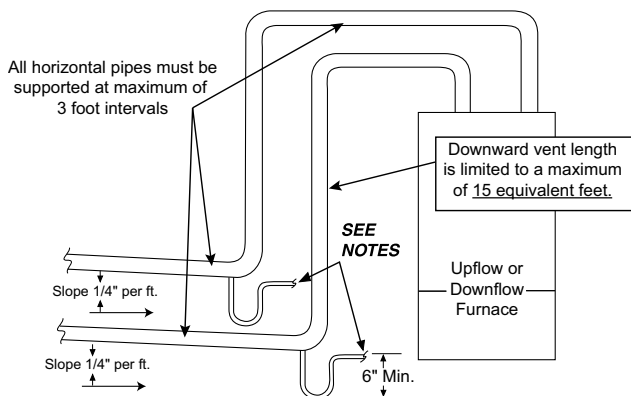

Important: Caution should be taken to prevent drains from freezing or causing slippery conditions that could lead to personal injury. Excessive draining of condensate may cause saturated ground conditions that may result in damage to plants.

Air for Combustion and Ventilation

Adequate flow of combustion and ventilating air must not be obstructed from reaching the Furnace. Air openings provided in the Furnace casing must be kept free of obstructions which restrict the flow of air. Airflow restrictions affect the efficiency and safe operation of the Furnace. Keep this in mind should you choose to remodel or change the area which contains your Furnace. Furnaces must have a free flow of air for proper performance.

Provisions for combustion and ventilation air shall be made in accordance with "latest edition" of Section 9.3, Air for Combustion and Ventilation, of the National Fuel Gas Code, ANSI Z223.1 / NFPA 54, or Sections 8.2, 8.3 or 8.4 of CSA B149.1 Installation Codes, and applicable provisions of the local building codes. Special conditions created by mechanical exhausting of air and fireplaces must be considered to avoid unsatisfactory Furnace operation.

Furnace location may be in an unconfined space or a confined space.

Unconfined space are installations with 50 cu. ft. or more per 1000 BTU/hr input from all equipment installed. Unconfined spaces are defined in the table and illustration for various furnace sizes. These spaces may have adequate air by infiltration to provide air for combustion, ventilation, and dilution of flue gases. Buildings with tight construction (for example, weather stripping, heavily insulated, caulked, vapor barrier, etc.), may need additional air provided as described for confined space.


Table 33. Minimum area in square feet for unconfined space installations

| Furnace Maximum BTUH Input Rating | With 8 ft. Ceiling, Minimum Area in Square Feet of Unconfined Space |
|-----------------------------------|---|
| 40,000 | 250 |
| 60,000 | 375 |
| 80,000 | 500 |
| 100,000 | 625 |
| 120,000 | 750 |

Furnace General Installation

Figure 51. Unconfined space

**50 CU. FT. OR MORE
PER 1000 BTU/HR INPUT
ALL EQUIP. INSTALLED**

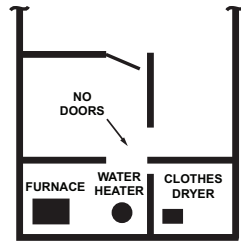

Confined spaces are installations with less than 50 cu. ft. of space per 1000 BTU/ hr input from all equipment installed. Confined spaces are defined in the table and illustration for various furnace sizes. Air for combustion and ventilation requirements can be supplied from inside the building.

The following types of installations will require use of OUTDOOR AIR for combustion, due to chemical exposures:

- Commercial buildings
- Buildings with indoor pools
- Furnaces installed in commercial laundry rooms
- Furnaces installed in hobby or craft rooms
- Furnaces installed near chemical storage areas

Exposure to the following substances in the combustion air supply will also require OUTDOOR AIR for combustion:

- Permanent wave solutions
- Chlorinated waxes and cleaners
- Chlorine based swimming pool chemicals
- Water softening chemicals
- Deicing salts or chemicals
- Carbon Tetrachloride
- Halogen type refrigerants
- Cleaning solvents (such as perchloroethylene)
- Printing inks, paint removers, varnish, etc.
- Hydrochloric acid
- Cements and glues
- Antistatic fabric softeners for clothes dryers
- Masonry acid washing material

Note: Extended warranties are not available in some instances. Extended warranty does not cover repairs to equipment installed in establishments with corrosive atmospheres, including but not limited to, dry cleaners, beauty shops, and printing facilities.

Table 34. Minimum free area in square inches each opening (furnace only) in a confined space

| Furnace Max BTUH.Input Rtg. | Air From Inside | Air From Outside | |
|-----------------------------|-----------------|-------------------|---------------------|
| | | Vertical Duct (a) | Horizontal Duct (b) |
| 40,000 | 100 | 10 | 20 |
| 60,000 | 100 | 15 | 30 |


Table 34. Minimum free area in square inches each opening (furnace only) in a confined space (continued)

| Furnace Max BTUH.Input Rtg. | Air From Inside | Air From Outside | |
|-----------------------------|-----------------|-------------------|---------------------|
| | | Vertical Duct (a) | Horizontal Duct (b) |
| 80,000 | 100 | 20 | 40 |
| 100,000 | 100 | 25 | 50 |
| 120,000 | 120 | 30 | 60 |
| 140,000 | 140 | 35 | 70 |

(a) 1 Square inch per 4000 BTU/hr Vertical Duct.
(b) 1 Square inch per 2000 BTU/hr Horizontal Duct.


Figure 52. Confined space

**LESS THAN 50 CU. FT.
PER 1000 BTU/HR INPUT
ALL EQUIP. INSTALLED**

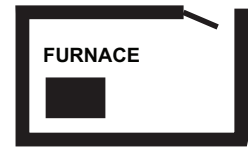

All air from inside the building — The confined space shall be provided with two permanent openings communicating directly with an additional room(s) of sufficient volume so that the combined volume of all spaces meets the criteria for an unconfined space. The total input of all gas utilization equipment installed in the combined space shall be considered in making this determination. Refer to the Minimum Free Area in square inches for confined spaces table, for minimum open areas required.

Figure 53. Air from inside building

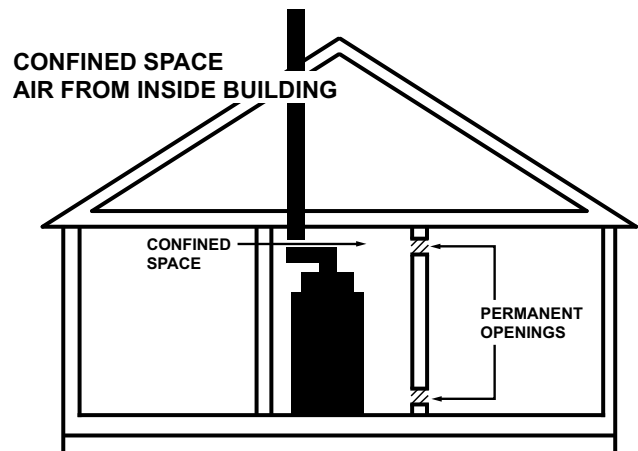

All air from outdoors — The confined space shall be provided with two permanent openings, one commencing within 12 inches of the top and one commencing within 12 inches of the bottom of the enclosure.

The openings shall communicate directly, or by ducts, with the outdoors or spaces (crawl or attic) that freely communicate with the outdoors. Refer to the Minimum Free Area in square inches for confined spaces table, for minimum open areas required.

Figure 54. Air from outdoors

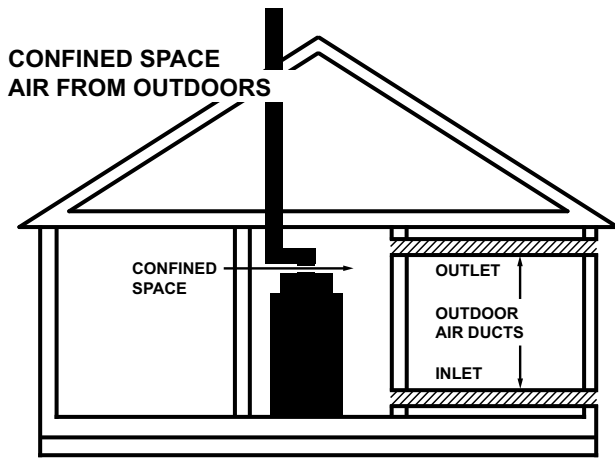


Figure 55. Air from ventilated attic/crawl space


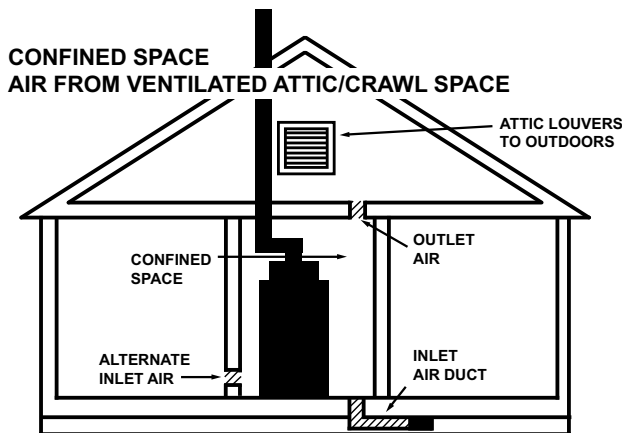


Figure 56. Air from ventilated attic

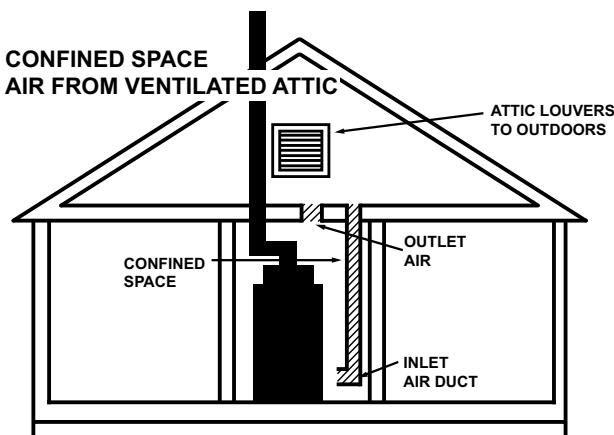

Duct Connections

Air duct systems should be installed in accordance with standards for air conditioning systems, National Fire Protection Association Pamphlet No. 90. They should be sized in accordance with ACCA Manual D or whichever is

applicable. Check on controls to make certain they are correct for the electrical supply.

Central furnaces, when used in connection with cooling units, shall be installed in parallel or on the upstream side of the cooling units to avoid condensation in the heating element, unless the furnace has been specifically approved for downstream installation. With a parallel flow arrangement, the dampers or other means used to control flow of air shall be adequate to prevent chilled air from entering the furnace, and if manually operated, must be equipped with means to prevent operation of either unit unless the damper is in full heat or cool position.

Flexible connections of nonflammable material may be used for return air and discharge connections to reduce the transmission of vibration. Though these units have been specifically designed for quiet, vibration free operation, air ducts can act as sounding boards and could, if poorly installed, amplify the slightest vibration to the annoyance level.

When the furnace is located in a utility room adjacent to the living area, the system should be carefully designed with returns which minimize noise transmission through the return air grille. Although these winter air conditioners are designed with large blowers operating at moderate speeds, any blower moving a high volume of air will produce audible noise which could be objectionable when the unit is located very close to a living area. It is often advisable to route the return air ducts under the floor or through the attic. Such design permits the installation of air return remote from the living area (i.e. central hall).

When the furnace is installed so that the supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by a duct(s) sealed to the furnace and terminating outside the space containing the furnace.

For furnaces not equipped with a cooling coil, it is recommended that the outlet duct be provided with a removable access panel. The opening shall be accessible when the furnace is installed and shall be of such a size that the heat exchanger can be viewed for possible openings using light assistance or a probe can be inserted for sampling the air stream. The removable cover must be sealed to prevent air leaks.

Where there is no complete return duct system, the return connection must be run full size from the Furnace to a location outside the utility room, basement, attic, or crawl space.

Important: Do not install return air through the back of the Furnace cabinet. Do not install return air through the side of the furnace cabinet on horizontal applications without following the guidelines in "Return Air Filters," p. 62 section of this document.

Carbon monoxide, fire or smoke can cause serious bodily injury, death, and/or property damage.

A variety of potential sources of carbon monoxide can be found in a building or dwelling such as gas-fired clothes

Furnace General Installation

dryers, gas cooking stoves, water heaters, furnaces and fireplaces. The U.S. Consumer Product Safety Commission recommends that users of gas-burning appliances install carbon monoxide detectors as well as fire and smoke detectors per the manufacturer's installation instructions to help alert dwelling occupants of the presence of fire, smoke or unsafe levels of carbon monoxide. These devices should be listed by Underwriters Laboratories, Inc. *Standards for Single and Multiple Station Carbon Monoxide Alarms, UL 2034* or CSA International Standard, *Residential Carbon Monoxide Alarming Devices, CSA 6.19*.

Notes:

- *The manufacturer of your Furnace DOES NOT test any detectors and makes no representations regarding any brand or type of detector.*
- *Seal per local codes.*

Supply Duct Connections

⚠ CAUTION

Coil Requirement!

Failure to follow instructions below could result in minor to moderate injury or property damage. For 4GXC* and 4MXC* coils on upflow furnaces in vertical, horizontal left, or horizontal right orientations without a factory-installed metal drain pan shield, must use a MAY*FERCOLKITAA kit. Coils installed on upflow furnaces must have drain pans suitable for 400° F (205° C) or metal drain pan shield. Downflow furnaces do not require a metal drain pan shield or MAY*FERCOLKITAA kit.

Notes: The "Coil Requirement" caution is applicable to:

- *Upflow furnace with coil*
- *Furnace in horizontal left with coil*
- *Furnace in horizontal right with "A" coil*

Installation Instructions:

1. Bend furnace flanges up.
2. Set the coil on top of the furnace.
3. Screw through the coil cabinet into the furnace flange. Guide holes are located on the coil.
4. Seal per local codes and requirements.
5. Insulate the first 6 to 12 inches of the supply duct.
6. Support the furnace and coil independently.
7. Cut the back flange along perforation.
8. Starting at the back of the furnace, cut the side flanges along perforations until past the end of the heat shield to avoid interference when bending.
9. Bend furnace side flanges down.
10. Match the coil up flush to the back of the furnace.

11. Set the furnace on top of the coil so that it is flush with the back of the furnace.

12. Attach ducting.

Table 35. Supply duct connections

| Image Reference | Steps to follow |
|---------------------------------------|---|
| Figure 57, p. 56 | Refer to Step 1 |
| Figure 58, p. 56 | Refer to Step 2, Step 3, and Step 4 |
| Figure 59, p. 57 | Refer to Step 1, Step 4, and Step 5 |
| Figure 60, p. 57 | Refer to Step 1 |
| Figure 61, p. 57 | Refer to Step 6, Step 3, and Step 4 |
| Figure 62, p. 57 | Refer to Step 7, Step 8, Step 9, and Step 6 |
| Figure 63, p. 58 | Refer to Step 10, and Step 4 |
| Figure 64, p. 58 | Refer to Step 7, Step 8, Step 9, and Step 6 |
| Figure 65, p. 58 | Refer to Step 11, and Step 4 |
| Figure 66, p. 58 and Figure 67, p. 59 | Refer to Step 1, Step 12, and Step 4 |

Figure 57. Upflow furnace with coil



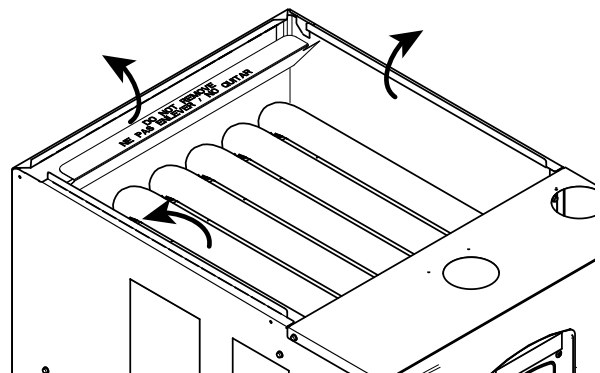


Figure 58. Upflow furnace with coil

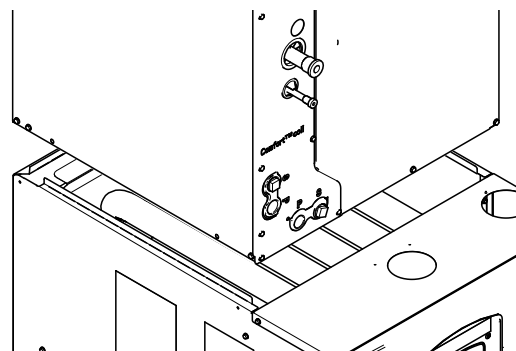

Note: There are no longer guide holes located on the furnace flange.

Figure 59. Upflow furnace without coil

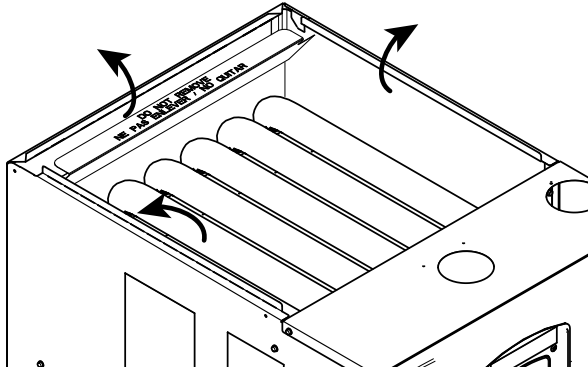

Important: The first 6 to 12 inches of the supply duct must be insulated to protect from high temperatures.

Figure 60. Furnace in horizontal left with coil



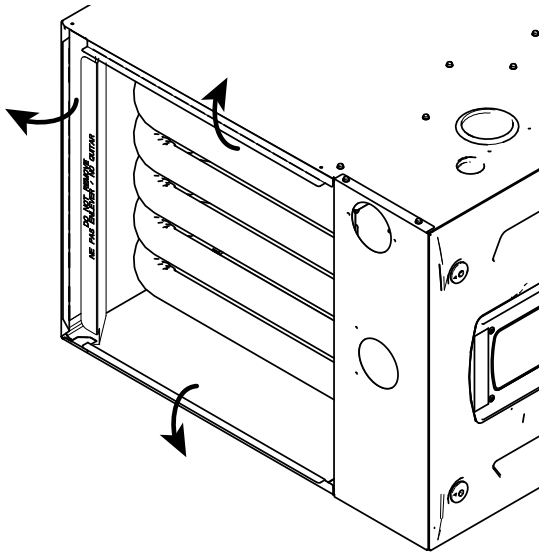


Figure 61. Furnace in horizontal left with coil

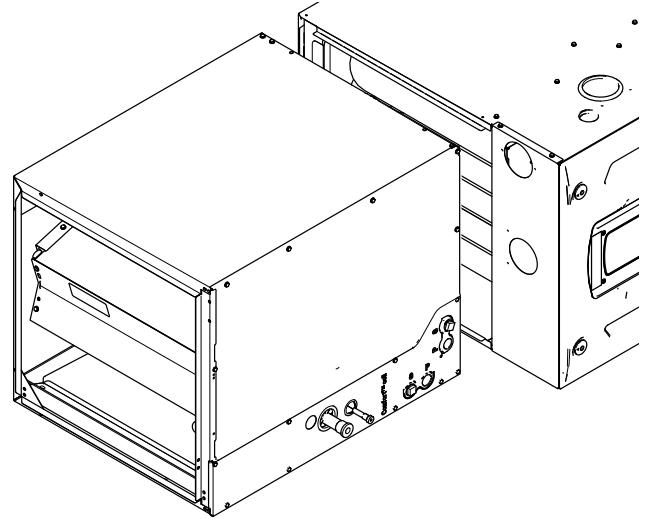

Note: There are no longer guide holes located on the furnace flange.

Figure 62. Furnace in horizontal right with "A" coil

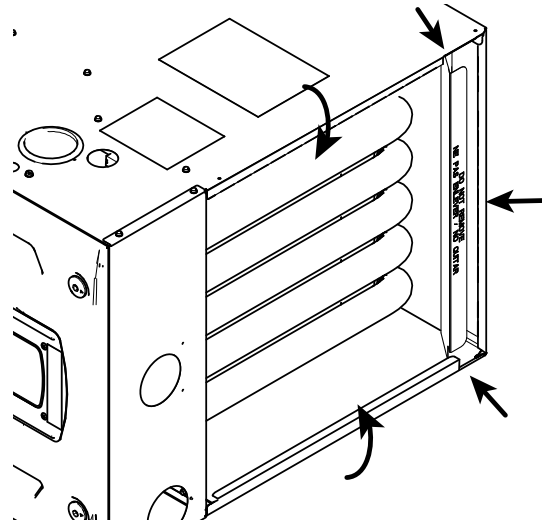

Note: Flat or dedicated horizontal coils may require flanges to be bent upward.

Furnace General Installation

Figure 63. Furnace in horizontal right with "A" coil

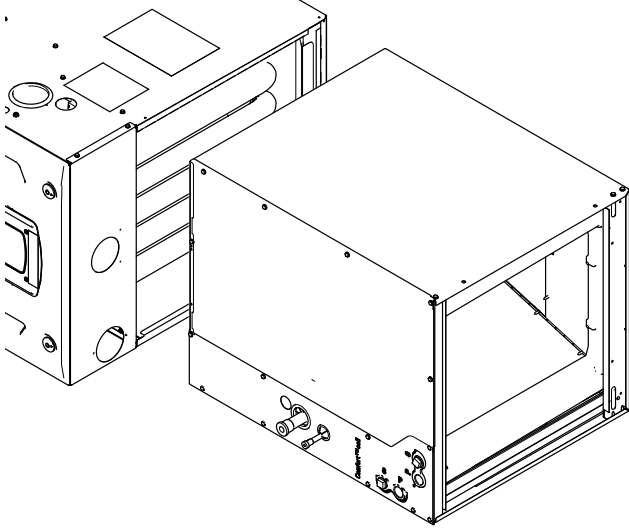


Figure 65. Downflow furnace with coil



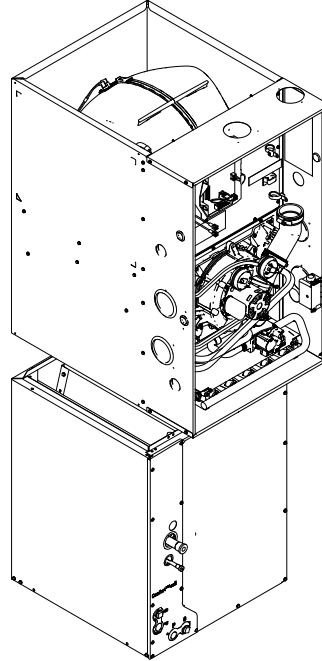


Figure 64. Downflow furnace with coil

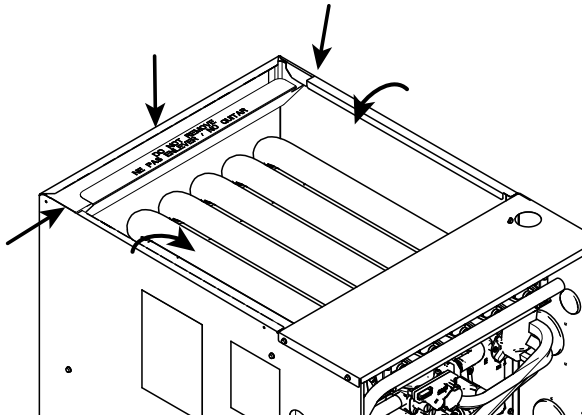


Note: 4GXC* or 4MXC* coils installed on a downflow furnace do not require a metal drain pan shield or the use of the MAY*FERCOLKITAA kit.

Figure 66. Horizontal right furnace — no coil

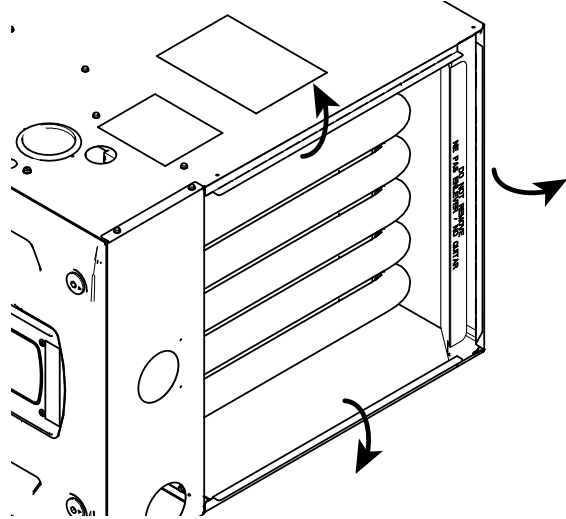

Important: A BAYBASE is required when installing the furnace on a combustible floor.

Figure 67. Downflow furnace — no coil

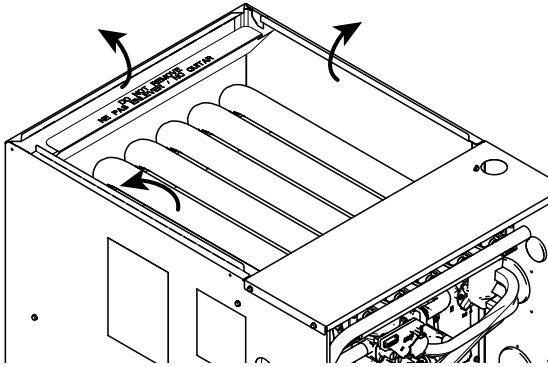

Important: A BAYBASE is required when installing the furnace on a combustible floor.

Return Duct Connections

General Guidelines:

- Back returns are not allowed on any S-Series Furnaces
- Side returns are not allowed on downflow S-Series Furnaces
- Mounting flanges must be located on ducting
- Shoot screws through the mount flanges into the furnace cabinet
- Always seal per local codes and requirements
- Furnace, coil, and ducting must be supported separately
- An external overflow drain pan must be installed in all applications over a finished ceiling to prevent property damage

Installation Instructions:

1. Remove the bottom plate.
2. Set the furnace on the base inside closet.
3. Install remote filter.
4. Seal per local codes and requirements.
5. Set the furnace on the filter box inside closet.
6. Must have grill present for air.
7. Set the furnace on the ducted pedestal. The ducted pedestal will use ducted air from a remote location.
8. Install filter at a remote location.
9. Set the furnace on the filter box. The ducted pedestal will use ducted air from a remote location.
10. Create ducting and set the furnace in place.
11. Match the filter cabinet flush to the back and bottom sides of the furnace cabinet and secure in place with screws.
12. Mark the two areas to be cut out for the return air.

13. Cut out the two sections of the cabinet and BAYLIFT kit to be removed.
14. Attach ducting to the filter box.
15. The ducted pedestal will use ducted air from a remote location.
16. Using guides, remove the cutout for the side return.
17. Create ducting and set the furnace in place. Use screws to attach ducting to the furnace cabinet.
18. Seal bottom panel per local codes and requirements.
19. Seal all other panels per local codes and requirements.
20. Remove the top plate.
21. Attach the ducting to the top of the furnace.
22. Attach the plenum ducting to the top of the furnace.
23. Attach the filter box to the top of the furnace.
24. Attach ducting.

Table 36. Return duct connections

| Image Reference | Steps to follow |
|------------------|---|
| Figure 68, p. 59 | Refer to Step 1, Step 2, Step 3, and Step 4 |
| Figure 69, p. 60 | Refer to Step 1, Step 5, Step 6, and Step 4 |
| Figure 70, p. 60 | Refer to Step 1, Step 7, Step 8, and Step 4 |
| Figure 71, p. 60 | Refer to Step 1, Step 9, and Step 4 |
| Figure 72, p. 60 | Refer to Step 1, Step 10, Step 11, Step 12, Step 13, Step 14, Step 15, and Step 4 |
| Figure 75, p. 61 | Refer to Step 16, Step 17, Step 18, and Step 19 |
| Figure 76, p. 61 | Refer to Step 16, Step 17, Step 18, and Step 19 |
| Figure 77, p. 61 | Refer to Step 20, Step 21, Step 3, and Step 4 |
| Figure 78, p. 62 | Refer to Step 20, Step 22, Step 3, and Step 4 |
| Figure 79, p. 62 | Refer to Step 20, Step 23, Step 24, and Step 4 |

Figure 68. Upflow furnace with bottom return in closet with remote filter

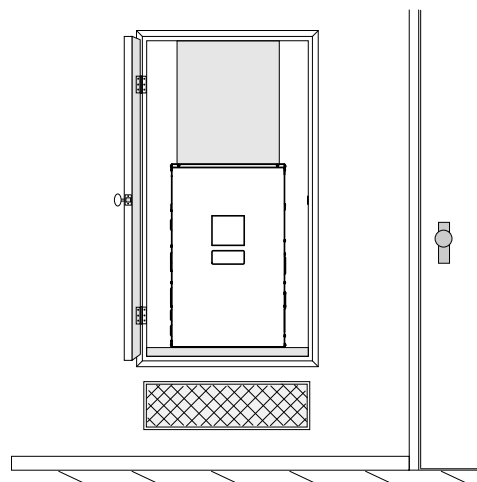


Figure 69. Upflow furnace with bottom return in closet with filter box

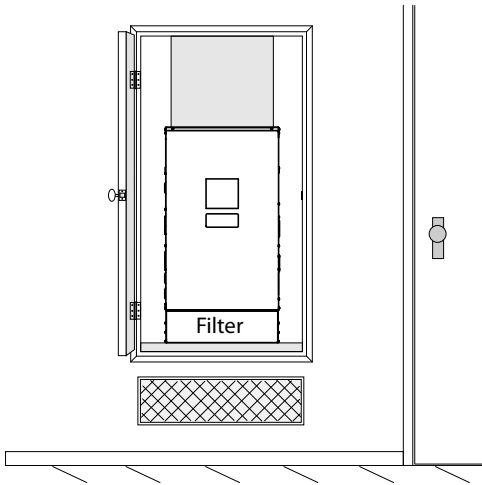


Figure 70. Upflow furnace with bottom return mounted on a ducted pedestal

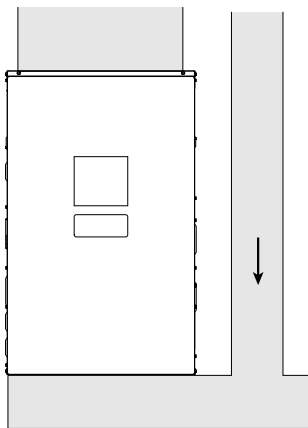


Figure 71. Upflow furnace with bottom return mounted on a ducted pedestal with filter box


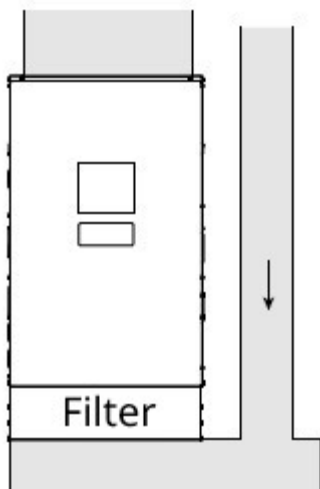


Figure 72. Upflow furnace with bottom and side returns mounted on a ducted pedestal with side return and filter box

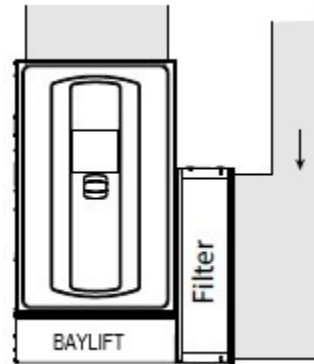

Important:

- Make sure the condensate and thermostat wiring holes are sealed on the cabinet side with the side return. The plugs and grommets may need to be changed with those on the opposite side of the cabinet.
- Make sure not to cut the cabinet in the "No Cut" area.

Notes:

- Use Optional BAYLIFT kit to lift furnace. Follow kit instructions.
- The furnace bottom pedestal must be a minimum of 6-inch height.

Figure 73. 17.5-inch filter cabinet with BAYLIFT kit

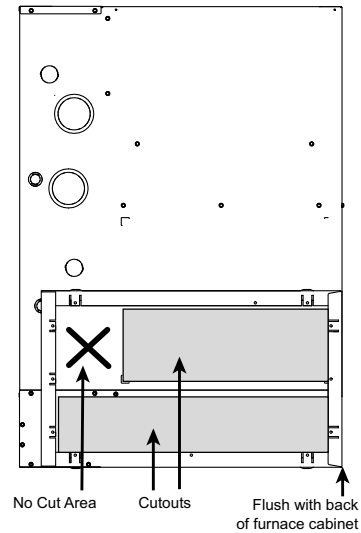


Figure 74. 21-inch filter cabinet with BAYLIFT kit


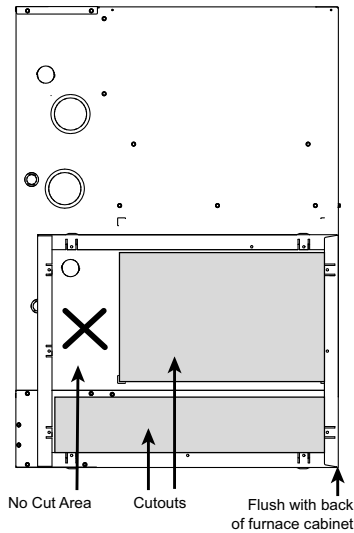


Figure 75. Upflow furnace with side return

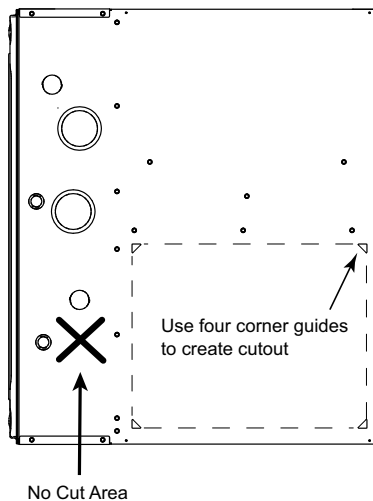


Important:

- Make sure the condensate and thermostat wiring holes are sealed on the cabinet side with the side return. The plugs and grommets may need to be changed with those on the opposite side of the cabinet.
- Make sure not to cut the cabinet in the "No Cut" area.

Notes:

- Return air on right side with the condensate on the left or return air on left with the condensate on the right do not require a transition.
- If using a filter box, use a transition, if possible, to attach the filter box to the furnace cabinet.

Figure 76. Upflow furnace with two side returns

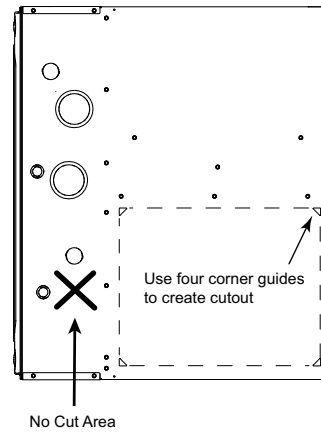

Important:

- One of the sides must have a transition to allow the condensate and thermostat wiring to exit the cabinet.
- If a transition is not a viable option, a hole may be drilled in the bottom of the cabinet to allow the condensate to exit. Also, a hole will need to be drilled in the side of the cabinet for the thermostat wiring to exit.
- Make sure not to cut the cabinet in the "No Cut" area.

Notes:

- If using one transition, the condensate and thermostat wiring will exit on the transition side.
- If using a filter boxes, use transitions, if possible, to attach the filter boxes to the furnace cabinet. If transitions are not used, condensate may exit through the bottom of the furnace.

Figure 77. Downflow furnace with top return

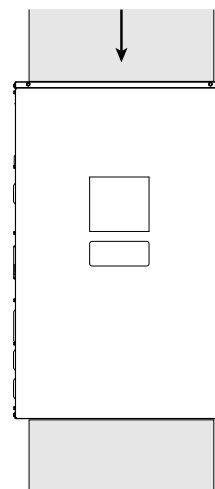


Figure 78. Downflow furnace with top return and plenum


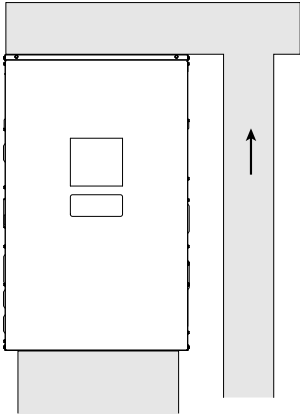


Figure 79. Downflow furnace with top return and plenum with filter box

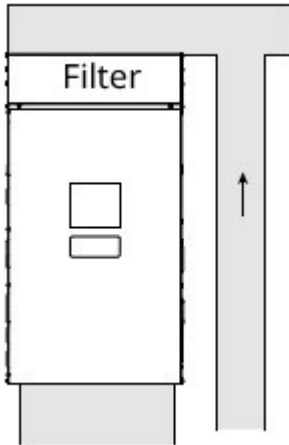

Return Air Filters

Typical Upflow Return Air Filter Installations

Filters are not factory supplied for upflow furnaces. Filter size needed will be dependent on type of filter and CFM requirement. Filters must be installed externally to the unit.

Important: *It is recommended to transition return ducting to the same size as the opening. It is acceptable for return duct or filter frame to extend forward of the opening but plastic plugs MUST be installed in any opening that the duct or filter frame may cover.*

Table 37. Upflow return air filters

| Furnace Width (in.) | Filter Qty and Size (in.) |
|---------------------|---------------------------|
| 17-1/2 | 1 – 16 x 25 x 1 |
| 21 | 1 – 20 x 25 x 1 |

Table 37. Upflow return air filters (continued)

| Furnace Width (in.) | Filter Qty and Size (in.) |
|---------------------|---------------------------|
| 24-1/2 | 1 – 24 x 25 x 1 |


Note: For upflow furnace models in any configuration, where the airflow requirement exceeds 1600 CFM - Furnaces will require return air openings and filters on: (1) both sides, or (2) one side and the bottom, or (3) just on the bottom.

Preparation for Upflow Bottom and Side Return Air Filter Installations

All return air duct systems should provide for installation of return air filters.

1. Determine the appropriate position to set the furnace in order to connect to existing supply and return ductwork.
2. For upflow side return installations, remove the insulation around the opening in the blower compartment.
3. The side panels of the upflow furnace include locating notches that are used as guides for cutting an opening for return air, refer to the figure and the upflow furnace outline drawing for duct connection dimensions for various furnaces.
4. If a 3/4-inch flange is to be used for attaching the air inlet duct, add to cut where indicated by dotted lines. Cut corners diagonally and bend outward to form flange.
5. If flanges are not required, and a filter frame is installed, cut between locating notches as in illustration.
6. The bottom panel of the upflow furnace must be removed for bottom return air.

Figure 80. Upflow furnaces

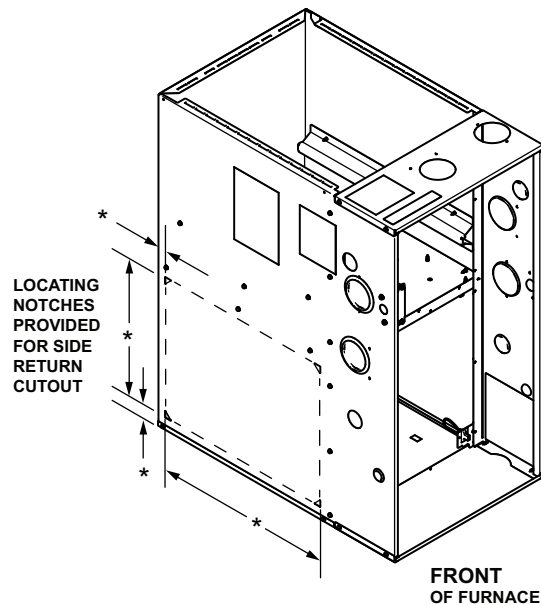

Return Air Filters For Furnace In Horizontal Configuration

When the furnace is installed in the horizontal configuration, the return air filters must be installed exterior to the furnace cabinet. Remote filter grilles may be used for homeowner convenience, refer to [Figure 81, p. 63](#) or the filters may be installed in the duct work upstream of the furnace, refer to [Figure 82, p. 63](#).

Filter kits are available for horizontal applications.

Note: Direct coupled side returns are not allowed to the blower cabinet.

Figure 81. Remote filter installation


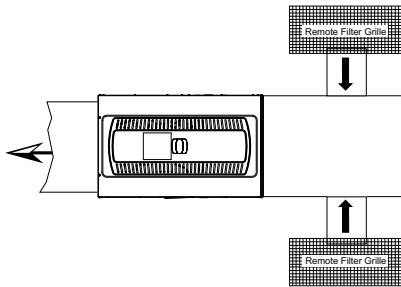


Figure 82. Duct filter installation

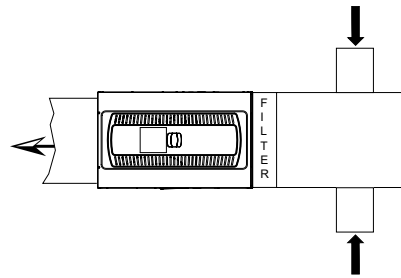

Typical Downflow Furnace Return Air Filter Installations

Filters are not factory supplied for downflow furnaces. Filter size needed will be dependent on type of filter and CFM requirement. Filters must be installed externally to the unit.

Table 38. Downflow Return Air Filters

| Furnace Width (in.) | Filter Qty and Size (in.) |
|---------------------|---------------------------|
| 17-1/2 | 1 – 16 x 25 x 1 |
| 21 | 1 – 20 x 25 x 1 |
| 24-1/2 | 1 – 24 x 25 x 1 |

Electrical Connections

Make wiring connections to the unit as indicated on enclosed wiring diagram. As with all gas appliances using electrical power, this furnace shall be connected into a permanently live electric circuit. It is recommended that furnace be provided with a separate "circuit protection device" electric circuit. The furnace must be electrically grounded in accordance with local codes or in the absence of local codes with the National Electrical Code, ANSI/NFPA 70 or CSA C22.1 Electrical Code, if an external electrical source is utilized. **The integrated furnace control is polarity sensitive.** The hot leg of the 120V power supply must be connected to the black power lead as indicated on the wiring diagram.


Refer to the Wiring Diagram section in this document and Unit Wiring Diagram attached to the furnace.

⚠ WARNING

Fire Hazard!
Failure to follow instructions below could result in death or serious injury or property damage.
For installations with flammable refrigeration system, the furnace must be powered at all times except during servicing. The furnace must be installed and connected according to installation instructions and wiring diagrams provided with the evaporator coil.

Field Wiring

Figure 83. Field wiring diagram for A952V with one / two stage AC or heat pump

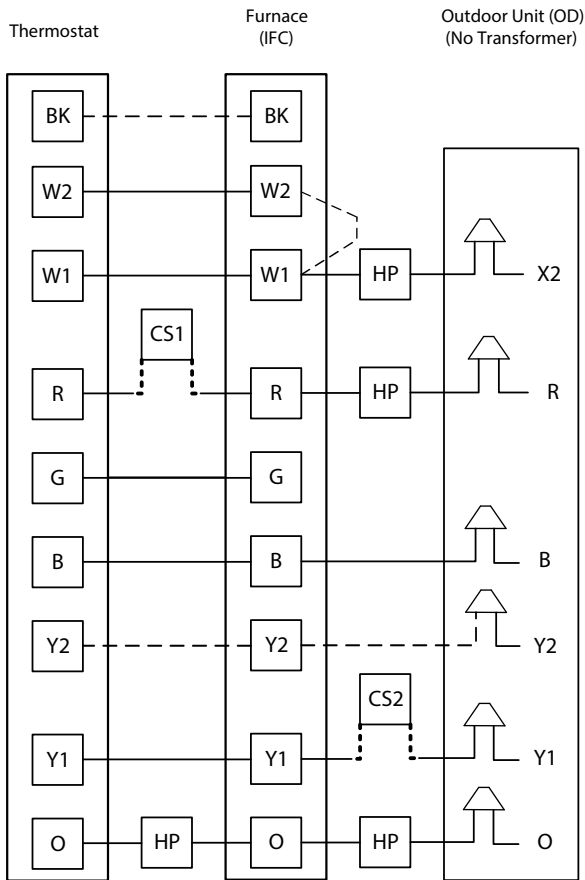

NOTES:

- 1) HP = Wiring used for Heat Pump System.
- 2) CS = wiring used for Condensate Switch (2 Options).
- 3) Y1 and/or Y2 must be connected from the thermostat to the IFC for proper airflow.
- 4) Remove Y1-O jumper for HP systems. O terminal must be connected as shown for gas heating operation during defrost.
- 5) If the thermostat does not have a W2, or there are not enough conductors, jumper W1 to W2 at the IFC.
- 6) A/TCONT824 thermostats do not require the use of X2.
- 7) For PWM (BK) enabled thermostats, cut the BK jumper on the IFC and connect wiring.



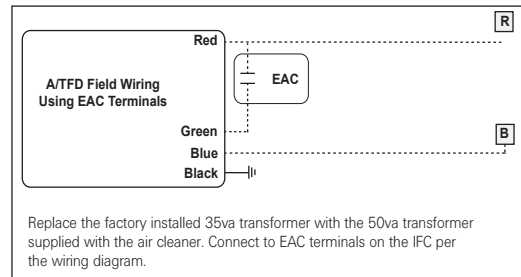


Figure 84. Field wiring diagram for A952V with single stage AC or heat pump with two stage airflow

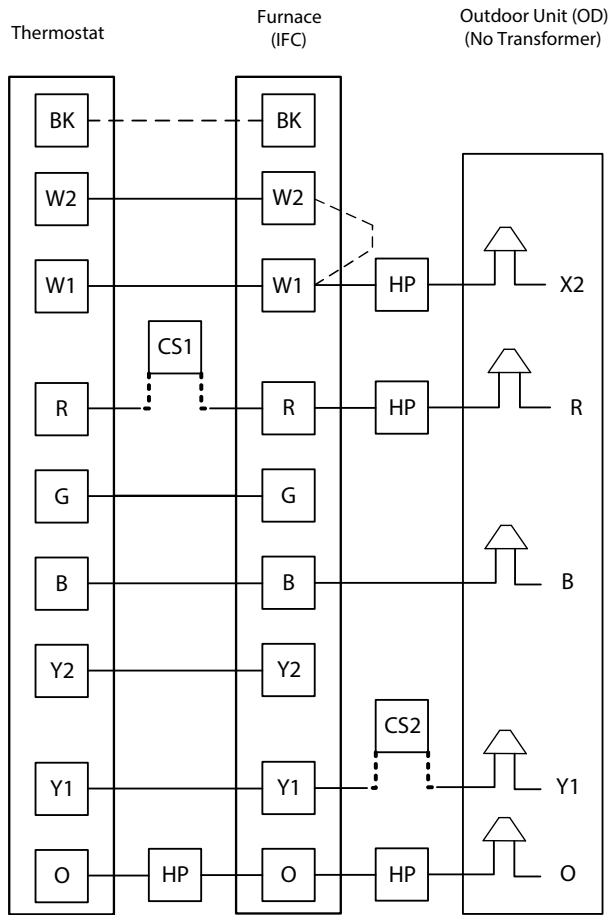

NOTES:

- 1) HP = Wiring used for Heat Pump System.
- 2) CS = wiring used for Condensate Switch (2 Options).
- 3) Y1 and Y2 must be connected from the thermostat to the IFC for proper airflow.
- 4) Thermostat must be setup for 2 stage OD.
- 5) IFC Must be setup for 2 stage OD using the Menu/Option Buttons.
- 6) Remove Y1-O jumper for HP systems. O terminal must be connected as shown for gas heating operation during defrost.
- 7) If the thermostat does not have a W2, or there are not enough conductors, jumper W1 to W2 at the IFC.
- 8) A/TCONT824 thermostats do not require the use of X2.
- 9) For PWM (BK) enabled thermostats, cut the BK jumper on the IFC and connect wiring.

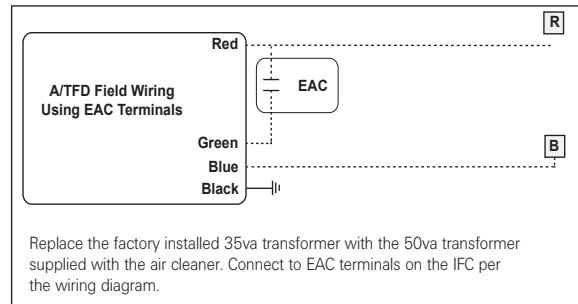

Condensate Drain Instructions

The following sections give general instructions for the installation of the gas furnace condensate drains. Repositioning of the condensate trap is covered in the exhaust air options section.

Cutouts with plugs and grommets are provided on the left and right hand side of the furnace cabinets for drain connections in VERTICAL APPLICATIONS. The standard arrangement is for the drain connection on the left side. The tubing may have to be trimmed in this application to avoid kinking.

The **upflow (vertical application)** also has provisions for right side drain connections. Exchange the grommet and plugs from the left and right side. Trim all excess tubing to avoid kinking.

It is always recommended that an auxiliary drain pan be installed under a horizontally installed evaporator or 90% Gas Furnace. Connect the auxiliary drain line to a separate drain line (no trap is needed in this line).

Horizontal applications require repositioning the condensate canister trap. Additionally the drain tubing connected to the inducer housing may need to be repositioned for removing the plug and reconnecting the tubing to the lower connection on the inducer housing.

Connections must be made to an **OPEN/ VENTED DRAIN**.

Notes:

- All condensate drain piping supplies included with the furnace are intended for internal piping only and should not be applied external to the furnace. All external piping must use 1/2-inch minimum size PVC pipe and fittings throughout for drain connections (fittings, pipe and PVC solvent cement not provided with furnace, must be field supplied). A 3/4-inch coupling is supplied to connect to systems that are using 3/4-inch piping with an air conditioner coil.
- A corrosion resistant condensate pump must be used if a pump is required for a specific drain system.

⚠ CAUTION

Water Damage!

Failure to follow instructions below could result in minor to moderate injury or equipment damage. Install a drain pan under the furnace to prevent leaking condensate.

Figure 85. Condensate management



Important: The condensate drain should be installed with provisions to prevent winter freeze-up of the condensate drain line. Frozen condensate will block drains, resulting in furnace shutdown. If the drain line cannot be installed in a conditioned space and/ or its surrounding ambient temperature is expected to fall below freezing, then heat tape should be applied as required to prevent freezing (per manufacturer's instructions). The heat tape should be rated at 5 or 6 watts per foot at 120 volts. Self-regulating (preferred) or thermostatically controlled heat tape is required.

Typical sources of UL listed heat tapes are W.W. Granger, Inc. (Wintergard Plus™ Series), McMaster Carr Supply Co. (3554 Series), or your equipment supplier.

The condensate drain may be cleaned or inspected by removal of the drain tube at the header.

Evaporator and Furnace condensate drain piping may be manifolded together. A primary drain vent stack must be installed and terminated below the outlet of the secondary heat exchanger drain connection to prevent water from damaging Furnace controls if the primary drain outlet plugs up.

Where the Furnace is installed above a finished ceiling, the primary drain vent stack must be installed such that overflow from the vent stack opening will flow into an auxiliary drain pan in order to prevent water damage to the finished ceiling below.

Vertical Application

Upflow furnace

Remove the plug from the side panel where the condensate will exit.

Install the condensate grommet into the side panel.

Install the connection tubing from the trap to the side of the unit and trim all excess tubing to avoid kinks.

Note: For easiest installation, remove the spring clip from the end of the condensate line and feed through the grommet.

Important: Condensate grommet must be installed for proper operation.

Figure 86. Upflow furnace with left side drain

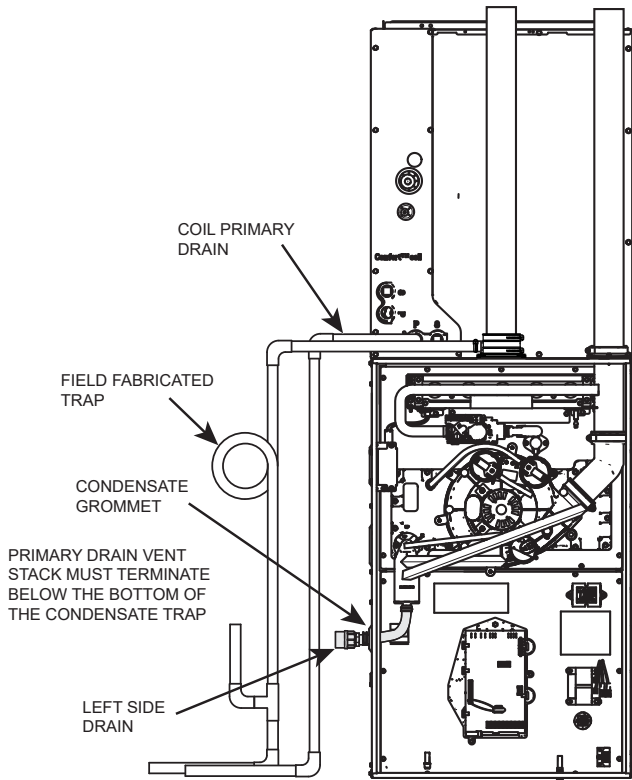


Figure 87. Upflow furnace with right side drain

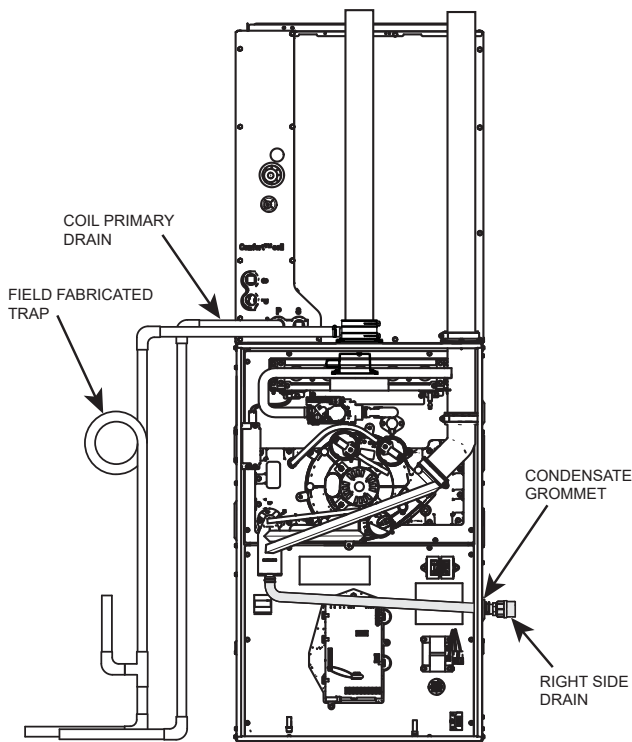


Figure 88. Upflow furnace with left side drain



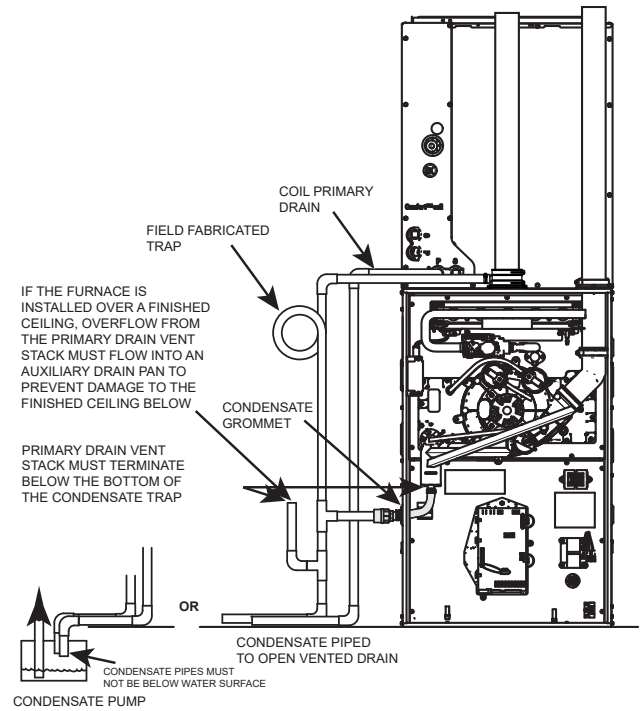


Figure 89. Upflow furnace with right side drain

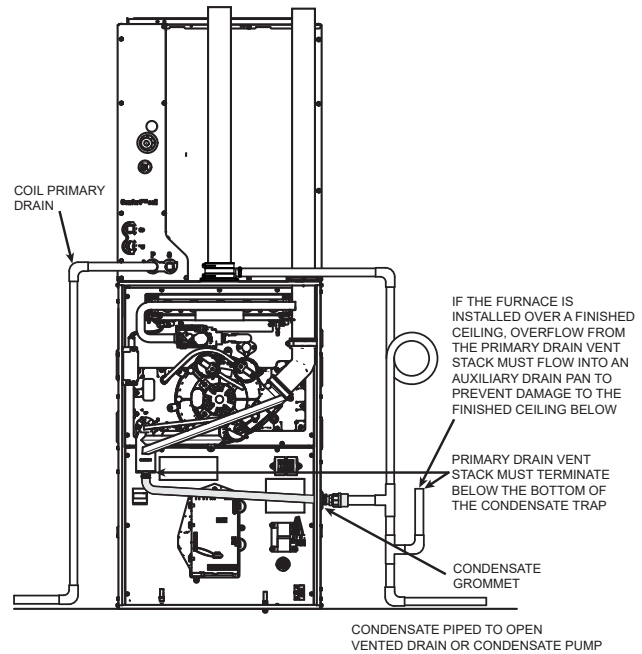

Condensate Drain Instructions


Figure 90. Upflow furnace with left side drain

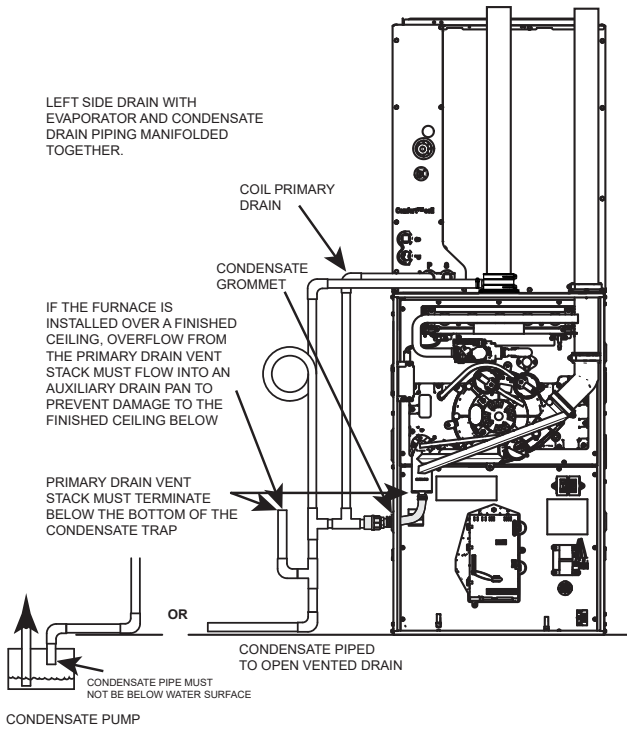

Downflow furnace

Cut the 90 degree section of the condensate tubing off and connect the tubing to the condensate trap. Install the condensate grommet into the bottom panel. Cut to length as needed.

Figure 91. Downflow furnace with bottom drain

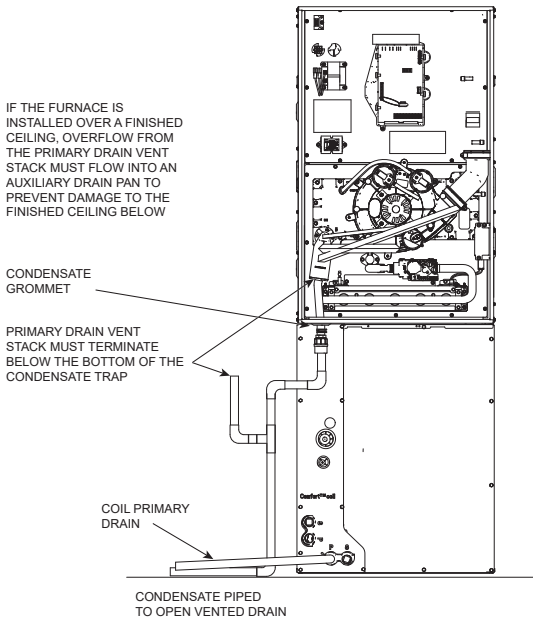


Downflow furnace with Left Side Condensate

1. Remove left hand condensate plug.


2. Install into bottom cross member.

Figure 92. Downflow furnace with left side condensate

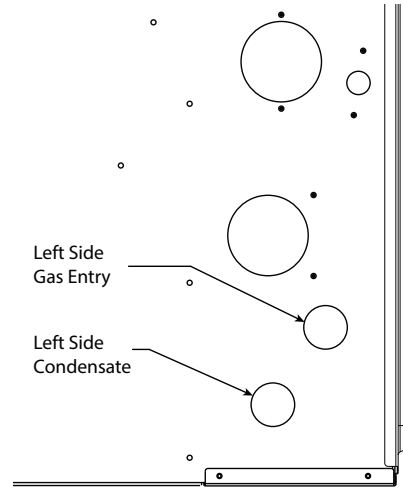

3. Plug the bottom hole with plug provided in document pack.


Figure 93. Downflow furnace with right side condensate — plug installation

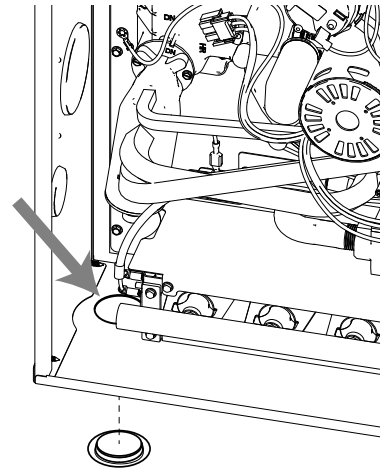

Attaching the condensate drain line:

1. Locate the condensate grommet and the condensate drain line assembly in the doc pack.
2. Insert the condensate grommet in the 1-5/8-inch hole in the side of the cabinet.
3. Remove the fitting at the end of the drain line assembly and insert it through the cabinet from the inside out. Attach the 90 degree section of the hose to the condensate drain trap.
4. Cut off the excess tube and reinstall the end fitting to the drain hose.


Figure 94. Condensate grommet

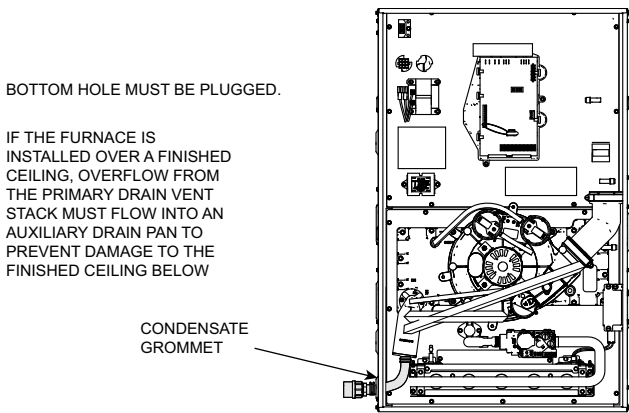

Downflow furnace with Right Side Condensate:


1. Drill an 11/16-inch diameter hole in the right side of the case at the dimensions shown.

Figure 95. Downflow furnace with right side condensate

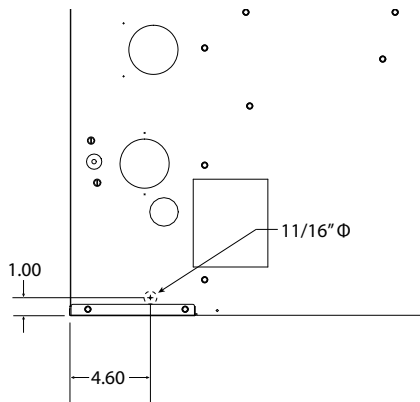

2. Plug the bottom hole with plug provided in document pack.

Figure 96. Plug hole

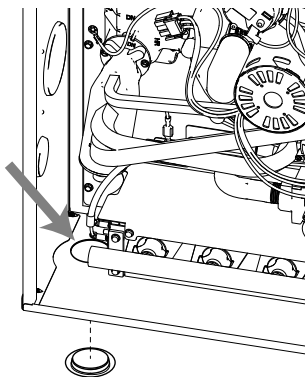

Attaching the condensate drain line:

1. Locate the condensate drain line assembly in the doc pack.

Important: It is best to cut the condensate drain hose assembly longer than 4 inches and then fit in place. It can then be trimmed to needed length. The 4-inch measurement is an approximation.

2. Cut the condensate drain line assembly as shown in Figure 97, p. 69.
3. Use a field supplied hose clamp to secure the condensate drain line to the condensate trap.
4. Insert a field supplied piece of 1/2-inch CPVC pipe through the 11/16-inch hole drilled through the cabinet and insert into drain line hose. Secure with the spring clip.

Note: Seal around the condensate drain tubing where it exits the cabinet.

Figure 97. Condensate drain line


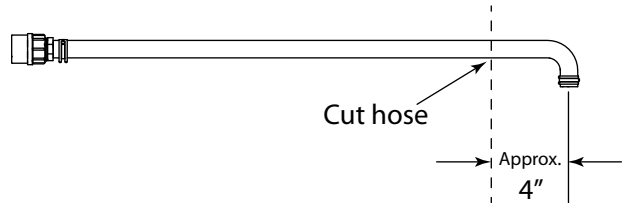


Figure 98. Downflow furnace with right side drain

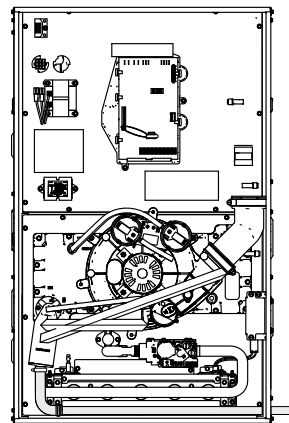

**DOWNFLOW FURNACES
RIGHT SIDE DRAIN**

11/16" DIAMETER HOLE MUST BE CUT IN RIGHT SIDE OF CASE. BOTTOM HOLE MUST BE PLUGGED. CUT FACTORY SUPPLIED CONDENSATE ASSEMBLY HOSE AND ATTACH TO FIELD SUPPLIED CPVC TUBE. SECURE WITH SPRING CLIP AND FIELD SUPPLIED HOSE CLAMP.

IF THE FURNACE IS INSTALLED OVER A FINISHED CEILING, OVERFLOW FROM THE PRIMARY DRAIN VENT STACK MUST FLOW INTO AN AUXILIARY DRAIN PAN TO PREVENT DAMAGE TO THE FINISHED CEILING BELOW

Horizontal Applications

Upflow models in horizontal:

It is always recommended that the auxiliary drain pan be installed under a horizontally installed evaporator and/or 90% gas furnace. Connect the auxiliary drain pan to a separate drain line (no trap is needed in this line).

Connections must be made to an **OPEN/VENTED DRAIN**. Outdoor draining of the furnace and coil condensate is permissible if allowed by local codes. Caution should be taken to prevent drains from freezing or causing slippery conditions that could lead to personal injury. Excessive

Condensate Drain Instructions


draining of condensate may cause saturated ground conditions that may result in damage to plants.

Notes:

- Use 1/2-inch or larger PVC or CPVC pipe and fittings as required for drain connections (fittings, pipe and solvent cement not provided).
- A corrosion resistant condensate pump must be used if a pump is required for a specific drain system.

Important: The condensate drain should be installed with provisions to prevent winter freeze-up of the condensate drain line. Frozen condensate will block drains, resulting in furnace shutdown. If the drain line cannot be installed in a conditioned space, then UL listed heat tape should be applied as required to prevent freezing (per manufacturer's instructions). The heat tape should be rated at 5 or 6 watts per foot at 120 volts. Self-regulating (preferred) or thermostatically controlled heat tape is required.

Figure 99. Horizontal applications

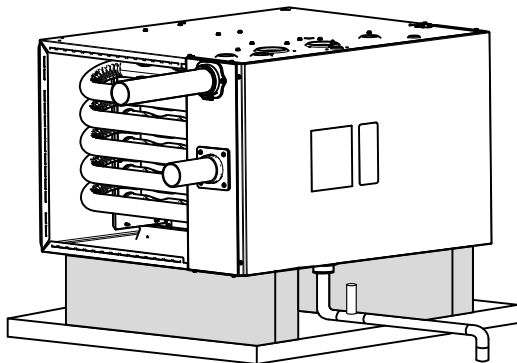

FURNACE MUST BE SUPPORTED AT ALL FOUR CORNERS. BAYHANG - OPTIONAL HORIZONTAL HANGING BRACKET KIT

TO APPROVED OPEN / VENTED DRAIN

Note: The overflow stand pipe termination must be even with or slightly below the bottom of the condensate trap.
 Note: Water from the overflow pipe must drain into the emergency drain pan.

To prevent AC condensate from backing up into the furnaces, follow these instructions for condensate drainage.

Notes:

1. The overflow stand pipe termination must be even with or slightly below than the bottom of the condensate trap.
2. Water from the overflow pipe must drain into the emergency drain pan.
3. It is recommended to use the secondary drain. The secondary drain pipe must terminate over the emergency drain pan.
4. Emergency drain pan.

Figure 100. Horizontal right


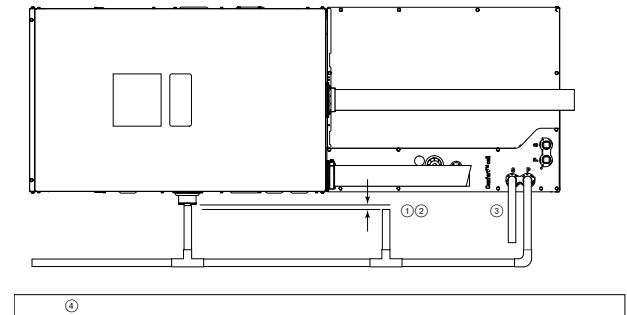


Figure 101. Horizontal left

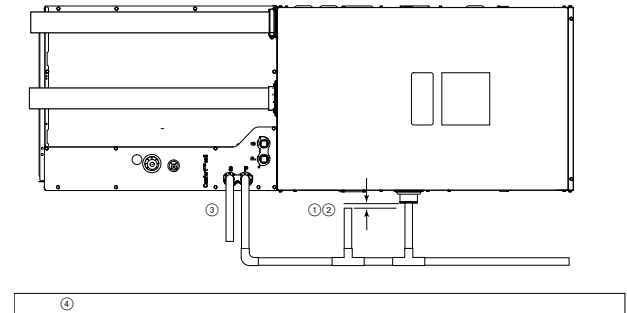

General Start-up and Adjustment

The following sections give instructions for the general start-up and adjustment of the gas furnaces.

Preliminary Inspections

With gas and electrical power **OFF**, ensure:

1. Duct connections are properly sealed.
2. Filters are in place.
3. Venting is properly assembled.
4. Blower vestibule panel is in place and all screws in place.

Turn knob on main gas valve within the unit to the **OFF** position. Turn the external gas valve to **ON**. Purge the air from the gas lines. After purging, check all gas connections for leaks with a soapy solution.

— **DO NOT CHECK WITH AN OPEN FLAME.** Allow 5 minutes for any gas that might have escaped to dissipate. Turn the gas valve in the unit to the **ON** position.

Propane Gas being heavier than air may require forced ventilation. Turn the toggle switch on the Gas Valve in the unit to the “ON” position.

Lighting Instructions

Lighting instructions appear on each unit. Each installation must be checked out at the time of initial start up to ensure proper operation of all components. Check out should include putting the unit through one complete cycle as outlined below.

Turn on the main electrical supply and set the comfort control above the indicated temperature. The igniter will automatically heat, then the gas valve is energized to permit the flow of gas to the burners. After ignition and flame is established, the flame control module monitors the flame and supplies power to the gas valve until the comfort control is satisfied.

⚠ WARNING

Risk of Fire or Explosion!

**Failure to follow instruction below could result in death or serious injury or property damage.
Do NOT attempt to manually light the furnace.**

To shut off

For complete shutdown: Turn the toggle or control switch located on the main gas valve inside the unit to the **OFF** position and the external main gas shutoff valve to the **OFF** position. Disconnect the electrical supply to the unit.

Whenever your house is to be vacant, arrange to have someone inspect your house for proper temperature. This is very important during freezing weather. If for any reason your furnace should fail to operate damage could result, such as frozen water pipes.

⚠ CAUTION

Freeze Damage!

**Failure to follow instructions below could result in minor to moderate injury or property damage.
During complete furnace shutdown during cold weather, take measures to prevent water pipes and receptacles from freezing.**

Control and Safety Switch Adjustment

Limit Switch Check Out

The limit switch is a safety device designed to close the gas valve should the furnace become overheated. Since proper operation of this switch is important to the safety of the unit, **it must be checked out on initial start up by the installer.**

To check for proper operation of the limit switches, set the thermostat to a temperature higher than the indicated temperature to bring on the gas valve. Restrict the airflow by blocking the return air to the blower. When the furnace reaches the maximum outlet temperature as shown on the rating plate, the burners must shut off. If they do not shut off after a reasonable time and overheating is evident, a faulty limit switch is probable and the limit switch must be replaced. After checking the operation of the limit control, be sure to remove the paper or cardboard from the return air inlet, or reconnect the blower.

Furnace Combustion Air Exhaust Options

Important:

- All plugs must be in place for sealed combustion.
- If the locations are changed from the defaults, the default holes not being used must be plugged.
- The combustion air exhaust must be vented to the outdoors.

Notes:

- For electric and natural gas connections, default is left side. For the combustion air inlet and exhaust, default is top of the furnace.
- If the electrical and natural gas connections are moved to the right side, remove the plugs and move them to the left side. The grommets will move from the left side to the right side.
- The grommets are different for the natural gas and condensate connections.
- The combustion air inlet does not have to be on the same side as the combustion air exhaust.
- Choose any combination such that it must have one inlet and one outlet.

Figure 102. Upflow application

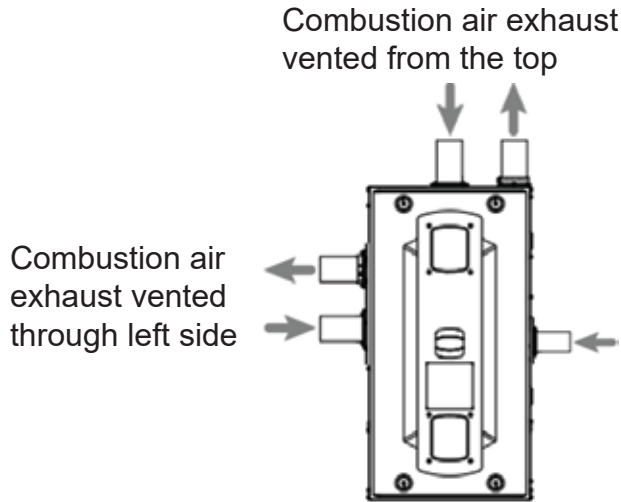


Figure 103. Horizontal left application

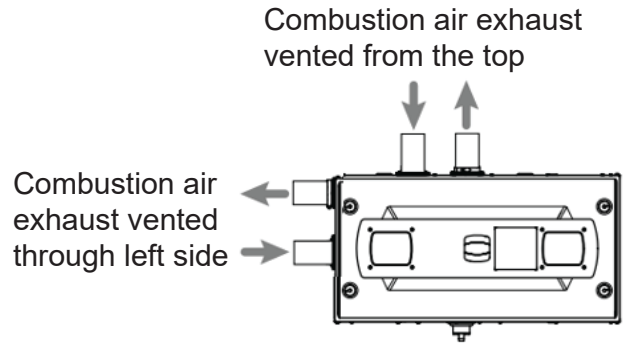


Figure 104. Horizontal right application


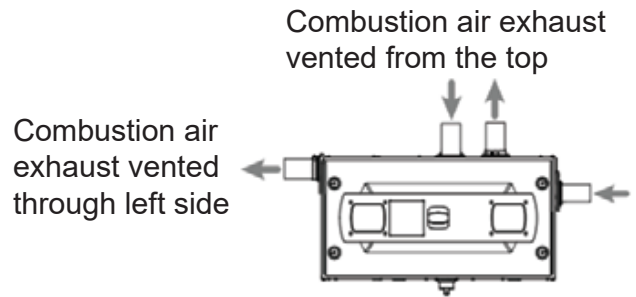


Figure 105. Downflow application



Upflow Furnace in Upflow Position - Top Vented Combustion Air

Figure 106. Conversion instructions

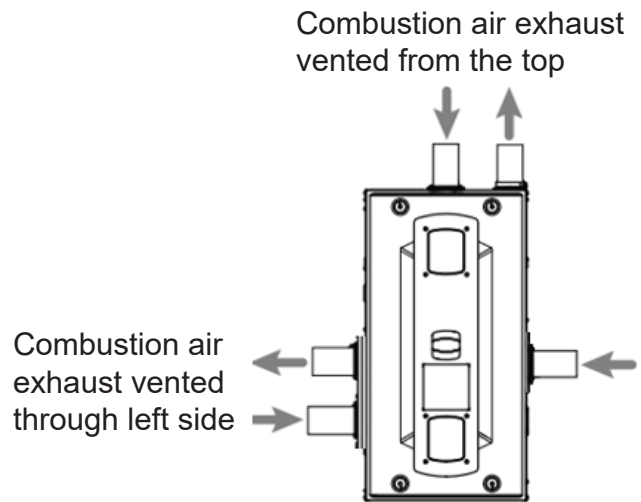


No changes need to be made to the inducer when installing the upflow furnace with the combustion air vented through the top.

Important: Trim the condensate pressure switch tubing to length to ensure there is no sag or trap created.

1. Attach the vent outlet gasket to the vent outlet.
2. Install vent outlet to top of cabinet using 2 screws supplied in the doc pack.
3. Install vent inlet gasket and vent inlet using 4 screws supplied in the doc pack.

Figure 107. Vent inlet/outlet

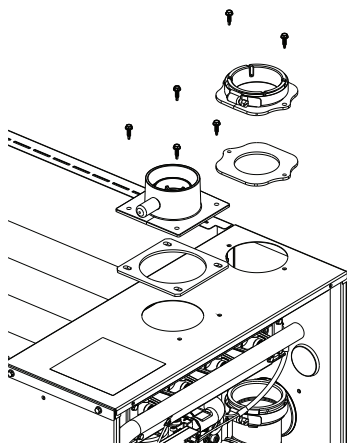


4. Slide PVC pipe through vent outlet adaptor and insert into inducer outlet.
5. Twist to insure PVC is fully inserted.
6. Tighten the clamp on the end of the 45 degree elbow.
7. Tighten the clamp on the outlet vent adapter.

Note: The vent outlet adapter is used for strain relief against the weight of the venting. The clamp should be tightened after the internal connection is made.

8. Install the combustion air inlet PVC pipe.

Note: If required, transition to larger venting within 2 ft. of the cabinet. CPL01544 – 2-in. x 3-in. offset coupling may be used and is factory supplied with 120 KBTUH furnaces. Canadian applications may use BAYREDUCE to meet ULC-S636 requirements.

Figure 108. Upflow furnace in upflow position

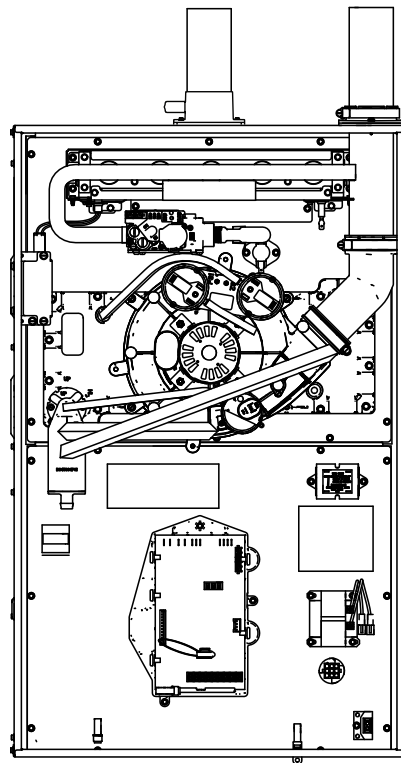

Upflow Furnace in Upflow Position - Left Side Vented Combustion Air

Changes need to be made to the inducer orientation when installing the upflow furnace with the combustion air vented through the side. Additional changes are needed for hose routing and PS2 rotation.

The below figure shows the furnace as it is sent from the factory.

Use the following steps to modify the furnace for upflow with side venting of combustion air.

Important: Right side vent outlet is not allowed because condensate will not drain.

Before proceeding, lay unit on its back to make conversion easier.

1. Disconnect all drain tubes from condensate trap.


Note: When removing condensate hoses from the condensate trap, hold the trap with your hand to prevent the trap from breaking. Removing the trap before the hoses is also an option.

2. Remove drain tubing from bottom of inducer housing.

Furnace Combustion Air Exhaust Options


3. Remove rain gutter tubing from inducer outlet.
4. Remove tubing from condensate pressure switch.
5. Remove tubing from PS2 to cold header.

Figure 109. Removing tubing

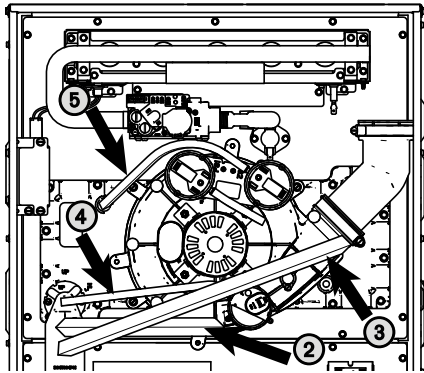


6. Remove two 3-inch plugs on left side of cabinet. To be used for combustion air and vent exhaust.
7. Install the two 3-inch plugs into the two 3-inch default openings on the top of the cabinet.

Figure 110. Plug installation

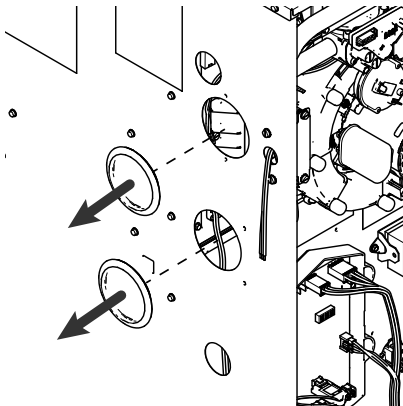


8. Loosen the clamp holding the 45 degrees elbow. Remove the elbow and discard.

Figure 111. Elbow removal

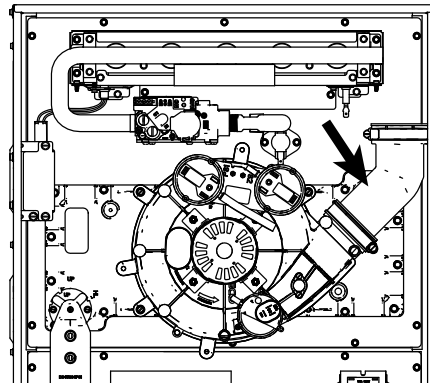

9. Remove the three inducer mounting screws.
10. Rotate inducer counter-clockwise so that the inducer outlet aligns with the exhaust vent outlet.
11. Insert and re-tighten screws to 30 in.-lbs. Do not overtighten.


Figure 112. Tightening screws

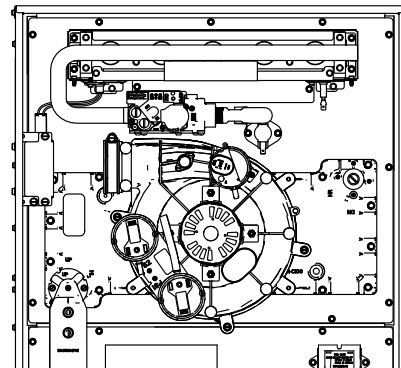

12. Remove the pressure switch bracket assembly.
13. Remove the screw that holds PS2, rotate 90 degrees clockwise, and reattach.
14. Reattach the pressure switch bracket assembly.


Note: Illustration shows the PS2 pressure switch in the final rotated position.

Figure 113. Tightening screws

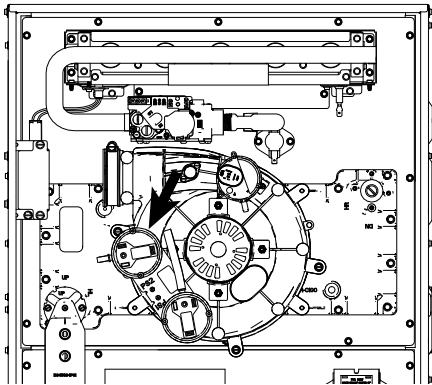

15. Attach the vent outlet gasket to the vent outlet.
16. Install vent outlet to top of cabinet using 2 screws supplied in the dock pack.
17. Install vent inlet gasket and vent inlet using 4 screws supplied in the dock pack.
18. Install the grommet for the condensate drain tube. The drain may be located on either side of the cabinet.

Figure 114. Grommet installation

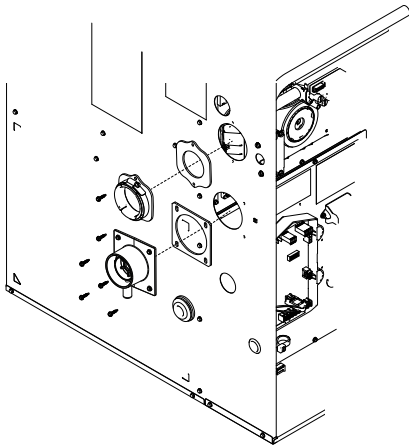


19. Slide PVC through vent outlet adaptor and insert into inducer outlet.
20. Twist to insure PVC is fully inserted.
21. Tighten the two clamps.
22. Install the combustion air inlet pipe.

Notes:


- The vent outlet adapter is used for strain relief against the weight of the venting. The clamp should be tightened after the internal connection is made.
- If required, transition to larger venting within 2ft of the cabinet. An 2-in. x 3-in. offset coupling is required if the transition is made in a horizontal plane. Use coupling CPL01544 (Canadian applications may use BAYREDUCE to meet ULC-S636 requirements.) See Horizontal Venting section for proper orientation of 2-in. x 3-in. offset coupling.

Figure 115. Condensate tubing

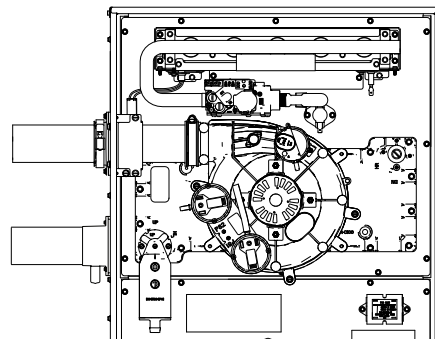

23. Connect PS2 tubing to switch and sensing location.
- Important:** Trim the condensate pressure switch tubing to length to ensure there is no sag or trap created
24. Remove port cap at bottom of inducer and connect inducer condensate tubing. Connect other end of inducer condensate tubing to top port on the condensate trap. Cut tubing to length, if necessary.
 25. Install previously removed port cap onto bottom port of the inducer. (As viewed in upflow)
 26. Connect condensate pressure switch tubing to pressure port on the condensate trap.
- Important:** Trim the condensate pressure switch tubing to length to ensure there is no sag or trap created.
27. Remove port plug from rain gutter and install in new position on opposite side of the rain gutter.
 28. Connect rain gutter condensate hose to the rain gutter and the lower port of the condensate trap. Cut to length, if necessary.

Figure 116. Condensate hose

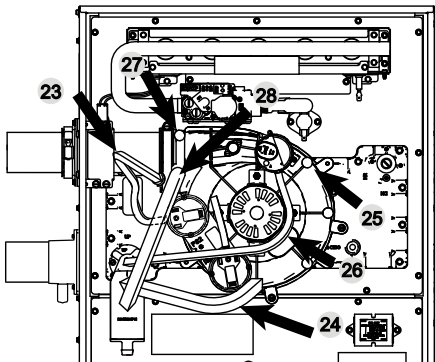

Upflow Furnace in Horizontal Left Position - Top Vented Combustion Air

Changes need to be made to the inducer orientation when installing the upflow furnace in the horizontal left position with the combustion air vented through the side. Additional changes are needed for hose routing, condensate trap orientation, and inducer hoses.

The figure to the top right shows the furnace as it is sent from the factory.

Use the following steps to modify the furnace for horizontal left with side venting of combustion air.

Before proceeding, lay unit on its back to make the conversion easier.


1. Remove all drain hoses from condensate trap.

Note: When removing condensate hoses from the condensate trap, hold the trap with your hand to prevent the trap from breaking. Removing the trap before the hoses is also an option.

2. Remove tubing from PS2 to cold header.
3. Remove drain tubing from bottom of inducer housing.
4. Remove rain gutter tubing from inducer outlet.
5. Remove tubing from condensate pressure switch.
6. Remove the screws that hold the condensate trap bracket. The condensate trap should not be removed from the condensate trap bracket. Remove assembly and retain for later installation.


Note: There is a plastic adapter with O-rings located inside the cold header that is held in place by the condensate trap bracket. Do not lose this adapter. This adapter needs to be in place when the condensate trap bracket is reattached.

Figure 117. Removing tubing

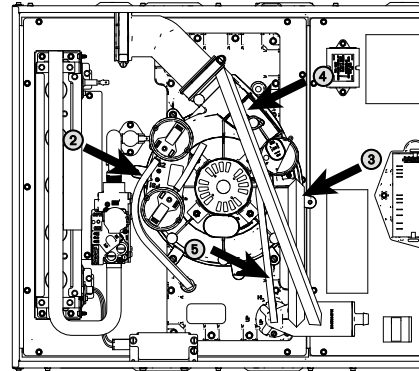

7. Loosen the clamp holding the 45 degree elbow. Remove the elbow and discard.

Figure 118. Removing tubing

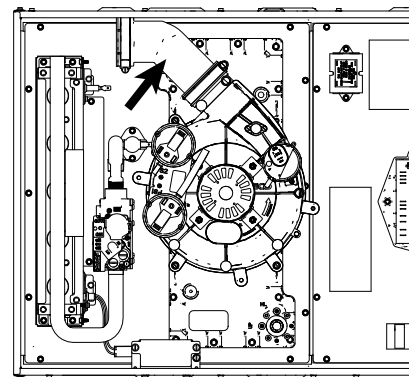

8. Remove three inducer screws.
9. Rotate the inducer so that the outlet is pointing vertically.
10. Use the three screws to reattach the inducer to the cold header to 30 in.-lbs. Do not overtighten.

Figure 119. Tightening screws



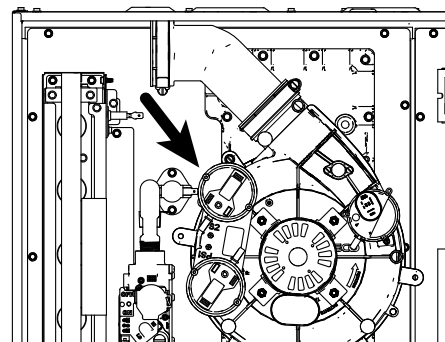


Figure 120. Inducer screw removal

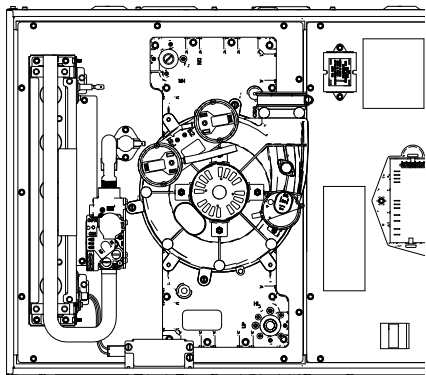


11. Remove 3-inch plug on left side of unit. To be used for condensate trap.
12. Install condensate trap grommet.
13. Remove two 3-inch plugs on right side of cabinet. To be used for combustion air exhaust and inlet.
14. Reuse the two 3-inch plugs to seal the two 3-inch default openings on the top of the furnace.

Figure 121. Sealing default openings

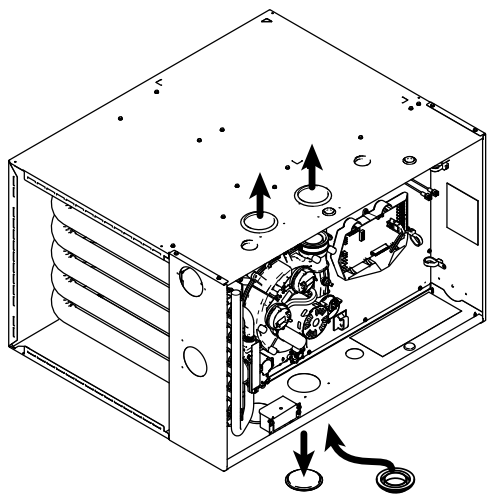

15. Attach the vent outlet gasket to the vent outlet.
16. Install vent outlet to top of cabinet using 2 screws supplied in the dock pack.
17. Install vent inlet gasket and vent inlet using 4 screws supplied in the dock pack.

Figure 122. Installing screws

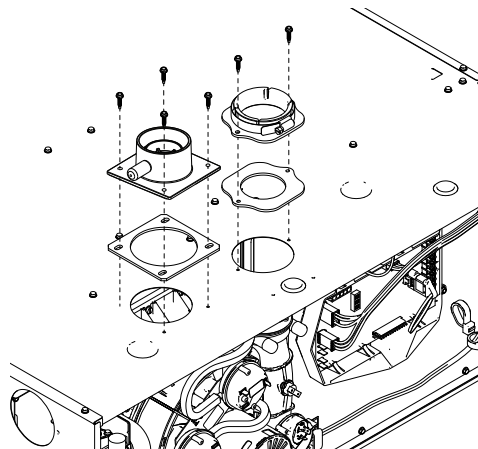


18. Slide PVC through vent outlet adaptor and insert into inducer outlet.
19. Twist to insure PVC is fully inserted.
20. Tighten the two clamps.
21. Install the combustion air inlet PVC pipe.

Notes:

- The vent outlet adapter is used for strain relief against the weight of the venting. The clamp should be tightened after the internal connection is made.
- If required, transition to larger venting within 2 ft. of the cabinet. CPL01544 – 2-in.x 3-in. offset coupling may be used and is factory supplied with 120 MBTUH furnaces. Canadian applications may use BAYREDUCE to meet ULC-S636 requirements.

Figure 123. PVC installation

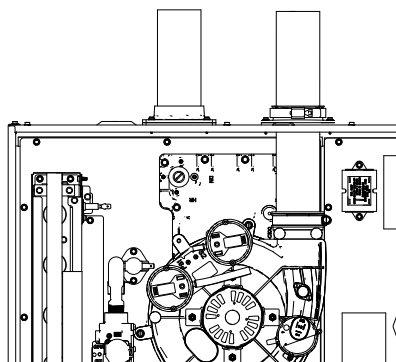

Condensate Trap Installation

22. Reinstall the condensate adapter if it was earlier removed or ensure adapter is still in place.

Important: The condensate adapter must be present for proper condensate drain operation.

Furnace Combustion Air Exhaust Options

23. Install condensate trap into new location by fitting into grommet and aligning the hole on the condensate trap with the hole labeled "HL".

Important: When installing a 21.0-inch wide S-Series furnace, the condenser trap grommet must be rotated so that the notch in the grommet faces the outer edge of the furnace cabinet as shown in the illustrations below and to the top left in next page. This allows the rain gutter tubing to fully seat onto the lower condensate port trap.

24. Hand tighten screws.

Figure 124. Tightening screws


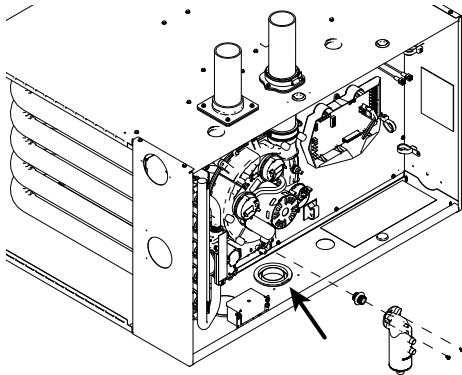


Figure 125. Condensate tubing

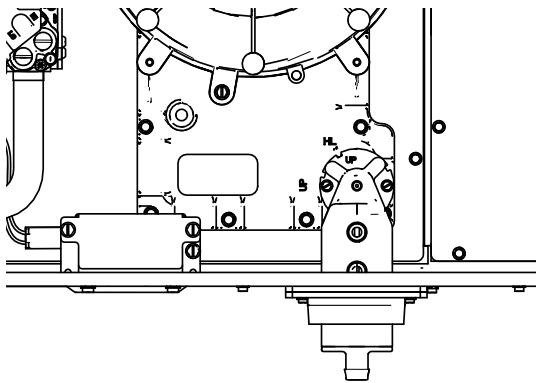

25. Connect PS2 tubing to switch and new sensing location.

Important: Trim the condensate pressure switch tubing to length to ensure there is no sag or trap created.

26. Remove port cap on left of inducer and connect inducer condensate tubing. Connect other end of inducer condensate tubing to top port on the condensate trap. Cut tubing to length, if necessary.


27. Install previously removed port cap onto bottom port of the inducer.

28. Connect condensate pressure switch tubing to pressure port on the condensate trap.

Important: Trim the condensate pressure switch tubing to length to ensure there is no sag or trap created

29. Connect rain gutter condensate hose to the rain gutter and the lower port of the condensate trap.

Figure 126. Condensate tubing

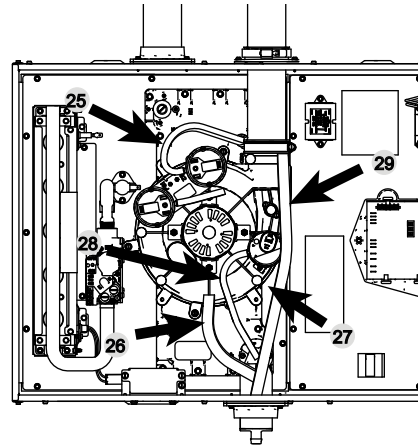

Upflow Furnace in Horizontal Left Position - Side Vented Combustion Air

Changes do not need to be made to the inducer orientation when installing the upflow furnace in the horizontal left position with the combustion air vented through the top. Changes are needed for hose routing, condensate trap orientation, and inducer port caps.

The below figure shows the furnace as it is sent from the factory.

Use the following steps to modify the furnace for horizontal left with top venting of combustion air.

Before proceeding, lay unit on its back to make the conversion easier.

1. Remove all drain hoses from condensate trap.

Note: When removing condensate hoses from the condensate trap, hold the trap with your hand to prevent the trap from breaking. Removing the trap before the hoses is also an option.

2. Remove tubing from PS2 to cold header.

3. Remove drain tubing from bottom of inducer housing.


4. Remove rain gutter tubing from inducer outlet.

5. Remove tubing from condensate pressure switch.

6. Remove the screws that hold the condensate trap bracket. The condensate trap should not be removed from the condensate trap bracket. Remove assembly and retain for later installation.


Note: There is a plastic adapter with O-rings located inside the cold header that is held in place by the condensate trap bracket. Do not lose this adapter. This adapter needs to be in place when the condensate trap bracket is reattached.

Figure 127. Removing screws

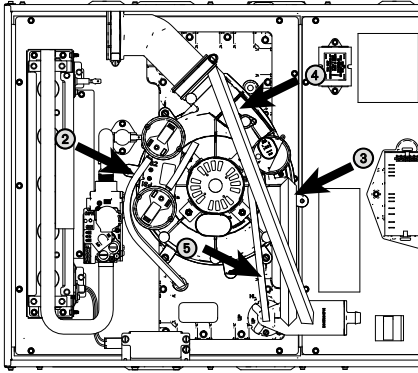


7. Remove plug from 3-inch hole.
8. Install condensate trap grommet.

Figure 128. Condensate trap grommet

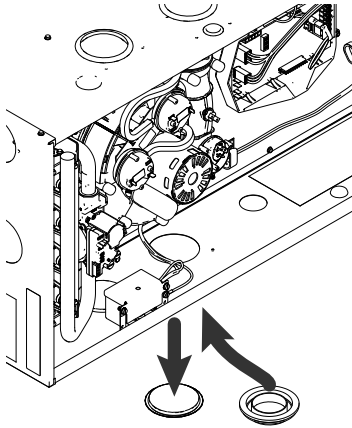


9. Remove the pressure switch bracket assembly.
10. Remove the screw that holds PS2, rotate 90 degrees clockwise, and reattach.
11. Reattach the pressure switch bracket assembly.

Figure 129. Removing screws

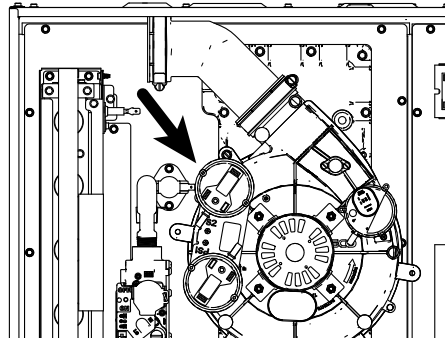

12. Attach the vent outlet gasket to the vent outlet.
13. Install vent outlet to top of cabinet using 2 screws supplied in the doc pack.
14. Install vent inlet gasket and vent inlet using 4 screws supplied in the doc pack.

Figure 130. Vent inlet/outlet

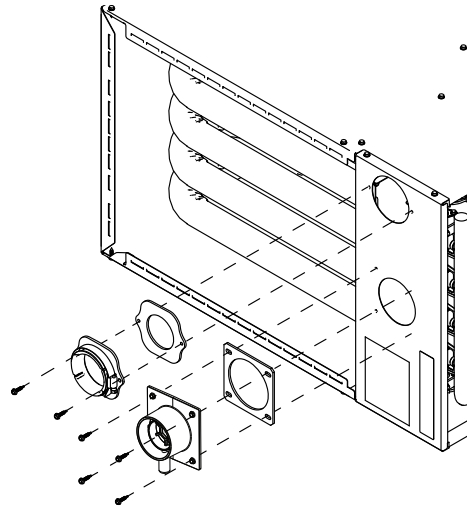


15. Slide PVC through vent outlet adaptor and insert into inducer outlet.
16. Twist to insure PVC is fully inserted.
17. Tighten the two clamps.
18. Install the combustion air inlet PVC pipe.

Notes:

- The vent outlet adapter is used for strain relief against the weight of the venting. The clamp should be tightened after the internal connection is made.
- If required, transition to larger venting within 2 ft. of the cabinet. An 2-in. x 3-in. offset coupling is required if the transition is made in a horizontal plane. Use coupling CPL01544 (Canadian applications may use BAYREDUCE to meet ULC-S636 requirements.) See Horizontal Venting section for proper orientation of 2-in. x 3-in. offset coupling.

Figure 131. Condensate tubing

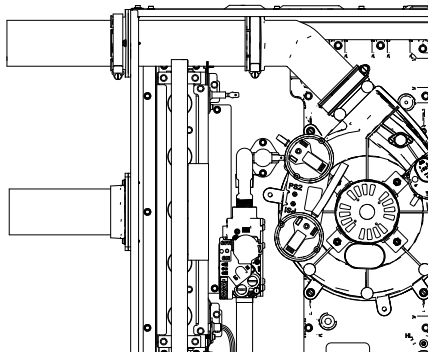

Condensate Trap Installation

19. Reinstall the condensate adapter if it was earlier removed or ensure adapter is still in place.

Important: The condensate adapter must be present for proper condensate drain operation.

20. Install condensate trap into new location by fitting into grommet and aligning the hole on the condensate trap with the hole labeled "HL".

When installing a 21.0-inch wide S-Series furnace, the condenser trap grommet must be rotated so that the notch in the grommet faces the outer edge of the furnace cabinet as shown in the illustrations below and to the top right. This allows the rain gutter tubing to fully seat onto the lower condensate port trap.

21. Hand tighten screws.

Figure 132. Tightening screws


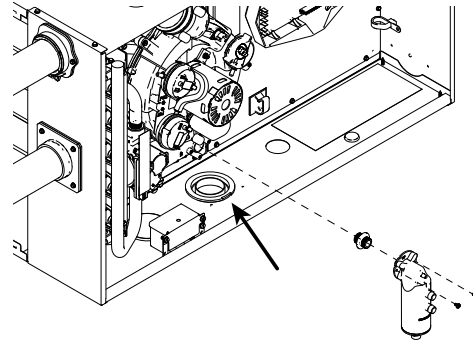


Figure 133. Condensate tubing

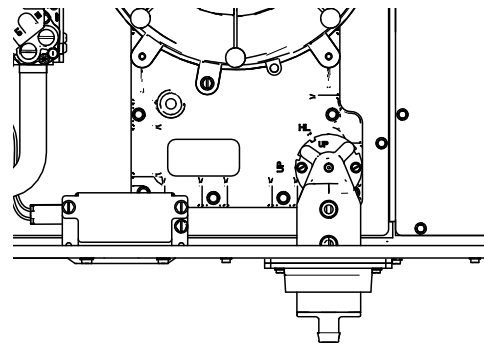

22. Connect PS2 tubing to switch and new sensing location.

Important: Cut to length but insure there is a rise in the tubing to avoid condensed flue gases from entering pressure switch.

23. Remove port cap on left side of inducer and connect inducer condensate tubing. Connect other end of inducer condensate tubing to top port on the condensate trap. Cut tubing to length, if necessary.

24. Install previously removed port cap onto bottom port of the inducer. (As viewed in upflow)


25. Connect condensate pressure switch tubing to pressure port on the condensate trap.

Important: Trim the condensate pressure switch tubing to length to ensure there is no sag or trap created.

26. Remove port plug from rain gutter and install in new position on opposite side of the rain gutter.

27. Connect rain gutter condensate hose to the rain gutter and the lower port of the condensate trap. Route rain gutter condensate hose to the right of the inducer motor.

Figure 134. Condensate tubing

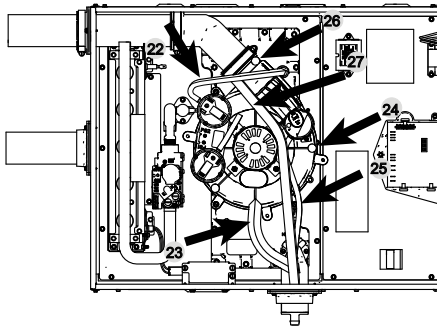

Upflow Furnace in Horizontal Right Position - Top Vented Combustion Air

Changes need to be made to the inducer orientation when installing the upflow furnace in the horizontal right position with the combustion air vented through the left side. Additional changes are needed for hose routing, condensate trap location, and inducer port caps, and the condensate plug.

The below figure shows the furnace as it is sent from the factory.

Use the following steps to modify the furnace for horizontal right with left side venting of combustion air.

Before proceeding, lay unit on its back to make the conversion easier.


1. Remove all drain hoses from condensate trap.

Note: When removing condensate hoses from the condensate trap, hold the trap with your hand to prevent the trap from breaking. Removing the trap before the hoses is also an option.

2. Remove tubing from PS2 to cold header.
3. Remove drain tubing from bottom of inducer housing.
4. Remove rain gutter tubing from inducer outlet.
5. Remove tubing from condensate pressure switch.
6. Remove the screws that hold the condensate trap bracket. The condensate trap should not be removed from the condensate trap bracket. Remove assembly and retain for later installation.
7. Remove the adapter located inside the condensate trap connection on the cold header and retain for later installation.


Note: The plastic adapter with O-rings located inside the cold header that is held in place by the condensate trap bracket. Do not lose this adapter. This adapter needs to be in place when the condensate trap bracket is reattached.

Figure 135. Removing tubing

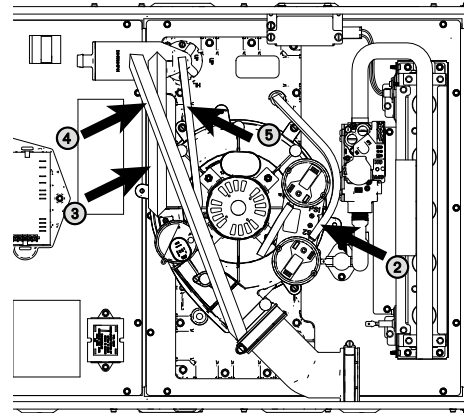


8. Remove 3-inch plug on right side of unit. To be used for condensate trap.
9. Install condensate trap grommet.
10. Remove two 3-inch plugs on left side of cabinet.
11. Reuse the two 3-inch plugs to seal the two 3-inch default openings on the top of the cabinet.

Figure 136. Sealing default openings

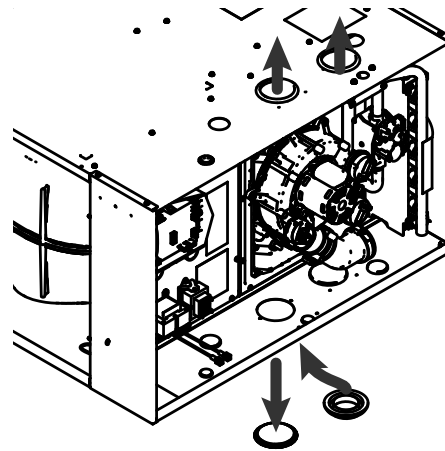


12. Attach the vent outlet gasket to the vent outlet.
13. Install vent outlet to top of cabinet using 2 screws supplied in the doc pack.
14. Install vent inlet gasket and vent inlet using 4 screws supplied in the doc pack.

Figure 137. Vent inlet/outlet

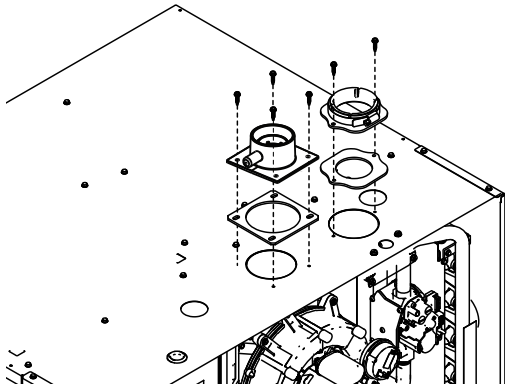

15. Remove three inducer screws.
16. Rotate the inducer so that the outlet is pointing vertically.
17. Use the three inducer screws to reattach the inducer to the cold header. Torque to 30 in.-lbs. Do not overtighten.
18. Remove condensate drain plug from top right location on cold header.
19. Place condensate drain plug onto the cold header outlet located on the bottom left of the cold header.

Figure 138. Tightening screws

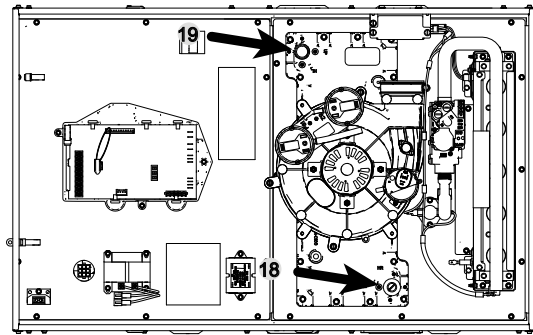


20. Slide PVC through vent outlet adaptor and insert into inducer outlet.
21. Twist to insure PVC is fully inserted.
22. Tighten the two clamps.
23. Install the combustion air inlet PVC pipe.

Notes:

- The vent outlet adaptor is used for strain relief against the weight of the venting. The clamp should be tightened after the internal connection is made.
- If required, transition to larger venting within 2 ft. of the cabinet. CPL01544 – 2-in. x 3-in. offset coupling may be used and is factory supplied with 120 MBTUH furnaces. Canadian applications may use BAYREDUCE to meet ULC-S636 requirements.

Figure 139. PVC installation

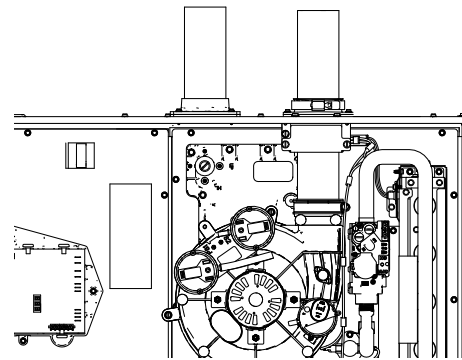

Condensate Trap Installation

24. Reinstall the condensate adapter if it was earlier removed or ensure adapter is still in place.

Important: The condensate adapter must be present for proper condensate drain operation.

25. Install condensate trap into new location by fitting into grommet and aligning the hole on the condensate trap with the hole labeled "HR".

Important: When installing a 21.0-inch wide S-Series furnace, the condenser trap grommet must be rotated so that the notch in the grommet faces the outer edge of the furnace cabinet as shown in the illustrations below and to the top right. This allows the rain gutter tubing to fully seat onto the lower condensate port trap.

26. Hand tighten screw.

Figure 140. Tightening screws


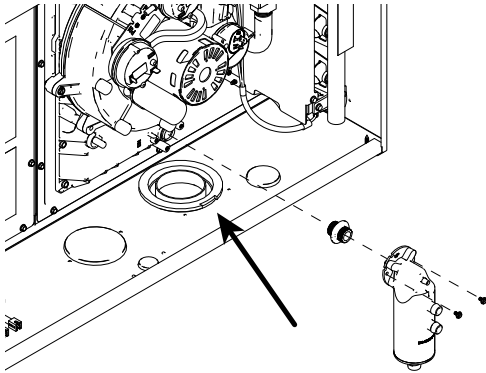


Figure 141. Condensate tubing

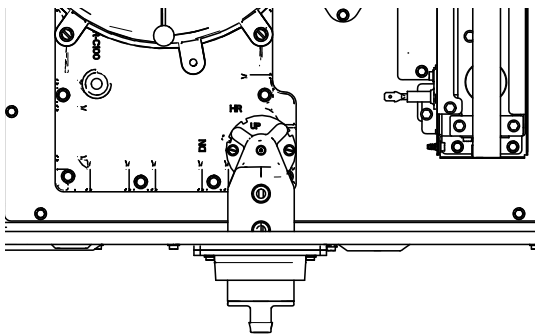

27. Connect PS2 tubing to switch and new sensing location.

Important: Trim the condensate pressure switch tubing to length to ensure there is no sag or trap created.

28. Remove port cap on the right side of the inducer and connect inducer condensate tubing. Connect other end of inducer condensate tubing to top port on the condensate trap. Cut tubing to length, if necessary.


29. Install previously removed port cap onto bottom port of the inducer.

30. Connect condensate pressure switch tubing to pressure port on the condensate trap.

Important: Cut to length to ensure there is no sag or trap created.

31. Connect rain gutter condensate hose to the rain gutter and the lower port of the condensate trap.

Figure 142. Connecting condensate hose

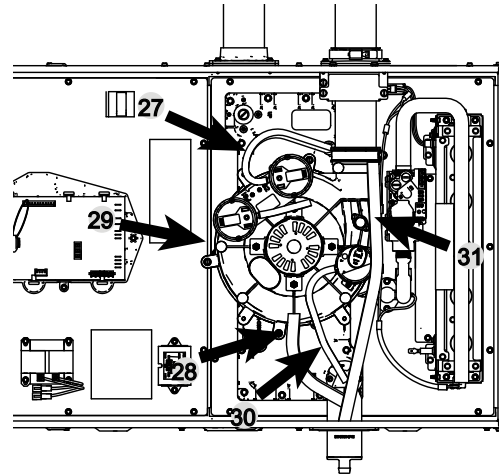

Upflow Furnace in Horizontal Right Position - Left Side Vented Combustion Air

Changes need to be made to the inducer orientation when installing the upflow furnace in the horizontal right position with the combustion air vented through the bottom. Additional changes are needed for hose routing, condensate trap location, and inducer port caps, and the condensate plug.

The below figure shows the furnace as it is sent from the factory.

Use the following steps to modify the furnace for horizontal right with bottom venting of combustion air.

Before proceeding, lay unit on its back to make the conversion easier.

1. Remove all drain hoses from condensate trap.

Note: When removing condensate hoses from the condensate trap, hold the trap with your hand to prevent the trap from breaking. Removing the trap before the hoses is also an option.

2. Remove tubing from PS2 pressure switch.

3. Remove drain tubing from bottom of inducer housing.

4. Remove rain gutter tubing from inducer outlet.

5. Remove tubing from condensate pressure switch.


6. Remove the screws that hold the condensate trap bracket. The condensate trap should not be removed from the condensate trap bracket. Remove assembly and retain for later installation.

7. Remove the condensate adapter located inside the condensate trap connection on the cold header and retain for later installation.

Furnace Combustion Air Exhaust Options


Note: The plastic condensate adapter with O-rings located inside the cold header that is held in place by the condensate trap bracket. Do not lose this adapter. The condensate adapter needs to be in place when the condensate trap bracket is reattached.

Figure 143. Removing tubing

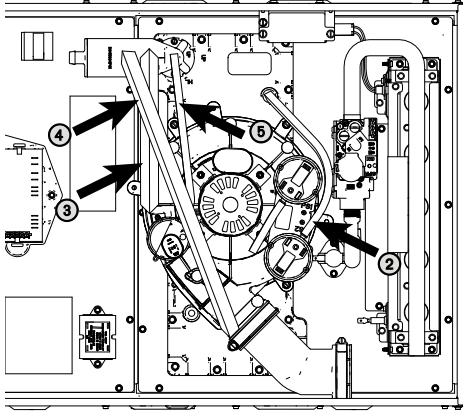

8. Remove 3-inch plug on right side of unit. To be used for condensate trap.
9. Install condensate trap grommet.
10. Remove 3-inch plugs on the left side of the cabinet. To be used for combustion air inlet.
11. Reuse the two 3-inch plugs to seal the two 3-inch default openings on the top of the furnace.


Figure 144. Sealing default openings

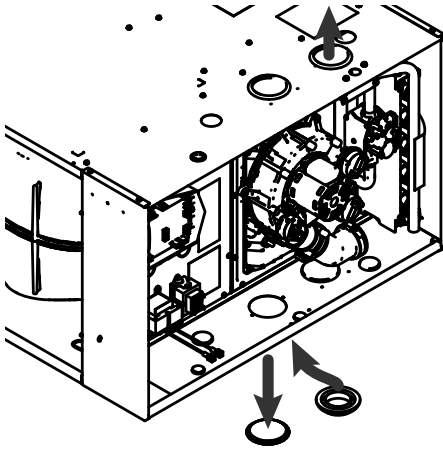

12. Remove three inducer screws.
13. While the inducer is loose, remove condensate drain plug from top right location on cold header.
14. Place condensate drain plug onto the cold header outlet located on the bottom left of the cold header.
15. Rotate the inducer 180 degrees so that the elbow is pointing towards the left.

16. Use the three inducer screws to reattach the inducer to the cold header. Torque to 30 in.-lbs. Do not overtighten.


Figure 145. Tightening screws

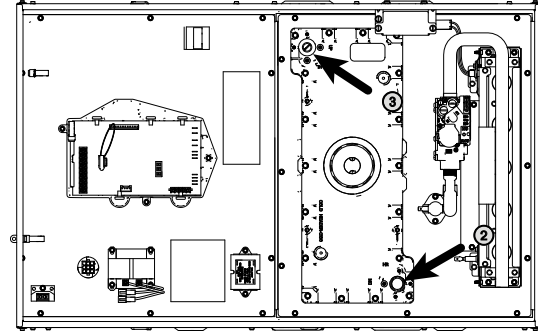

17. Remove the pressure switch bracket assembly.
18. Remove the screw that holds PS2, rotate 90 degrees clockwise, and reattach.
19. Reattach the pressure switch bracket assembly.


Note: The inducer is shown rotated into its final position in the illustration in next page.

Figure 146. Attaching pressure switch

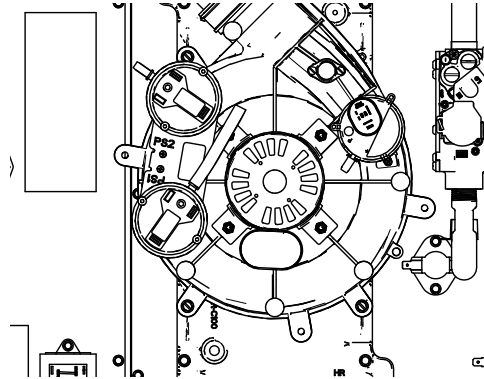

20. Cut 3-inch hole in bottom panel using large dimple as guide.

Figure 147. Cutting hole

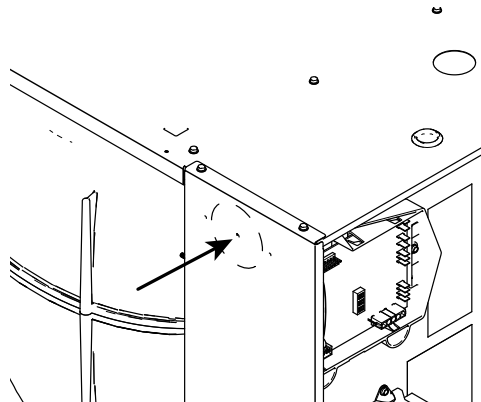


21. Attach the vent outlet gasket to the vent outlet.
22. Install vent outlet to top of cabinet using 2 screws supplied in the doc pack.
23. Install vent inlet gasket and vent inlet using 4 screws supplied in the doc pack.

Notes:


- *The vent outlet adapter is used for strain relief against the weight of the venting. The clamp should be tightened after the internal connection is made.*
- *If required, transition to larger venting within 2ft. of the cabinet. An 2-in. x 3-in. offset coupling is required if the transition is made in a horizontal plane. Use coupling CPL01544 (Canadian applications may use BAYREDUCE to meet ULC-S636 requirements.) See Horizontal Venting section for proper orientation of 2-in. x 3-in. offset coupling.*

Figure 148. Vent inlet/outlet

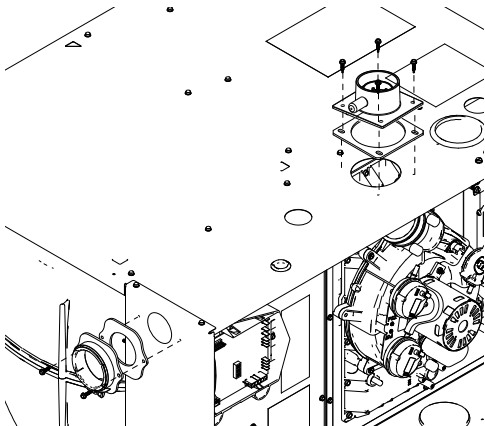

24. Slide PVC through vent outlet adaptor and insert into inducer outlet.
25. Twist to insure PVC is fully inserted.
26. Tighten the two clamps.
27. Install the combustion air inlet PVC pipe.

Figure 149. PVC installation

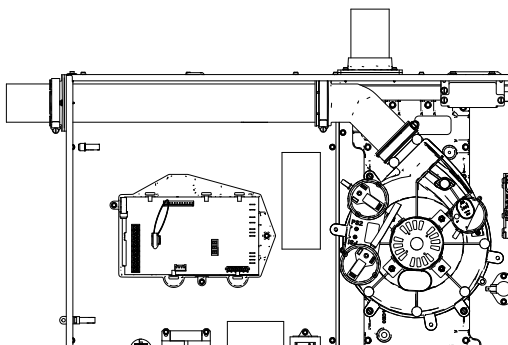

Condensate Trap Installation

28. Reinstall the condensate adapter if it was earlier removed or ensure adapter is still in place.

Important: *The condensate adapter must be present for proper condensate drain operation.*

29. Install condensate trap into new location by fitting into grommet and aligning the hole on the condensate trap with the hole labeled "HR".

Important: *When installing a 21.0-inch wide S-Series furnace, the condenser trap grommet must be rotated so that the notch in the grommet faces the outer edge of the furnace cabinet as shown in the illustrations below and to the top left in next page. This allows the rain gutter tubing to fully seat onto the lower condensate port trap.*

30. Hand tighten screw.

Figure 150. Grommet

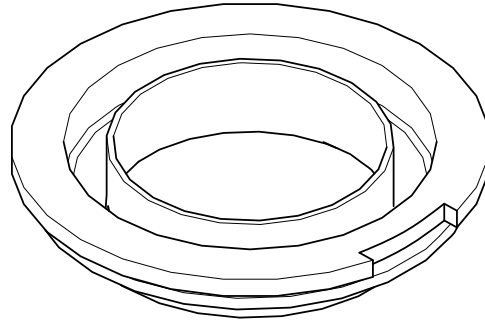


Figure 151. Tightening screws


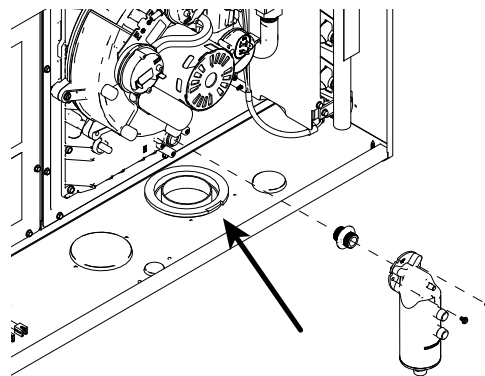


Figure 152. Condensate tubing

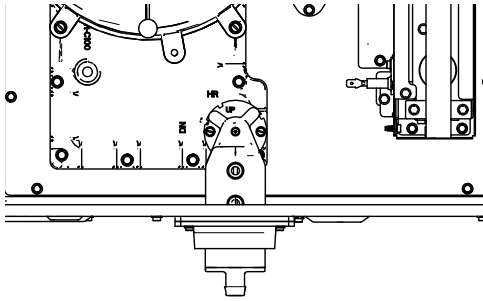

31. Connect PS2 tubing to switch and new sensing location. Use additional tubing in ship with bag, if necessary.


Important: Trim the condensate pressure switch tubing to length to ensure there is no sag or trap created.

32. Remove port cap on the right side of inducer and connect inducer condensate tubing. Connect other end of inducer condensate tubing to top port on the condensate trap. Cut tubing to length, if necessary.
33. Install previously removed port cap onto bottom port of the inducer. (As viewed in upflow)
34. Connect condensate pressure switch tubing to pressure port on the condensate trap.

Important: Cut to length to ensure there is no sag or trap created.

35. Remove port plug from rain gutter and install in new position on opposite side of the rain gutter.
36. Connect rain gutter condensate hose to the rain gutter and the lower port of the condensate trap. Route rain gutter condensate hose to the right of the inducer motor.

Figure 153. Condensate tubing connection

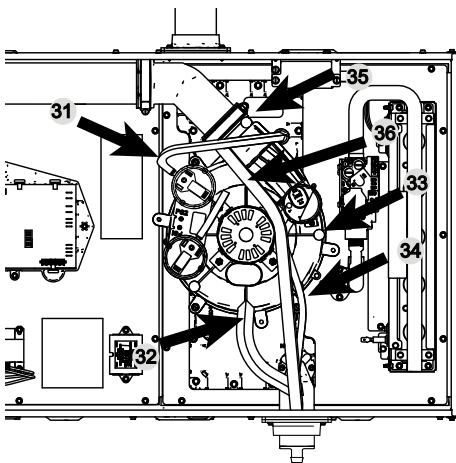


Downflow Furnace - Top Vented Combustion Air

No changes need to be made to the inducer when installing the downflow furnace with the combustion air vented through the top.

Important: Trim the condensate pressure switch tubing to length to ensure there is no sag or trap created.

1. Attach the vent outlet gasket to the vent outlet.
2. Install vent outlet to top of cabinet using 2 screws supplied in the doc pack.
3. Install vent inlet gasket and vent inlet using 4 screws supplied in the doc pack.

Figure 154. Vent inlet/outlet

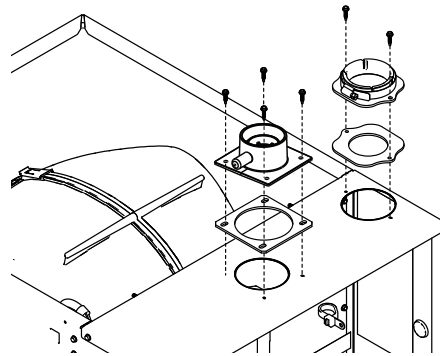


4. Slide PVC pipe through vent outlet adaptor and insert into inducer outlet.
5. Twist to insure PVC is fully inserted.
6. Tighten the two clamps.
7. Install the combustion air inlet PVC pipe.

Notes:

- The vent outlet adaptor is used for strain relief against the weight of the venting. The clamp should be tightened after the internal connection is made.
- If required, transition to larger venting within 2ft. of the cabinet. CPL01544 – 2-in. x 3-in. offset coupling may be used and is factory supplied with 120 MBTUH furnaces. Canadian applications may use BAYREDUCE to meet ULC-S636 requirements.

Figure 155. PVC installation

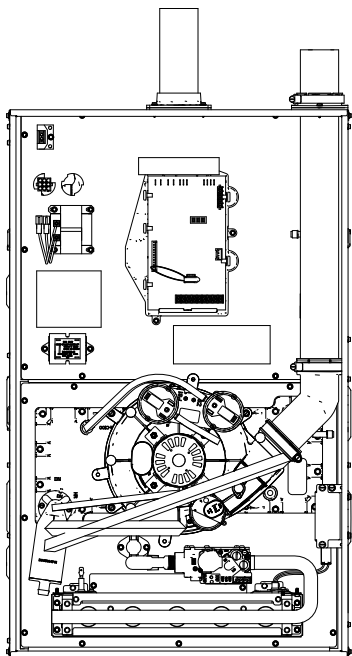

Downflow Furnace - Left Side Vented Combustion Air

Changes need to be made to the inducer orientation when installing the downflow furnace with the combustion air vented through the side. Additional changes are needed for hose routing and PS2 rotation.

The figure to the top right shows the furnace as it is sent from the factory.

Use the following steps to modify the furnace for downflow with side venting of combustion air.

Important: Right side vent outlet is not allowed because condensate will not drain.


Before proceeding, lay unit on its back to make conversion easier.

1. Disconnect all drain tubes from condensate trap.

Note: When removing condensate hoses from the condensate trap, hold the trap with your hand to prevent the trap from breaking.


2. Remove drain tubing from bottom of inducer housing.
3. Remove rain gutter tubing from inducer outlet.
4. Remove tubing from condensate pressure switch.
5. Remove tubing from PS2 to cold header.

Figure 156. Removing tubing

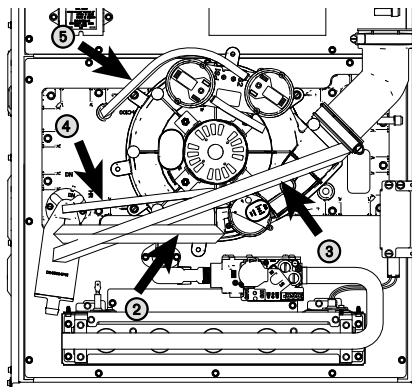


6. Remove two 3-inch plugs on left side of cabinet. To be used for combustion air exhaust and inlet.
7. Reuse the two 3-inch plugs to seal the two 3-inch default openings on the top of the cabinet.

Figure 157. Plug opening

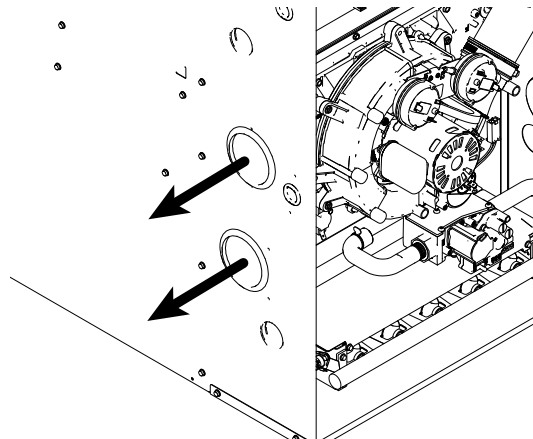

8. Loosen the clamp holding the 45 degree elbow. Remove the elbow and discard.

Figure 158. Removing elbow

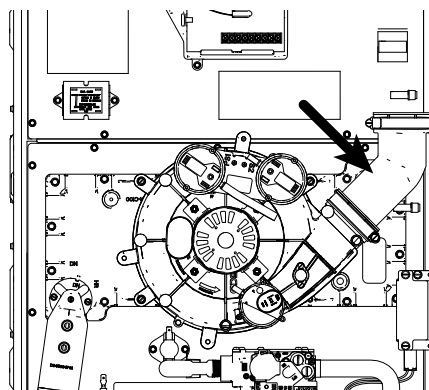

9. Remove the three inducer mounting screws.

Furnace Combustion Air Exhaust Options

10. Rotate inducer counterclockwise so that the inducer outlet aligns with the exhaust vent outlet.
11. Reinsert and tighten screws to 30 in.-lbs. Do not overtighten.

Figure 159. Tightening screws


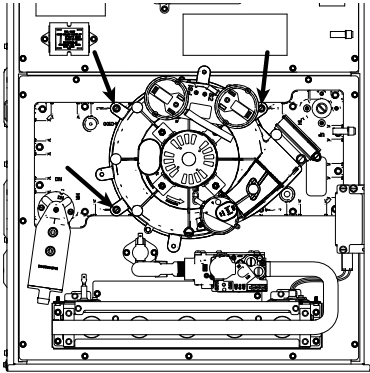



Figure 160. Tightening screws

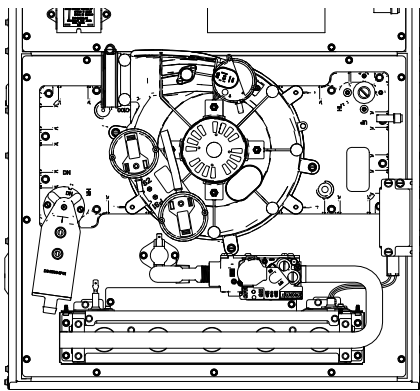

12. Remove the pressure switch bracket assembly.
13. Remove the screw that holds PS2, rotate 90 degrees counterclockwise, and reattach.
14. Reattach the pressure switch bracket assembly.


Note: The illustration shows PS2 in its final position after being rotated.

Figure 161. Reattaching pressure switch bracket

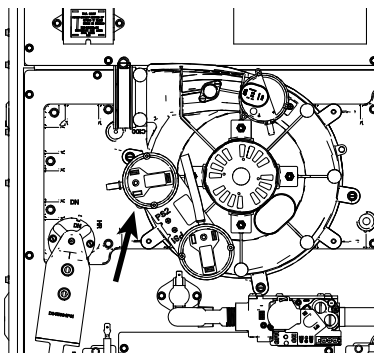

15. Attach the vent outlet gasket to the vent outlet.
16. Install vent outlet to cabinet using 2 screws supplied in the doc pack.
17. Install vent inlet gasket and vent inlet using 4 screws supplied in the doc pack.
18. Install the grommet for the condensate drain tube. The drain may be located on either side of the cabinet.

Figure 162. Grommet installation

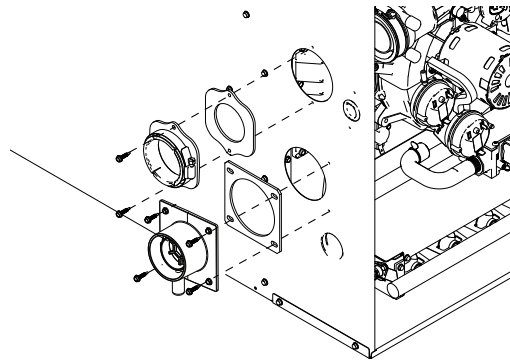


19. Slide PVC through vent outlet adaptor and insert into inducer outlet.
20. Twist to insure PVC is fully inserted.
21. Tighten the two clamps.
22. Install the combustion air inlet PVC pipe.

Notes:

- The vent outlet adaptor is used for strain relief against the weight of the venting. The clamp should be tightened after the internal connection is made.
- If required, transition to larger venting within 2ft of the cabinet. An 2-in. x 3-in. offset coupling is required if the transition is made in a horizontal plane. Use coupling CPL01544 (Canadian applications may use BAYREDUCE to meet ULC-S636 requirements.) See Horizontal Venting section for proper orientation of 2-in. x 3-in. offset coupling.

Figure 163. PVC installation

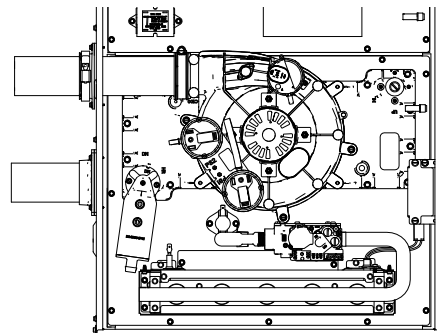

23. Connect PS2 tubing to switch and sensing location.

Important: Trim the condensate pressure switch tubing to length to ensure there is no sag or trap created.

24. Remove port cap at bottom of inducer and connect inducer condensate tubing. Connect other end of inducer condensate tubing to top port on the condensate trap. Cut tubing to length, if necessary.

25. Install previously removed port cap onto bottom port of the inducer.


26. Connect condensate pressure switch tubing to pressure port on the condensate trap.

Important: Cut to length to ensure there is no sag or trap created.

27. Remove port plug from rain gutter and install in new position on opposite side of the rain gutter.


28. Connect rain gutter condensate hose to the rain gutter and the lower port of the condensate trap. Cut to length, as required.

Figure 164. Condensate tubing

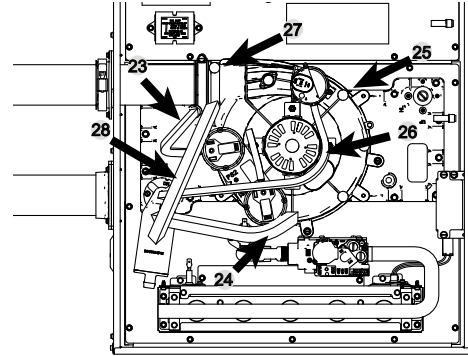

Integrated Furnace Control Menu

Figure 165. A952V control menu

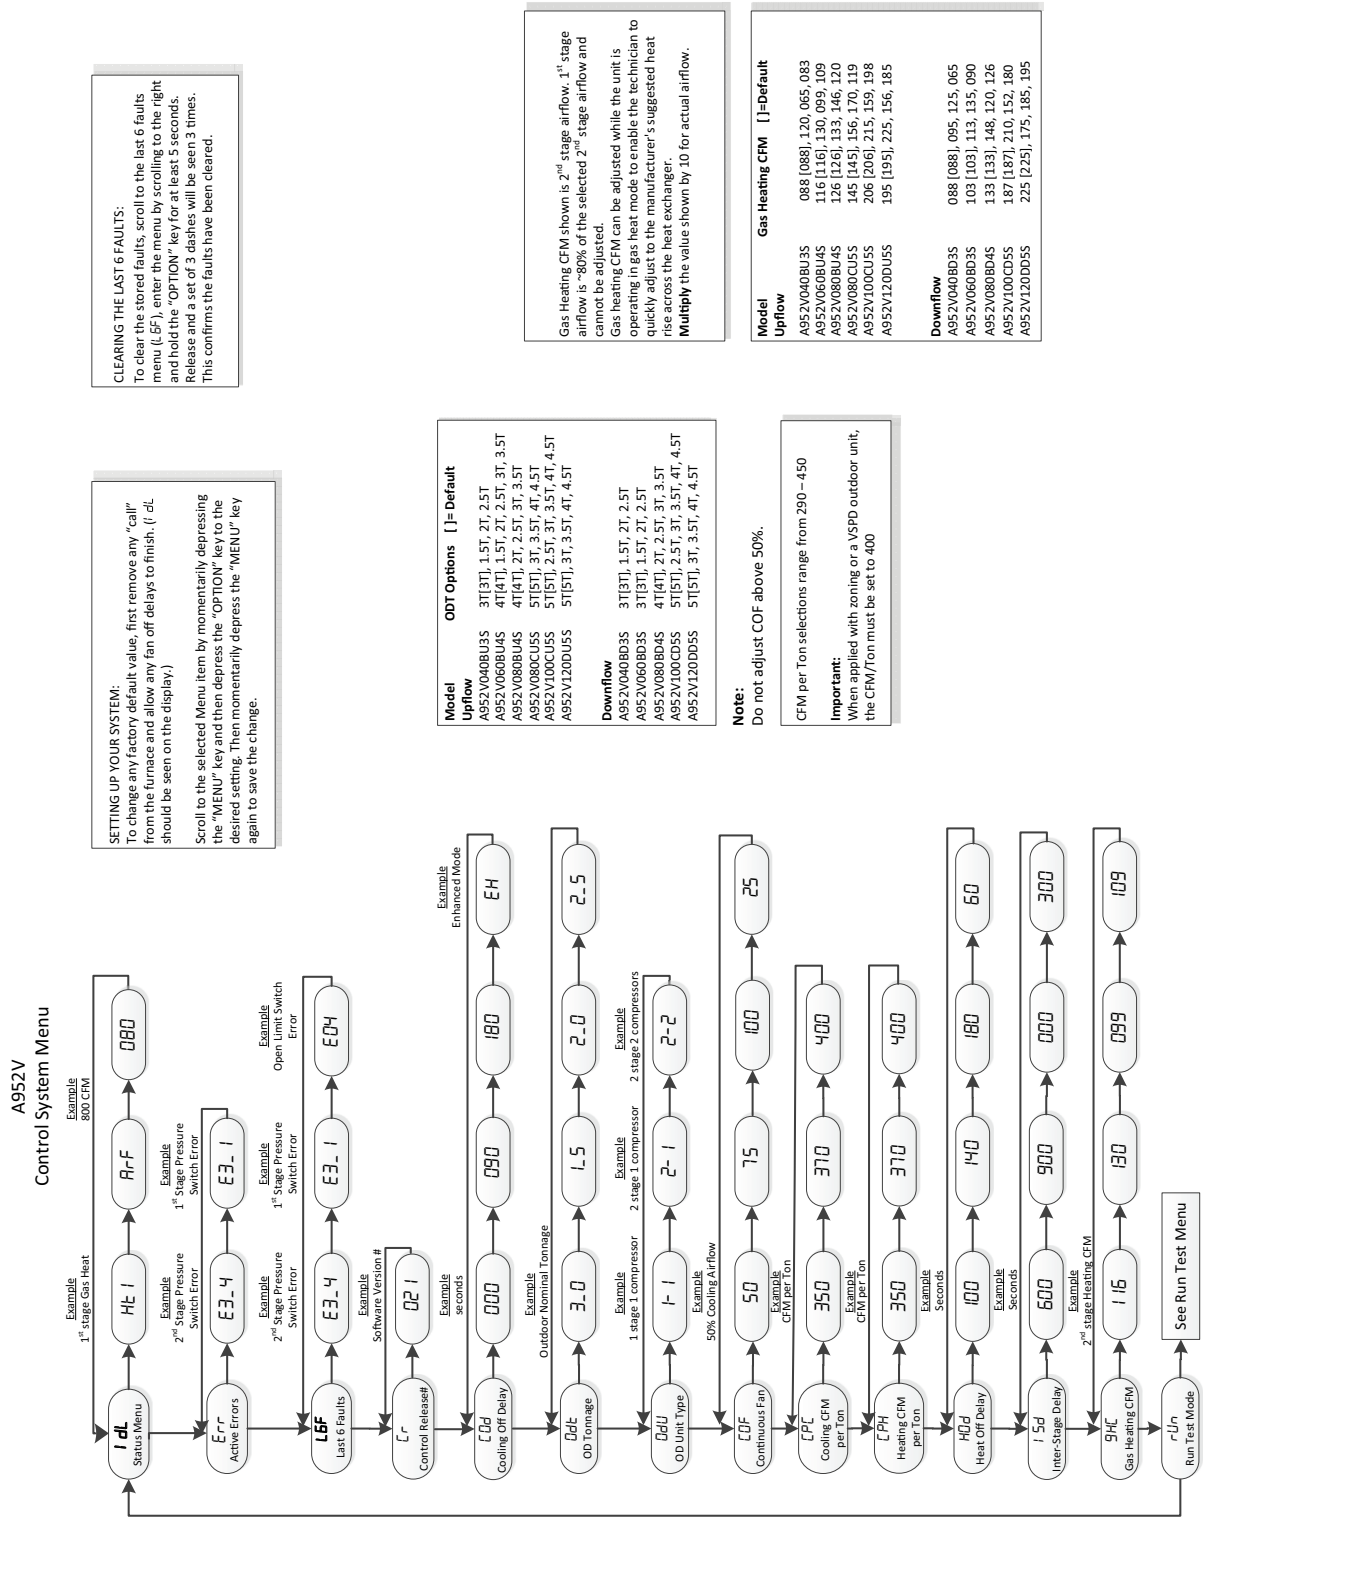

CLEARING THE LAST 6 FAULTS:
To clear the stored faults, scroll to the last 6 faults menu (LbF), enter the menu by scrolling to the right and hold the "OPTION" key for at least 5 seconds. Release and a set of 3 dashes will be seen 3 times. This confirms the faults have been cleared.

SETTING UP YOUR SYSTEM:
To change any factory default value, first remove any "call" from the furnace and allow any fan off delays to finish. (i dL should be seen on the display).
Scroll to the selected Menu item by momentarily depressing the "MENU" key and then depress the "OPTION" key to the desired setting. Then momentarily depress the "MENU" key again to save the change.

| Model | ODT Options | [] = Default |
|-----------------|----------------------------------|---------------|
| Upflow | | |
| A952V040BU3S | 3T(3T), 1.5T, 2T, 2.5T | |
| A952V060BU4S | 4T(4T), 1.5T, 2T, 2.5T, 3T, 3.5T | |
| A952V080BU4S | 4T(4T), 2T, 2.5T, 3T, 3.5T | |
| A952V080CU5S | 5T(5T), 3T, 3.5T, 4T, 4.5T | |
| A952V100CU5S | 5T(5T), 2.5T, 3T, 3.5T, 4T, 4.5T | |
| A952V120DU5S | 5T(5T), 3T, 3.5T, 4T, 4.5T | |
| Downflow | | |
| A952V040BD3S | 3T(3T), 1.5T, 2T, 2.5T | |
| A952V060BD3S | 3T(3T), 1.5T, 2T, 2.5T | |
| A952V080BD4S | 4T(4T), 2T, 2.5T, 3T, 3.5T | |
| A952V100CD5S | 5T(5T), 2.5T, 3T, 3.5T, 4T, 4.5T | |
| A952V120DD5S | 5T(5T), 3T, 3.5T, 4T, 4.5T | |


Note:
Do not adjust COF above 50%.
CFM per Ton selections range from 290 – 450
Important:
When applied with zoning or a VSPD outdoor unit, the CFM/Ton must be set to 400.

Gas Heating CFM shown is 2nd stage airflow, 1st stage airflow is ~80% of the selected 2nd stage airflow and cannot be adjusted.
Gas heating CFM can be adjusted while the unit is operating in gas heat mode to enable the technician to quickly adjust to the manufacturer's suggested heat rise across the heat exchanger.
Multiply the value shown by .10 for actual airflow.

| Model | Gas Heating CFM | [] = Default |
|-----------------|--------------------------|---------------|
| Upflow | | |
| A952V040BU3S | 088 [088], 120, 065, 083 | |
| A952V060BU4S | 116 [116], 130, 099, 109 | |
| A952V080BU4S | 126 [126], 133, 146, 120 | |
| A952V080CU5S | 145 [145], 156, 170, 119 | |
| A952V100CU5S | 206 [206], 215, 159, 198 | |
| A952V120DU5S | 195 [195], 225, 156, 185 | |
| Downflow | | |
| A952V040BD3S | 088 [088], 095, 125, 065 | |
| A952V060BD3S | 103 [103], 113, 135, 090 | |
| A952V080BD4S | 133 [133], 148, 120, 126 | |
| A952V100CD5S | 187 [187], 210, 152, 180 | |
| A952V120DD5S | 225 [225], 175, 185, 195 | |

Figure 166. A952X system status examples

A952V Examples of System Status

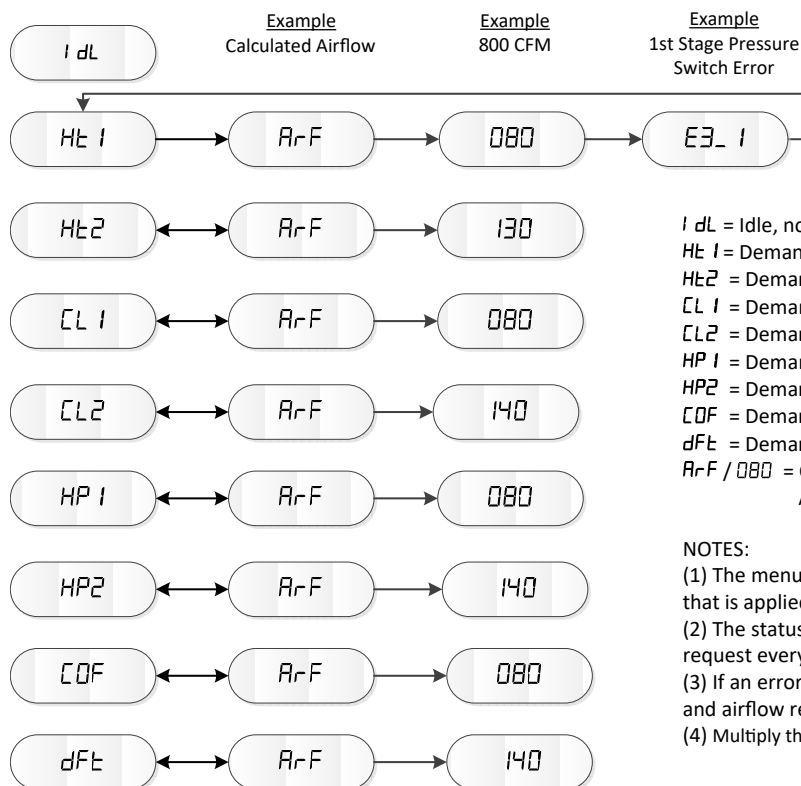

IdL = Idle, no demand for cooling, heating, or fan
Ht 1 = Demand for 1st stage gas heat
Ht 2 = Demand for 2nd stage gas heat
CL 1 = Demand for 1st stage cooling
CL 2 = Demand for 2nd stage cooling
HP 1 = Demand for 1st stage heat pump
HP 2 = Demand for 2nd stage heat pump
CDF = Demand for continuous fan
dFt = Demand for outdoor unit defrost, furnace running in gas heat mode
ArF / 080 = Calculated airflow is 800 CFM.
 Airflow display is rounded down to the nearest 10 cfm

- NOTES:
- (1) The menu status displayed is solely dependent on the input of 24VAC that is applied to the low voltage terminal strip.
 - (2) The status will alternate between the system mode and the airflow request every 2 seconds.
 - (3) If an error occurs, an E*.* will alternately flash with the system mode and airflow request. See first example
 - (4) Multiply the value shown by 10 for actual airflow

Run Test Mode

Figure 167. Segment menu



To enter Run Test Mode, scroll to using the Menu key, then push the op/on key. The LED will flash three times, then begin the test.

To exit the test mode, momentarily push the Menu key, cycle power to the furnace, or make a valid thermostat call for capacity or fan.

Sequence of Run Test Mode

- rU1 – Turns the inducer on in 1st stage for 30 seconds
- rU2 – Turns on the inducer on 2nd stage for 30 seconds
- rU3 – Turns the ignitor on for 10 seconds
- rU4 – Turns the circulating blower on 1st stage compressor speed for 10 seconds

- rU5 – Turns the circulating blower on 2nd stage compressor speed for 10 seconds
- rU6 – Turns the circulating blower on 1st stage gas heat speed for 10 seconds
- rU7 – Turns on the circulating blower on 2nd stage gas heat speed for 10 seconds

The above sequence will repeat two more times unless the Run Test Mode is exited, see above

Important: The Run Test Mode does not test fire the furnace or bring the outdoor unit on. It is designed to allow the technician to observe each mode to ensure the IFC, inducer, and circulating blower are performing as intended.

Integrated Furnace Control Display Codes

Table 39. 2 Stage Inducer with ECM Blower Motor Status Codes

| | |
|------------|---|
| <i>IdL</i> | Idle |
| <i>Ht1</i> | First Stage Heating |
| <i>Ht2</i> | Second Stage Heating |
| <i>RrF</i> | Calculated airflow times 10 (080=800 CFM) |
| <i>COF</i> | Continuous Fan |
| <i>CL1</i> | First Stage Cooling |
| <i>CL2</i> | Second Stage Cooling |
| <i>HP1</i> | First Stage Heat Pump |
| <i>HP2</i> | Second Stage Heat Pump |
| <i>dFt</i> | Defrost Mode |

Table 40. Menu Options

| | |
|------------|--|
| <i>Err</i> | Active Alarm Menu |
| <i>L6F</i> | Last 6 Faults (To clear — Hold Option button down for 5 seconds) |
| <i>Cr</i> | Code Release Number |
| <i>COd</i> | Cooling Off Delay (Seconds) |
| <i>OdT</i> | Outdoor Tonnage |
| <i>OdU</i> | Outdoor Unit |
| <i>COF</i> | Blower Constant Fan Airflow Multiplier (Percentage) |
| <i>CPc</i> | Cooling (CFM/Ton) |
| <i>CPH</i> | Heat Pump Heating (CFM/Ton) |
| <i>HOd</i> | Heat Off Delay (Seconds) |
| <i>ISd</i> | Inter-Stage Delay (Seconds) |
| <i>gHC</i> | Gas Heating CFM 2nd Stage (1st Stage is not adjustable) |
| <i>rUn</i> | Run Test Mode |

Table 41. Error codes

| Alarm Error Code | Alarm Explanation |
|------------------|--|
| <i>E01</i> | Loss of the IRQ or other internal failures (Internal IFC error) |
| <i>E2_1</i> | Retry Exceeded (Flame never sensed, one hour lockout after 3 times) |
| <i>E2_2</i> | Recycles Exceeded (Flame sensed then lost, one hour lockout after 10 times) |
| <i>E2_3</i> | 1st Stage Gas Valve Not Energized When It Should Be exceeded after 10 times |
| <i>E2_4</i> | Redundant Relay (HLO output) Not Energized when it should be exceeded after 10 times |

Table 41. Error codes (continued)

| Alarm Error Code | Alarm Explanation |
|------------------|--|
| <i>E3_1</i> | Shorted Pressure Switch, 1st Stage |
| <i>E3_2</i> | Open Pressure Switch, 1st Stage |
| <i>E3_3</i> | Shorted Pressure Switch, 2nd Stage |
| <i>E3_4</i> | Open Pressure Switch, 2nd Stage |
| <i>E04</i> | Open Limit (Main Thermal, Rollout Switch, or Reverse Airflow Switch) |
| <i>E05</i> | Flame detected, should not be present |
| <i>E6_1</i> | Voltage reversed polarity |
| <i>E6_2</i> | Bad grounding |
| <i>E6_3</i> | 1. Igniter relay fails 2. Igniter open |
| <i>E7_1</i> | 1st stage gas valve (MVL) is energized when it should be off |
| <i>E7_2</i> | Redundant Relay (HLO output) Energized when it should Not be |
| <i>E08</i> | Flame current is low, but still strong enough to allow operation |
| <i>E09</i> | Open Inducer Limit Switch or Condensate Pressure Switch |
| <i>E10</i> | Communication error between variable speed inducer and blower motor microprocessor |
| <i>E11</i> | 1. 1st stage gas valve not energized when it should be 2. 1st stage gas valve relay stuck closed 3. 2nd stage gas valve relay stuck closed 4. 2nd stage gas valve energized when it should not be 5. 2nd stage gas valve not energized when it should be |
| <i>E12</i> | Open fuse |
| <i>E13</i> | Blower HP/OEM ID |
| <i>E14</i> | No PM and local copy bad |
| <i>E15</i> | Both of unit Data File in PM and local Unit Data File are corrupt |
| <i>E17</i> | Blower motor no communication response |
| <i>E18</i> | Blower communication failure on the control |

Fault Code Recovery

1. To view the last 6 faults, press the **Menu** key until the **Last 6 Faults (L6F)** menu appears.
2. Enter the menu by pressing the **Option** key.
3. The last 6 faults can be viewed.


Clearing the Last 6 Faults

1. To clear the last 6 faults, press the **Menu** key until the **Last 6 Faults (L6F)** menu appears.
2. Enter the menu by pressing the **Option** key.
3. Hold the **Option** key for at least 5 seconds.
4. Release and a set of 3 dashes will be seen 3 times. This confirms the faults have been cleared.

Resetting Factory Defaults

1. Display must be in Idle Mode.
2. Push the **Menu** and **Option** buttons at the same time for 15 seconds then release.
3. The 7 segment will flash "Fd" 3 times. This confirms the unit has been reset to the factory defaults.

Figure 168. Component layout

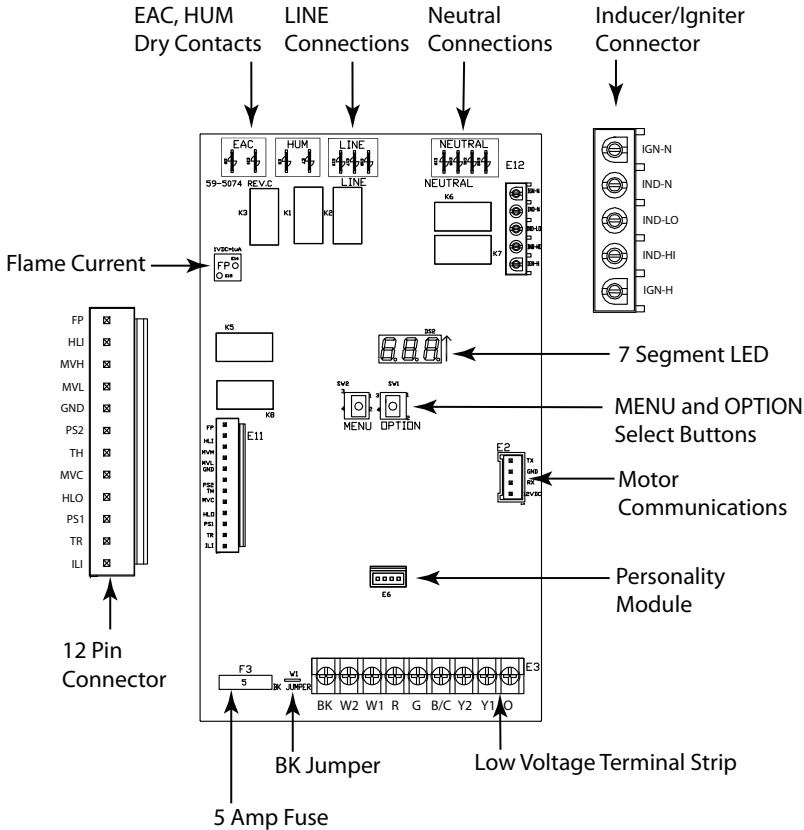

Troubleshooting

The following pages include troubleshooting flowcharts in reference for the 2 Stage A952V family of furnaces only.

The information contained is for reference only and does not cover all scenarios or problems that may be encountered.



ONLY qualified technicians should attempt to install, troubleshoot, or repair this appliance.

Failure to follow all cautions and/or warnings could result in personal or property damage, including death.

See [Table 41, p. 92](#) for possible error codes.

For questions regarding IFC component layouts, see [Figure 168, p. 93](#).

GETTING STARTED

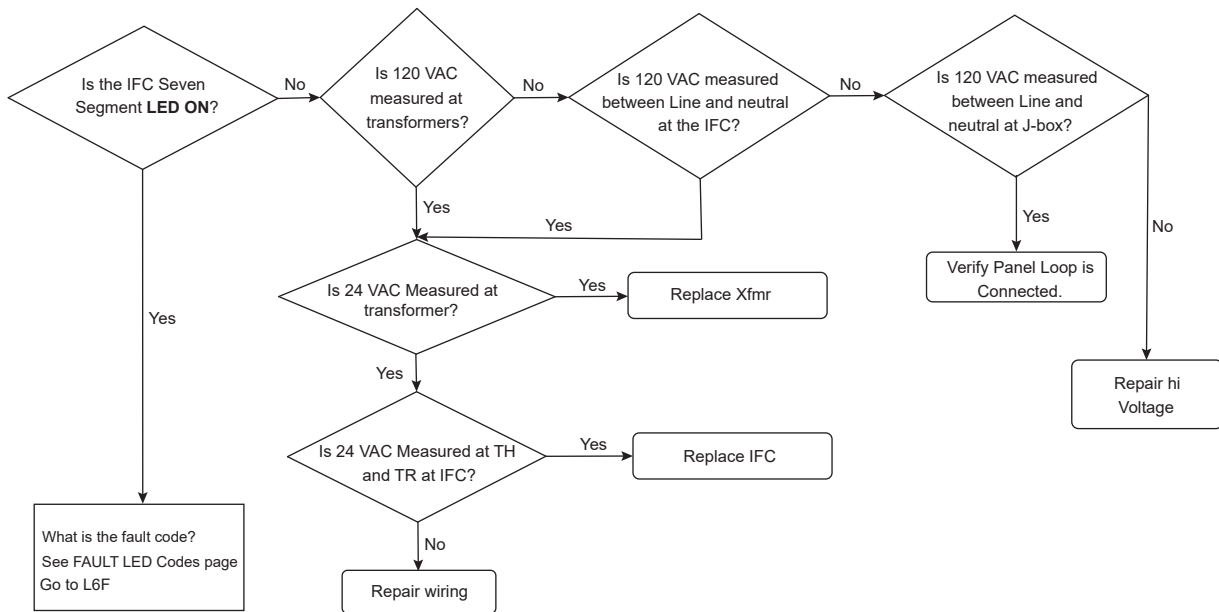


DEFINITION:
Internal Failure of the Control Board.


2.1 Fault Code



DEFINITION:
 RETRY Lock Out = 3 unsuccessful tries for ignition within a single call for heat. Lockout period is for one hour.
Flame has never been sensed
All gas appliances in the home should be turned on to verify gas pressure

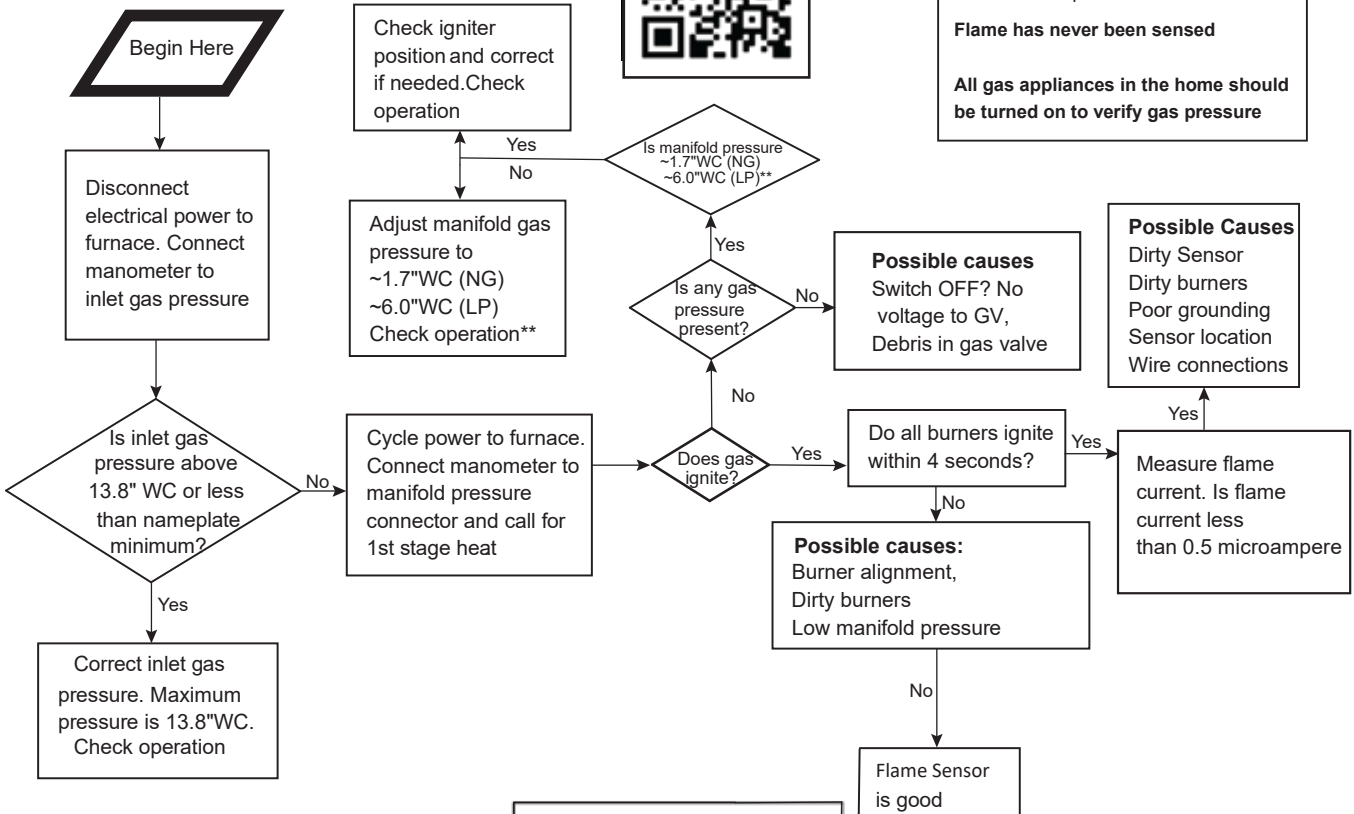


To measure flame current, use a VOM set to DC micro-amps. Connect voltmeter leads in series with flame sensor circuit, see illustration.

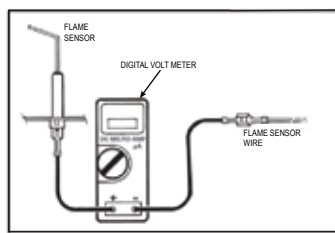


2.2 Fault Code



DEFINITION
 RECYCLE Lock Out = 10 recycles within a single call for heat. Lockout period is for one hour.
Flame has never been sensed
 Turn All gas appliances ON

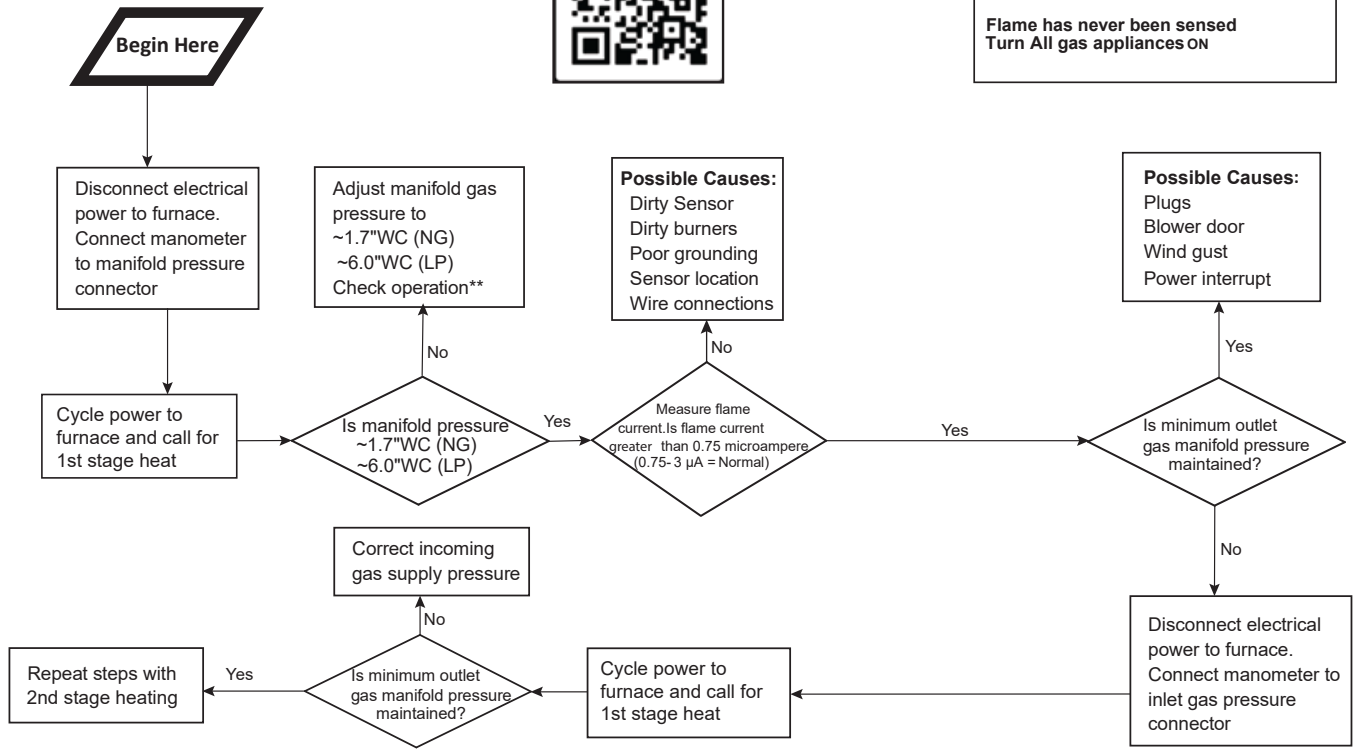

To measure flame current, use a VOM set to DC microampere. Connect voltmeter leads in series with flame sensor circuit, see illustration.

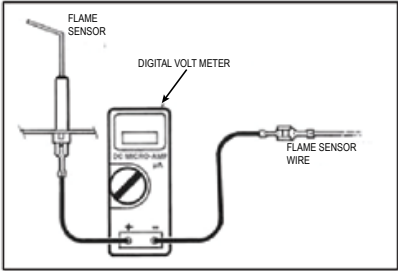

2.3 Fault Code

Replace IFC

DEFINITION:
 1st Stage Gas Valve not energized when it should be 10 times within the same call for heat.
24VAC not sensed on MVL 10 TIMES

2.4 Fault Code

Replace IFC

DEFINITION
 High limit output relay is not closed when it should be
24VAC not sensed on HLO 10 TIMES


3.1 Fault Code

Note #1
 24 volts = Open Switch
 0 volts = Closed Switch



DEFINITION:
 An error has occurred with the PS1, indicating that the pressure switch is closed when it should be open.
In most cases, the pressure switch is not the problem.
NOTE: Verify pressure switch wiring and tube routing are correct.

Begin Here

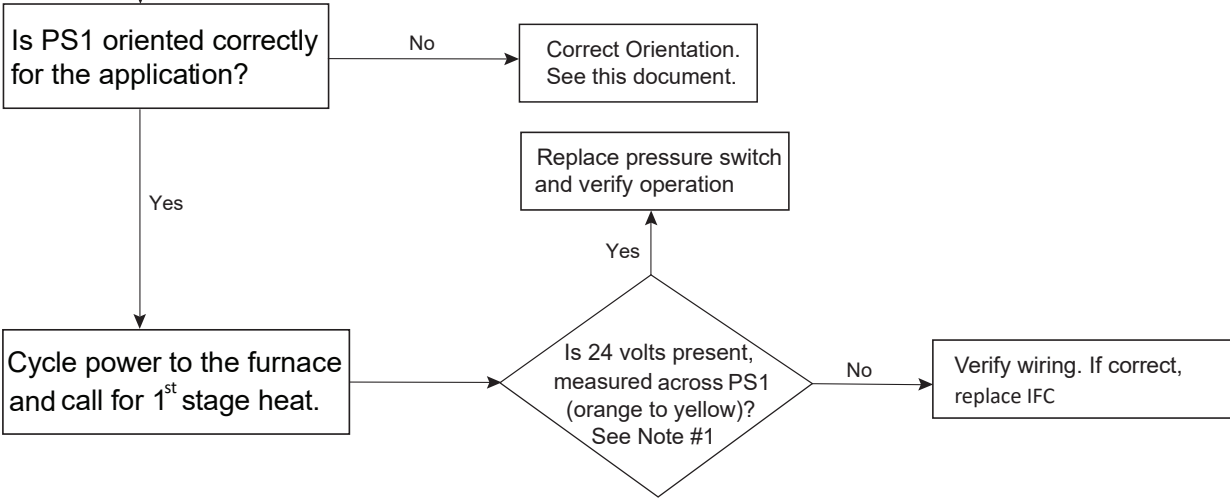

Troubleshooting

3.2 Fault Code


Note #1
24 volts = Open Switch
0 volts = Closed Switch

Note #2
Measured pressure is negative, greater than refers to magnitude only.



DEFINITION:
An error has occurred with the PS1 indicating that the pressure switch is open when it should be closed.
In most cases, the pressure switch is not the problem.
NOTE: Verify pressure switch wiring and tube routing are correct.

PS1 Open errors can occasionally occur when wind gusts occur. The IFC will a close both PS1 by increasing the voltage to the inducer motor

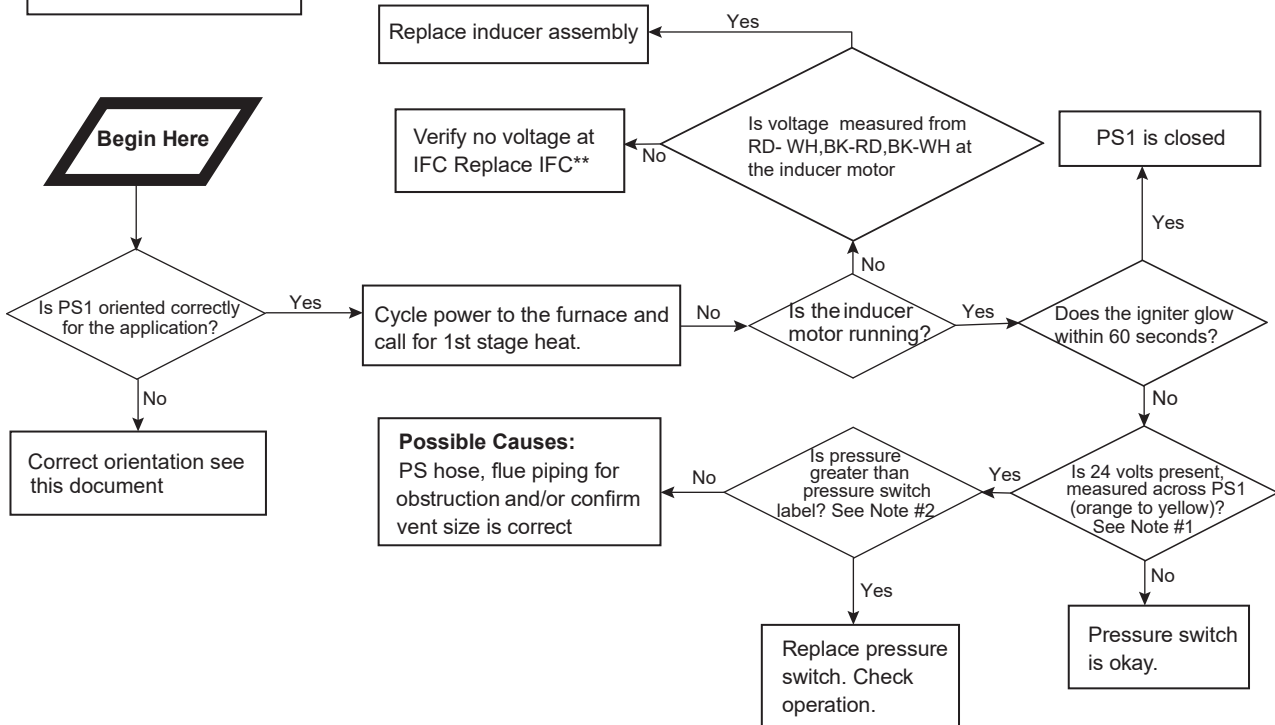


3.3 Fault Code

Note #1
OL = Open Switch
0 ohms = Closed



DEFINITION:
An error has occurred with the PS2, indicating that the pressure switch is closed when it should be open.
In most cases, the pressure switch is not the problem.
NOTE: Verify pressure switch wiring and tube routing are correct.

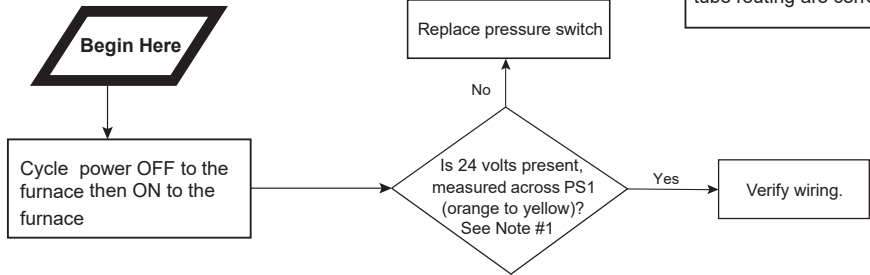

3.4 Fault Code




DEFINITION:
 An error has occurred with the PS2 indicating that the pressure switch is open when it should be closed.

In most cases, the pressure switch is not the problem.

NOTE: Verify pressure switch wiring and tube routing are correct.


Note #1
 24 volts = Open Switch
 0 volts = Closed Switch


Note #2
 Measured pressure is negative, greater than refers to magnitude only.

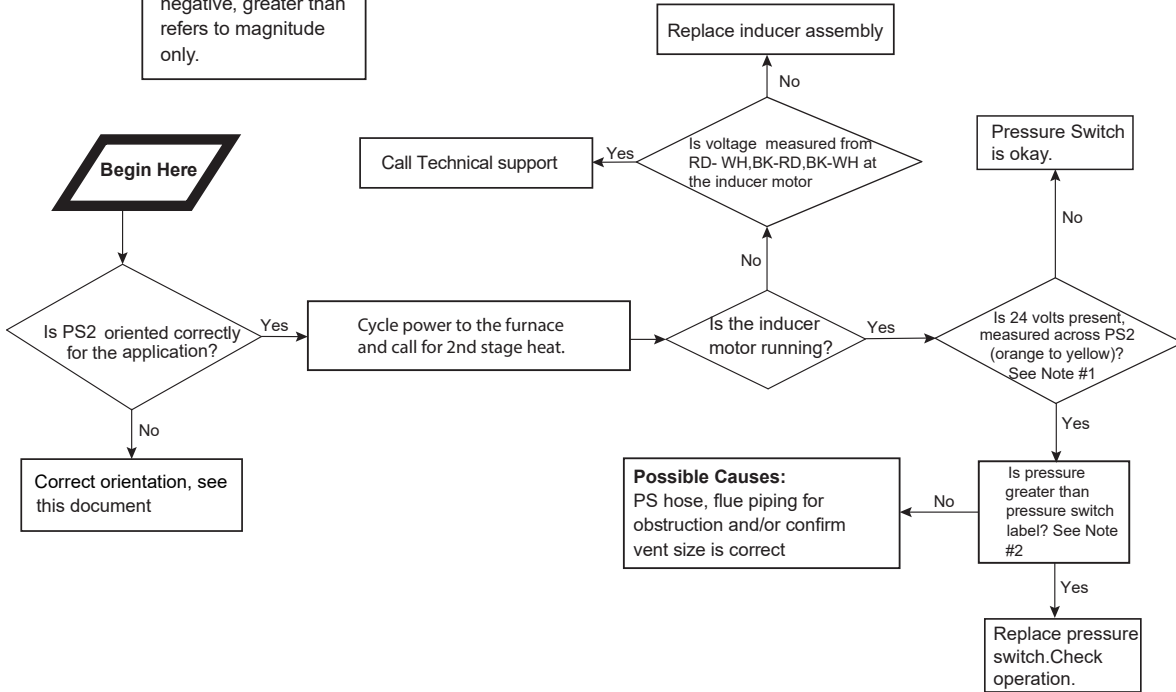




DEFINITION:
 Limit switches are safety devices that will open when an abnormal high temperature has been sensed. REMOVE ALL JUMPER WIRING TO SWITCHES!
 Under no circumstances, shall these switches be left jumpered when not troubleshooting. Verify filters and blower wheels are clean.

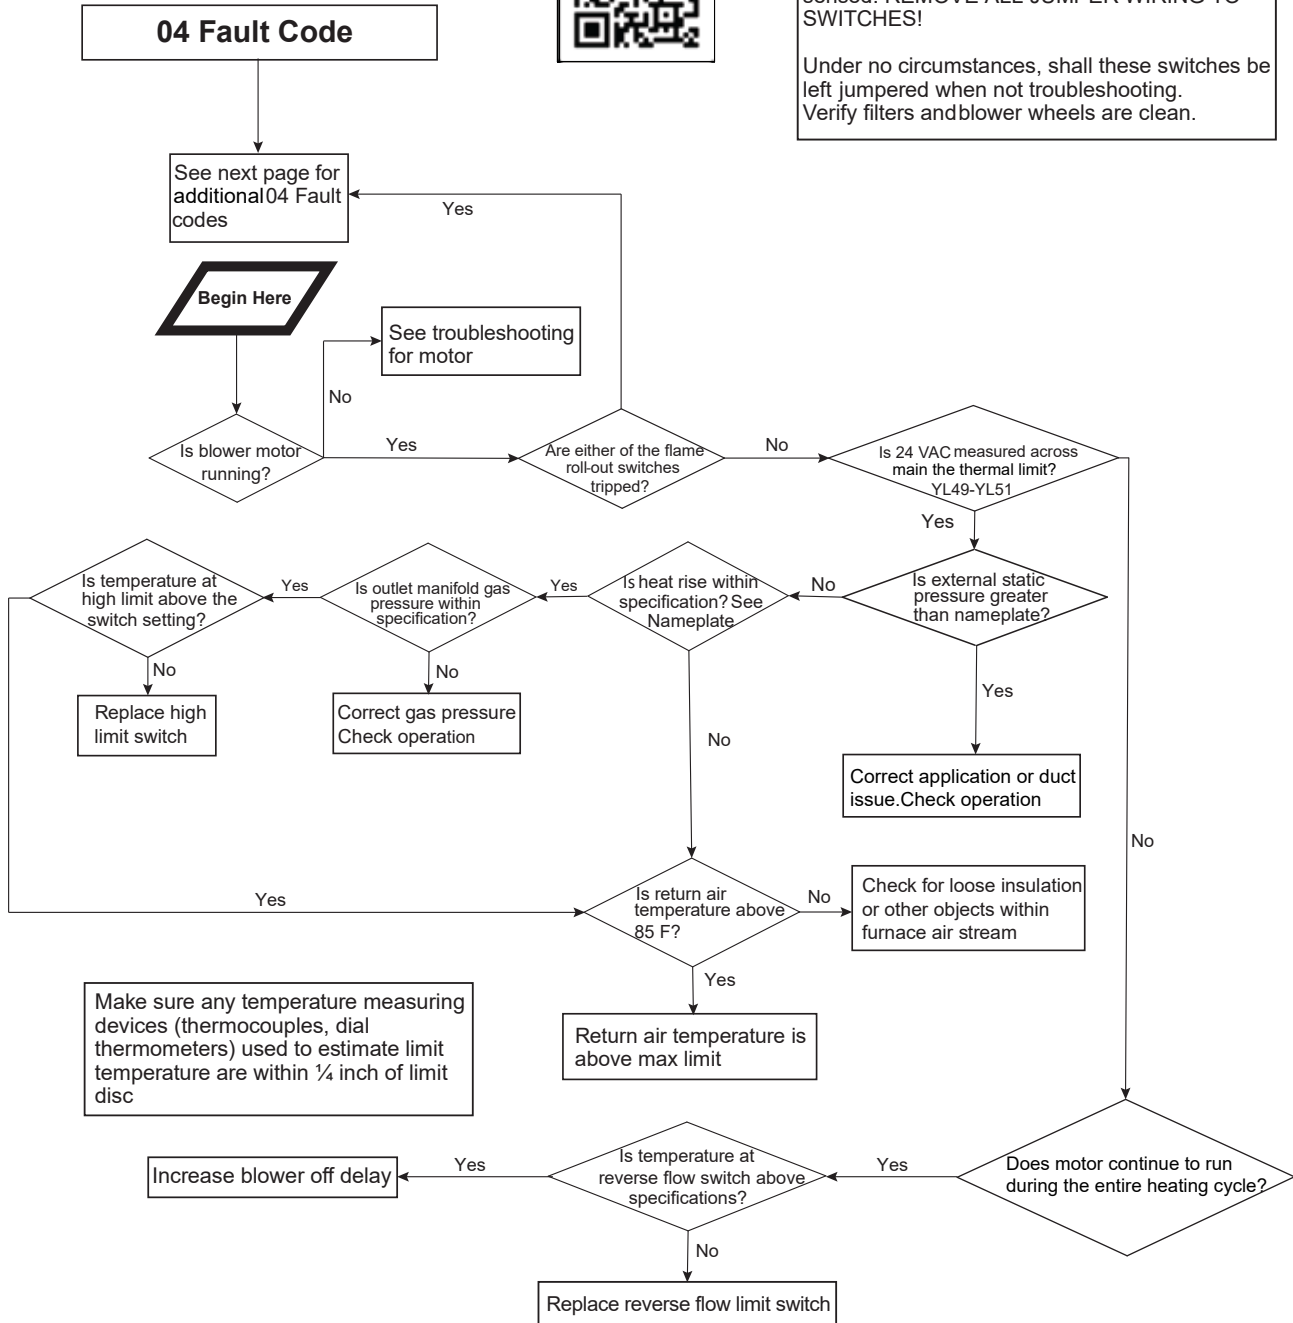

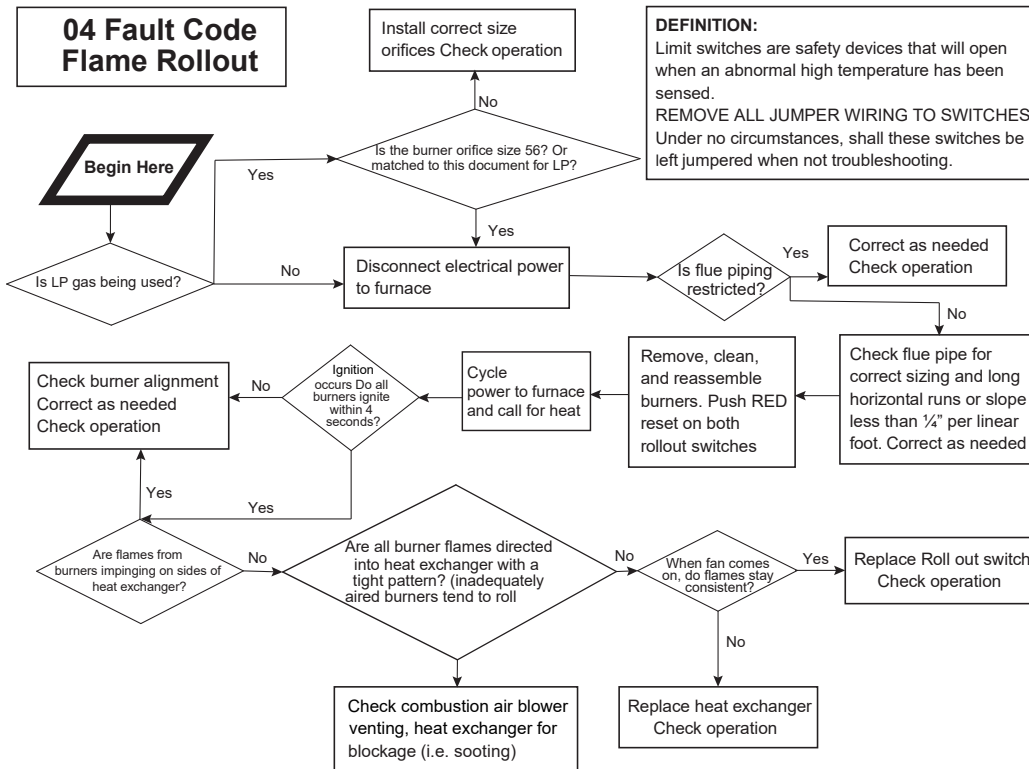


05 Fault Code

DEFINITION:
Flame is sensed when it should not be.

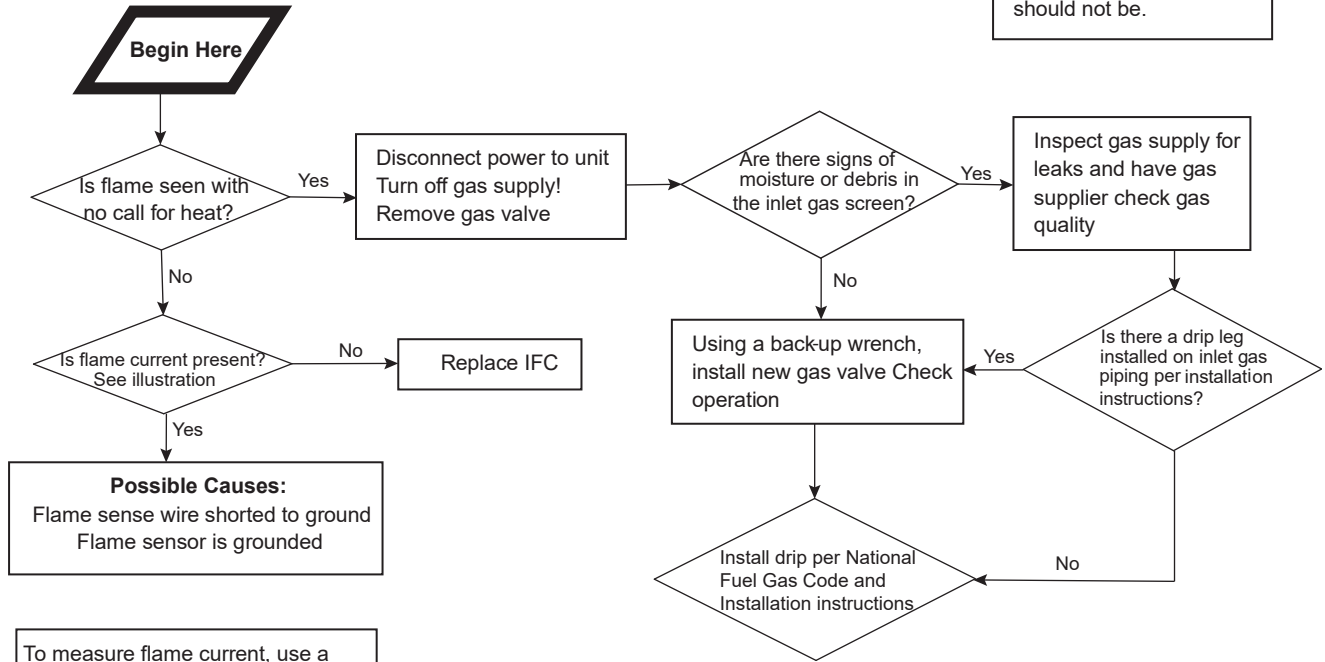


To measure flame current, use a VOM set to DC micro amps. Connect voltmeter leads in series with flame sensor circuit, see illustration,

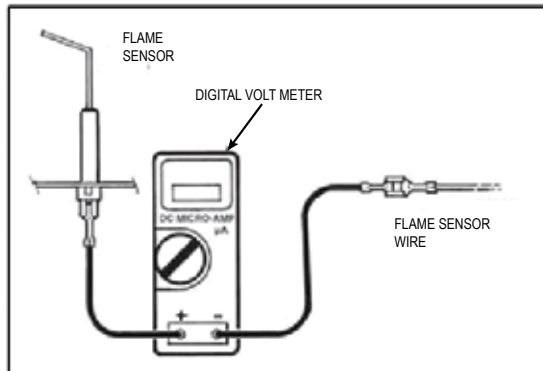

6.1 Fault Code Reversed Polarity




DEFINITION:
Polarity Fault-Incoming high voltage wiring is reversed

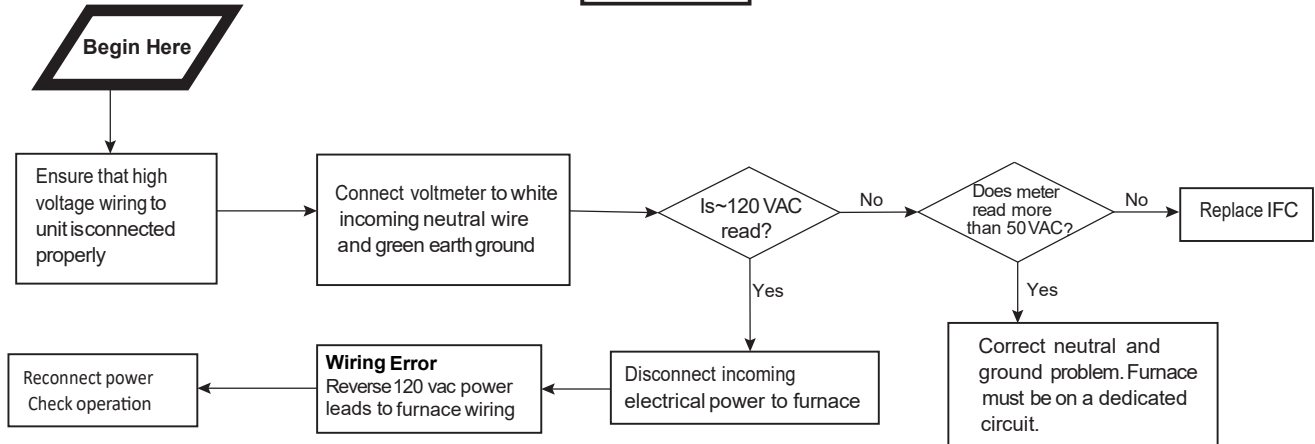


6.2 Fault Code Faulty Ground

DEFINITION:
Ground Fault-Incoming or chassis ground connection is not sensed

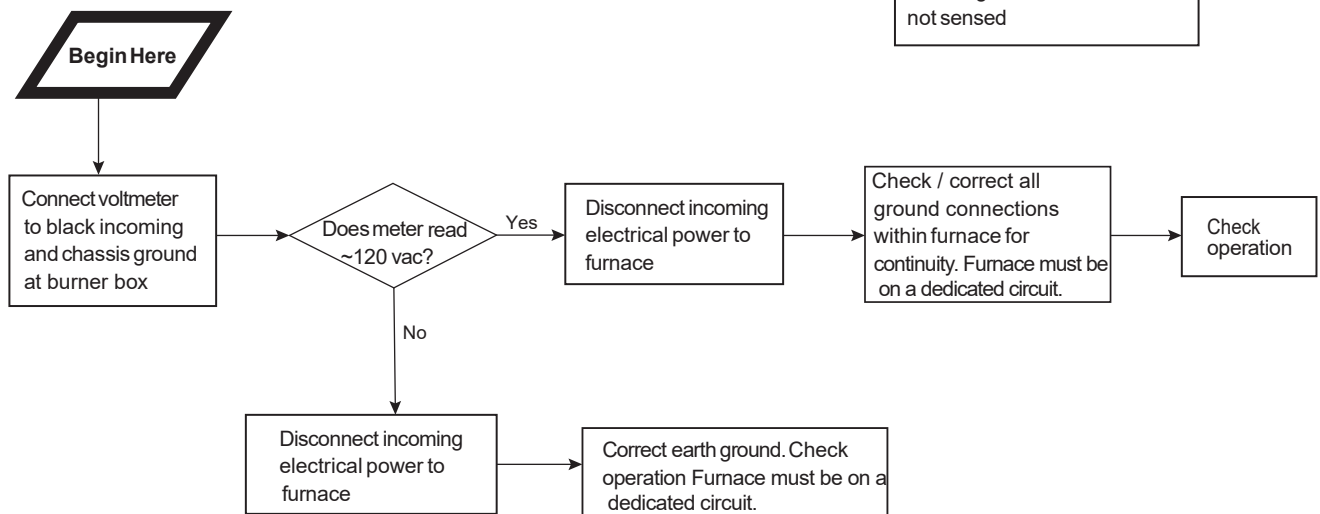

6.3 Fault Code

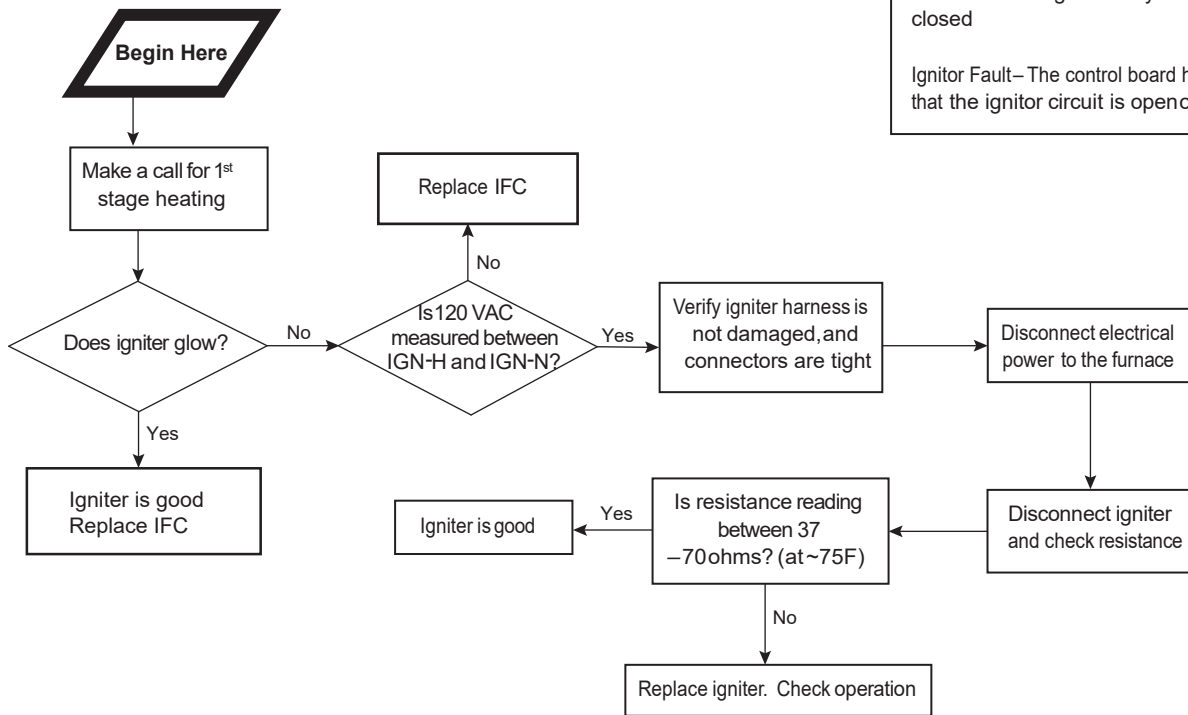


DEFINITION:

Igniter Relay Fault–The control board has sensed that the igniter relay has stuck closed

Ignitor Fault– The control board has sensed that the ignitor circuit is open or shorted.

7.1 Fault Code

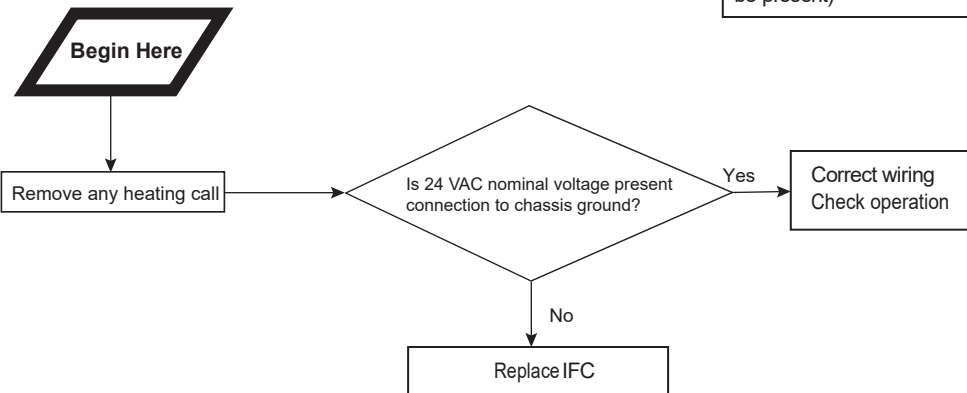

DEFINITION:

External Gas Valve Circuit Error (24 volts is present when it should not be present)

7.2 Fault Code

Replace IFC

DEFINITION:

Internal control board error
Redundant HLO relay closed when it should not be.

8 Fault Code

DEFINITION:

The flame sense current is less than 0.5 micro-amp DC

Begin Here

Connect a voltmeter with the ability to read micro-amperes per the illustration below.

Make a call for 1st stage heating

Ensure all burner flames directed into heat exchanger with a tight pattern? (inadequately aired burners tend to roll back)

Flame sensor is good. Check wiring and / or connections


Is flame current measured less than 0.5 micro-amp DC?

Is flame sensor located correctly? See figure

Check operation


Correct flame sensor location

Replace Flame sensor

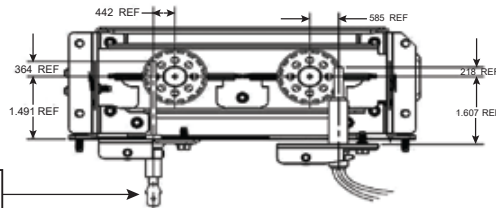

Flame Sensor


To measure flame current, use a VOM set to DC micro-amps. Connect voltmeter leads in series with flame sensor circuit, see illustration

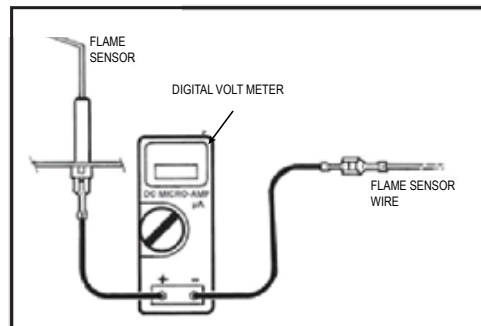

9 Fault Code



DEFINITION:
 Condensate Pressure Switch Open: The condensate system is not free flowing and opened the safety switch OR
 Inducer Limit: This error is normally caused by improper installation or application of the furnace venting system.

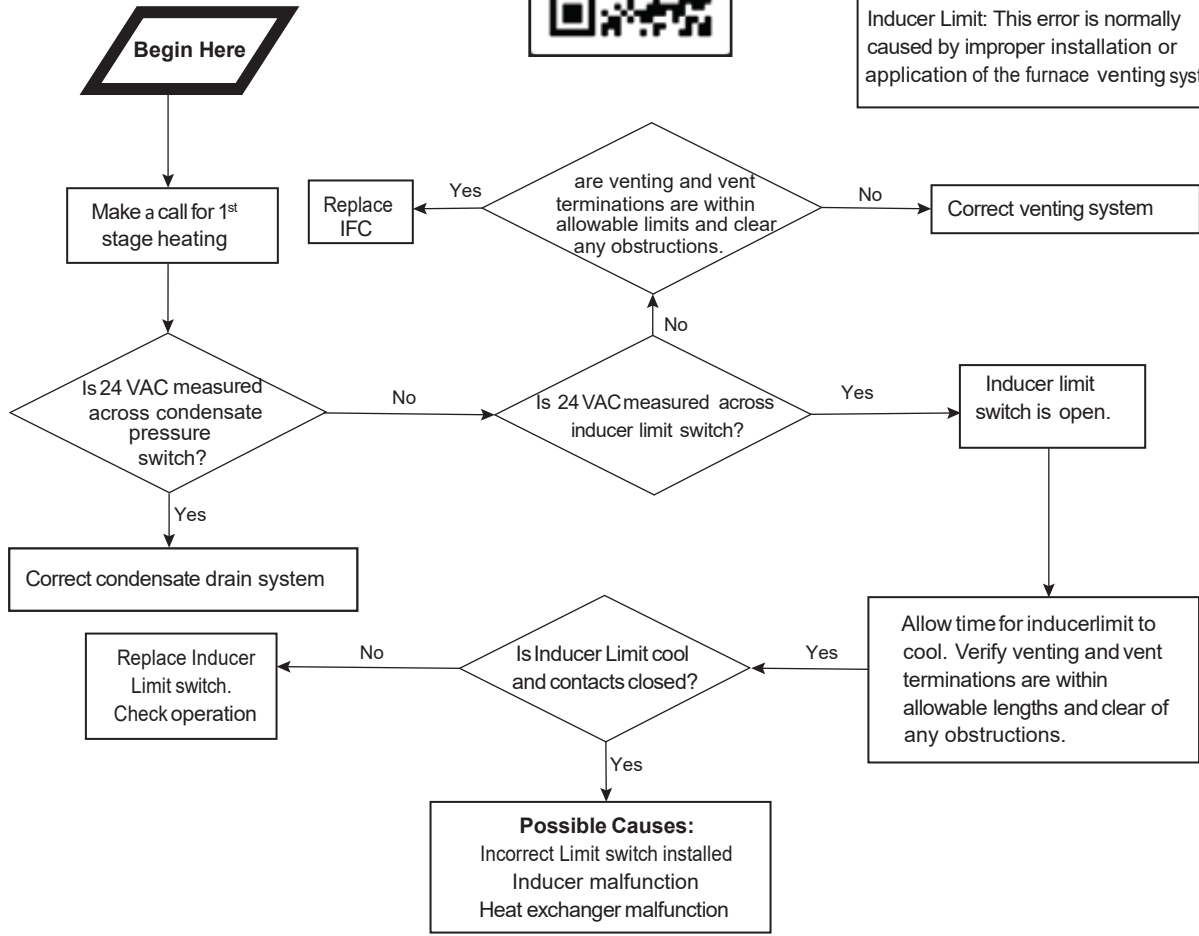

10 Fault Code


Replace IFC

DEFINITION:
 Internal control board error. Communication error between the inducer and blower motor micro-processors

11 Fault Code

Definition


The IFC has detected that internal gas valve relays have failed OR 24 VAC is being sensed at 2nd stage gas valve

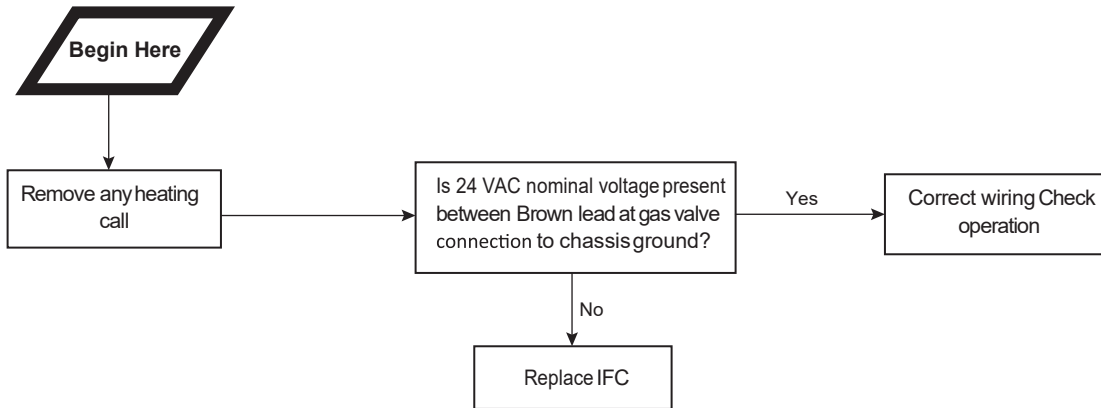

12 Fault Code


Definition:

The onboard 5 amp fuse is open or missing.

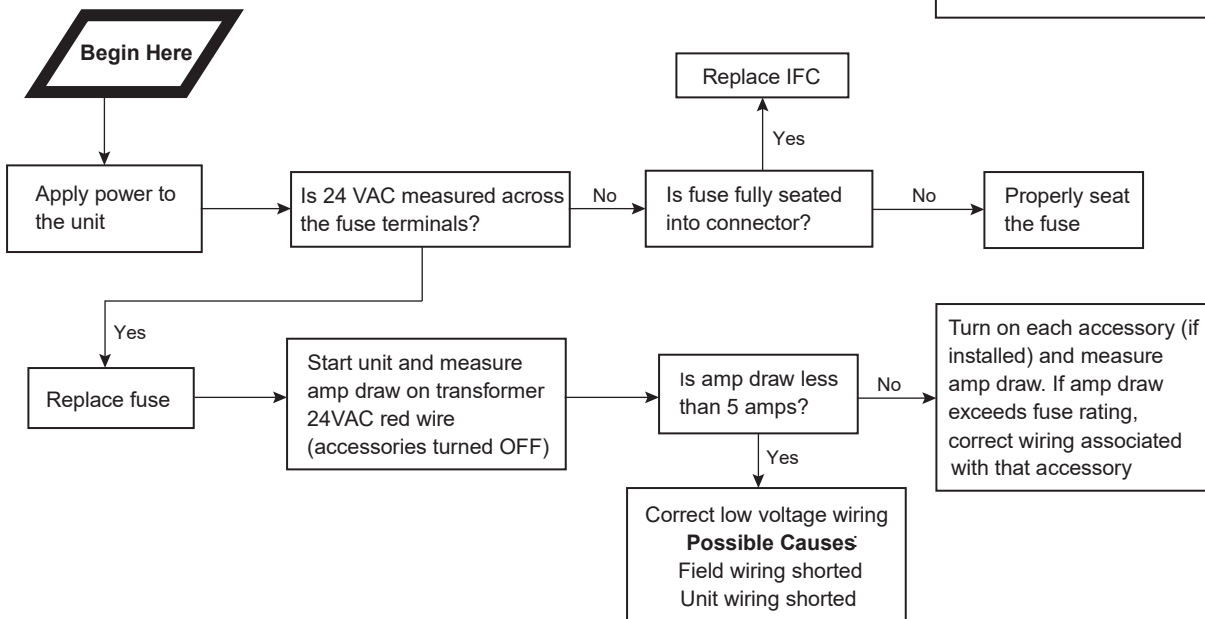


13 Fault Code

DEFINITION:
This fault is generated when the HP or OEM ID of the blower motor does not match the value that is programmed on the Personality Module

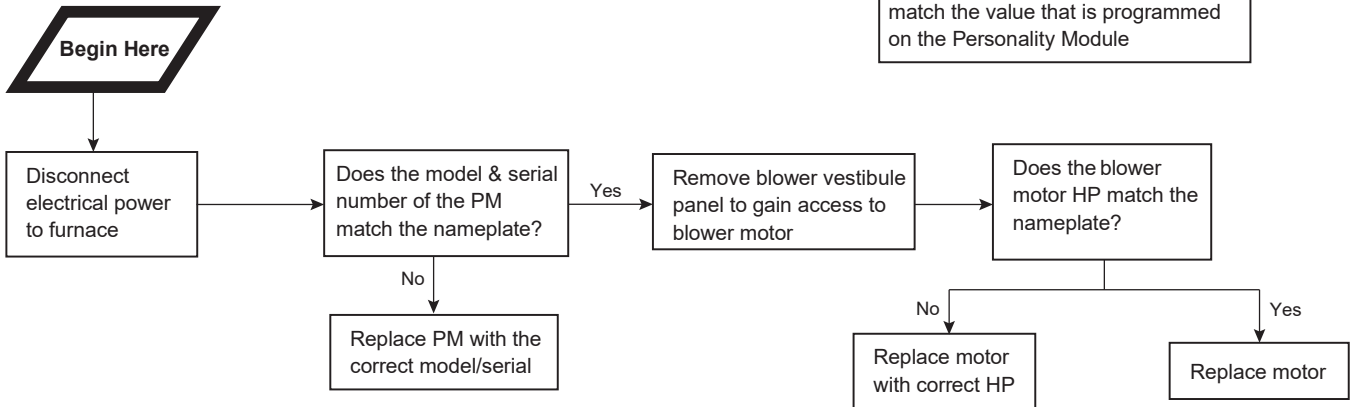


14 Fault Code

DEFINITION:
This fault is generated when the PM is missing and the onboard information cannot be read

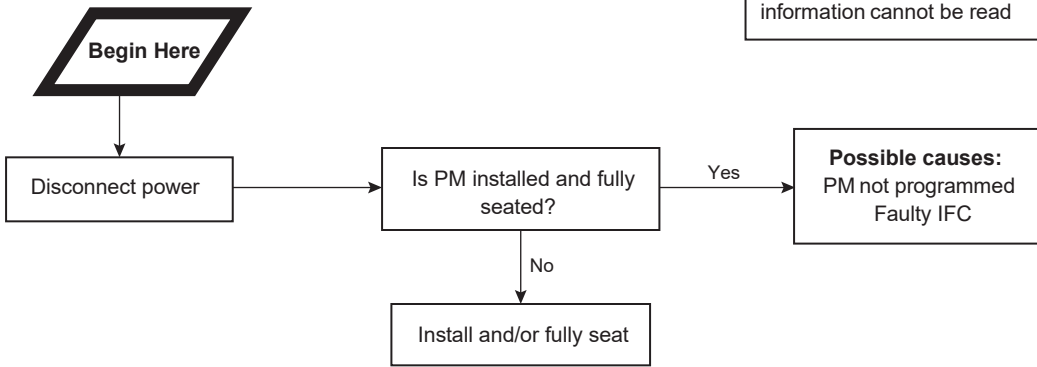

15 Fault Code


DEFINITION:
This fault is generated when the PM and the IFC information is corrupted



17 Fault Code

DEFINITION:


This fault is generated when IFC does not see a return signal from the blower motor

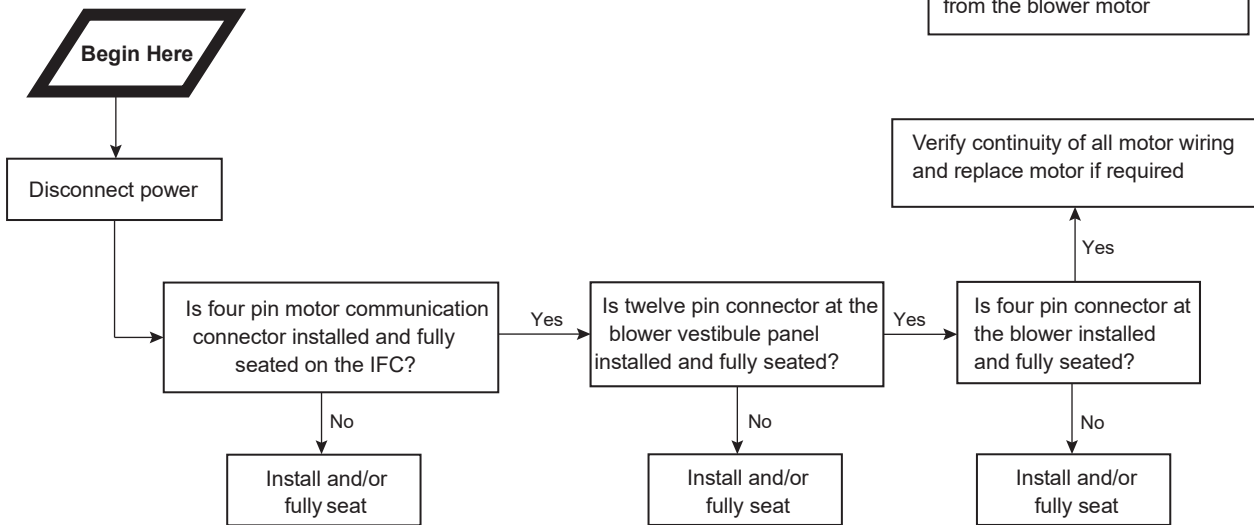


18 Fault Code

DEFINITION:



This fault is generated when the IFC does not see a send message itself.

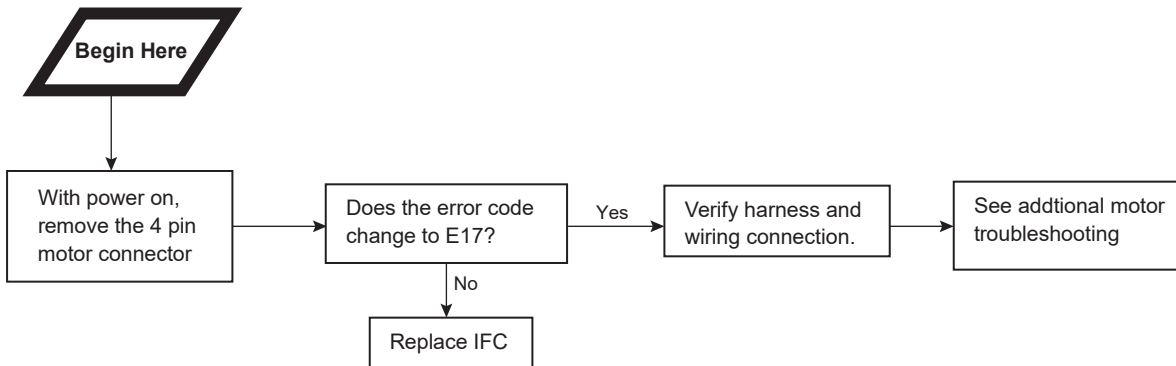

Serial Motor Troubleshooting

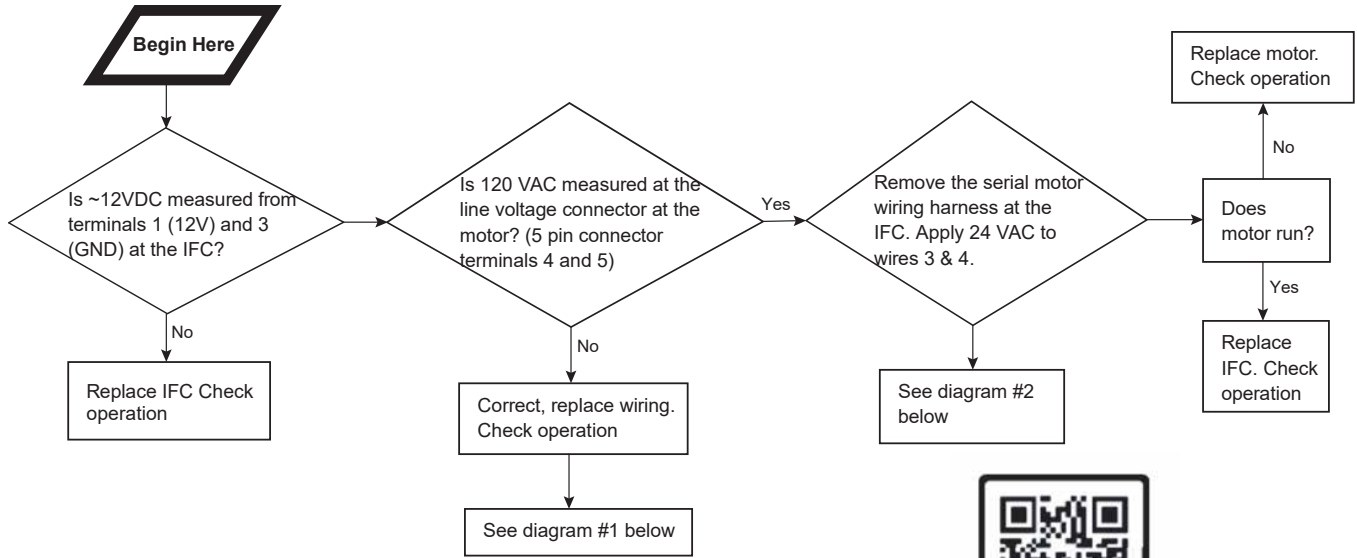


FTH: VS Serial Port Motors

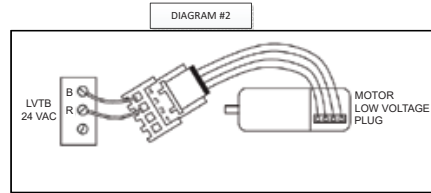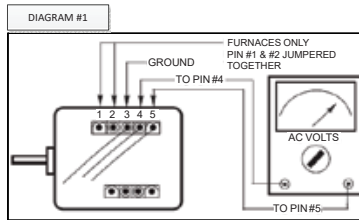

Belly Band Location

Distance from belly band to the front face of motor for minimum vibration

Figure 169. Belly band

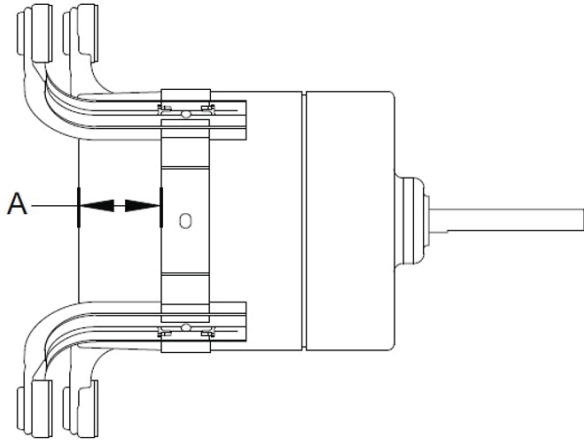

Blower housings and wheel removed from view for clarity.

Blower housings and wheel removed from view for clarity.

Table 42. Regal Rexnord Eon+ Motor (D346803P02-P04)

| Furnace Cabinet Size | Dimension "A" (inches) |
|----------------------------|------------------------|
| 040BU3, 040BD3, and 060BD3 | 2.75 |
| 060BU4, 080BU4, and 080BD4 | 3.54 |
| All C and D | 3.79 |

Table 43. Panasonic V2 Motor (D345263P01-P03)

| Furnace Cabinet Size | Dimension "A" (inches) |
|----------------------------|------------------------|
| 040BU3, 040BD3, and 060BD3 | 2.71 |
| 060BU4, 080BU4, and 080BD4 | 3.42 |
| All C and D | 1.79 |

Sequence of Operation

Notes:

1. The seven segment LED readout is based on thermostat input. During a simultaneous call for W1 and W2, the seven segment LED will read "HL2", although the IFC will process the call for 1st stage heat first.
2. Numbers in Parenthesis () refer to the 12 pin terminal positions.

EAC and HUM Timing

- EAC relay closes approximately 2 seconds after the blower starts and opens when the blower motor stops.
- HUM relay closes on any heating call (HP/Gas) approximately 1 second after the blower motor starts and opens when any heating call (HP/Gas) is removed.

1st Stage Gas Heating

1. R – W1 contacts close on the thermostat sending 24Vac to the W1 low voltage terminal of the IFC. Technician should read 24Vac from W1 to B/C. The seven segment LED will read "HL 1".
2. The IFC performs a self-check routine and then confirms:
 - a. Condensate pressure switch and Inducer limit switch are closed by sending 24Vac out the HLO terminal and monitoring the ILI (1) input.
 - b. Flame roll-out switches (FRS) 1 and 2, main thermal limit (TCO), and any reverse air flow (RAF) switches are proved closed by sending 24Vac out the HLO (4) terminal and monitoring the HLI (11) input.
 - c. Pressure switch 1 (PS1) and pressure switch 2 (PS2) are proved open by sending 24Vac out the HLO terminal, through the limit switches, and monitoring the PS1 and PS2 inputs.

Note: If a thermal limit is open, 24Vac will not be present at either pressure switch.
3. After steps a, b, and c are confirmed, the inducer relay is closed energizing 1st stage inducer. As the inducer ramps up, PS1 closes.
4. The ignitor relay on the IFC closes and the ignitor energizes and warms up is approximately 20 seconds.
5. The 1st stage gas valve relay closes, energizing the 1st stage gas valve solenoid to allow ignition.
6. The first burner will ignite and flame will crossover to the remaining burners, establishing current to the flame sensor. Flame sensing must take place within 4 seconds.

Note: There are two flame sense pads located on the IFC, marked "FP". To measure the flame current, use a VOM set to DC volts. 1Vdc = 1 micro-amp. Flame current will vary depending on the type of meter used. Typical flame current ranges from 0.75 to 3.0 micro-amps (0.75 to 3 Vdc).

7. Once flame sense has been achieved, a timer on the IFC starts and after the "Blower On" delay has completed, the indoor blower will energize and run at the 1st stage gas heating speed. The seven segment LED for example will alternately read:

HL1 = Gas heating, Stage 1

RRF = Airflow

550 = 600 calculated cfm (value shown x 10)

8. When the temperature raises enough to satisfy the thermostat setting, contacts R-W1 will open.
9. The gas valve relay will open, closing the gas valve. The inducer will continue to run for approximately 5 seconds to remove any combustion byproducts from inside the furnace.
10. The indoor blower continues to run to remove heat from the heat exchangers. The blower off time is field adjustable through the IFC menu setup option. The seven segment LED will read "i dL" = Idle, no thermostat demand.

2nd Stage Gas Heating

Note: 2nd stage heating cannot operate without 1st stage operation.

1. R – W1 contacts close on the thermostat sending 24Vac to the W1 low voltage terminal of the IFC. Technician should read 24Vac from W1 to B/C. The seven segment LED will read "HL 1"
2. The IFC performs a self-check routine and then confirms:
 - a. Condensate pressure switch and Inducer limit switch are proved closed by sending 24Vac out the HLO terminal and monitoring the ILI (1) input.
 - b. Flame roll-out switches (FRS) 1 and 2, main thermal limit (TCO), and any reverse air flow (RAF) switches are closed by sending 24Vac out the HLO (4) terminal and monitoring the HLI (11) input.
 - c. Pressure switch 1 (PS1) and pressure switch 2 (PS2) are proved open by sending 24Vac out the HLO terminal, through the limit switches, and monitoring the PS1 (3) and PS2 (7) inputs.

Note: If a thermal limit is open, 24Vac will not be present at either pressure switch.
3. After steps a, b, and c are confirmed, the inducer relay is closed energizing 1st stage inducer. As the inducer ramps up, PS1 will close.
4. When PS1 closes, the ignitor relay on the IFC will close. The ignitor is energized and warm up is approximately 20 seconds.
5. After the ignitor warm up, the 1st stage gas valve relay is closed, energizing the 1st stage gas valve solenoid to allow ignition.
6. The first burner will ignite and flame will crossover to the remaining burners, establishing current to the flame

sensor. Flame sensing must take place within 4 seconds.

Note: *There are two flame sense pads located on the IFC, marked "FP". To measure the flame current, use a VOM set to DC volts. 1Vdc = 1 micro-amp. Flame current will vary depending on the type of meter used. Typical flame current ranges from 0.75 to 3.0 micro-amps (0.75 to 3 Vdc).*

7. Once flame sense has been achieved, a timer on the IFC starts and after the "Blower On" delay has completed, the indoor blower will energize and run at the 1st stage gas heating speed. The seven segment LED for example will alternately read:

$H\bar{L}1$ = Gas heating, Stage 1

RrF = Airflow

$\bar{0}5\bar{0}$ = 600 calculated cfm (value shown x 10)

8. R-W2 contacts close on the thermostat sending 24Vac to the W2 low voltage terminal of the IFC. Technician should read 24Vac from W2 to B/C. The seven segment LED will read " $H\bar{L}2$ ".
9. The IFC then energizes the 2nd stage inducer relay. The inducer ramps to 2nd stage, the second stage gas valve relay on the IFC closes, energizing second stage gas valve. The indoor blower motor will ramp up to the 2nd stage gas heating speed. The seven segment LED for example will alternately read:

$H\bar{L}2$ = Gas heating, Stage 2

RrF = Airflow

123 = 1230 calculated cfm (value shown x 10)

10. The IFC monitors PS2 for closure and if PS2 does not close within 45 seconds, a PS2 open error will be declared and the furnace will operate in 1st stage. If PS2 closes, 2nd stage gas heating will continue until the thermostat R-W2 contacts open.

Note: *If PS2 does not close within the 45 second time, the IFC will wait 10 minutes and repeat step 9. If on the third attempt during the same heating call, PS2 does not close within the 45 second proving time, the unit will lock out 2nd stage until the heating calls are removed or the power is cycled to the furnace.*

11. When the temperature raises enough to satisfy the thermostat setting, contacts R-W2 will open, 2nd stage gas valve will close, the indoor blower motor will ramp down to 1st stage, and the unit will continue to run until R-W1 contacts open.
12. When the temperature raises enough to satisfy the thermostat setting, contacts R-W1 will open.
13. The gas valve relay will open, closing the gas valve. The inducer will continue to run for approximately 5 seconds to remove any combustion byproducts from inside the furnace.
14. The indoor blower continues to run to remove heat from the heat exchangers. This blower off time is field adjustable through the IFC menu setup option. The seven segment LED will read " $i\ dL$ " = Idle, no thermostat demand.

Single Stage Cooling

1. R-Y1-G contacts on the thermostat close sending 24Vac to the Y1 and G low voltage terminals on the IFC. Technician should read 24Vac between Y1-B/C and between G-B/C.

Note: *Factory supplied Y1-O jumper must remain in place for proper seven segment LED readout. If removed, seven segment LED will read "HP 1".*

2. 24Vac is sent to the OD unit via thermostat wiring.
3. The indoor blower ramps to the cooling airflow. The seven segment LED for example will alternately read:

$\bar{C}L1$ = Cooling, Stage 1

RrF = Airflow

$\bar{0}8\bar{0}$ = 800 calculated cfm (value shown x 10)

4. When the temperature is lowered enough to satisfy the thermostat setting, contacts R-Y1-G will open.
5. The OD unit shuts off and the indoor blower shuts off, unless a blower off delay has been enabled in the IFC setup menu options. The seven segment LED will read " $i\ dL$ " = Idle, no thermostat demand.

Two Stage Cooling

1. R-Y1-G contacts on the thermostat close sending 24Vac to the Y1 and G low voltage terminals on the IFC. Technician should read 24Vac between Y1-B/C and between G-B/C.

Note: *Factory supplied Y1-O jumper must remain in place for proper seven segment LED readout. If removed, seven segment LED will read "HP 1".*

2. 24Vac is sent to the OD unit via thermostat wiring energizing 1st stage compressor operation.
3. The indoor blower ramps to the 1st stage cooling airflow. The seven segment LED for example will alternately read:

$\bar{C}L1$ = Cooling, Stage 1

RrF = Airflow

$\bar{0}8\bar{0}$ = 800 calculated cfm (value shown x 10)

4. R-Y2 contact on the thermostat closes sending 24Vac to Y2 low voltage terminal on the IFC. Technician should read 24Vac between Y2 and B/C.
5. 24Vac is sent to the OD unit via thermostat wiring.
6. The indoor airflow ramps to 2nd stage cooling airflow. The seven segment LED for example will read:

$\bar{C}L2$ = Cooling, Stage 2

RrF = Airflow

$15\bar{0}$ = 1600 calculated cfm (value shown x 10)

7. When the temperature is lowered enough to satisfy the thermostat setting, contacts R-Y1-Y2-G will open.
8. The OD unit shuts off and the indoor blower shuts off, unless a blower off delay has been enabled in the IFC setup menu options. The seven segment LED will read " $i\ dL$ " = Idle, no thermostat demand.

Periodic Servicing Requirements

1. General Inspection – *Examine the furnace installation annually for the following items:*
 - a. All flue product carrying areas external to the Furnace (i.e. chimney, vent connector) are clear and free of obstruction. A vent screen in the end of the Vent (flue) Pipe must be inspected for blockage annually, if applicable.
 - b. The vent connector is in place, slopes upward and is physically sound without holes or excessive corrosion.
 - c. The return air duct connection(s) is physically sound, is sealed to the Furnace and terminates outside the space containing the Furnace.
 - d. The physical support of the Furnace should be sound without sagging, cracks, gaps, etc., around the base so as to provide a seal between the support and the base.
2. Filters – Filters should be cleaned or replaced (with high velocity filters only), monthly and more frequently during high use times of the year such as midsummer or midwinter.
3. Blowers – The Blower size and speed determine the air volume delivered by the Furnace. The Blower motor bearings are factory lubricated and under normal operating conditions do not require servicing. Annual cleaning of the Blower wheel and housing is recommended for maximum air output, and this must be performed only by a qualified servicer or service agency.
4. Igniter – This unit has a special hot surface direct ignition device that automatically lights the burners. Please note that it is very fragile and should be handled with care.

⚠ CAUTION

Hot Surface!

**Failure to follow instructions below could result in minor to moderate injuries.
Do not touch igniter. It is extremely hot.**

5. Burner – Gas burners do not normally require scheduled servicing, however, accumulation of foreign material may cause a yellowing flame or delayed ignition. Either condition indicates that a service call is required. For best operation, burners must be cleaned annually using brushes and vacuum cleaner. Turn off gas and electric power supply. To clean burners, remove burner bottom plate (2 screws) and bottom burner bracket (2 screws). Twist burner towards slot, lift, and push forward away from orifice. Remove burners.

Alternate method — Remove manifold assembly, bottom burner plate, and bottom burner bracket. Remove burners.

Note: *Be careful NOT to break igniter when removing burners.*

Clean burners with brush and/ or vacuum cleaner. Reassemble parts by reversal of the above procedure.

Notes:

- *Natural gas units should not have any yellow tipped flames. This condition indicates that a service call is required. For best operation, burners must be cleaned annually using brushes and vacuum cleaner.*
- *On Propane units, due to variations in BTU content and altitude, servicing may be required at shorter intervals.*

6. Heat Exchanger/Flue Pipe – These items must be inspected for signs of corrosion, and/ or deterioration at the beginning of each heating season by a qualified service technician and cleaned annually for best operation. To clean flue gas passages, follow recommendations below:
 - a. Turn off gas and electric power supply.
 - b. Inspect flue pipe exterior for cracks, leaks, holes or leaky joints. Some discoloration of PVC pipe is normal.
 - c. Remove door from Furnace.
 - d. Inspect around insulation covering flue collector box. Inspect induced draft Blower connections from recuperative cell and to the flue pipe connection.
 - e. Remove burners. (See [Step 5.](#))
 - f. Use a mirror and flashlight to inspect interior of Heat Exchanger, be careful not to damage the Igniter, Flame Sensor or other components.
 - g. If any corrosion is present, the Heat Exchanger should be cleaned by a qualified service technician.
 - h. After inspection is complete replace burners and Furnace door.
 - i. Restore gas supply. Check for leaks using a soap solution. Restore electrical supply. Check unit for normal operation.
7. Cooling Coil Condensate Drain - If a cooling coil is installed with the Furnace, condensate drains should be checked and cleaned periodically to assure that condensate can drain freely from coil to drain. If condensate cannot drain freely water damage could occur.

About Trane and American Standard Heating and Air Conditioning

Trane and American Standard create comfortable, energy efficient indoor environments for residential applications. For more information, please visit www.trane.com or www.americanstandardair.com.



The manufacturer has a policy of continuous data improvement and it reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.