


Installer's Guide

Upflow/Horizontal Left/Right Gas-Fired, Single Stage Induced Draft Furnace with Variable Speed Blower Motor

Upflow, Horizontal Right/Left
(For use with Natural Gas only.)

Single Stage
L8V1A040U3VSAA
L8V1A060U3VSAA
L8V1B080U4VSAA
L8V1C100U5VSAA

*Note: This product complies with SJVAPCD 4905 and SCAQDMD 1111 with
NOx levels below 14 ng/J.*

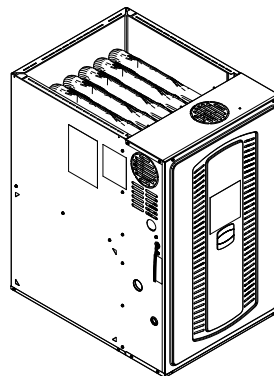

*Note: Graphics in this document are for
representation only. Actual model may
differ in appearance.*



18-CE15D1-1C-EN

▲ SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

SAFETY SECTION NON-CONDENSING FURNACES

Important: — This document pack contains a wiring diagram and service information. This is customer property and is to remain with this unit. Please return to service information pack upon completion of work.

⚠ WARNING

FIRE OR EXPLOSION HAZARD!

Failure to follow safety warnings exactly could result in a fire or explosion causing property damage, personal injury or loss of life.

— Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. — **WHAT TO DO IF YOU SMELL GAS**

- Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

⚠ WARNING

EXPLOSION HAZARD!

Failure to follow this Warning could result in property damage, personal injury or death. Install a gas detecting warning device in case of a gas leak. **NOTE: The manufacturer of your furnace does not test any detectors and makes no representations regarding any brand or type of detector.**

⚠ WARNING

FIRE OR EXPLOSION HAZARD!

Failure to follow the safety warnings exactly could result in serious injury, death, or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury, or loss of life.

⚠ WARNING

ELECTRICAL SHOCK, FIRE, OR EXPLOSION HAZARD!

Failure to follow this Warning could result in dangerous operation, property damage, severe personal injury, or death.

Improper servicing could result in dangerous operation, property damage, severe personal injury, or death.

- Before servicing, disconnect all electrical power to furnace.
- When servicing controls, label all wires prior to disconnection. Reconnect wires correctly.
- Verify proper operation after servicing.

⚠ WARNING

CARBON MONOXIDE POISONING HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

To ensure furnace is vented properly, do not replace factory supplied venting components with field fabricated parts. Fabricating parts can result in damaged vents and components allowing carbon monoxide to escape the venting system.

⚠ WARNING

CARBON MONOXIDE HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

When replacing a furnace, ensure the venting system is adequate for the new furnace.

⚠ WARNING

FIRE HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not install the furnace directly on carpeting, tile or other combustible material other than wood flooring.

⚠ WARNING**WARNING!**

This product can expose you to chemicals including lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov.

⚠ WARNING**ELECTRICAL SHOCK HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not bypass the door switch or panel loop by any permanent means.

⚠ WARNING**ELECTRICAL SHOCK HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not touch any components other than the Menu and Option buttons on the IFC.

⚠ WARNING**FIRE OR EXPLOSION HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do NOT attempt to manually light the furnace.

⚠ WARNING**CARBON MONOXIDE POISONING HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Follow the service and/or periodic maintenance instructions for the Furnace and venting system.

⚠ WARNING**CARBON MONOXIDE POISONING HAZARD!**

Failure to follow this Warning could result in serious personal injury or death.

Make sure that the blower door is in place and not ajar. Dangerous fumes could escape an improperly secured door.

⚠ WARNING**ELECTRICAL SHOCK HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Disconnect power to the unit before removing the blower door. Allow a minimum of 10 seconds for IFC power supply to discharge to 0 volts.

⚠ WARNING**SAFETY HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

These furnaces are not approved or intended for installation in manufactured (mobile) housing, trailers, or recreational vehicles.

⚠ WARNING**EXPLOSION HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

In the event that electrical, fuel, or mechanical failures occur, shut gas supply off at the manual gas valve located on the supply gas piping coming into the furnace before turning off the electrical power to the furnace. Contact the service agency designated by your dealer.

⚠ WARNING**EXPLOSION HAZARD!**

Failure to follow this Warning could result in property damage, serious personal injury, or death.

Do not store combustible materials, gasoline, or other flammable vapors or liquids near the unit.

⚠ WARNING**SAFETY HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not use semi-rigid metallic gas connectors (flexible gas lines) within the furnace cabinet.

⚠ WARNING

INSTALLATION WARNING — HIGH VOLTAGE MOVING PARTS!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Bodily injury can result from high voltage electrical components, fast moving fans, and combustible gas. For protection from these inherent hazards during installation and servicing, the main gas valve must be turned off and the electrical supply must be disconnected. If operating checks must be performed with the unit operating, it is the technician's responsibility to recognize these hazards and proceed safely.

⚠ WARNING

SAFETY HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not install the filter in the return duct directly above the furnace in horizontal applications. Install the filter remotely.

⚠ WARNING

SAFETY HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Turn the power to the furnace off before servicing filters to avoid contact with moving parts.

⚠ WARNING

CARBON MONOXIDE HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Furnace venting into an unlined masonry chimney or concrete chimney is prohibited.

⚠ WARNING

CARBON MONOXIDE HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

The chimney liner must be thoroughly inspected to insure no cracks or other potential areas for flue gas leaks are present in the liner. Liner leaks will result in early deterioration of the chimney.

⚠ WARNING

SHOCK HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

If a disconnect switch is present, it must always be locked in the open position before servicing the unit.

⚠ WARNING

OVERHEATING AND EXPLOSION HAZARD!

Failure to follow this Warning could result in property damage, personal injury or death.

Should overheating occur, or the gas supply fail to shut off, shut off the gas valve to the unit before shutting off the electrical supply.

⚠ CAUTION

IMPROPER VOLTAGE CONNECTION!

Failure to follow this Caution could result in property damage.

Do NOT connect the furnace line voltage to a GFCI protected circuit.

⚠ CAUTION

CORROSION WARNING!

Failure to follow this Caution could result in property damage or personal injury.

Do not install the furnace in a corrosive or contaminated atmosphere.

⚠ CAUTION

SHARP EDGE HAZARD!

Failure to follow this Caution could result in property damage or personal injury.

Be careful of sharp edges on equipment or any cuts made on sheet metal while installing or servicing.

⚠ CAUTION

BACKUP WRENCH REQUIRED!

Failure to follow this Caution could result in property damage or personal injury.

Use a backup wrench on the gas valve when installing gas piping to prevent damage to the gas valve and manifold assembly.

⚠ CAUTION

FREEZE CAUTION!

Failure to follow this Caution could result in property damage or personal injury. If complete furnace shutdown is done during the cold weather months, provisions must be taken to prevent freeze-up of all water pipes and water receptacles.

⚠ CAUTION

FREEZE CAUTION!

Failure to follow this Caution could result in property damage or personal injury. Whenever your house is to be vacant, arrange to have someone inspect your house for proper temperature. This is very important during freezing weather. If for any reason your furnace should fail to operate damage could result, such as frozen water pipes.

⚠ CAUTION

IGNITION FUNCTION!

Failure to follow this Caution may result in poor ignition characteristics. Maintain manifold pressure in high altitude installations.

⚠ CAUTION

WATER DAMAGE!

Failure to follow this Caution could result in property damage or personal injury. It is recommended that an external overflow drain pan be installed in all applications over a finished ceiling to prevent property damage or personal injury from leaking condensate.

⚠ CAUTION

HOT SURFACE!

Failure to follow this Caution could result in personal injury. Do NOT touch igniter. It is extremely hot.

⚠ CAUTION

FURNACE SERVICE CAUTION!

Failure to follow this Caution could result in property damage or personal injury. Label all wires prior to disconnection when servicing controls. Verify proper operation after servicing. Wiring errors can cause improper and dangerous operation.

⚠ CAUTION

DO NOT USE AS CONSTRUCTION HEATER!

Failure to follow this Caution could result in property damage or personal injury. In order to prevent shortening its service life, the Furnace should NOT be used as a "Construction Heater".

⚠ CAUTION

WIRING INFORMATION!

Failure to follow this Caution could result in property damage or personal injury. The integrated furnace control is polarity sensitive. The hot leg of the 120 VAC power must be connected to the BLACK field lead.

⚠ CAUTION

EQUIPMENT DAMAGE!

UV light exposure can cause the plastic blower material to deteriorate which could lead to Blower Housing Damage. For units containing a plastic Blower Housing, Do NOT install third party Ultra-Violet Air Cleaners where the Blower Housing can be exposed to UV light.

For more information, visit www.trane.com and www.americanstandardair.com or contact your installing dealer.
6200 Troup Highway
Tyler, TX 75707

⚠ WARNING

**CARBON MONOXIDE POISONING
HAZARD!**

Failure to follow the steps outlined below for each appliance connected to the venting system being placed into operation could result in carbon monoxide poisoning or death.

The following steps shall be followed for each appliance connected to the venting system being placed into operation, while all other appliances connected to the venting system are not in operation:

- Inspect the venting system for proper size and horizontal pitch as required in the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and these instructions. Determine there is no blockage or restriction, leakage, corrosion or other deficiencies which could cause an unsafe condition.
- Close all doors and windows between the space in which the appliance(s) connected to the venting system are located. Also close fireplace dampers.
- Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans such as range hoods so they are operating at maximum speed. Do not operate a summer exhaust fan.
- Follow the lighting instructions. Place the appliance being inspected into operation. Adjust the thermostat so appliance is operating continuously.
- Test for spillage from draft hood equipped appliances at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle.
- If improper venting is observed during any of the above tests, the venting system must be corrected in accordance with the National Fuel Gas Code, ANSI Z221.1/NFPA 54.
- After it has been determined that each appliance connected to the venting system properly vents when tested, return all doors, windows, exhaust fans, etc. to their previous condition of use.

Table of Contents

Accessories.....	8	Electrical Connections	32
Document Pack Contents.....	8	Field Wiring	32
Furnace Installation Guidelines	9	General Start-up and Adjustment.....	34
Safety Practices and Precautions.....	9	Preliminary Inspections	34
General Guidelines	9	Lighting Instructions.....	34
Locations and Clearances	10	Control and Safety Switch Adjustment	34
Outline Drawing	11	Furnace Combustion Air Exhaust Options.....	35
Furnace General Installation.....	12	Inducer Venting Conversion Instructions	36
Furnace Panel Removal	12	Integrated Furnace Control Menu.....	39
Horizontal Installation in an Attic or Crawlspace	12	Belly Band Location.....	41
Gas Piping	13	Integrated Furnace Control Display Codes	42
Combustion and Input Check.....	15	Setting Airflow	43
Gas Valve Adjustment.....	16	Sequence of Operation	44
High Altitude Derate.....	17		
General Venting	18		
Air for Combustion and Ventilation.....	20		
Duct Connections.....	23		
Return Air Filters	30		

Accessories


Table 1. Accessories

Model Number	Description	Use with
BAYHANG	Horizontal Hanging Kit	All Furnaces
BAYLIFTB	Dual Return Kit (B size extension)	B Cabinet Furnaces
BAYLIFTC	Dual Return Kit (C size extension)	C Cabinet Furnaces
BAYSF1165AA ^(a)	1" SlimFit Box with MERV 4 Filter	All Furnaces
BAYSF1255BA	1" SlimFit Filter and Insulated Frame	All furnaces when used in side return application B Cabinet furnaces only when in bottom return application
FLRSF1255	1" Filter replacement (Qty 12)	BAYSF1255BA
BAYVENT800B	Masonry Chimney Vent Kit	All furnaces
PIPO2095	U fitting for gas piping	All Furnaces for right hand gas entry
BAYHALTMOD0004	High Altitude Module	L8V1C100U5VS*
BAYHALTMOD0005	High Altitude Module	L8V1A040U3VS*
BAYHALTMOD0006	High Altitude Module	L8V1A060U3VS*
BAYHALTMOD0007	High Altitude Module	L8V1B080U4VS*

^(a) Airflow greater than 1600 CFM requires dual returns

Document Pack Contents

Item	Qty.	Description
1	1	Plug — Gas
2	1	Combustion Air Duct Note: For L8V1C100U5VS Only ^(a)
3	1	Installer's Guide
4	1	Service Facts
5	1	Owner Guide
6	1	Limited Warranty
7	2	Tinnerman Clips (not pictured) Note: Tinnerman Clips should be kept with unit and are used if the door panel flange hole (s) becomes stripped.

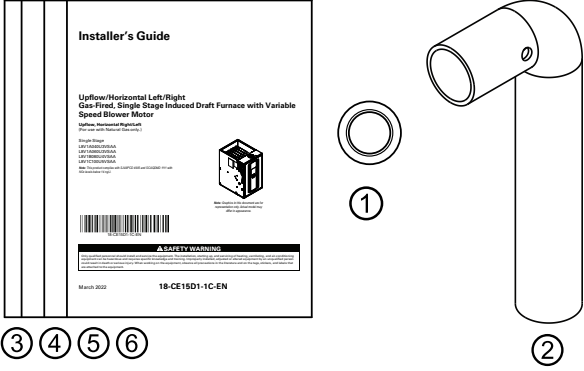

^(a) Future C100 furnaces with the Burner Box limit on the bottom DO NOT require the Combustion Air Duct.

Furnace Installation Guidelines

The following sections give general guidelines for the installation of the gas furnaces.

Safety Practices and Precautions

The following safety practices and precautions must be followed during the installation, servicing, and operation of this Furnace.

1. Use only with the type gas approved for this Furnace. Refer to the Furnace rating plate.
2. Install the Furnace only in a location and position as specified in "Locations and Clearances" of these instructions.
3. Provide adequate combustion and ventilation air to the Furnace space as specified in "Air for Combustion and Ventilation" of these instructions.
4. Combustion products must be discharged outdoors. Connect this Furnace to an approved vent system only, as specified in the "Venting" section of these instructions.
5. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections, as specified in the "Gas Piping" section of these instructions.
6. Always install the Furnace to operate within the Furnace's intended temperature-rise range with a duct system which has an external static pressure within the allowable range, as specified on the unit rating plate. Airflow within temperature rise for cfm versus static is shown in the Service Facts accompanying this Furnace.
7. When a Furnace is installed so that the supply ducts carry air circulated by the Furnace to areas outside the space containing the Furnace, the return air shall also be handled by a duct(s) sealed to the Furnace casing and terminating outside the space containing the Furnace.
8. A gas-fired Furnace for installation in a residential garage must be installed as specified in "Location and Clearances" section of these instructions.
9. The Furnace return air temperature range is between 55 and 80 Fahrenheit.
10. The furnace, under any circumstance may NOT be used during construction phase of the building or structure.

11. In the Commonwealth of Massachusetts, this product must be gas piped by a Licensed Plumber or Gas Fitter.

This Furnace is certified to leak 1% or less of nominal air conditioning CFM delivered when pressurized to .5" water column with all inlets, outlets, and drains sealed.

General Guidelines

The manufacturer assumes no responsibility for equipment installed in violation of any code or regulation.

It is recommended that Manual J of the Air Conditioning Contractors Association (ACCA) or A.R.I. 230 be followed in estimating heating requirements. When estimating heating requirements for installation at Altitudes above 2000 ft., remember the gas input must be reduced. See Combustion and Input Check.

Material in this shipment has been inspected at the factory and released to the transportation agency without known damage. Inspect exterior of carton for evidence of rough handling in shipment. Unpack carefully after moving equipment to approximate location. If damage to contents is found, report the damage immediately to the delivering agency.

Codes and local utility requirements governing the installation of gas fired equipment, wiring, plumbing, and flue connections must be adhered to. In the absence of local codes, the installation must conform with latest edition of the National Fuel Gas Code ANSI Z223.1 / NFPA 54. The latest code may be obtained from the American Gas Association Laboratories, 400 N. Capitol St. NW, Washington D.C. 20001. 1-800-699-9277 or www.aga.org.

These furnaces have been classified as Fan Assisted Combustion system CATEGORY I furnaces as required by ANSI Z21.47 "latest edition". Therefore they do not require any special provisions for venting other than what is indicated in these instructions.

Warning: These furnaces are not approved or intended for installation in manufactured (mobile) housing, trailers, or recreational vehicles.

Locations and Clearances

The location of the Furnace is normally selected by the architect, the builder, or the installer. However, before the Furnace is moved into place, be sure to consider the following requirements:

1. Is the location selected as near the chimney or vent and as centralized for heat distribution as practical?
2. Do all clearances between the Furnace and enclosure equal or exceed the minimums stated in Clearance Table below?

Minimum clearance to combustible materials	
<p>INSTALLATION CLEARANCE TO COMBUSTIBLE CONSTRUCTION CLEARANCE IN INCHES.</p> <p>THIS FURNACE IS APPROVED FOR UPFLOW AND HORIZONTAL APPLICATIONS ONLY.</p>	
<p>FOR UPFLOW APPLICATIONS 14.5" CABINETS, ALL BTU: 1" SIDES, 1" TOP 17.5" CABINETS, ALL BTU: 1" SIDES, 1" TOP 21.0" CABINETS, ALL BTU: 1" SIDES, 1" TOP</p>	<p>CLEARANCE ARROWS DO NOT CHANGE WITH FURNACE ORIENTATION.</p>
<p>FOR HORIZONTAL APPLICATIONS 14.5" CABINETS, ALL BTU: 1" SIDES, 1" TOP 17.5" CABINETS, ALL BTU: 1" SIDES, 1" TOP(L8X ONLY) 17.5" CABINETS, ALL BTU: 3" SIDES, 1" TOP* 21.0" CABINETS, ALL BTU: 1" SIDES, 1" TOP*</p>	
<p>* MINIMUM 1-1/2" AIR CLEARANCE IS REQUIRED UNDER THE FURNACE IN HORIZONTAL FOR PROPER OPERATION. SUPPORT MATERIAL UNDERNEATH THE FURNACE MUST NOT BLOCK MORE THAN HALF OF THE VENT OPENING AREA.</p>	
<p>NOTES: 1: MUST FOLLOW NATIONAL FUEL & GAS CODES FOR INSTALLS. 2: TYPE B VENT CLEARANCE IS 1". 3: SINGLE WALL VENT NOT PERMITTED. 4: "SIDE" IN HORIZONTAL ARE THE SUPPLY AND RETURN.</p>	
<p>LINE CONTACT ONLY PERMISSIBLE BETWEEN LINES FORMED BY INTERSECTIONS OF THE TOP AND TWO SIDES OF THE FURNACE JACKET, AND BUILDING JOISTS, STUDS OR FRAMING.</p>	
<p>D346216P01 REV D </p>	

3. Is there sufficient space for servicing the Furnace and other equipment? A minimum of 24 inches front accessibility to the Furnace must be provided. Any access door or panel must permit removal of the largest component.
4. Are there at least 3 inches of clearance between the Furnace combustion air openings in the front panel and any closed panel or door provided?
5. Are the ventilation and combustion air openings large enough and will they remain unobstructed? If outside air is used, are the openings set 12" above the highest snow accumulation level?
6. Allow sufficient height in supply plenum above the furnace to provide for cooling coil installation, if the cooling coil is not installed at the time of this Furnace installation.
7. The Furnace shall be installed so electrical components are protected from water.
8. If the Furnace is installed in a garage, it must be installed so that the burners, and the ignition source are located not less than 18 inches above the floor and the Furnace must be located or protected to avoid physical damage from vehicles.
9. The gas furnace must not be located where excessive exposure to contaminated combustion air will result in safety and performance related problems. Avoid the following known contaminants:
 - a. Permanent wave solutions
 - b. Chlorinated waxes and cleaners
 - c. Chlorine based swimming pool chemicals
 - d. Water softening chemicals
 - e. De-icing salts or chemicals
 - f. Carbon tetrachloride
 - g. Halogen type refrigerants
 - h. Cleaning solvents (such as perchloroethylene)
 - i. Printing inks, paint removers, varnishes, etc.
 - j. Hydrochloric acid
 - k. Cements and glues
 - l. Antistatic fabric softeners for clothes dryers
 - m. Masonry acid washing materials


Furnace General Installation

The following sections give general instructions for the installation of the gas furnaces.

Furnace Panel Removal

Note: For the L8V1 furnace, a 1/4" nut driver is required to remove the two screws at the top of the front panel. The front panel can then be removed by lifting upwards.

Note: Tinnerman clips are provided in the doc pack if the door panel flange hole(s) becomes stripped.

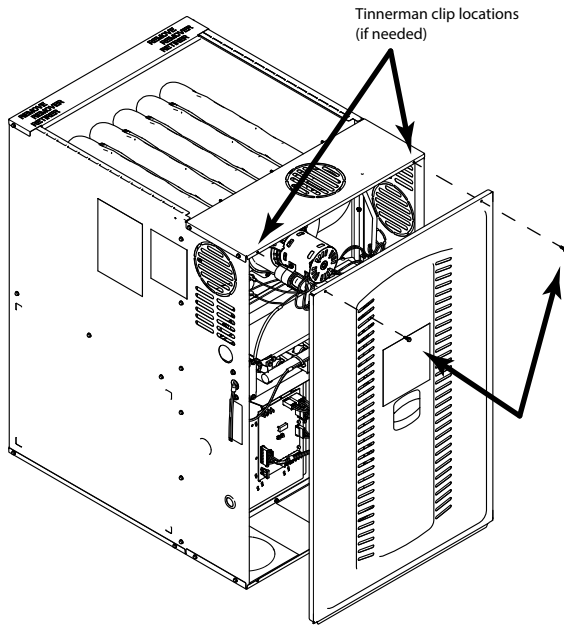

Horizontal Installation in an Attic or Crawlspace


The non-condensing furnace may be installed in an attic or crawl space in the horizontal position by placing the furnace on its left or right side (as viewed from the front in the vertical position). The horizontal furnace installation in an attic should be on a service platform large enough to allow for proper clearances on all sides and service access to the front of the furnace. See the "Locations and Clearances," p. 10. Minimum 1.5" air clearance is required under the furnace when in horizontal. Support material if underneath the furnace, must not block more than half of the vent opening area. See Figure 1, p. 12. Line contact is only permissible between lines formed by intersections of the top and two sides of the furnace casing and building joists, studs, or framing.

The furnace may be placed horizontally in a crawl space on a pad or other noncombustible material. Place blocks underneath to support the furnace and raise the unit for sufficient protection from moisture.

The furnace may be installed in a hanging position using straps. The furnace should be supported at both ends and have an additional support in the center of the furnace in back.





Figure 1. Horizontal Furnace

WHEN SUSPENDING THE HORIZONTAL FURNACE, IT SHOULD BE SUSPENDED BY ATTACHING TO THE CABINET IN THE PLACES SHOWN.


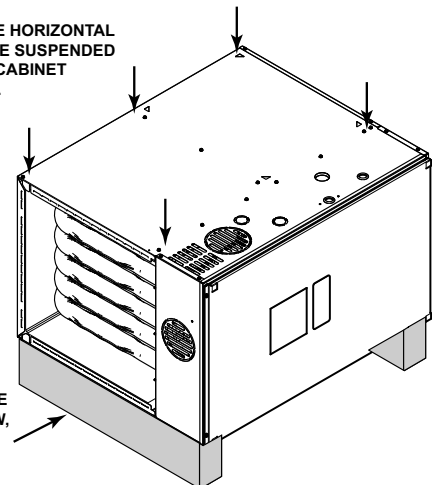


WHEN SUPPORTING THE FURNACE FROM BELOW, SUPPORT FRONT TO BACK (AS SHOWN) OR SIDE TO SIDE.

Gas Piping
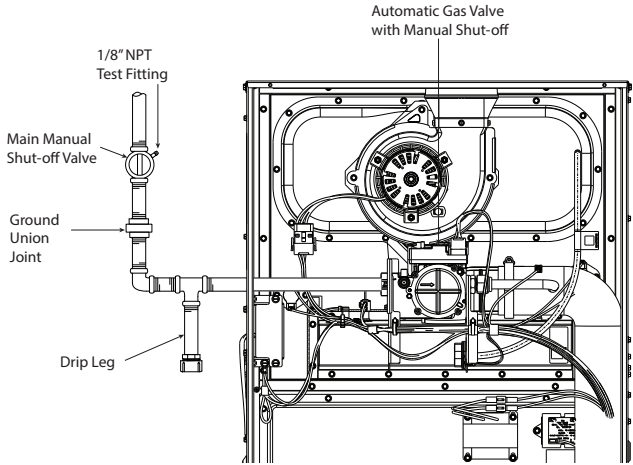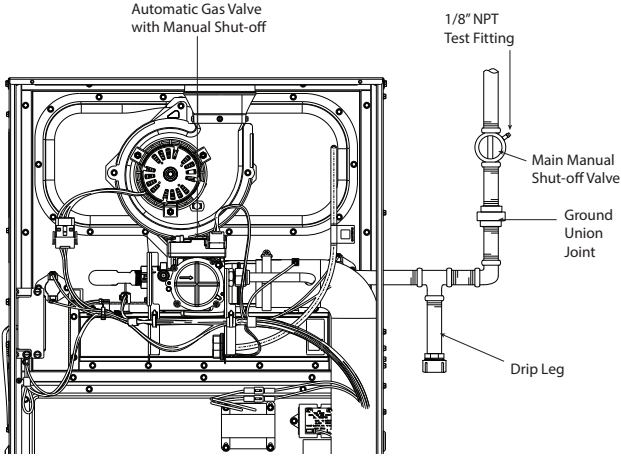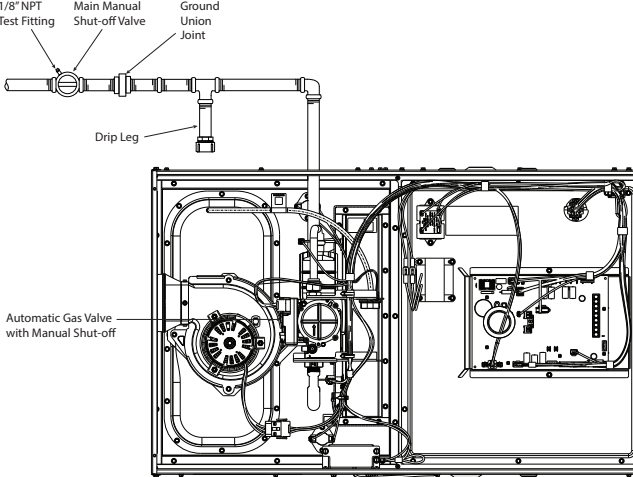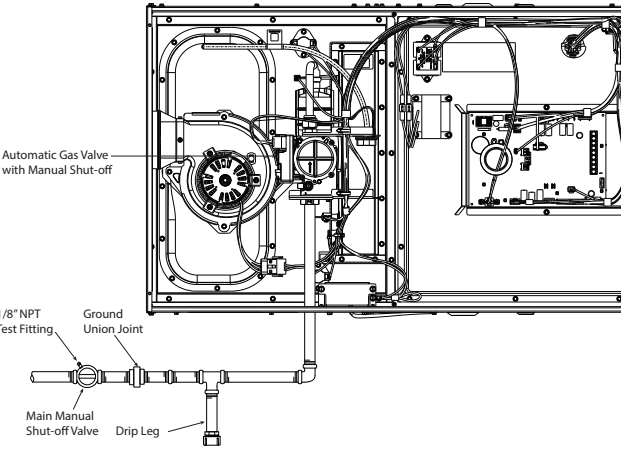
<p>Important: The furnace default is left side gas piping.</p> <p>Note: For ease of installation, optional accessory part PIP02095 is recommended for gas piping entering the right side of the furnace.</p>	
<p>Furnace in upflow orientation with gas piping on left</p> 	<p>Furnace in upflow orientation with gas piping on right</p> <p>Note: For ease of installation, optional accessory part PIP02095 is recommended for gas piping entering the right side of the furnace in the upflow orientation.</p> 
<p>Note: For ease of installation, optional accessory part PIP02095 is recommended for gas piping entering the right side of the furnace.</p>	
<p>Furnace in horizontal left orientation with gas piping out top</p> <p>Note: For ease of installation, optional accessory part PIP02095 is recommended for gas piping entering the top of the furnace in the horizontal left position.</p> 	<p>Furnace in horizontal left orientation with gas piping out bottom</p> 

Furnace General Installation

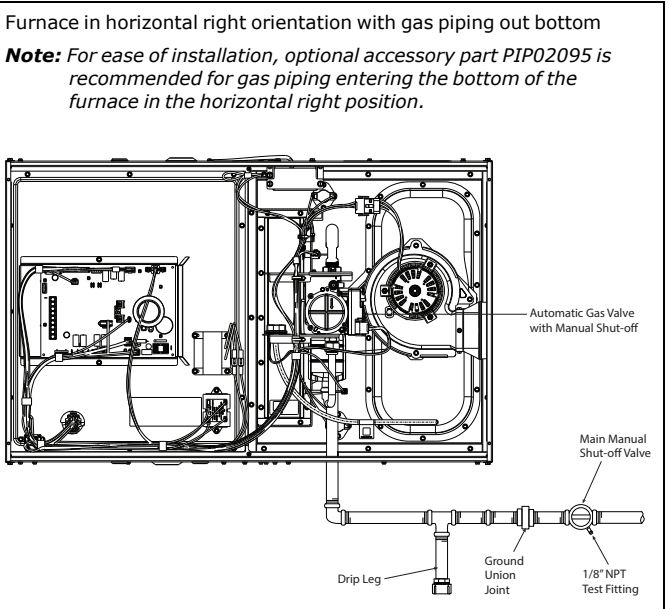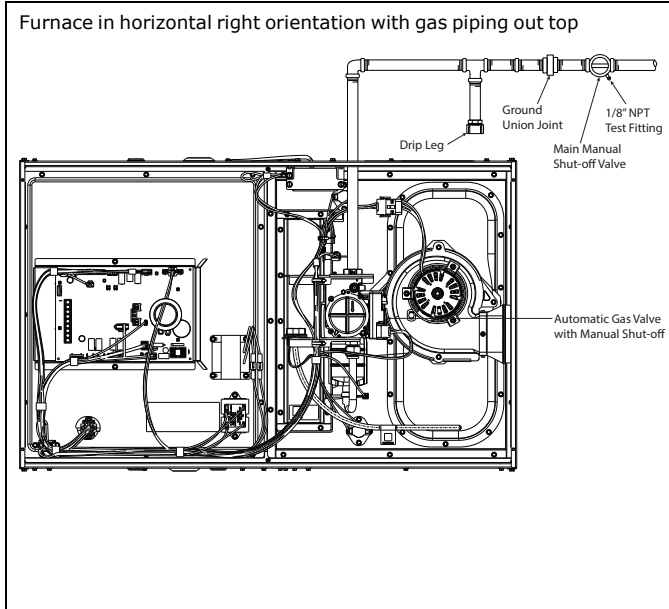

The furnace is shipped standard for left side installation of gas piping. A cutout with plug is provided on the right side for an alternate gas piping arrangement.

The installation of piping shall be in accordance with piping codes and the regulations of the local gas company. Pipe joint compound must be resistant to the chemical reaction with liquefied petroleum gases.

Important: If local codes allow the use of flexible gas appliance connector, always use a new listed connector. Do not use a connector which has previously serviced another gas appliance.

Refer to the piping table for delivery sizes. Connect gas supply to the unit, using a ground joint union and a manual shut-off valve. National codes require a condensation drip leg to be installed ahead of the gas valve.

The furnace and its individual shut-off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa).

The furnace must be isolated from the gas supply piping by closing its individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psig (3.5 kPa).

Note: Maximum pressure to the gas valve for natural gas is 13.8" W.C. Minimum pressure is 5.0" W.C.

NATURAL GAS ONLY

TABLE OF CUBIC FEET PER HOUR OF GAS FOR VARIOUS PIPE SIZES AND LENGTHS

PIPE SIZE	LENGTH OF PIPE						
	10	20	30	40	50	60	70
1/2	131	90	72	62	55	50	46
3/4	273	188	151	129	114	104	95
1	514	353	284	243	215	195	179
1-1/4	1060	726	583	499	442	400	368

This table is based on Pressure Drop of 0.3 inch W.C. and 0.6 SP. GR. Gas

All gas fittings must be checked for leaks using a soapy solution before lighting the furnace. **DO NOT CHECK WITH AN OPEN FLAME!**

ORIFICE SIZES

INPUT RATING BTUH	NUMBER OF BURNERS	MAIN BURNER ORIFICE DRILL SIZE
		NAT. GAS
40,000	1	1 - 3.2 mm
60,000	1	1 - #23
80,000	1	1 - #15
100,000	1	1 - #11

Combustion and Input Check

1. Make sure all gas appliances are off except the furnace.
2. Clock the gas meter with the furnace operating (determine the dial rating of the meter) for one revolution.
3. Match the "Sec" column in the gas flow table with the time clocked.
4. Read the "Flow" column opposite the number of seconds clocked.
5. Use the following factors *if necessary*:
 - a. For 1 Cu. Ft. Dial Gas Flow CFH = Chart Flow Reading ÷ 2
 - b. For 1/2 Cu Ft. Dial Gas Flow CFH = Chart Flow Reading ÷ 4
 - c. For 5 Cu. Ft. Dial Gas Flow CFH = 10X Chart Flow Reading ÷ 4
6. Multiply the final figure by the heating value of the gas obtained from the utility company and compare to the nameplate rating. This must not exceed the nameplate rating.

Gas Flow in Cubic Feet Per Hour							
2 Cubic Foot Dial							
Sec.	Flow	Sec.	Flow	Sec.	Flow	Sec.	Flow
10	732	31	236	52	141	86	85
11	666	32	229	53	138	88	83
12	610	33	222	54	136	90	81
13	563	34	215	55	133	94	78
14	523	35	209	56	131	98	75
15	488	36	203	57	128	100	73
16	458	37	198	58	126	104	70
17	431	38	193	59	124	108	68
18	407	39	188	60	122	112	65
19	385	40	183	62	118	116	63
20	366	41	179	64	114	120	61
21	349	42	174	66	111	130	56
22	333	43	170	68	108	140	52
23	318	44	166	70	105	150	49
24	305	45	163	72	102	160	46
25	293	46	159	74	99	170	43
26	282	47	156	76	96	180	41
27	271	48	153	78	94	190	39
28	262	49	149	80	92	200	37
29	253	50	146	82	89		
30	244	51	144	84	87		

Gas Valve Adjustment

Note: The gas valve supplied with this unit has been calibrated specifically for the Ultra Lo-NOx ignition system. Adjustment is not typically necessary.

Manifold pressure adjustments are only recommended when there are ignition light-off, flame stabilization, or tonal issues with the furnace.


To adjust the manifold pressure:

1. Turn off all electrical power to the system.
2. Attach a manifold pressure gauge with flexible tubing to the outlet pressure boss marked "OUT P" on White- Rodgers gas valve model 36J.
3. Loosen (Do Not remove) the pressure tap test set screw one turn with 3/32" hex wrench.
 - a. The pressure tap adjustment kit (KIT07611) contains a 3/32" hex wrench, a 5/16" hose and a connector and can be ordered through Global Parts.
4. Turn on system power and make a call for heating.
5. To adjust the run manifold pressure, remove the high (HI) adjustment regulator cover screw.
 - a. To increase outlet pressure, turn the regulator adjust screw clockwise.
 - b. To decrease outlet pressure, turn the regulator adjust screw counterclockwise.
 - c. Adjust regulator until pressure shown on manometer matches the pressure specified in the table.

The input of no more than nameplate rating and no less than 93% of the nameplate rating, unless the unit is derated for high altitude.
 - d. Replace and tighten the regulator cover screw securely.
6. To adjust the light off manifold pressure, remove the low (LO) adjustment regulator cover screw.
 - a. To increase outlet pressure, turn the regulator adjust screw clockwise.
 - b. To decrease outlet pressure, turn the regulator adjust screw counterclockwise.
 - c. Adjust regulator until pressure shown on manometer matches the pressure specified in the table.

The input of no more than nameplate rating and no less than 93% of the nameplate rating, unless the unit is derated for high altitude.
 - d. Replace and tighten the regulator cover screw securely.
7. Cycle the furnace several times to verify regulator setting.
 - a. Repeat steps 5-7 if needed.
8. Turn off all electrical power to the system.
9. Remove the manometer and flexible tubing and tighten the pressure tap screw.
10. Using a leak detection solution or soap suds, check for leaks at the pressure outlet boss and pressure tap test screw.
11. Turn on system power and check operation of the unit.

White-Rodgers 36J

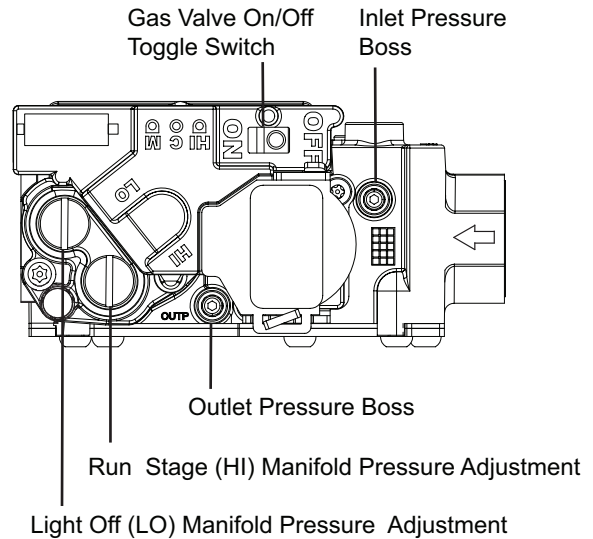

Maximum and Minimum INLET Pressure (inches w.c.)

Natural Gas	
Maximum	13.8
Minimum	5

Recommended Fuel Manifold Settings (inches w.c.)

L8V1A040U3VS	2.1" Light-Off (LO) / 3.0" Run (HI)
L8V1A060U3VS	
L8V1B080U4VS	
L8V1C100U5VS	

Orifice sizes for Natural Gas

L8V1A040U3VS	3.2 mm
L8V1A060U3VS	#23
L8V1B080U4VS	#15
L8V1C100U5VS	#11

Note: Adjust RUN / (HI) manifold pressure to ~ 2.7" if high pitch combustion sound develops.

High Altitude Derate

<p>Input ratings (BTUH) of these Furnaces are based on sea level operation and should not be changed at elevations up to 2,000 ft. (610 m).</p> <p>If the installation is 2,000 ft. (610 m) or above, the Furnace input rate (BTUH) shall be reduced 4% for each 1,000 ft. above sea level.</p> <p>The Furnace input rate shall be checked by clocking the gas flow rate (CFH) and multiplying by the heating value obtained from the local utility supplier for the gas being delivered at the installed altitude. Input rate changes can be made by adjusting the Manifold Pressure (min 2.7 - max 3.0 in. W.C. - Natural Gas).</p> <p>If the desired input rate can not be achieved with a change in Manifold Pressure, then the orifices must be changed.</p>	<table border="1"> <thead> <tr> <th colspan="2">PART NUMBERS FOR REPLACEMENT ORIFICES</th> </tr> <tr> <th>DRILL SIZE</th> <th>J-TUBE PART NUMBER</th> </tr> </thead> <tbody> <tr> <td>A040 = 3.2 mm</td> <td>TUB15871</td> </tr> <tr> <td>A060 = #23</td> <td>TUB15353</td> </tr> <tr> <td>B080 = #15</td> <td>TUB15443</td> </tr> <tr> <td>C100 = #11</td> <td>TUB15780</td> </tr> </tbody> </table>	PART NUMBERS FOR REPLACEMENT ORIFICES		DRILL SIZE	J-TUBE PART NUMBER	A040 = 3.2 mm	TUB15871	A060 = #23	TUB15353	B080 = #15	TUB15443	C100 = #11	TUB15780						
PART NUMBERS FOR REPLACEMENT ORIFICES																			
DRILL SIZE	J-TUBE PART NUMBER																		
A040 = 3.2 mm	TUB15871																		
A060 = #23	TUB15353																		
B080 = #15	TUB15443																		
C100 = #11	TUB15780																		
<p>Turn the main Gas Valve toggle switch within the unit to the "OFF" position. Turn the external gas valve to "ON". Purge the air from the gas lines. After purging, check all gas connections for leaks with a soapy solution – DO NOT CHECK WITH AN OPEN FLAME. Allow 5 minutes for any gas that might have escaped to dissipate.</p>	<p>Note: For furnaces requiring modifications other than manifold pressure adjustment for installation at high altitude, installation of this furnace at altitudes above 2000 ft (610 m) shall be made in accordance with the listed High Altitude Conversion Kit available with this furnace.</p> <table border="1"> <thead> <tr> <th colspan="3">High Altitude Kits</th> </tr> <tr> <th>Attributes</th> <th>0 - 4000 ft</th> <th>4001 - 7800 ft</th> </tr> </thead> <tbody> <tr> <td>A040</td> <td>N/A</td> <td>BAYHALTMOD0005</td> </tr> <tr> <td>A060</td> <td>N/A</td> <td>BAYHALTMOD0006</td> </tr> <tr> <td>B080</td> <td>N/A</td> <td>BAYHALTMOD0007</td> </tr> <tr> <td>C100</td> <td>N/A</td> <td>BAYHALTMOD0004</td> </tr> </tbody> </table>	High Altitude Kits			Attributes	0 - 4000 ft	4001 - 7800 ft	A040	N/A	BAYHALTMOD0005	A060	N/A	BAYHALTMOD0006	B080	N/A	BAYHALTMOD0007	C100	N/A	BAYHALTMOD0004
High Altitude Kits																			
Attributes	0 - 4000 ft	4001 - 7800 ft																	
A040	N/A	BAYHALTMOD0005																	
A060	N/A	BAYHALTMOD0006																	
B080	N/A	BAYHALTMOD0007																	
C100	N/A	BAYHALTMOD0004																	

General Venting

VENT PIPING

These furnaces have been classified as Fan-Assisted Combustion System, Category I furnaces under the "latest edition" provisions of ANSI Z21.47 standards. Category I furnaces operate with a non-positive vent static pressure and with a flue loss of not less than 17 percent.

Important: To reduce the combustion back pressure tones that may occur, the minimum overall length of B-vent must be 7 feet.

Multistory and common venting are permitted for these furnaces. Venting systems shall be in accordance with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, local codes, and this installation manual.

Side wall termination with the use of an add-on draft inducer is not allowed with this furnace.

The furnace shall be connected to a factory built chimney or vent complying with a recognized standard, or a masonry or concrete chimney lined with a lining material acceptable to the authority having jurisdiction.

VENTING INTO A MASONRY CHIMNEY

If the chimney is oversized, the liner is inadequate, or flue-gas condensation is a problem in your area, consider using the chimney as a pathway or chase for type "B" vent or flexible vent liner. If flexible liner material is used, size the vent using the "B" vent tables, then reduce the maximum capacity by 20% (multiply 0.80 times the maximum capacity). Masonry Chimney Kit BAYVENT800B may be used with these furnaces (**Upflow model furnaces only**) to allow venting into a masonry chimney. Refer to the BAYVENT800B Installer's Guide for application requirements.

INTERNAL MASONRY CHIMNEYS

Venting of fan assisted appliances into a lined, internal masonry chimney is allowed only if it is common vented with at least one natural draft appliance; **OR**, if the chimney is lined with type "B", double wall vent or suitable flexible liner material

⚠ WARNING

Safety Hazard!

Failure to follow this warning could result in carbon monoxide poisoning or death.

The chimney liner must be thoroughly inspected to insure no cracks or other potential areas for flue gas leaks are present in the liner. Liner leaks will result in early deterioration of the chimney.

The following section does not apply if BAYVENT800B (Masonry Chimney Vent Kit) is used. All instructions with the kit must be followed.

Masonry Chimney Venting				
Type Furnace	Tile Lined Chimney		Chimney Lining	
	Internal	External	"B" Vent	Flexible Metal Liner
Single Fan Assist	No	No	Yes	Yes ^(a)
Fan Assist + Fan Assist	No	No	Yes	Yes ^(a)
Fan Assist + Natural	Yes	No	Yes	Yes ^(a)

^(a) Flexible chimney liner size is determined by using the type "B" vent size for the available BTUH input, then reducing the maximum capacity by 20% (multiply maximum capacity times 0.80). The minimum capacity is the same as shown in the "B" vent tables.

EXTERNAL MASONRY CHIMNEY

Venting of fan assisted appliances into external chimneys (one or more walls exposed to outdoor temperatures), requires the chimney be lined with type "B", double wall vent or suitable flexible chimney liner material. This applies in all combinations of common venting as well as for fan assisted appliances vented alone.

The following installation practices are recommended to minimize corrosion caused by condensation of flue products in the furnace and flue gas system.

1. Avoid an excessive number of bends.
2. Horizontal runs should pitch upward at least 1/4" per foot.
3. Horizontal runs should be as short as possible.
4. All vent pipe or connectors should be securely supported and must be inserted into, but not beyond the inside wall at the chimney vent.
5. When vent connections must pass through walls or partitions of combustible material, a thimble must be used and installed according to local codes.
6. Vent pipe through the roof should be extended to a height determined by National Fuel Gas Code or local codes. It should be capped properly to prevent rain water from entering the vent. Roof exit should be waterproofed.
7. Use type "B" double wall vent when vent pipe is routed through cool spaces (below 60° F.).
8. Where long periods of airflow are desired for comfort, use long fan cycles instead of continuous airflow.
9. Apply other good venting practices as stated in the venting section of the National Fuel Gas Code ANSI Z223.1 "latest edition".
10. **Vent connectors serving appliance vented by natural draft or non-positive pressure shall not be connected into any portion of a mechanized draft system operating under positive pressure.**
11. Horizontal pipe runs must be supported by hangers, straps or other suitable material in intervals at a minimum of every 3 feet of pipe.
12. A furnace shall not be connected to a chimney or flue serving a separate appliance designed to burn solid fuel.
13. The flow area of the largest section of vertical vent or chimney shall not exceed 7 times the smallest listed appliance categorized vent area, flue collar area, or draft hood outlet area unless designed in accordance with approved engineering methods.


Maximum Vent or Tile Lined Chimney Flow Area = $[\pi(D^*)^2] / 4 \times 7$

* Draft hood outlet diameter, flue collar diameter, or listed appliance categorized vent diameter.

Gas Vent Termination

Roof Pitch	Minimum Height
Flat to 6/12	1.0 Feet ^(a)
Over 6/12 to 7/12	1.25 Feet
Over 7/12 to 8/12	1.5 Feet
Over 8/12 to 9/12	2.0 Feet
Over 9/12 to 10/12	2.5 Feet
Over 10/12 to 11/12	3.25 Feet
Over 11/12 to 12/12	4.0 Feet
Over 12/12 to 14/12	5.0 Feet
Over 14/12 to 16/12	6.0 Feet
Over 16/12 to 18/12	7.0 Feet
Over 18/12 to 20/12	7.5 Feet
Over 20/12 to 21/12	8.0 Feet

^(a) This requirement covers most installations

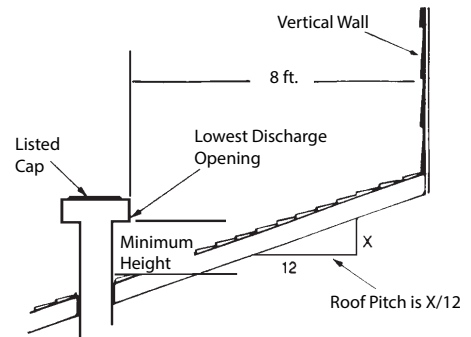

The vent termination should not be less than 8 ft. from a vertical wall.

^(a) This requirement covers most installations


Air for Combustion and Ventilation

Adequate flow of combustion and ventilating air must not be obstructed from reaching the Furnace. Air openings provided in the Furnace casing must be kept free of obstructions which restrict the flow of air. Airflow restrictions affect the efficiency and safe operation of the Furnace. Keep this in mind should you choose to remodel or change the area which contains your Furnace. Furnaces must have a free flow of air for proper performance.


Provisions for combustion and ventilation air shall be made in accordance with "latest edition" of Section 9.3, Air for Combustion and Ventilation, of the National Fuel Gas Code, ANSI Z223.1 / NFPA 54. Installation Codes, and applicable provisions of the local building codes. Special conditions created by mechanical exhausting of air and fireplaces must be considered to avoid unsatisfactory Furnace operation.

Furnace location may be in an **unconfined** space or a **confined** space.

Unconfined space are installations with 50 cu. ft. or more per 1000 BTU/hr input from all equipment installed. Unconfined spaces are defined in the table and illustration for various furnace sizes. These spaces may have adequate air by infiltration to provide air for combustion, ventilation, and dilution of flue gases. Buildings with tight construction (for example, weather stripping, heavily insulated, caulked, vapor barrier, etc.), may need additional air provided as described for confined space.



Minimum Area in Square Feet for Unconfined Space Installations	
Furnace Maximum BTUH Input Rating	With 8 Ft. Ceiling, Minimum Area in Square Feet of Unconfined Space
40,000	250
60,000	375
80,000	500
100,000	625

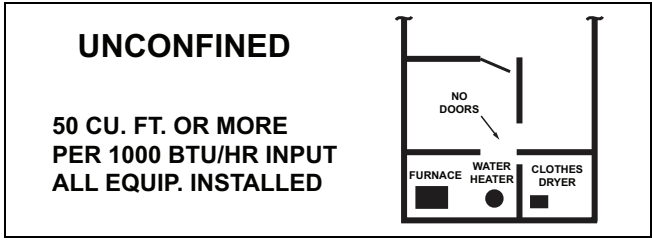

Confined spaces are installations with less than 50 cu. ft. of space per 1000 BTU/ hr input from all equipment installed. Confined spaces are defined in the table and illustration for various furnace sizes. Air for combustion and ventilation requirements can be supplied from inside the building.

1. The following types of installations will **require** use of OUTDOOR AIR for combustion, due to chemical exposures:

- * Commercial buildings
- * Buildings with indoor pools
- * Furnaces installed in commercial laundry rooms
- * Furnaces installed in hobby or craft rooms
- * Furnaces installed near chemical storage areas


Exposure to the following substances in the combustion air supply will also require OUTDOOR AIR for combustion:

- * Permanent wave solutions
- * Chlorinated waxes and cleaners
- * Chlorine based swimming pool chemicals
- * Water softening chemicals
- * Deicing salts or chemicals
- * Carbon Tetrachloride
- * Halogen type refrigerants
- * Cleaning solvents (such as perchloroethylene)
- * Printing inks, paint removers, varnish, etc.
- * Hydrochloric acid
- * Cements and glues
- * Antistatic fabric softeners for clothes dryers
- * Masonry acid washing material


Note: *Extended warranties are not available in some instances. Extended warranty does not cover repairs to equipment installed in establishments with corrosive atmospheres, including but not limited to, dry cleaners, beauty shops, and printing facilities.*

Minimum Free Area in Square Inches Each Opening (Furnace Only) in a Confined Space			
Furnace Max BTUH Input Rtg.	Air From Inside	Air From Outside	
		Vertical Duct (a)	Horizontal Duct (b)
40,000	250	10	20
60,000	375	15	30
80,000	500	20	40
100,000	100	25	50

(a) 1 Square inch per 4000 BTU/hr Vertical Duct.
 (b) 1 Square inch per 2000 BTU/hr Horizontal Duct.

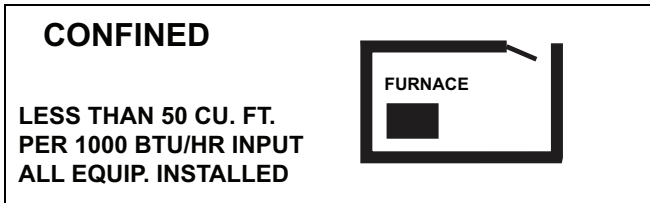


All air from inside the building The confined space shall be provided with two permanent openings communicating directly with an additional room(s) of sufficient volume so that the combined volume of all spaces meets the criteria for an unconfined space. The total input of all gas utilization equipment installed in the combined space shall be considered in making this determination. Refer to the Minimum Free Area in square inches for confined spaces table, for minimum open areas required.

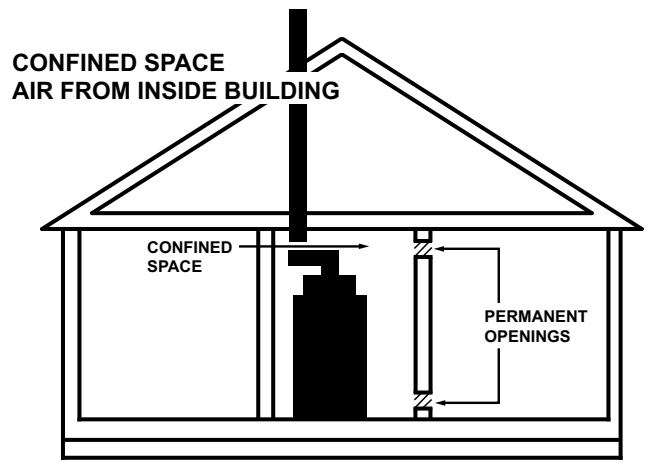


Furnace General Installation

All air from outdoors The confined space shall be provided with two permanent openings, one commencing within 12 inches of the top and one commencing within 12 inches of the bottom of the enclosure. The openings shall communicate directly, or by ducts, with the outdoors or spaces (crawl or attic) that freely communicate with the outdoors. Refer to the Minimum Free Area in square inches for confined spaces table, for minimum open areas required.


**CONFINED SPACE
AIR FROM OUTDOORS**

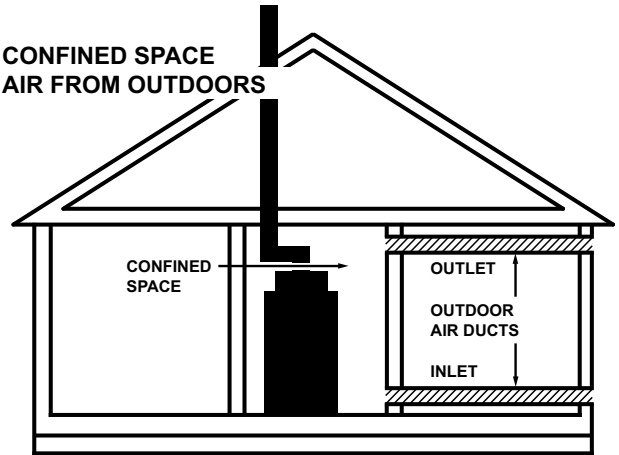


**CONFINED SPACE
AIR FROM VENTILATED ATTIC/CRAWL SPACE**

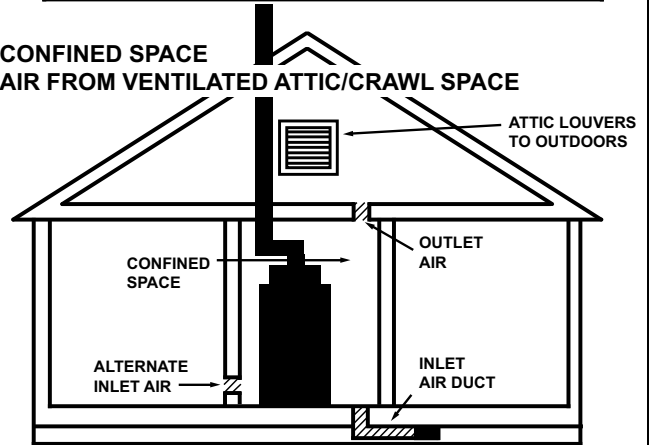

**CONFINED SPACE
AIR FROM VENTILATED ATTIC**

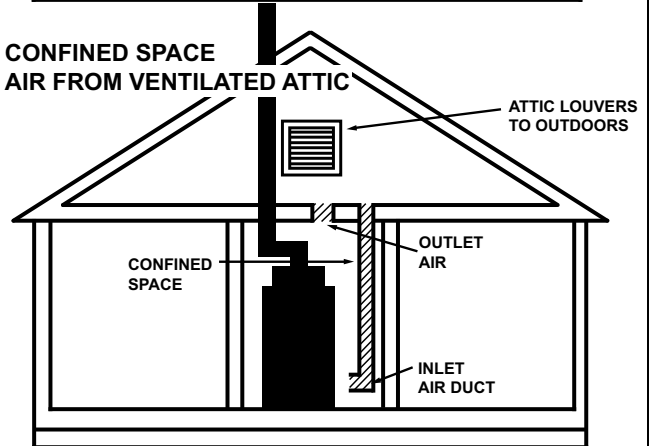

Duct Connections

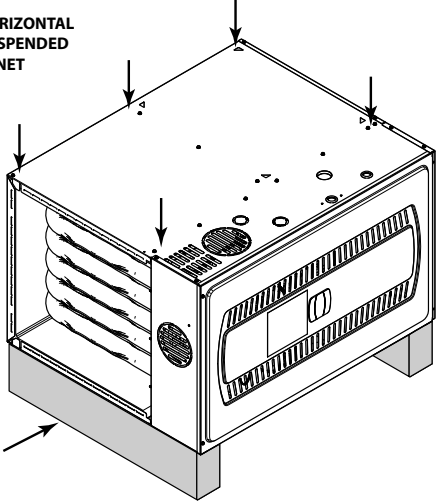
<p>Air duct systems should be installed in accordance with standards for air conditioning systems, National Fire Protection Association Pamphlet No. 90. They should be sized in accordance with ACCA Manual D or whichever is applicable. Check on controls to make certain they are correct for the electrical supply.</p> <p>Central furnaces, when used in connection with cooling units, shall be installed in parallel or on the upstream side of the cooling units to avoid condensation in the heating element, unless the furnace has been specifically approved for downstream installation. With a parallel flow arrangement, the dampers or other means used to control flow of air shall be adequate to prevent chilled air from entering the furnace, and if manually operated, must be equipped with means to prevent operation of either unit unless the damper is in full heat or cool position.</p> <p>Flexible connections of nonflammable material may be used for return air and discharge connections to reduce the transmission of vibration. Though these units have been specifically designed for quiet, vibration free operation, air ducts can act as sounding boards and could, if poorly installed, amplify the slightest vibration to the annoyance level.</p>	<p>When the furnace is located in a utility room adjacent to the living area, the system should be carefully designed with returns which minimize noise transmission through the return air grille. Although these winter air conditioners are designed with large blowers operating at moderate speeds, any blower moving a high volume of air will produce audible noise which could be objectionable when the unit is located very close to a living area. It is often advisable to route the return air ducts under the floor or through the attic. Such design permits the installation of air return remote from the living area (i.e. central hall).</p> <p>When the furnace is installed so that the supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by a duct(s) sealed to the furnace and terminating outside the space containing the furnace.</p> <p>For furnaces not equipped with a cooling coil, it is recommended that the outlet duct be provided with a removable access panel. The opening shall be accessible when the furnace is installed and shall be of such a size that the heat exchanger can be viewed for possible openings using light assistance or a probe can be inserted for sampling the air stream. The removable cover must be sealed to prevent air leaks.</p>
<p>Where there is no complete return duct system, the return connection must be run full size from the Furnace to a location outside the utility room, basement, attic, or crawl space. Do Not install return air through the back of the Furnace cabinet. Do Not install return air through the side of the furnace cabinet on horizontal applications without following the guidelines in the Return Air Filters section in the figure for Horizontal furnace with side return.</p>	
<p>Carbon monoxide, fire or smoke can cause serious bodily injury, death, and/or property damage. A variety of potential sources of carbon monoxide can be found in a building or dwelling such as gas-fired clothes dryers, gas cooking stoves, water heaters, furnaces and fireplaces. The U.S. Consumer Product Safety Commission recommends that users of gas-burning appliances install carbon monoxide detectors as well as fire and smoke detectors per the manufactures installation instructions to help alert dwelling occupants of the presence of fire, smoke or unsafe levels of carbon monoxide. These devices should be listed by Underwriters Laboratories, Inc. <i>Standards for Single and Multiple Station Carbon Monoxide Alarms, UL 2034.</i></p>	<p>Note: <i>The manufacturer of your Furnace DOES NOT test any detectors and makes no representations regarding any brand or type of detector.</i></p>
<p>Note: <i>Seal per local codes</i></p>	
<p>In horizontal applications, the furnace must be supported with one of the following methods.</p> <ol style="list-style-type: none"> 1. Support below with non-combustible material as shown in the illustration. 2. Use BAYHANG kit. See kit instructions. 3. Use unistrut with cabling to provide support from under the unit. 4. Use strapping material in locations shown in illustration. <p>Note: <i>When supporting from underneath, unit must have 1.5" minimum air clearance. Block the minimum amount of vent holes as possible.</i></p>	<p>WHEN SUSPENDING THE HORIZONTAL FURNACE, IT SHOULD BE SUSPENDED BY ATTACHING TO THE CABINET IN THE PLACES SHOWN.</p>  <p>WHEN SUPPORTING THE FURNACE FROM BELOW, SUPPORT FRONT TO BACK (AS SHOWN) OR SIDE TO SIDE.</p>

Furnace General Installation

Table 3. Supply Duct Connections


Upflow Furnace with Coil

1. Bend furnace flanges up.
2. Set the coil on top of the furnace.
3. Screw through the coil cabinet into the furnace flange. Guide holes are located on the coil.
4. Seal per local codes and requirements.

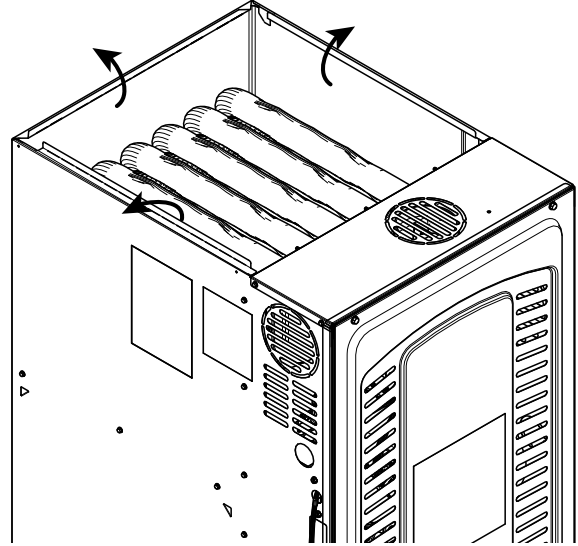

Furnace in Horizontal Left with Coil


1. Bend furnace flanges up.
2. Support the furnace and coil independently.
3. Screw through the coil cabinet into the furnace flange. Guide holes are located on the coil.
4. Seal per local codes and requirements.

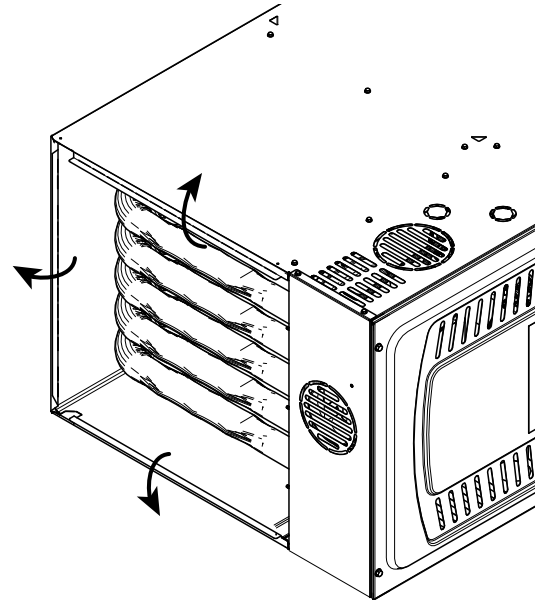

Furnace in Horizontal Right with "A" Coil

1. Bend furnace flanges down.
2. Support the furnace and coil independently.
3. Match the coil up flush to the back of the furnace.
4. Seal per local codes and requirements.

Note: Flat or dedicated horizontal coils may require flanges to be bent upward.

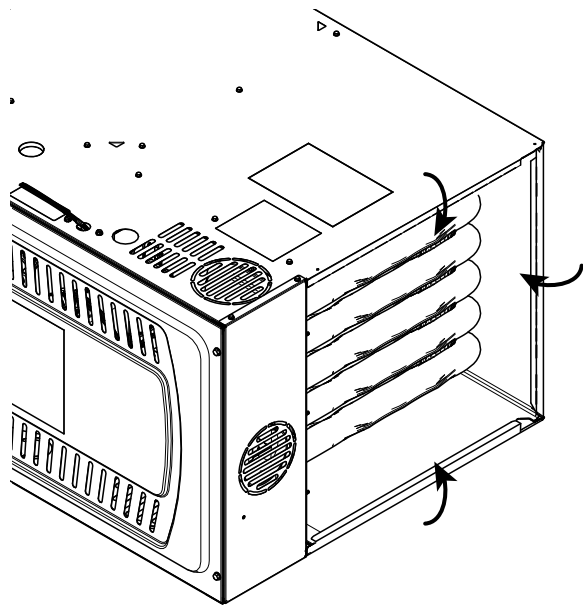

Furnace General Installation

Table 4. Return Duct Connections

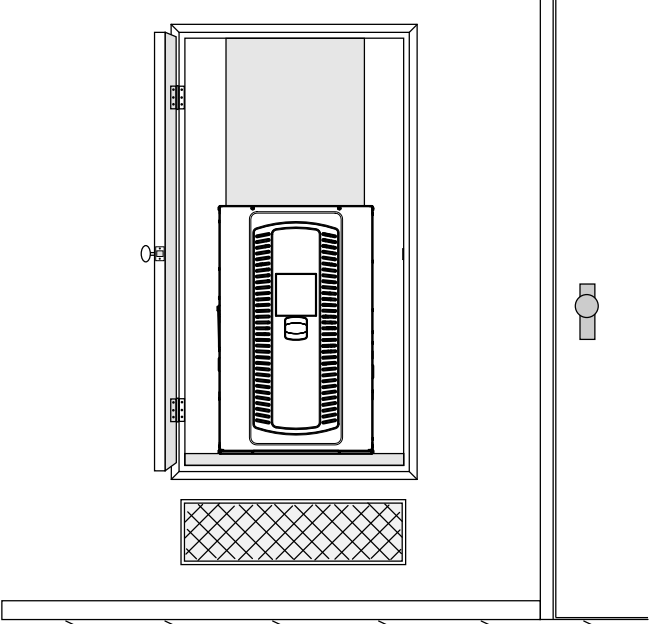
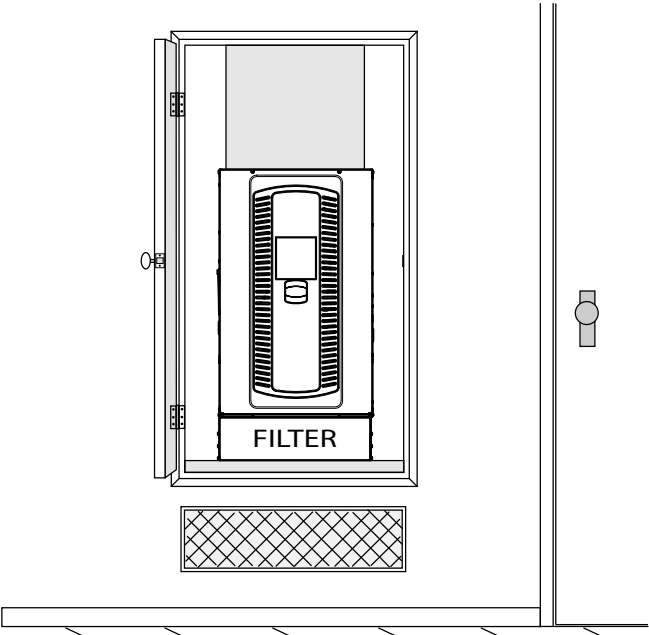
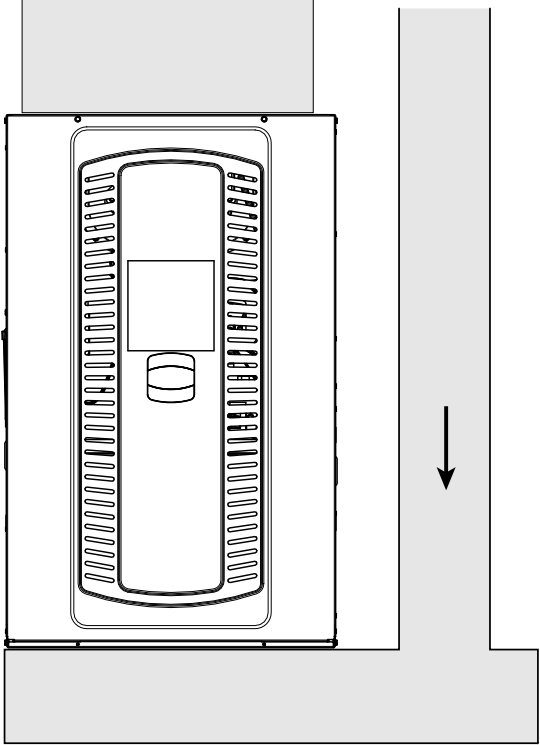
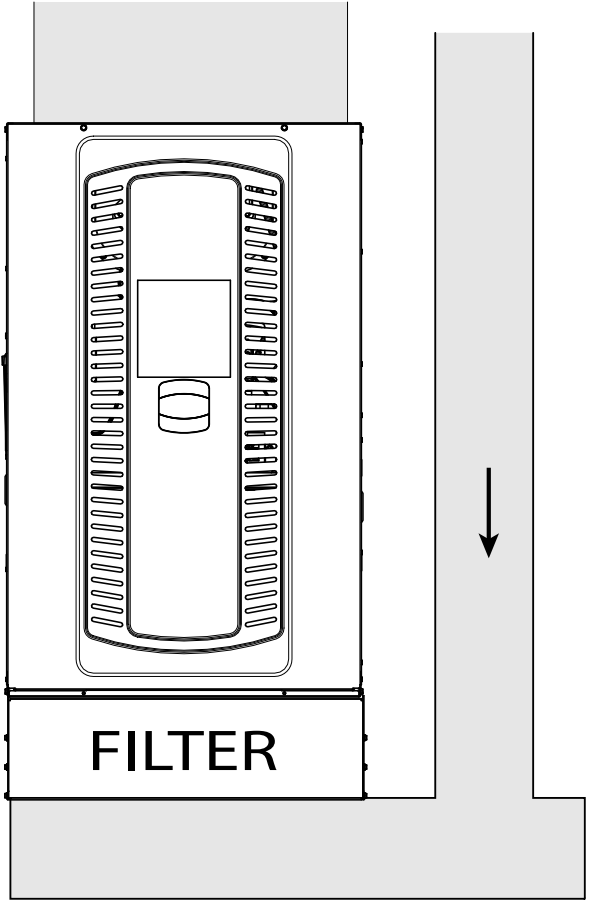
<p>Return Ducting General Guidelines</p> <ul style="list-style-type: none">• Back returns are not allowed on any S-Series Furnaces• Side returns are not allowed on downflow or horizontal S-Series Furnaces• Mounting flanges must be located on ducting• Shoot screws through the mount flanges into the furnace cabinet• Always seal per local codes and requirements• Furnace, coil, and ducting must be supported separately• An external overflow drain pan must be installed in all applications over a finished ceiling to prevent property damage• Minimum return air is 55°F and maximum is 80°F.	
<p>Upflow Furnace with Bottom Return in Closet with Remote Filter</p> <ol style="list-style-type: none">1. Remove the bottom plate.2. Set the furnace on the base inside closet.3. Install remote filter.4. Seal per local codes and requirements.	 <p>The diagram shows a top-down view of a furnace cabinet installed in a closet. The furnace is positioned on a base. Below the furnace, a rectangular remote filter is shown with a diamond-patterned mesh. The closet door is open to the left, and a lock is visible on the right side of the door. The floor is indicated by diagonal lines at the bottom.</p>
<p>Upflow Furnace with Bottom Return in Closet with Filter Box</p> <ol style="list-style-type: none">1. Remove the bottom plate.2. Set the furnace on the filter box inside closet.3. Must have grille present for air.4. Seal per local codes and requirements.	 <p>The diagram shows a top-down view of a furnace cabinet installed in a closet. The furnace is positioned on a rectangular filter box labeled "FILTER". Below the filter box, a rectangular grille with a diamond-patterned mesh is shown. The closet door is open to the left, and a lock is visible on the right side of the door. The floor is indicated by diagonal lines at the bottom.</p>

Table 4. Return Duct Connections (continued)

<p>Upflow Furnace with Bottom Return Mounted on a Ducted Pedestal</p> <ol style="list-style-type: none">1. Remove the bottom plate.2. Set the furnace on the ducted pedestal. The ducted pedestal will use ducted air from a remote location.3. Install filter at a remote location.4. Seal per local codes and requirements.	 <p>The diagram shows a furnace unit mounted on a T-shaped ducted pedestal. The furnace has a front panel with a central control panel and two vertical grilles on either side. The pedestal has a vertical section on the right with a downward-pointing arrow, indicating the return air path. The furnace is positioned directly on top of the horizontal base of the pedestal.</p>
<p>Upflow Furnace with Bottom Return Mounted on a Ducted Pedestal with Filter Box</p> <ol style="list-style-type: none">1. Remove the bottom plate.2. Set the furnace on the filter box. The ducted pedestal will use ducted air from a remote location.3. Seal per local codes and requirements.	 <p>The diagram shows a furnace unit mounted on a ducted pedestal. The furnace is positioned on top of a rectangular box labeled "FILTER". The pedestal has a vertical section on the right with a downward-pointing arrow, indicating the return air path. The furnace is positioned on top of the filter box, which is mounted on the horizontal base of the pedestal.</p>

Furnace General Installation

Table 4. Return Duct Connections (continued)

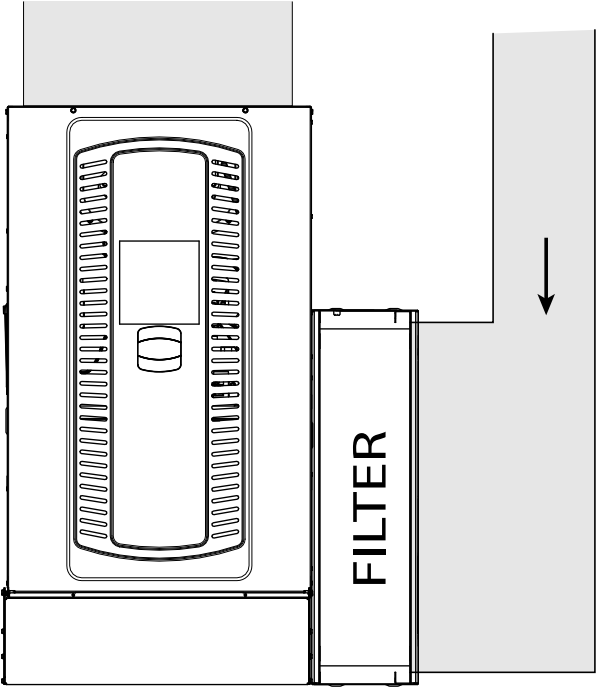
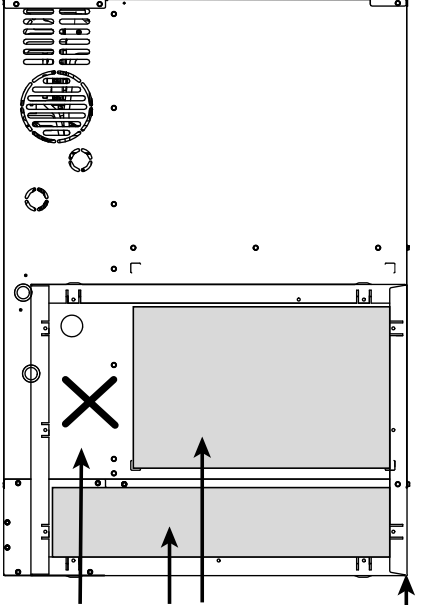
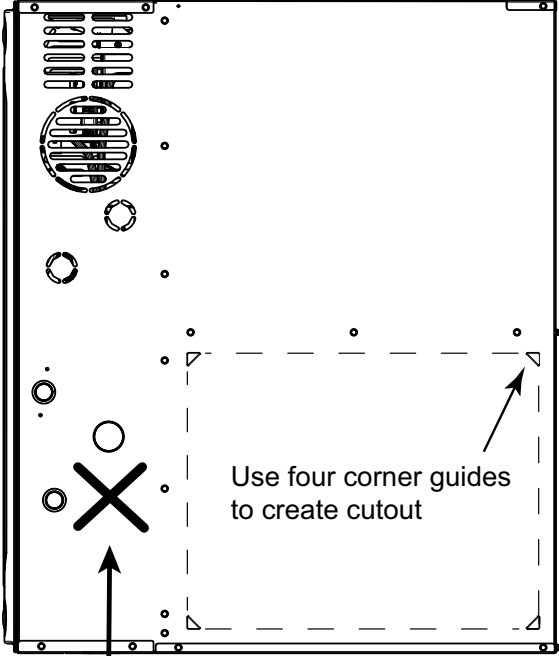
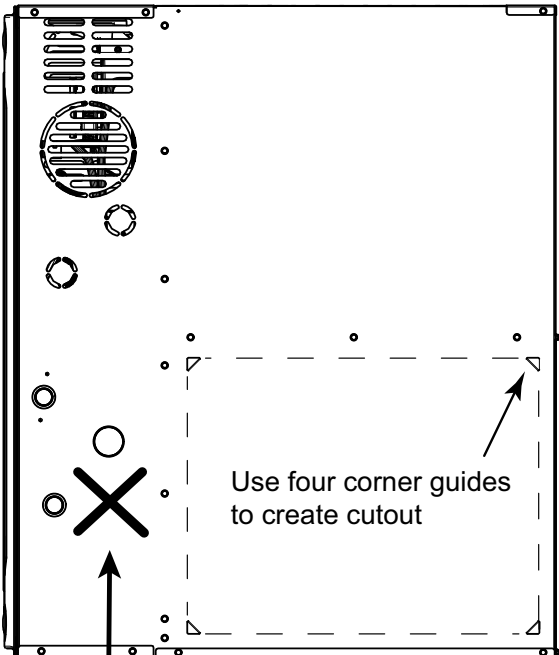
<p>Upflow Furnace with Bottom and Side Returns Mounted on a Ducted Pedestal with Side Return and Filter Box</p> <p>Important: Make sure the thermostat wiring hole is sealed on the cabinet side with the side return.</p> <p>Important: Make sure not to cut the cabinet in the "No Cut" area.</p> <ol style="list-style-type: none"> 1. Remove the bottom plate. 2. Create ducting and set the furnace in place. <p>Note: Use Optional BAYLIFT kit to lift furnace. Follow kit instructions.</p> <p>Note: The furnace bottom pedestal must be a minimum of 6" in height.</p> <ol style="list-style-type: none"> 3. Match the filter cabinet flush to the back and bottom sides of the furnace cabinet and secure in place with screws. 4. Mark the two areas to be cut out for the return air. 5. Cut out the two sections of the cabinet and BAYLIFT kit to be removed. 6. Attach ducting to the filter box. 7. The ducted pedestal will use ducted air from a remote location. 8. Seal per local codes and requirements. 	
<p>Cabinet cutout when used with BAYLIFT</p>	<p>21" Filter Cabinet with BAYLIFT Kit shown</p>  <p>No Cut Area Cutouts Flush with back of furnace cabinet</p>

Table 4. Return Duct Connections (continued)

<p>Upflow Furnace with Side Return</p> <p>Important: Make sure the thermostat wiring hole is sealed on the cabinet side with the side return.</p> <p>Important: Make sure not to cut the cabinet in the "No Cut" area.</p> <ol style="list-style-type: none">Using guides, remove the cutout for the side return.Create ducting and set the furnace in place. Use screws to attach ducting to the furnace cabinet. <p>Note: If using a filter box, use a transition, if possible, to attach the filter box to the furnace cabinet.</p> <ol style="list-style-type: none">Seal bottom panel per local codes and requirements.Seal all other panels per local codes and requirements.	 <p>The diagram shows the front panel of a furnace cabinet. At the top, there are several horizontal filter slots and a circular air filter. Below these, there are two circular cutouts for side returns. A dashed rectangular box is drawn on the right side of the cabinet, with an arrow pointing to its corners and the text "Use four corner guides to create cutout". On the left side, there is a large 'X' mark over a circular area, with an arrow pointing to it from the text "No Cut Area" below the diagram.</p>
<p>Upflow Furnace with Two Side Returns</p> <p>Important: One of the sides must have a transition to allow the thermostat wiring to exit the cabinet.</p> <p>Important: If a transition is not a viable option, a hole will need to be drilled in the side of the cabinet for the thermostat wiring to exit.</p> <p>Important: Make sure not to cut the cabinet in the "No Cut" area.</p> <p>Note: If using one transition, the thermostat wiring will exit on the transition side.</p> <ol style="list-style-type: none">Using guides, remove the two cutouts for the side returns.Create ducting and set the furnace in place. Use screws to attach ducting to the furnace cabinet. <p>Note: If using a filter boxes, use transitions, if possible, to attach the filter boxes to the furnace cabinet.</p> <ol style="list-style-type: none">Seal bottom panel per local codes and requirements.Seal all other panels per local codes and requirements.	 <p>The diagram is identical to the one above, showing the front panel of a furnace cabinet with filter slots, a circular filter, and two circular cutouts. A dashed rectangular box on the right side is labeled "Use four corner guides to create cutout". A large 'X' mark on the left side is labeled "No Cut Area".</p>

Return Air Filters

TYPICAL AIR FILTER INSTALLATIONS

Filters are not factory supplied for furnaces. Filter size needed will be dependent on type of filter and CFM requirement. Filters must be installed externally to the unit.

Important: *It is recommended to transition return ducting to the same size as the opening. It is acceptable for return duct or filter frame to extend forward of the opening but plastic plugs MUST be installed in any opening that the duct or filter frame may cover.*

Return Air Filters

Furnace Width	Bottom Return Filter Qty and Size
14.5"	1 – 14" x 25" x 1"
17.5"	1 – 16" x 25" x 1"
21.0"	1 – 20" x 25" x 1"


Note: *For upflow airflow furnaces where the airflow requirement exceeds 1600 CFM - Furnaces will require return air openings and filters on: (1) both sides, or (2) one side and the bottom, or (3) just on the bottom.*

Preparation for Upflow Bottom and Side Return Air Filter Installations

All return air duct systems should provide for installation of return air filters.

1. Determine the appropriate position to set the furnace in order to connect to existing supply and return ductwork.
2. For upflow side return installations, remove the insulation around the opening in the blower compartment
3. The side panels of the upflow furnace include locating notches that are used as guides for cutting an opening for return air, refer to the figure and the upflow furnace outline drawing for duct connection dimensions for various furnaces.
4. If a 3/4" flange is to be used for attaching the air inlet duct, add to cut where indicated by dotted lines. Cut corners diagonally and bend outward to form flange.
5. If flanges are not required, and a filter frame is installed, cut between locating notches as in illustration.
6. The bottom panel of the upflow furnace must be removed for bottom return air.

UPFLOW FURNACES ONLY

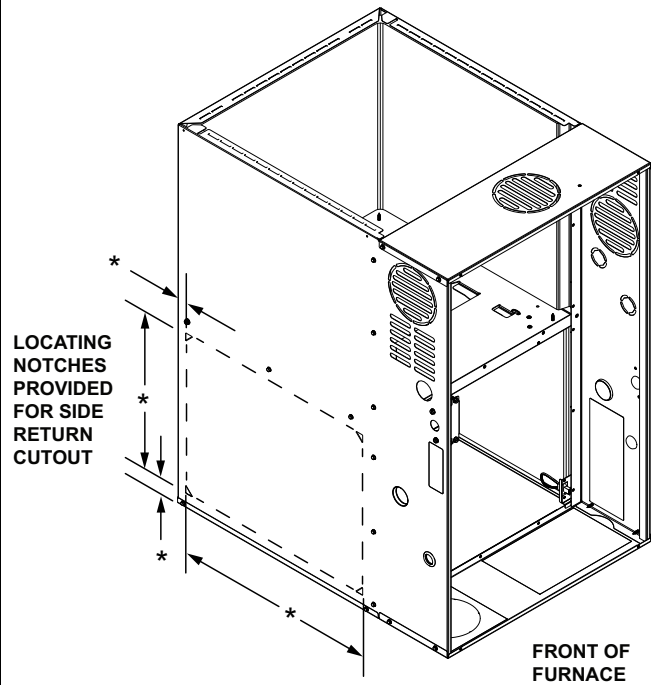

* SEE OUTLINE DRAWING

1. When the furnace is installed in the horizontal right or left application and a return duct is attached to the top side, do not install a filter in the return duct directly above the furnace. Install the filter in a remote location.

When the furnace is installed in the horizontal right or left application and a close coupled (less than 36") return duct is attached to the bottom side of the furnace as shown above, securely attach a 1/2" mesh metal hardware cloth protective screen to the inside bottom of the filter grille **to prevent personal injury from contacting moving parts when reaching into the return opening to replace the filter.**

Close coupled (less than 36") return (filter directly beneath bottom side return) is not recommended due to noise considerations.


2. Connect the duct work to the furnace. See Outline Drawing for supply and return duct size and location.

Flexible duct connectors are recommended to connect both supply and return air ducts to the furnace.

If only the front of the furnace is accessible, it is recommended that both supply and return air plenums are removable.

3. When replacing a furnace, old duct work should be cleaned out. Thin cloths should be placed over the registers and the furnace fan should be run for 10 minutes. Don't forget to remove the cloths before you start the furnace.

4. **The horizontal installation of the upflow furnace requires an external filter section. Filter kits are available for horizontal applications.**

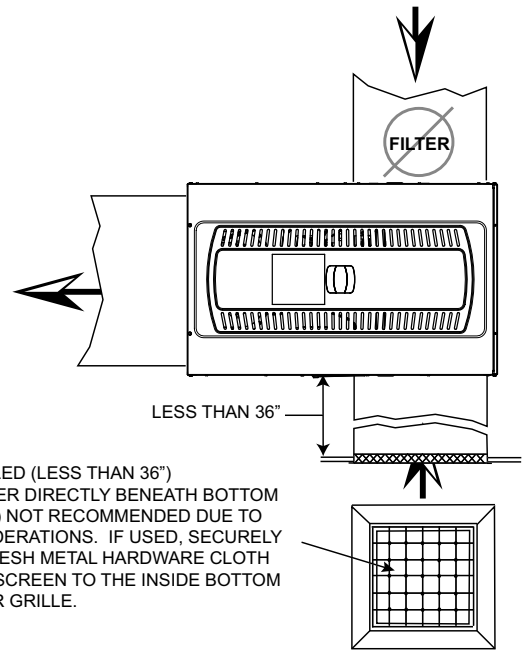

CLOSE COUPLED (LESS THAN 36") RETURN (FILTER DIRECTLY BENEATH BOTTOM SIDE RETURN) NOT RECOMMENDED DUE TO NOISE CONSIDERATIONS. IF USED, SECURELY ATTACH 1/2" MESH METAL HARDWARE CLOTH PROTECTIVE SCREEN TO THE INSIDE BOTTOM OF THE FILTER GRILLE.


RETURN AIR FILTERS FOR FURNACE IN HORIZONTAL CONFIGURATION


When the Furnace is installed in the horizontal configuration, the return air filters must be installed exterior to the furnace cabinet. Remote filter grilles may be used for homeowner convenience or the filters may be installed in the duct work upstream of the furnace.

Electrical Connections

Make wiring connections to the unit as indicated on enclosed wiring diagram. As with all gas appliances using electrical power, this furnace shall be connected into a permanently live electric circuit. It is recommended that furnace be provided with a separate "circuit protection device" electric circuit. The furnace must be electrically grounded in accordance with local codes or in the absence of local codes with the National Electrical Code, ANSI/NFPA 70, if an external electrical source is utilized. **The integrated furnace control is polarity sensitive.** The hot leg of the 120V power supply must be connected to the black power lead as indicated on the wiring diagram. Refer to the SERVICE FACTS literature and unit wiring diagram attached to furnace.

Field Wiring

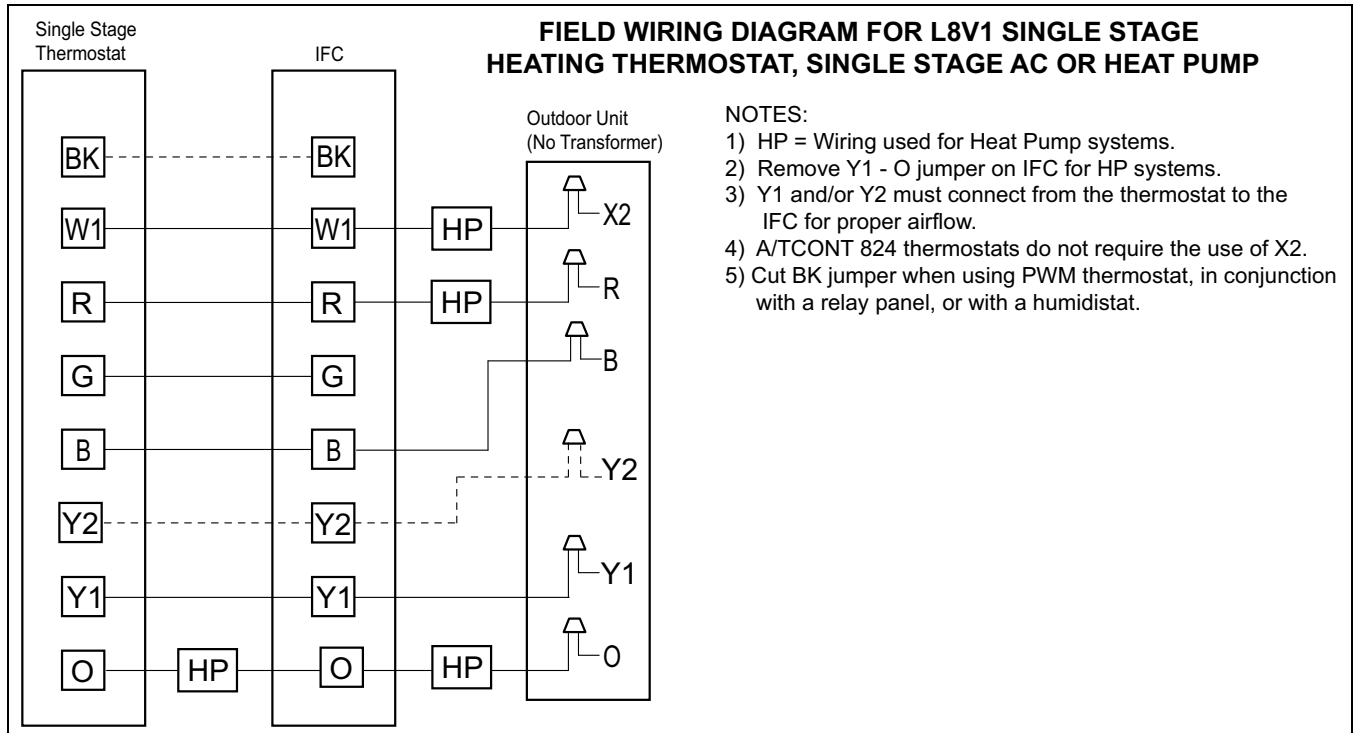

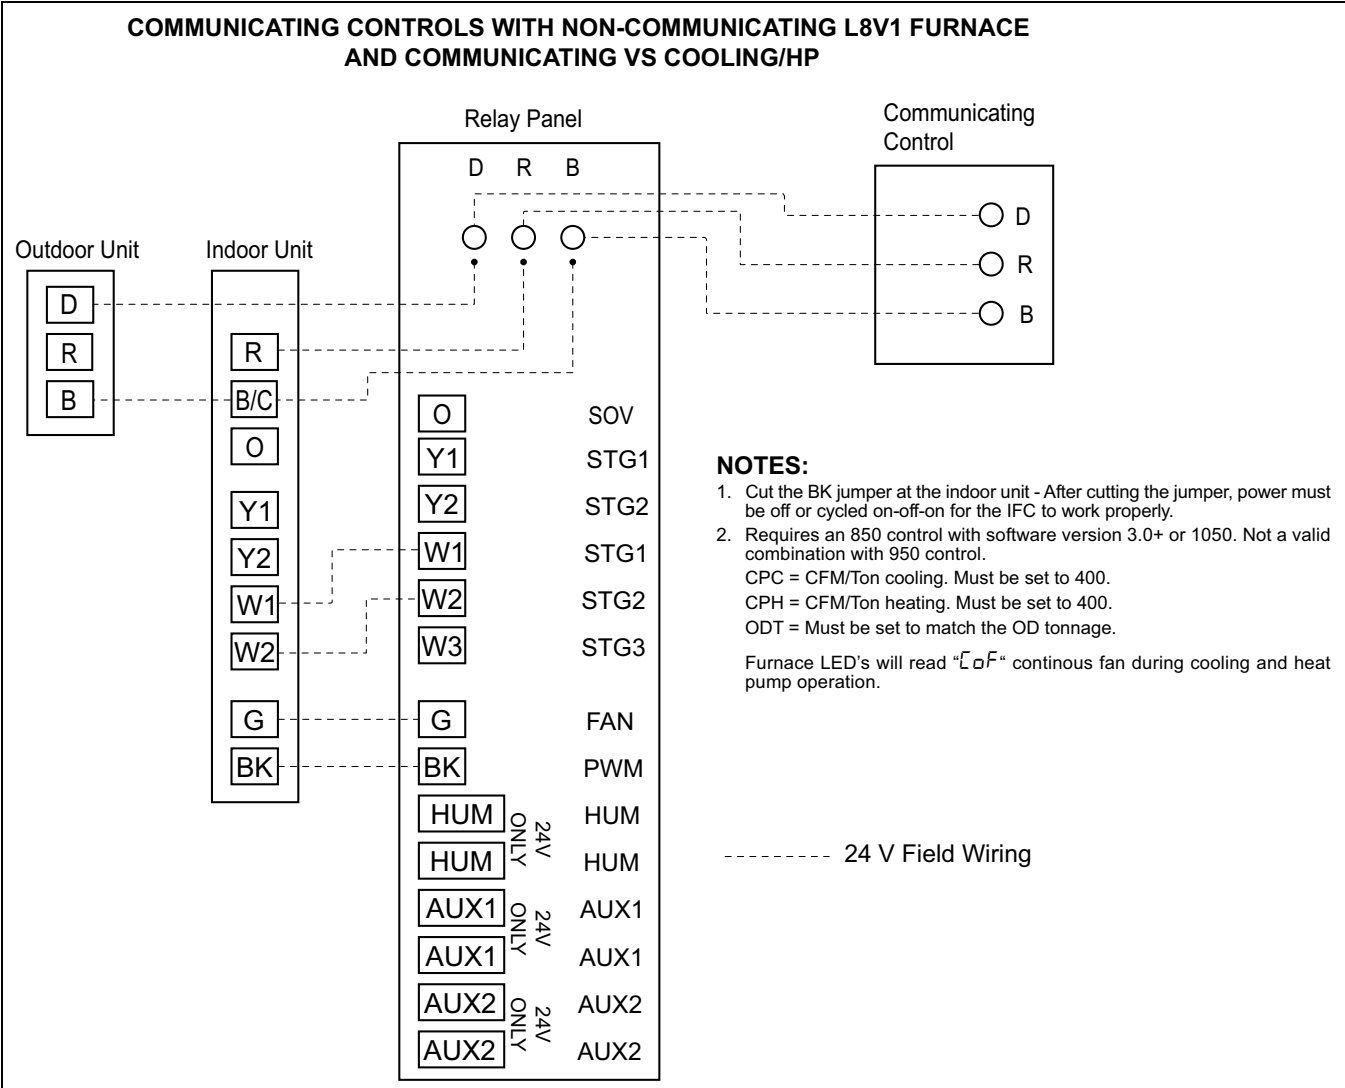

General Start-up and Adjustment

The following sections give instructions for the general start-up and adjustment of the gas furnaces.

Preliminary Inspections

<p>With gas and electrical power "OFF", ensure:</p> <ol style="list-style-type: none"> 1. Duct connections are properly sealed. 2. Filters are in place. 3. Venting is properly assembled. 4. Blower vestibule panel is in place and all screws in place. 	<p>Turn knob on main gas valve within the unit to the "OFF" position. Turn the external gas valve to "ON". Purge the air from the gas lines. After purging, check all gas connections for leaks with a soapy solution.</p> <p>— DO NOT CHECK WITH AN OPEN FLAME. Allow 5 minutes for any gas that might have escaped to dissipate. Turn the gas valve in the unit to the "ON" position.</p> <p>Turn the toggle switch on the Gas Valve in the unit to the "ON" position.</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Lighting Instructions

<p>Lighting instructions appear on each unit. Each installation must be checked out at the time of initial start up to ensure proper operation of all components. Check out should include putting the unit through one complete cycle as outlined below.</p> <p>Turn on the main electrical supply and set the comfort control above the indicated temperature. The igniter will automatically heat, then the gas valve is energized to permit the flow of gas to the burners. After ignition and flame is established, the flame control module monitors the flame and supplies power to the gas valve until the comfort control is satisfied.</p>	<div style="background-color: black; color: white; text-align: center; padding: 5px;">⚠ WARNING</div> <div style="border: 1px solid black; padding: 5px;"> <p>FIRE OR EXPLOSION HAZARD!</p> <p>Failure to follow this Warning could result in property damage, severe personal injury, or death. Do NOT attempt to manually light the furnace.</p> </div>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

<p>To shut off</p> <p>For complete shutdown: Turn the toggle or control switch located on the main gas valve inside the unit to the "OFF" position and the external main gas shutoff valve to the "OFF" position. Disconnect the electrical supply to the unit.</p>	
<p>Whenever your house is to be vacant, arrange to have someone inspect your house for proper temperature. This is very important during freezing weather. If for any reason your furnace should fail to operate damage could result, such as frozen water pipes.</p>	<div style="background-color: black; color: white; text-align: center; padding: 5px;">⚠ CAUTION</div> <div style="border: 1px solid black; padding: 5px;"> <p>FREEZE CAUTION!</p> <p>Failure to follow this Caution could result in property damage or personal injury. If complete furnace shutdown is done during the cold weather months, provisions must be taken to prevent freeze-up of all water pipes and water receptacles.</p> </div>

Control and Safety Switch Adjustment

<p>LIMIT SWITCH CHECK OUT</p> <p>The limit switch is a safety device designed to close the gas valve should the furnace become overheated. Since proper operation of this switch is important to the safety of the unit, it must be checked out on initial start up by the installer.</p>	<p>To check for proper operation of the limit switches, set the thermostat to a temperature higher than the indicated temperature to bring on the gas valve. Restrict the airflow by blocking the return air to the blower. When the furnace reaches the maximum outlet temperature as shown on the rating plate, the burners must shut off. If they do not shut off after a reasonable time and overheating is evident, a faulty limit switch is probable and the limit switch must be replaced. After checking the operation of the limit control, be sure to remove the paper or cardboard from the return air inlet, or reconnect the blower.</p>
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Furnace Combustion Air Exhaust Options

Note: Default is left side for electric and gas connections.

The following sections give instructions for the different furnace orientations and the options for venting the exhaust combustion air.

Important: When looking at the different orientations, the direction of the combustion air exhaust in the illustration's description is after the furnace has been rotated, if needed.

Table 5. Venting Options for Upflow Applications

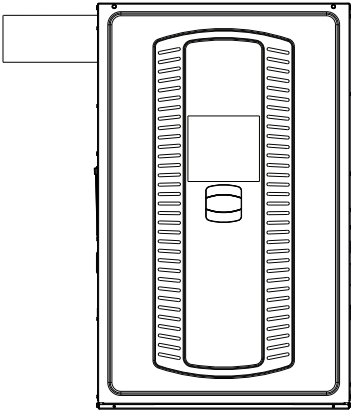
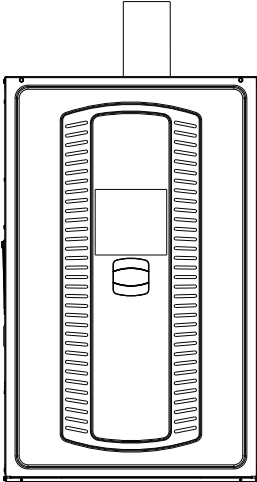
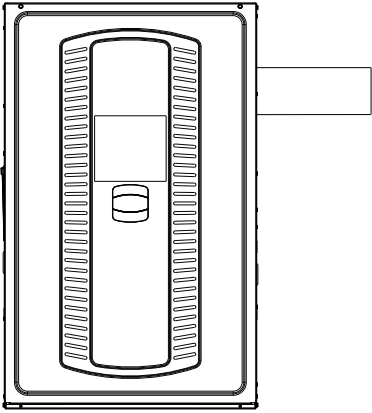
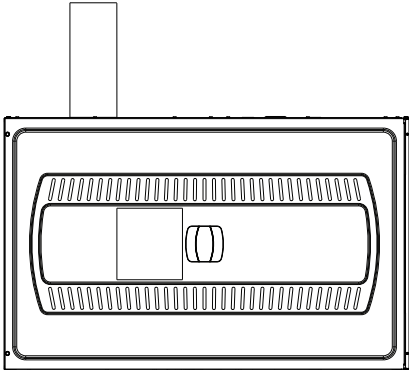
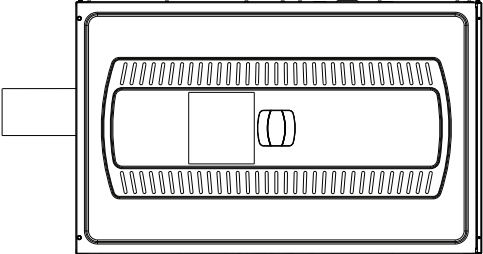
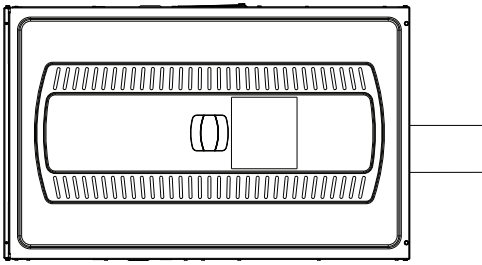
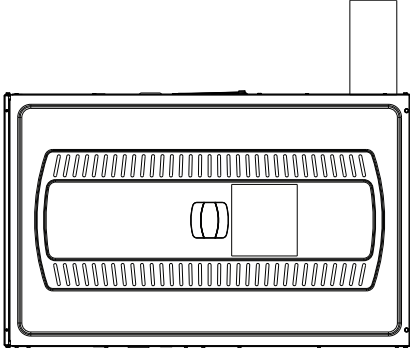
<p>Refer to the illustrations below to find the approved venting options for upflow furnace.</p> <p>Important: The exhaust must be vented to the outdoors.</p>		
Upflow Orientation or Installation		
<p>Vented through left side.</p> 	<p>Vented out top.</p> 	<p>Vented through right side.</p> 

Table 6. Venting Options for Horizontal Left Applications


<p>Refer to the illustrations below to find the approved venting options for horizontal left furnace.</p> <p>Important: The exhaust must be vented to the outdoors.</p>	
Horizontal Left Orientation or Installation	
<p>Vented out top.</p> 	<p>Vented through left side.</p> 

Furnace Combustion Air Exhaust Options

Table 7. Venting Options for Horizontal Right Applications

<p>Refer to the illustrations below to find the approved venting options for horizontal right furnace.</p> <p>Important: The exhaust must be vented to the outdoors.</p>	
Horizontal Right Orientation or Installation	
<p>Vented through right side.</p> 	<p>Vented out top.</p> 

Inducer Venting Conversion Instructions
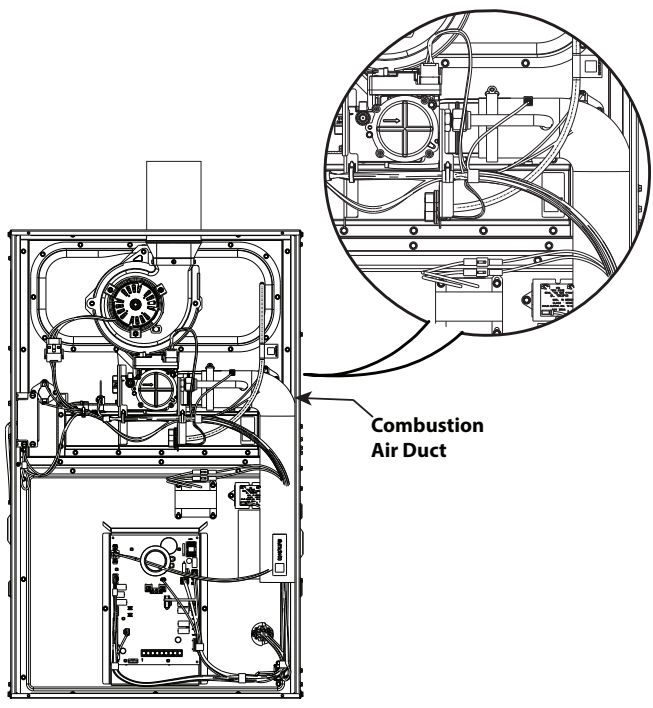
<p>Important: After deciding the orientation of the flue outlet, cut the metal tabs around the appropriate 5" metal cutout on the furnace cabinet and remove the cutout, if necessary.</p> <p>Note: When rotating the inducer it may be necessary to cut the wire tie. A new wire tie must be installed once the inducer is rotated.</p> <p>Note: Self-tapping screws are recommended for attaching the vent pipe to the inducer outlet.</p>	<p>Pressure Switch locations</p> <p>L8V1 — Pressure Transducer and Pressure Switch are connected to the hot header.</p>
<p>Upflow orientation with top venting</p> <p>Important: The combustion air duct MUST be installed on C100 upflow applications. Failure to install will result in nuisance burner box limit trips.</p> <p>Note: Future C100 furnaces with the Burner Box limit on the bottom DO NOT require the Combustion Air Duct.</p> <ol style="list-style-type: none"> 1. Install combustion air duct by sliding the split section of the duct around the J-tube until it reaches the clearance hole of the duct. 2. Install hose clamp and hand tighten. 3. No changes need to be made to the inducer when installing the furnace in upflow position when vented through the top. <p>Note: Self-tapping screws are recommended for attaching the vent pipe to the inducer outlet.</p>	 <p style="text-align: center;">Combustion Air Duct</p>

Upflow orientation with left side venting


Important: The combustion air duct **MUST** be installed on **C100 upflow** applications. Failure to install will result in nuisance burner box limit trips.

Note: Future C100 furnaces with the Burner Box limit on the bottom **DO NOT** require the Combustion Air Duct.

Before proceeding, lay unit on its back to make the conversion easier. The following changes need to be made to the inducer when installing the furnace in upflow position with the combustion air vented out the left side.

1. Remove the four screws holding the inducer in place.
2. Rotate the inducer so the inducer outlet is pointing towards the 5" cutout.
3. Secure the inducer in place using the screws removed in step 1.
4. Attach the vent to the inducer outlet.

Note: Self-tapping screws are recommended for attaching the vent pipe to the inducer outlet.

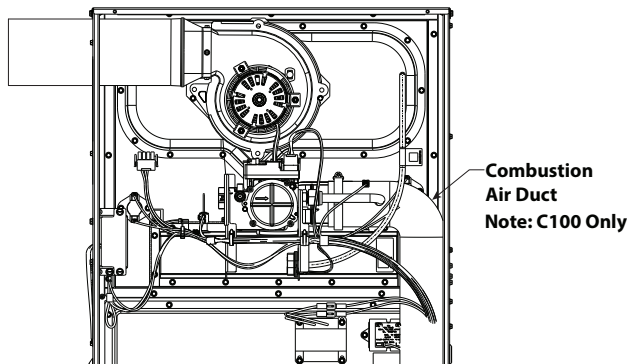

Upflow orientation with right side venting


Important: The combustion air duct **MUST** be installed on **C100 upflow** applications. Failure to install will result in nuisance burner box limit trips.

Note: Future C100 furnaces with the Burner Box limit on the bottom **DO NOT** require the Combustion Air Duct.

Before proceeding, lay unit on its back to make the conversion easier. The following changes need to be made to the inducer when installing the furnace in upflow position with the combustion air vented out the left side.

1. Remove the four screws holding the inducer in place.
2. Rotate the inducer so the inducer outlet is pointing towards the 5" cutout.
3. Secure the inducer in place using the screws removed in step 1.
4. Attach the vent to the inducer outlet.


Note: Self-tapping screws are recommended for attaching the vent pipe to the inducer outlet.

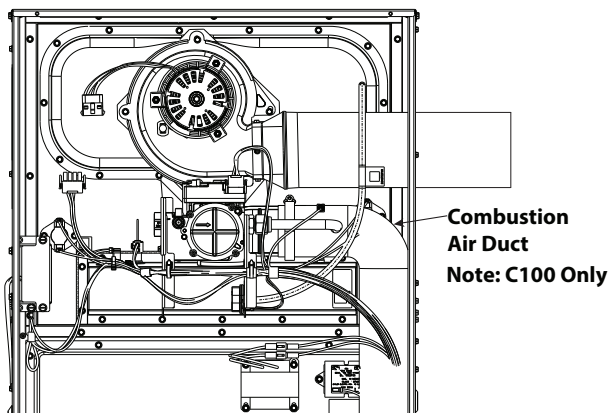

Horizontal left orientation with left side venting

No changes need to be made to the inducer when installing the furnace in upflow position with the combustion air vented through the top.

Note: Self-tapping screws are recommended for attaching the vent pipe to the inducer outlet.

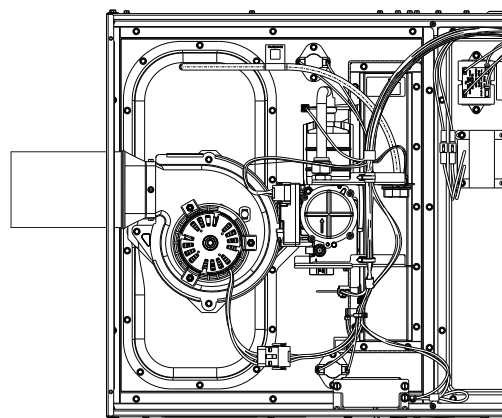


Furnace Combustion Air Exhaust Options

Horizontal left orientation with top venting

Before proceeding, lay unit on its back to make the conversion easier. The following changes need to be made to the inducer when installing the furnace in upflow position with the combustion air vented out the left side.

1. Remove the four screws holding the inducer in place.
2. Rotate the inducer so the inducer outlet is pointing towards the 5" cutout.
3. Secure the inducer in place using the screws removed in step 1.
4. Attach the vent to the inducer outlet.


Note: Self-tapping screws are recommended for attaching the vent pipe to the inducer outlet.

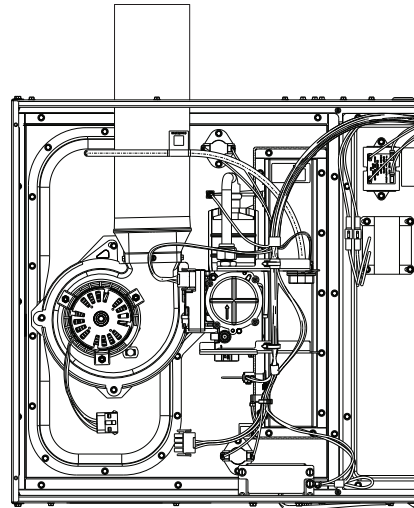

Horizontal right orientation with right side venting

No changes need to be made to the inducer when installing the furnace in upflow position with the combustion air vented through the top.

Note: Self-tapping screws are recommended for attaching the vent pipe to the inducer outlet.

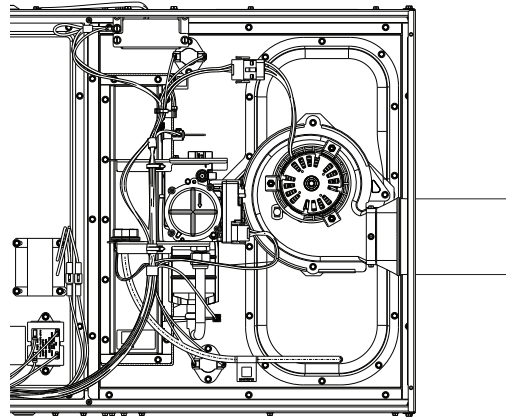


Horizontal right orientation with top venting

Before proceeding, lay unit on its back to make the conversion easier. The following changes need to be made to the inducer when installing the furnace in upflow position with the combustion air vented out the left side.


1. Remove the four screws holding the inducer in place.
2. Rotate the inducer so the inducer outlet is pointing towards the 5" cutout.
3. Secure the inducer in place using the screws removed in step 1.
4. Attach the vent outlet gasket to the vent outlet.

Note: Self-tapping screws are recommended for attaching the vent pipe to the inducer outlet.

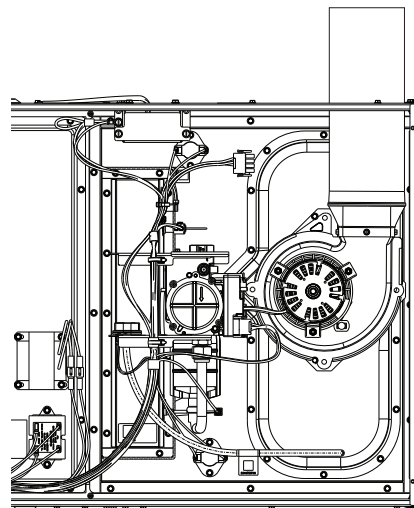

Integrated Furnace Control Menu

L8V1 Control System Menu

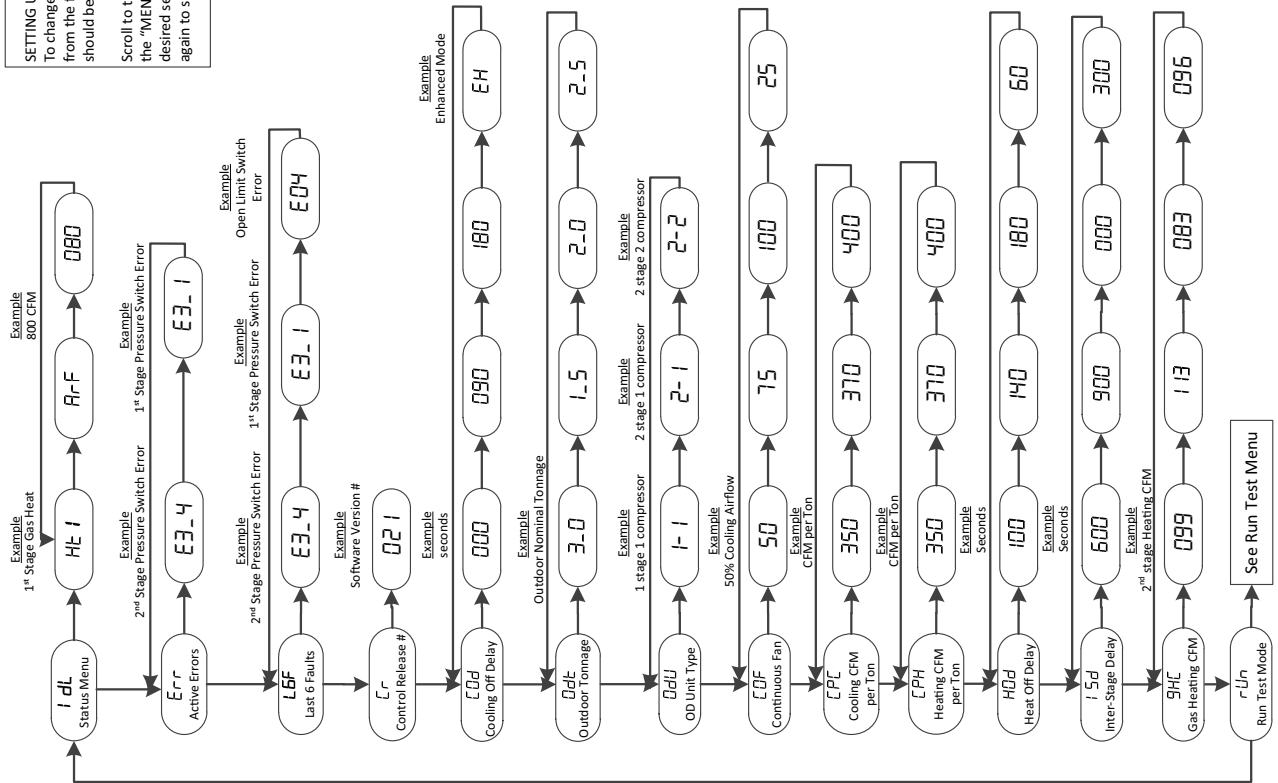

SETTING UP YOUR SYSTEM:
To change any factory default value, first remove and "call" from the furnace and allow any fan off delays to finish. (i dL should be seen on the display.)
Scroll to the selected Menu item by momentarily depressing the "MENU" key and then depress the "OPTION" key to the desired setting. Then momentarily depress the "MENU" key again to save the change.

CLEARING THE LAST 6 FAULTS:
To clear the stored faults, scroll to the last 6 faults menu (L6F), enter the menu by scrolling to the right and hold the "OPTION" key for at least 5 seconds. Release and a set of 3 dashes will be seen 3 times. This confirms the faults have been cleared.

Model Uplift **ODT Options [] = Default**

L8V1A040U3VS	3T[3T], 1.5T, 2T, 2.5T
L8V1A060U3VS	3T[3T], 1.5T, 2T, 2.5T
L8V1B080U4VS	4T[4T], 2T, 2.5T, 3T, 3.5T
L8V1C100U5VS	5T[5T], 2.5T, 3T, 3.5T, 4T, 4.5T

Note:
Do not adjust COF above 50%.

CFM per Ton selections range from 290 – 450
Important:
When applied with zoning or a VSPD outdoor unit, the CFM/Ton must be set to 400 and ODT must match the OD tonnage.


Gas heating CFM can be adjusted while the unit is operating in gas heat mode to enable the technician to quickly adjust to the manufacturer's suggested heat rise across the heat exchanger.
Multiply the value shown by 10 for actual airflow.

Model Uplift **Gas Heating CFM [] = Default**

L8V1A040U3VS	061[061], 063, 070, 055
L8V1A060U3VS	099[099], 113, 083, 096
L8V1B080U4VS	135[135], 140, 118, 125
L8V1C100U5VS	150[150], 160, 190, 200

L8V1

Examples of System Status

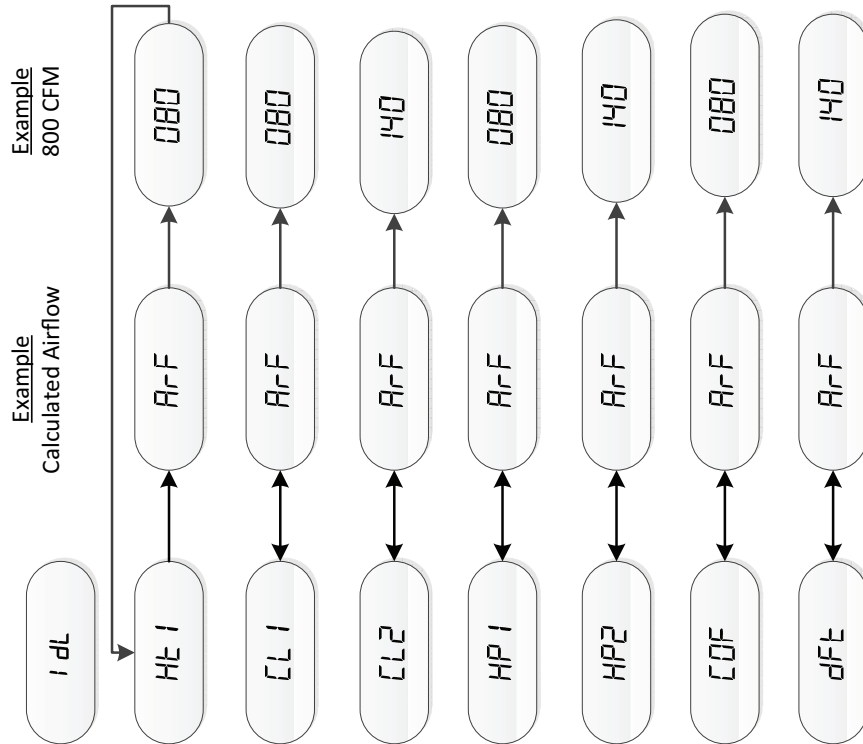

Example
800 CFM

- i dL = Idle, no demand for cooling, heating, or fan
 - Ht 1 = Demand for 1st stage gas heat
 - CL 1 = Demand for 1st stage cooling
 - CL 2 = Demand for 2nd stage cooling
 - HP 1 = Demand for 1st stage heat pump
 - HP 2 = Demand for 2nd stage heat pump
 - COF = Demand for continuous fan
 - dFt = Demand for outdoor unit defrost, furnace running in gas heat mode
 - ArF / 000 Calculated airflow is 800 CFM.
- Airflow display is rounded down to the nearest 10 cfm

NOTES:

- (1) The menu status displayed is solely dependent on the input of 24VAC that is applied to the low voltage terminal strip.
- (2) The status will alternate between the system mode and the airflow request every 2 seconds.
- (3) If an error occurs, an E*.* will alternately flash with the system mode and airflow request. See first example
- (4) Multiply the value shown by 10 for actual airflow

Note: During run test mode, depressing the option key will allow the user to hold (HLD) that test sequence if measurements want to be taken. The exception is RU3 (ignitor).



Run Test Mode:
 To enter Run Test Mode, scroll to *rUn* using the Menu key, then push the option key. The LED will flash *rUn* three times, then begin the test.
 To exit the test mode, momentarily push the Menu key, cycle power to the furnace, or make a valid thermostat call for capacity or fan.

Sequence of Run Test Mode
rU1 – Turns the inducer on in 1st stage for 30 seconds
rU3 – Turns the ignitor on for 10 seconds
rU4 – Turns the circulating blower on 1st stage compressor speed for 10 seconds
rU5 – Turns the circulating blower on 2nd stage compressor speed for 10 seconds
rU6 – Turns the circulating blower on 1st stage gas heat speed for 10 seconds
 The above sequence will repeat two more times unless the Run Test Mode is exited, see above

Important: The Run Test Mode does not test fire the furnace or bring the outdoor unit on. It is designed to allow the technician to observe each mode to ensure the IFC, inducer, and circulating blower are performing as intended.

Belly Band Location

Distance from belly band to the front face of motor for minimum vibration

<p>Blower housings and wheel removed from view for clarity.</p>	Furnace Cabinet Size	Dimension "A" (inches)
	A	3.87
	B	5.04
	C	1.79

Integrated Furnace Control Display Codes

Inducer with ECM Blower Motor	
<i>i dL</i>	Idle
<i>Ht1</i>	Gas Heating
<i>A-r-F</i>	Calculated Airflow (Followed by Airflow times 10)
<i>CF</i>	Continuous Fan
<i>CL1</i>	First Stage Cooling
<i>CL2</i>	Second Stage Cooling
<i>HP1</i>	First Stage Heat Pump
<i>HP2</i>	Second Stage Heat Pump
<i>dFt</i>	Defrost Mode
Menu Options	
<i>Err</i>	Active Alarm Menu
<i>L6F</i>	Last 6 Faults (To clear — Hold Option button down for 5 seconds)
<i>Cr</i>	Code Release Number
<i>COd</i>	Cooling Off Delay (Seconds)
<i>OdL</i>	Outdoor Tonnage
<i>OdU</i>	Outdoor Unit
<i>COF</i>	Blower Constant Fan Airflow Multiplier (Percentage)
<i>CPc</i>	Cooling (CFM/Ton)
<i>CPH</i>	Heat Pump Heating (CFM/Ton)
<i>Had</i>	Heat Off Delay (Seconds)
<i>i Sd</i>	Inter-Stage Delay (Seconds)
<i>gHC</i>	Gas Heating CFM (Airflow times 10)
<i>rUn</i>	Run Test Mode

Table 8. Fault Code Recovery

Fault Code Recovery

- To view the last 6 faults, press the "Menu" key until the "Last 6 Faults" (*L6F*) menu appears.
- Enter the menu by pressing the "Option" key.
- The last 6 faults can be viewed.

Clearing the Last 6 Faults

- To clear the last 6 faults, press the "Menu" key until the "Last 6 Faults" (*L6F*) menu appears.
- Enter the menu by pressing the "Option" key.
- Hold the "Option" key for at least 5 seconds.
- Release and a set of 3 dashes with be seen 3 times. This confirms the faults have been cleared.

Resetting Factory Defaults


- Display must be in Idle Mode.
- Push the "Menu" and "Option" buttons at the same time for 15 seconds then release.
- The 7 segment will flash "Fd" 3 times. This confirms the unit has been reset to the factory defaults.

The diagram, titled "IFC Component Layout", shows a terminal block with various connections. On the left side, terminals E32 through E12 are used for Inducer 3-Phase (4 N/A, 3 IND-(U), 2 IND-(V), 1 IND-(W)), Motor Communications (1 12V, 2 RX, 3 GND, 4 TX), and Menu Option (MENU, OPTION). A Low Voltage Fuse (5 AMP) and BK Jumper are connected to terminals E14 and E13. On the right side, terminals E23 through E18 are used for Neutral, Seven Segment LED (N1, H2), Igniter, Personality Module, Pressure Transducer (E18), EAC, HUM, and Y1 - O Jumper. A Flame Sense (E39 FP) and Line (E47, E21, E19) connection is also shown.

Setting Airflow

With all ductwork connected and a clean filter in place, measure the External Static Pressure (ESP) of the unit in locations below. Use the appropriate airflow table for the furnace and outdoor unit installed.

Measurements must be made prior to the evaporator coil, if equipped, and after the filter.

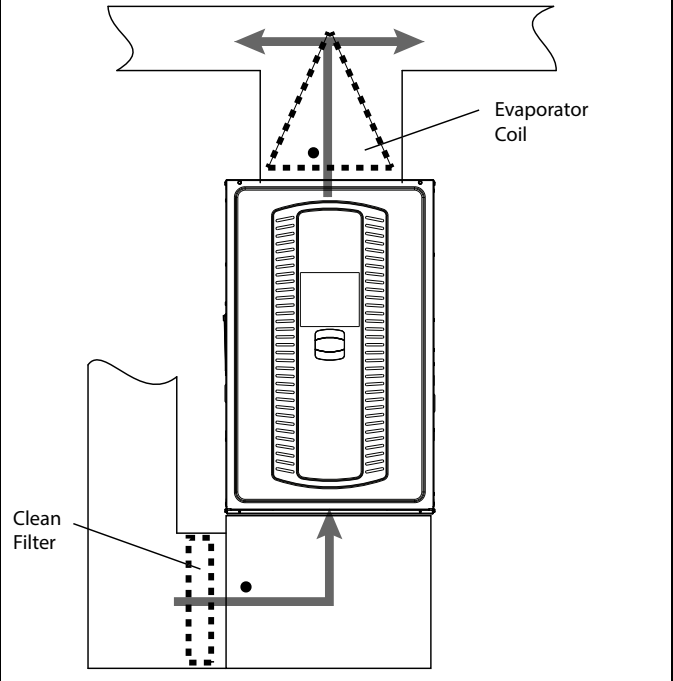

Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter

Model	Airflow Setting CFM/Ton		EXTERNAL STATIC PRESSURE (IN. W. C.)				
			0.1	0.3	0.5	0.7	0.9
L8V1C100U5VSAA	450	CFM	1773	1769	1765	1760	1754
		WATTS	364	430	501	576	653
	420	CFM	1654	1652	1649	1646	1640
		WATTS	301	364	431	503	577
	400	CFM	1575	1574	1572	1569	1564
		WATTS	264	324	390	459	530
	370	CFM	1456	1456	1455	1452	1447
		WATTS	214	271	333	399	467
	350	CFM	1378	1377	1377	1374	1368
		WATTS	184	239	299	363	429
	330	CFM	1299	1299	1297	1294	1288
		WATTS	158	210	268	330	394
	310	CFM	1220	1219	1217	1213	1206
		WATTS	134	185	240	300	362
290	CFM	1141	1140	1137	1131	1122	
	WATTS	113	161	215	272	333	

This is an example Airflow Table only. See Service Facts for complete airflow data.

Sequence of Operation

EAC and HUM Timing

- EAC relay closes approximately 5 seconds after the blower starts.
- EAC relay opens when the blower motor stops.
- HUM relay closes on a gas heating call when the blower motor starts and flame is sensed.
- HUM relay opens when flame is no longer sensed, i.e. thermostat is satisfied.

Note: The EAC and HUM terminals are dry contacts, no power output.

Gas Heating

Note: There are two main thermal limits on this unit. Thermal Limit 1 is the primary limit for upflow applications with right side return ducting. Thermal Limit 2 is the primary limit for all other applications.

1. R – W contacts close on the thermostat sending 24VAC to the W low voltage terminal of the IFC. Technician should read 24VAC from W to C. The seven segment LED display will show $H\bar{L} \bar{I}$.
2. The IFC performs a self-check routine and then confirms that the:
 - a. Main thermal limits (HI LIMIT), burner box limit (BBOX LIMIT), and reverse air flow (RAF) switches are closed by sending 24VAC out of the HLO terminal and monitoring the HLI input for 24VAC.
 - b. The IFC then checks the inducer and blower motor communications.
3. Once step 2a and 2b are confirmed, the variable speed inducer motor is energized and performs a 30 seconds pre-purge and then shuts down.
4. Once the pre-purge, the igniter warm up period begins.
 - a. Eight seconds after the igniter warm-up begins, the inducer is energized and ramps up to meet the Light-Off pressure.
 - b. Once the Light-Off pressure feedback is sensed and the igniter warm-up time has elapsed (~17 seconds), the 1st stage gas valve is energized.

Note: If the feedback is not correct, the IFC will time out and flash the proper fault code.
5. The burner system will ignite, providing current to the flame sensor. Proof of flame must be established within 4 seconds or a retry will occur.

Note: Typical flame current ranges from 0.75 – 3.0 μ a.

6. Once flame sense has been established, the igniter is de-energized, the blower on timer begins and the inducer ramps to the “Pre-Run” speed. During this transition, the combustion pressure increases until the Pre-Run pressure is sensed.
7. Once the Pre-Run pressure feedback is sensed, the IFC will energize the 2nd stage of the gas valve.
8. After the blower on timer has completed, the indoor blower will run at the selected gas heating speed.
9. The seven segment LED will alternately read:
 - $H\bar{L} \bar{I}$ = Gas heating, Stage 1
 - $R\bar{r}\bar{F}$ = Airflow
 - $\bar{0}\bar{5}\bar{0}$ = 600 calculated cfm (value shown x 10) (example value)
10. When the temperature raises enough to satisfy the thermostat setting, contacts R-W will open.
11. The gas valve relay will open, closing the gas valve. The inducer continues to run for ~5 seconds to remove any combustion by-products from inside the furnace.
12. The indoor blower continues to run to remove heat from the heat exchangers. The Heat Off Delay is field adjustable. The seven segment LED will return to $\bar{I} \bar{d}\bar{L}$ (Idle) assuming there is no other demand from the thermostat, i.e., continuous fan call.

Single Stage Cooling

Note: Factory supplied Y1-O jumper must remain in place for proper seven segment LED readout. If removed, seven segment LED will read $H\bar{P} \bar{I}$

1. R-Y1-G contacts on the thermostat close sending 24VAC to the Y1 and G low voltage terminals on the IFC. Technician should read 24VAC between Y1-B/C and between G-B/C.
2. 24VAC is sent to the OD unit via thermostat wiring.
3. The indoor blower ramps to the cooling airflow. The seven segment LED for example will alternately read:
 - $\bar{C}\bar{L} \bar{I}$ = Cooling, Stage 1
 - $R\bar{r}\bar{F}$ = Airflow
 - $\bar{0}\bar{8}\bar{0}$ = 800 calculated cfm (value shown x 10)
4. When the temperature is lowered enough to satisfy the thermostat setting, contacts R-Y-G will open.
5. The OD unit shuts off and the indoor blower shuts off, unless a blower off delay has been enabled in the IFC setup menu options. The seven segment LED will read $\bar{I} \bar{d}\bar{L}$ = Idle, no thermostat demand.

Two Stage Cooling

1. See sequence of operation for Single stage cooling operation above (steps 1-3).
2. R-Y2 contact on the thermostat close sending 24VAC to Y2 low voltage terminal on the IFC. Technician should read 24VAC between Y2 and B/C.
3. 24VAC is sent to the OD unit via thermostat wiring.
4. The indoor airflow ramps to 2nd stage airflow. The seven segment LED for example will read:
 - $LL2$ = Cooling, Stage 2
 - RrF = Airflow
 - 150 = 1600 calculated cfm (value shown x 10)
5. When the temperature is lowered enough to satisfy the thermostat setting, contacts R-Y1-Y2-G will open.
The OD unit shuts off and the indoor blower shuts off, unless a blower off delay has been enabled in the IFC setup menu options. The seven segment LED will read $1dL$ = Idle, no thermostat demand.

Single Stage Heat Pump

Note: Factory supplied Y1-O jumper must be removed for proper seven segment LED readout and defrost operation.

1. R-Y1-G contacts on the thermostat close sending 24VAC to the Y1 and G low voltage terminals on the IFC. Technician should read 24VAC between Y1-B/C and between G-B/C.
2. 24VAC is sent to the OD unit via thermostat wiring.
3. The indoor blower ramps to the HP heating airflow. The seven segment LED for example will alternately read:
 - $HP1$ = Heat Pump Heating, Stage 1
 - RrF = Airflow
 - 080 = 800 calculated cfm (value shown x 10)
4. When the temperature is raised enough to satisfy the thermostat setting, contacts R-Y-G will open.
5. The OD unit shuts off and the indoor blower shuts off, unless a blower off delay has been enabled in the IFC setup menu options. The seven segment LED will read $1dL$ = Idle, no thermostat demand.

Two Stage Heat Pump

1. See sequence of operation for single stage heat pump operation above (steps 1-3)
2. R-Y2 contact on the thermostat close sending 24VAC to Y2 low voltage terminal on the IFC. Technician should read 24VAC between Y2 and B/C.
3. 24VAC is sent to the OD unit via thermostat wiring.
4. The indoor airflow ramps to 2nd stage airflow. The seven segment LED for example will read:
 - $HP2$ = Heat Pump Heating, Stage 2
 - RrF = Airflow
 - 150 = 1600 calculated cfm (value shown x 10)
5. When the temperature is raised enough to satisfy the thermostat setting, contacts R-Y1-Y2-G will open.
6. The OD unit shuts off and the indoor blower shuts off, unless a blower off delay has been enabled in the IFC setup menu options. The seven segment LED will read $1dL$ = Idle, no thermostat demand.

About Trane and American Standard Heating and Air Conditioning

Trane and American Standard create comfortable, energy efficient indoor environments for residential applications. For more information, please visit www.trane.com or www.americanstandardair.com.



Intertek

The manufacturer has a policy of continuous data improvement and it reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.