



TRANE®

Installation, Operation, and Maintenance **E50 Series**

Compact Power and Energy Meters
BACnet® (E50H2-T2)
for use with split-core and solid-core CT's



PN: X13690276002

X39641310001

⚠ SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

November 2025

BAS-SVX082E-EN

TRANE
TECHNOLOGIES™



Introduction

Read this manual thoroughly before operating or servicing this unit.

Warnings, Cautions, and Notices

Safety advisories appear throughout this manual as required. Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

The three types of advisories are defined as follows:



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.



Indicates a situation that could result in equipment or property-damage only accidents.

Important Environmental Concerns

Scientific research has shown that certain man-made chemicals can affect the earth's naturally occurring stratospheric ozone layer when released to the atmosphere. In particular, several of the identified chemicals that may affect the ozone layer are refrigerants that contain Chlorine, Fluorine and Carbon (CFCs) and those containing Hydrogen, Chlorine, Fluorine and Carbon (HCFCs). Not all refrigerants containing these compounds have the same potential impact to the environment. Trane advocates the responsible handling of all refrigerants.

Important Responsible Refrigerant Practices

Trane believes that responsible refrigerant practices are important to the environment, our customers, and the air conditioning industry. All technicians who handle refrigerants must be certified according to local rules. For the USA, the Federal Clean Air Act (Section 608) sets forth the requirements for handling, reclaiming, recovering and recycling of certain refrigerants and the equipment that is used in these service procedures. In addition, some states or municipalities may have additional requirements that must also be adhered to for responsible management of refrigerants. Know the applicable laws and follow them.

⚠ WARNING

Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses FIRE and ELECTROCUTION hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

⚠ WARNING

Personal Protective Equipment (PPE) Required!

Failure to wear proper PPE for the job being undertaken could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the instructions below:

- Before installing/servicing this unit, technicians **MUST** put on all PPE required for the work being undertaken (Examples: cut resistant gloves/sleeves, butyl gloves, safety glasses, hard hat/bump cap, fall protection, electrical PPE and arc flash clothing). **ALWAYS** refer to appropriate Safety Data Sheets (SDS) and OSHA guidelines for proper PPE.
- When working with or around hazardous chemicals, **ALWAYS** refer to the appropriate SDS and OSHA/GHS (Global Harmonized System of Classification and Labelling of Chemicals) guidelines for information on allowable personal exposure levels, proper respiratory protection and handling instructions.
- If there is a risk of energized electrical contact, arc, or flash, technicians **MUST** put on all PPE in accordance with OSHA, NFPA 70E, or other country-specific requirements for arc flash protection, **PRIOR** to servicing the unit. **NEVER** PERFORM ANY SWITCHING, DISCONNECTING, OR VOLTAGE TESTING WITHOUT PROPER ELECTRICAL PPE AND ARC FLASH CLOTHING. ENSURE ELECTRICAL METERS AND EQUIPMENT ARE PROPERLY RATED FOR INTENDED VOLTAGE.

⚠ WARNING**Follow EHS Policies!**

Failure to follow instructions below could result in death or serious injury.

- All Trane personnel must follow the company's Environmental, Health and Safety (EHS) policies when performing work such as hot work, electrical, fall protection, lockout/tagout, refrigerant handling, etc. Where local regulations are more stringent than these policies, those regulations supersede these policies.
- Non-Trane personnel should always follow local regulations.

⚠ WARNING**Cancer and Reproductive Harm!**

This product can expose you to chemicals including lead and bisphenol A (BPA), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Trademarks

All trademarks referenced in this document are the trademarks of their respective owners.

Copyright

This document and the information in it are the property of Trane, and may not be used or reproduced in whole or in part without written permission. Trane reserves the right to revise this publication at any time, and to make changes to its content without obligation to notify any person of such revision or change.

Revision History

Obsolete Modbus Energy Meters.



Table of Contents

Specifications	5	Solid State Pulse Outputs	11
Dimensions	6	RS-485 Communication	11
Guidelines	6	Display Screen	12
Installation	7	Navigating Screens and Setting Parameters	12
DIN Rail Mount	7	Navigate Setup Screen	12
Screw Mount	7	Enter BACnet® Communication Parameters	12
Supported Systems	7	Enter CT Output Voltage and Input Current Ranges	12
Product Diagram	9	Enter the Service Type to Monitor	12
Wiring Diagrams	9	China RoHS Compliance Information	13
Control Power	10	Additional Resources	14
Fuse Recommendations	11		
Pulse Contact Inputs	11		




Specifications

Table 1. Specifications

Measurement Accuracy:	Real Power and Energy: IEC 62053-22 Class 0.2S, ANSI C12.20 0.2%
Input Voltage Characteristics:	Measured AC Voltage: Minimum 90V _{L-N} (156V _{L-L}) for stated accuracy U.L. Maximum: 600V _{L-L} (347V _{L-N}) CE Maximum: 300V _{L-N} Impedance: 2.5MΩ _{L-N} /5MΩ _{L-L} Frequency Range: 45 Hz to 65 Hz
Input Current Characteristics:	Measurement Input Range: 0 to 0.333 Vac or 0 to 1.0 Vac (+20% over-range) Impedance: 10.6 kΩ (1/3 V mode) or 32.1 kΩ (1 V mode)
Control Power:	AC: 5 VA maximum, 90V minimum U.L. Maximum: 600V _{L-L} (347V _{L-N}) CE Maximum: 300V _{L-N} DC: 3W maximum External DC current limiting required. Refer to fuse recommendation U.L. and CE: 125 Vdc to 300 Vdc Ride-through Time: 100 ms @120 Vac
Mechanical Characteristics:	IP Degree of Protection (IEC60529): IP40 front display; IP20 Meter Terminal Block Screw Torque: 0.37 ft-lb (0.5 N·m) nominal/0.44 ft-lb (0.6 N·m) maximum Terminal Block Wire Size: 24 AWG to 14 AWG (0.2 to 2.1 mm ²) Rail: T35 (35 mm) DIN Rail per EN50022
Operating Conditions:	Operating Temp: -30°C to 70°C (-22°F to 158°F) Storage Temp: -40° to 85°C (-40° to 185°F) Humidity Range: <95% RH (non-condensing) Altitude of Operation: 3 km maximum
Metering Category:	North America: CAT III; for distribution systems up to 347 V _{L-N} /600 Vac _{L-L} CE: CAT III; for distribution systems up to 300 V _{L-N} Dielectric Withstand: Per U.L. 508, EN61010 Conducted/Radiated Emissions: FCC part 15 Class B, EN55011/EN61000 Class B (residential and light industrial) Conducted/Radiated Immunity: EN61000 Class A (heavy industrial)
Agency Approvals:	U.S./Canada (cULus): UL508 (open type device)/CSA 22.2 No. 14-05 Europe (CE): EN61010-1

Dimensions

Figure 1. Unit dimensions

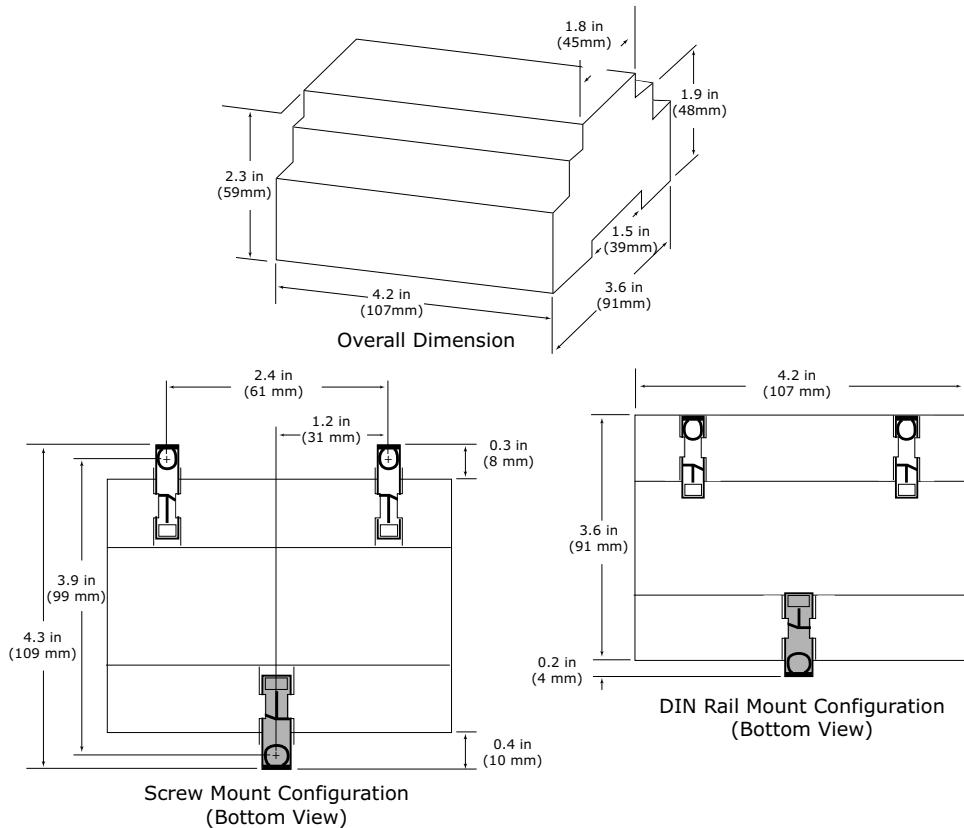

Guidelines


- Disconnect power prior to installation.
- Reinstall any covers displaced during installation before re-powering unit.
- Mount the meter in an appropriate electrical enclosure near equipment to be monitored.
- Do not install the load side of a variable frequency drive (VFD).

Installation

Mount the meter using one of the following two methods:

DIN Rail Mount

Figure 2. DIN rail mount

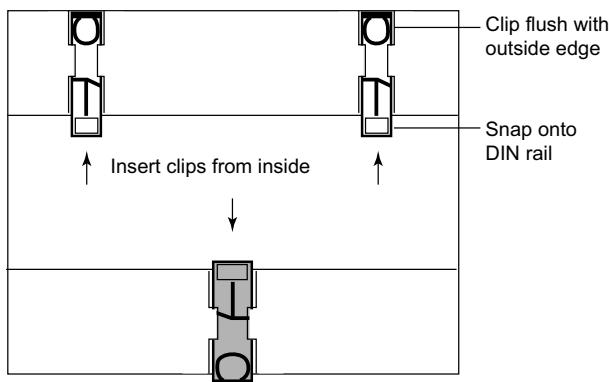

1. Attach mounting clips to the underside of housing by sliding them into the slots from the inside.


Note: The stopping pegs must face the housing and the outside edge of the clip must be flush with the outside edge of the housing.

2. Snap the clips onto the DIN rail.

Note: Use 2-end stop clips to reduce the unit from shifting horizontally across the DIN rail.

Screw Mount

Figure 3. Screw mount

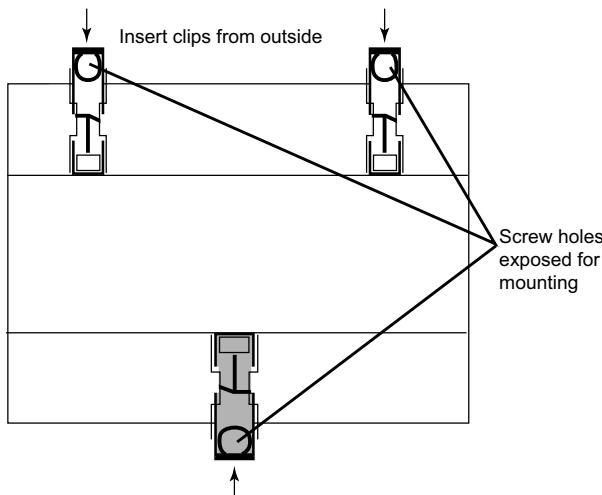

1. Attach mounting clips to the underside of the housing by sliding them into the slots from the outside.

Note: The stopping pegs must face the housing and the screw hole must be exposed on the outside of the housing.

2. Use three (3) #8 screws (not supplied) to mount the meter to the back of enclosure.

Supported Systems

The meter has a number of different possible system wiring configurations (See [Table 2, p. 8](#) and next section, [“Wiring Diagrams,” p. 9](#)).

To configure the meter, set the System Type via the User Interface BACnet Analog Value Object AV2 (E50H2-T2). The system type tells the meter which of its current and voltage inputs are valid, which are to be ignored, and if neutral is connected. Setting the correct system type prevents unwanted energy accumulation on unused inputs, selects the formula to calculate the Theoretical Maximum System Power, and determines which phase loss algorithm is to be used. The phase loss algorithm is configured as a percent of the Line-to-Line System Voltage (except when in System Type 10). In addition, it calculates the expected Line-to-Neutral voltages for system types that have Neutral (12 and 40). Values that are not valid in a particular System Type display as — on the User Interface or BACnet Analog Input objects.

Note: To avoid distortion, use parallel wires for control power and voltage inputs.



Installation

Table 2. wiring configurations

	CTs		Voltage Connections			System Type		Phase Loss Measurement			Wiring Diagram
# Wires	Qty	ID	Qty	ID	Type	BACnet A.V. Obj. AV2	User Interface (SET-UP>S SYS)	VLL	VLN	Balance	Diagram #
Single-Phase Wiring											
2	1	A	2	A, N	L-N	10	1L+1n	—	AN	—	1
2	1	A	2	A, B	L-L	11	2L	AB	—	—	2
3	2	A, B	3	A, B, N	L-L w/N	12	2L+1n	AB	AN, AB	AN-AB	3
Three-Phase Wiring											
3	3	A, B, C	3	A, B, C	Delta	31	3L	AB, BC, CA	—	AB-BC-CA	4
4	3	A, B, C	4	A, B, C, N	Grounded Wye	40	3L-1n	AB, BC, CA	AN, BN, CN	AN-BN-CN and AB-BC-CA	5, 6

Refer to the following symbols used in the wiring diagrams.

	Voltage Disconnect Switch
	Fuse (not included with meter) <i>Note: Installer is responsible for ensuring compliance with local requirements.</i>
	Earth Ground
	Current Transducer (CT)
	Potential Transformer
	Protection containing a voltage disconnect switch with a fuse or disconnect circuit breaker. The protection device must be rated for the available short circuit current at the connection point.

NOTICE

Equipment Damage!

Failure to follow instructions below could result in overheating and permanent equipment damage. This product is designed only for use with 1 Volt or 0.333 Volt current transducers. Do not use current output CTs on this product.


! WARNING

Hazardous Voltage and Equipment Damage!

Failure to disconnect power before servicing could result in death or serious injury. Disconnect all electric power, including remote disconnects before servicing. CT terminals are referenced to neutral on the meter and may be at elevated voltages. Do not contact meter terminals while the unit is connected. Do not connect or short other circuits to the CT terminals.

Product Diagram

Figure 4. Product diagram

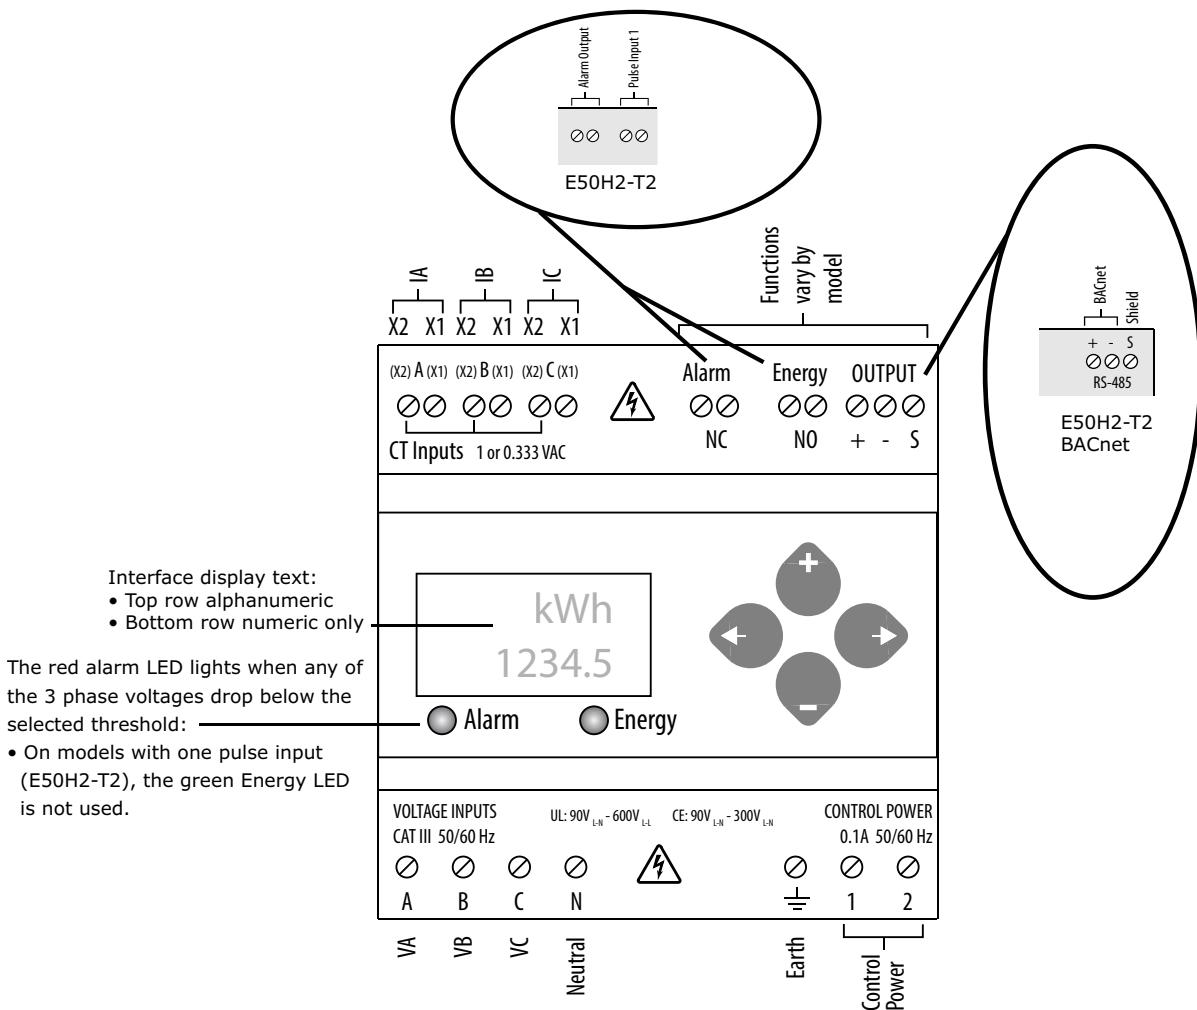

Wiring Diagrams

The current transducers are not polarity sensitive for all E50 models. It is not necessary to observe CT orientation.

Figure 5. 1-phase, line-to-neutral, 2-wire system, 1 CT use system type 10 (1L+1n)

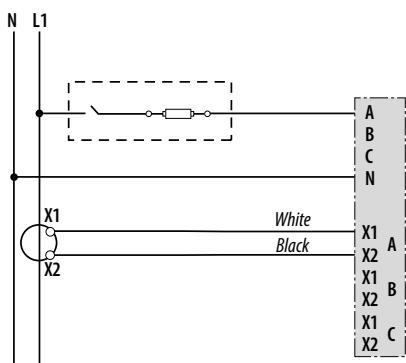


Figure 6. 1-phase, line-to-line, 2-wire system, 1 CT use system type 11 (2L)

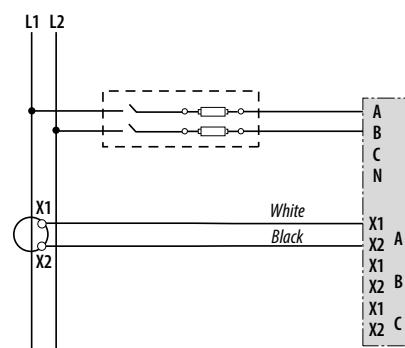


Figure 7. 1-phase, direct voltage connection, 2 CT use system type 12 (2L+1n)

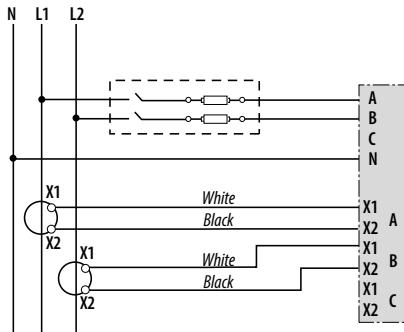


Figure 8. 3-phase, 3-wire system, 3 CT, no PT use system type 31 (3L)

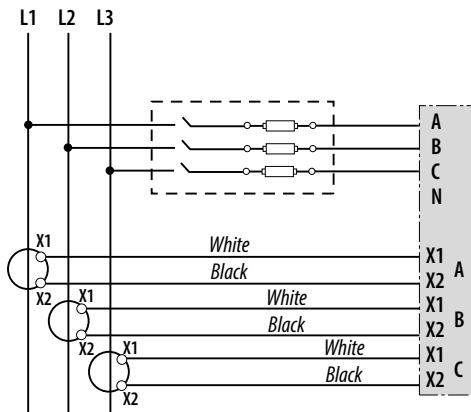


Figure 9. 3-phase, 4-wire, direct voltage input connection, 3 CT use system type 40 (3L+1n)



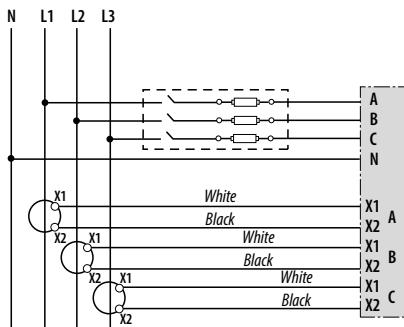


Figure 10. 3-phase, 4-wire wye connection, 3 CT, 3 PT use system type 40 (3L+1n)

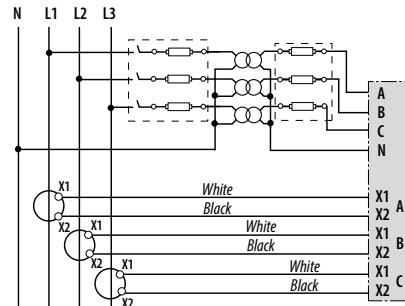

Control Power

Figure 11. Direct connect control power, line to line

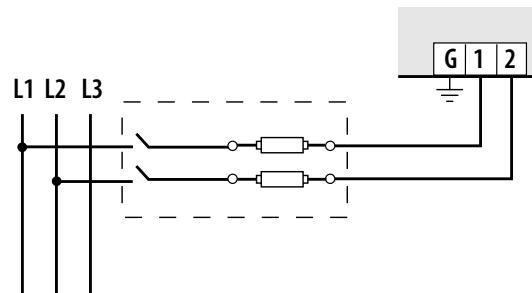

Line-to-Line from 90 Vac to 600 Vac (UL). In UL installations the lines may be floating (such as a delta). If any lines are tied to an earth (such as a corner grounded delta), refer to the Line-to-Neutral installation limits. In CE compliant installations, the lines must be neutral (earth) referenced at less than 300 Vac_{L-N}

Figure 12. Line-to-neutral from 90 Vac to 347 Vac (ul) OR 300 Vac (CE)

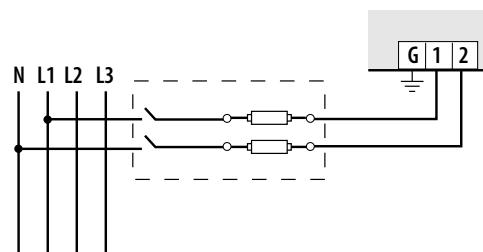


Figure 13. DC control power from 125 Vdc to 300 Vdc (ul and CE Max.)


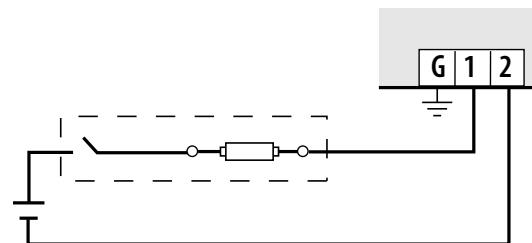


Figure 14. Control power transformer may be wired L-N or L-L. Output to meet meter input requirements.

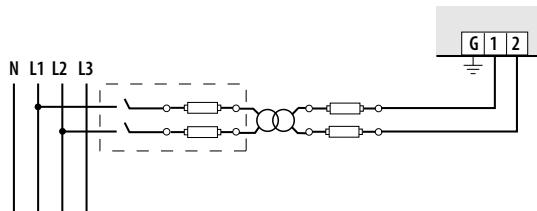

Fuse Recommendations

Keep the fuses close to the power source.

For selecting fuses and circuit breakers, use the following criteria:

- Select current interrupt capacity based on the installation category and fault current capability.
- Select over-current protection with a time delay.
- Use a voltage rating sufficient for the input voltage applied.
- Provide over-current protection and disconnecting means to protect the wiring. For AC installations, use Trane AH04 or equivalent. For DC installations, provide external circuit protection.
- Suggested: 0.5A, time delay fuses rated for DC operation at or above the supply voltage.
- Use the earth connection (G) for electromagnetic compatibility (EMC), not a protective earth ground.

Pulse Contact Inputs

The E50H2-T2 has one input with pulse accumulators for solid state or mechanical contacts in other sensors, such as water or gas flow meters. This input is isolated from the measured circuits. On models with BACnet communication (E50H2-T2), it is referenced to the communication signal ground and the comm output shield terminal. Use with contacts that do not require current to remove oxidation.

Figure 15. Pulse contact inputs (E50H2-T2 Only)


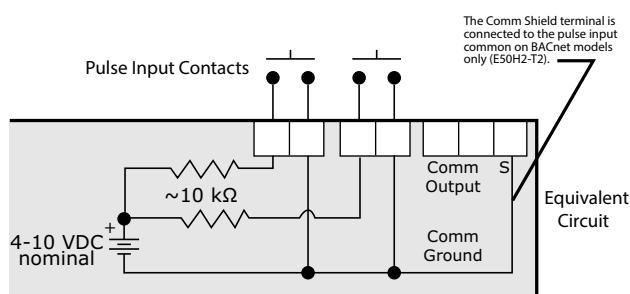



Figure 16. Solid state pulse outputs

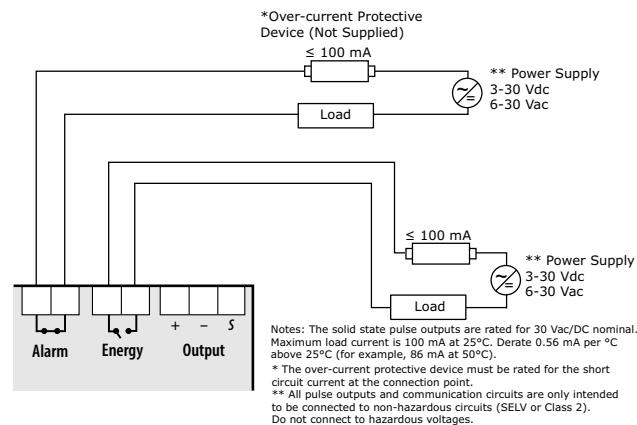

RS-485 Communication

Below shows a daisy chain of devices to the power meter. The RS-485 secondary port allows the power meter to be connected in a daisy chain with up to 63, 2-wire devices.

Figure 17. RS-485 communication

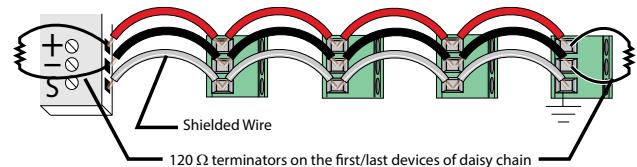

Notes:


- The voltage and current ratings on the terminals are compliant with the requirements of the EIA RS-485 communications standard.
 - The RS-485 transceivers are $\frac{1}{4}$ unit load or less.
 - RS-485+ has a 47 kΩ pull up to +5V, and RS-485- has a 47 kΩ pull down to Shield (RS-485 signal ground).
 - Wire the RS-485 Bus as a daisy chain from device-to-device, without any stubs. Use 120 Ω termination resistors at each end of the bus (not included).
 - Shield is not internally connected to Earth Ground.
 - Connect Shield to Earth Ground somewhere on the RS-485 bus (only at one point).
- For all terminals on E5x meters:
- When tightening terminals, apply the correct torque: 0.37 to 0.44 ft·lb (0.5-0.6 N·m).
 - Use 14 to 24 gauge (2.1 - 0.2 mm²) wire.

Solid State Pulse Outputs

The E50H2-T2 has an Alarm output, but no energy pulse outputs.

Display Screen


Figure 18. Display screen buttons

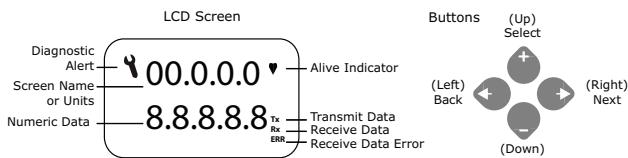

Navigating Screens and Setting Parameters

These instructions assume the meter shipped with factory default settings. If it has been previously configured, all optional values should be checked.

Figure 19. Interface buttons

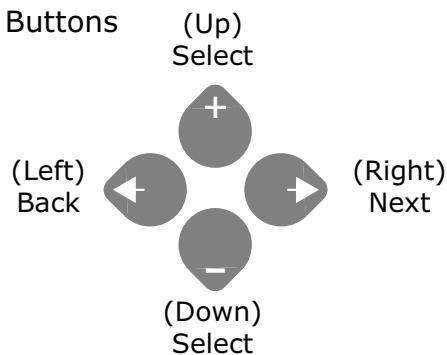

Navigate Setup Screen

1. Press + or – repeatedly until the **SETUP** screen displays.
2. Press -> to advance to the **PASWD** screen.
3. Press -> to move through the digits. Press + or – to enter your password (the default is **00000**).
4. Press -> to advance to the first setup screen (S BAC on E50H2-T2).
5. Press + or – to select the desired parameter screen to set.
6. After setting parameters, press + or – to select the next setup screen or <- to exit and return to **SETUP**.

Enter BACnet® Communication Parameters

1. Press + or – repeatedly until the **SETUP** screen displays.

2. Press -> to advance to the **MAC** screen and through the address digits. Press + or – to select the BACnet MAC address (default is **001**).
3. Press -> to accept the value and advance to the **KBAUD** screen. Press + or – to select the baud rate (default is **76.8k**).
4. Press -> to advance to the **ID1** screen and through the upper four digits of the Device Instance. Press + or – to select the ID digits (default is a **pseudo-random number**).
5. Press -> to accept the value and advance to the **ID2** screen and through the lower three digits of the Device Instance. Press + or – to select the ID digits (default is a **pseudo-random number**).
6. Press -> to accept the value and return to the **S BAC** screen.

Enter CT Output Voltage and Input Current Ranges

1. Press + or – repeatedly until the **SETUP** screen displays.
2. Press -> to advance to the **S CT** (Set Current Transducer) setup screen.
3. Press -> to advance to the **CT V** screen. Press + or – to select the voltage mode current transducer output voltage (default is **1.00**).
4. Press -> to advance to the **CT SZ** screen and through the digits. Press + or – to select the CT size in amps (default is **100**).
5. Press -> to accept the value and return to the **S CT** screen.

Enter the Service Type to Monitor

1. Press + or – repeatedly until the **SETUP** screen displays.
2. Press -> to advance to the **S SYS** (Set System) setup screen.
3. Press -> to advance to the **SYSTEM** screen. Press + or – to select the configuration (refer to the Wiring Diagrams section, diagrams #5 and #6 for 3L-1N).
4. Press -> to return to the **S SYS** screen.



China RoHS Compliance Information

Table 3. Hazardous substances

Part Name	Pb	Hg	Cd	Cr, VI	PBB	PBDE
Electronic	X ^(a)	O ^(b)	O	O	O	O

(a) X indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572.

(b) O indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.



Additional Resources

Quick Installation Guide, Z207411-0A 0217.



Notes

Trane - by Trane Technologies (NYSE: TT), a global innovator - creates comfortable, energy efficient indoor environments for commercial and residential applications. For more information, please visit trane.com or tranetechnologies.com.

Trane has a policy of continuous product and product data improvements and reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.